


ASSEMBLY INSTRUCTIONS

EEI-6541

V0.14.09.24

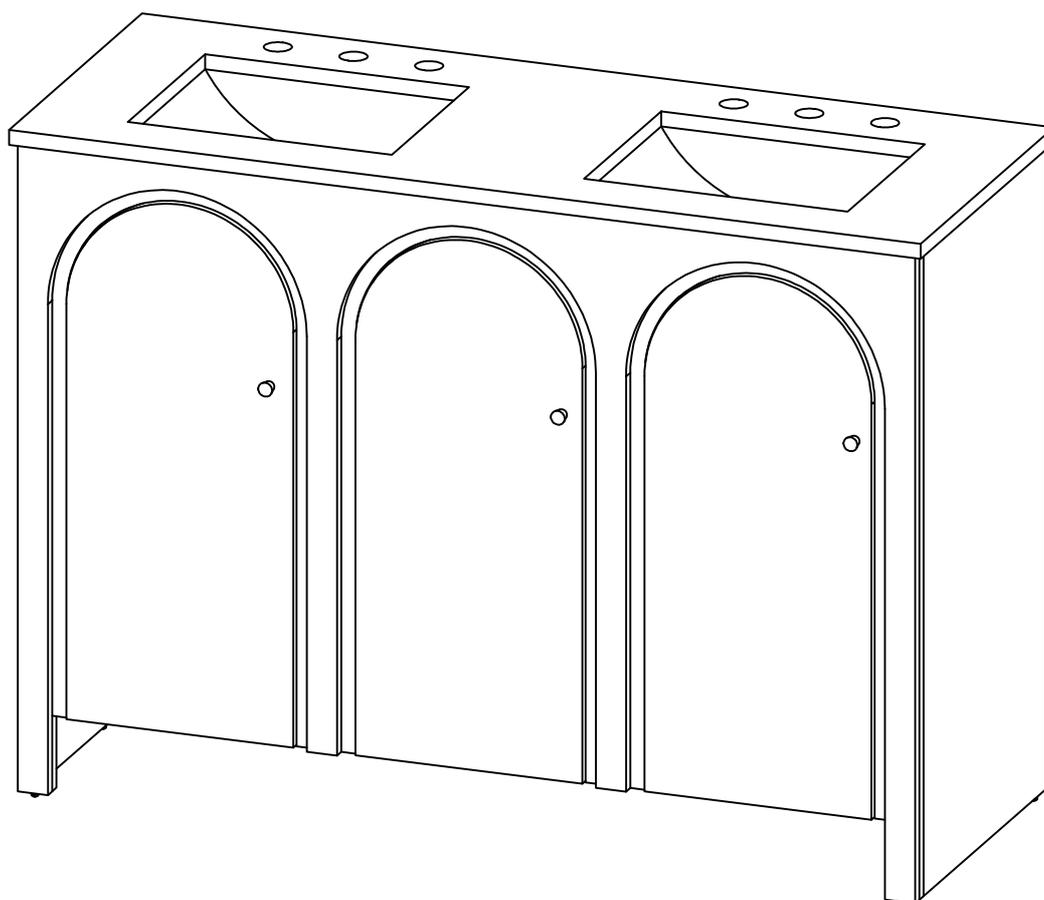

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

*modway



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 60 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screw completely until all hardware is lined up and inserted into the holes.

Do not over-tighten screw and bolts to avoid stripping the hardware or cracking the item


For vanity and plumbing installation, we suggest hiring a professional contractor and plumber.

Assemble your item on a flat carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture component :

1 Bottom Panel	x1
2 Side Panel Left	x1
3 Side Panel Right	x1
4 Front Panel	x1
5 Door Panel	x3
6 Back Support Upper	x1
7 Back Support Lower	x1
8 Middle Support	x2
9 Adjustable Shelf	x3

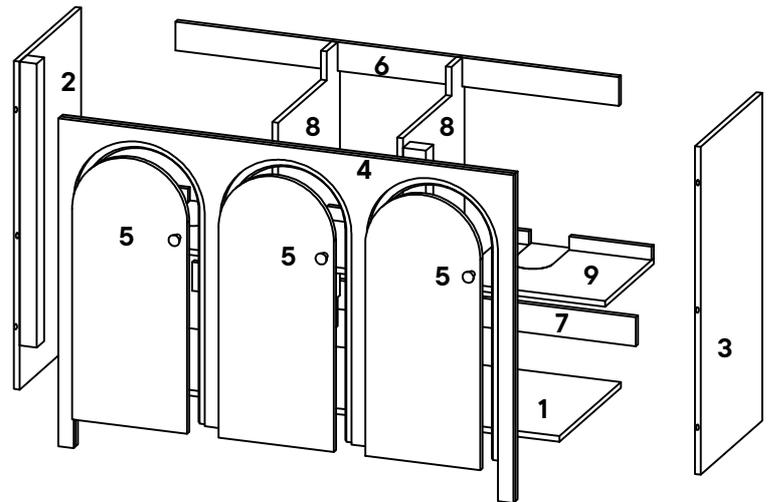

Provided hardware:

A		Wooden Dowel 8 x 40 mm	x10
B		Cam Bolt 6 x 40 mm	x28
C		Cam Lock 15 mm	x28
D		Screw 6 x 16 mm	x12
E		Hinge	x6
F		Knob	x3
G		Shelf Pin	x12
H		Screw 6 x 25 mm	x3
I		Adjustable Leveler	x4

What You Need:

Phillips Head Screwdriver
Phillips

You may also need:

- + Power Drill
- + Level
- + Silicone Adhesive or caulk
- + Drywall Anchors and Screws
- + Other Wall-Mounting Hardware








Step 1

HARDWARE

- A** Wood Dowel 8 x 40 mm x10
- B** Cam Bolt 6 x 40 mm x28

COMPONENTS

- 1** Bottom Panel x1
- 2** Side Panel Left x1
- 3** Side Panel Right x1
- 4** Front Panel x1

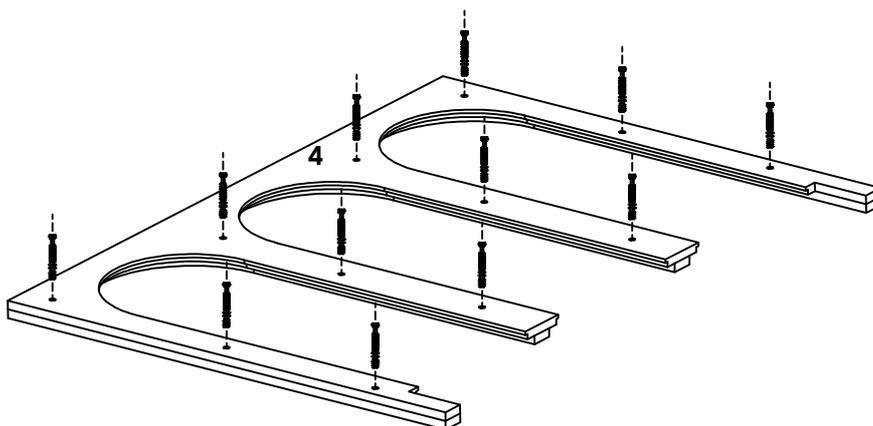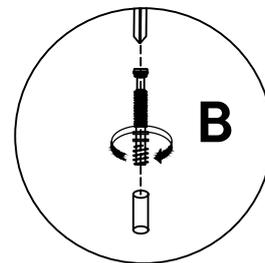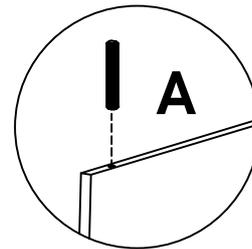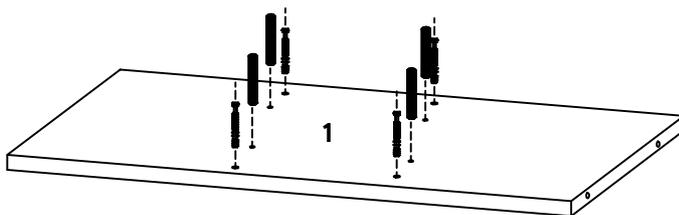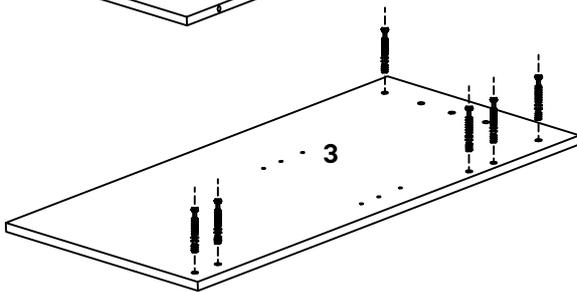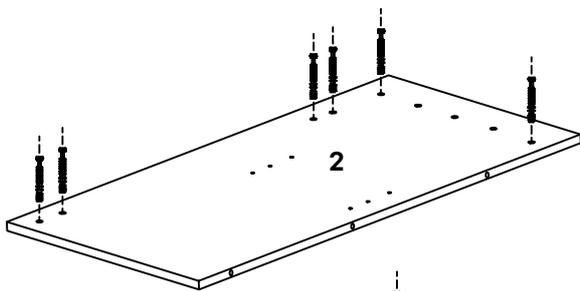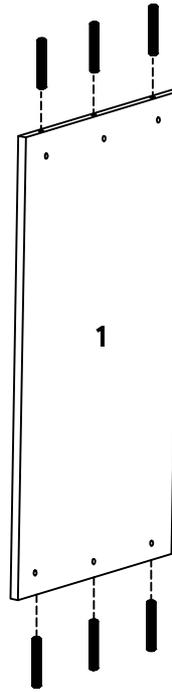

Step 2

HARDWARE

C Cam Lock 15 mm x6



COMPONENTS

1 Bottom Panel x1

2 Side Panel Left x1

6 Back Support Upper x1

7 Back Support Lower x1

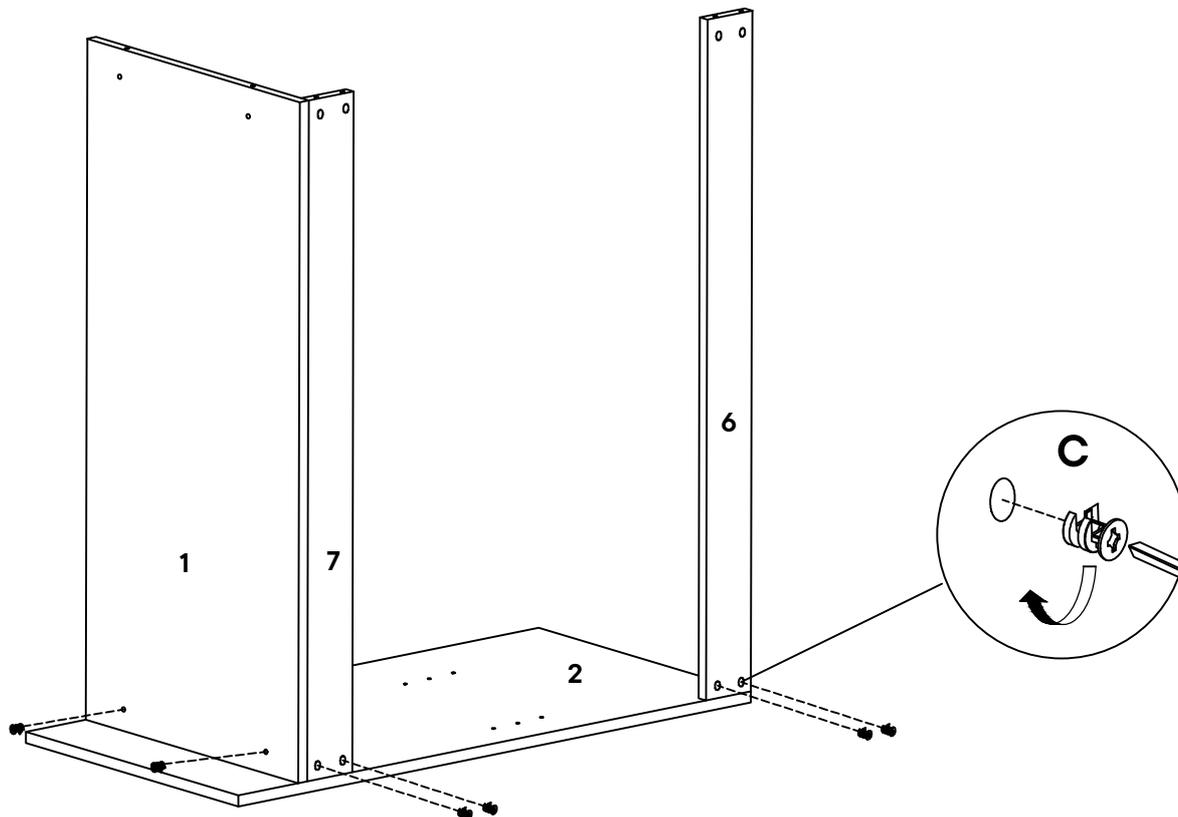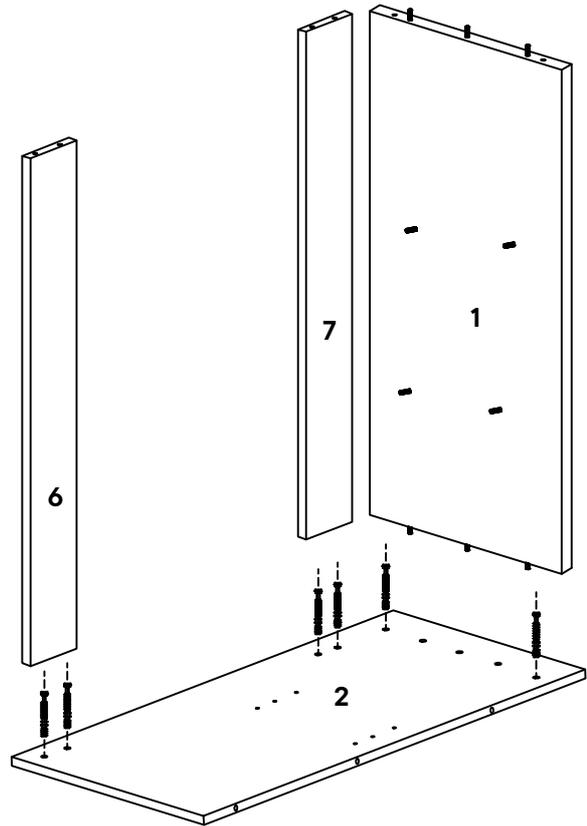




Step 3

HARDWARE

- C** Cam Lock 15 mm x10

COMPONENTS

- 1** Bottom Panel x1
- 2** Side Panel Left x1
- 3** Side Panel Right x1
- 6** Back Support Upper x1
- 7** Back Support Lower x1
- 8** Middle Support x2

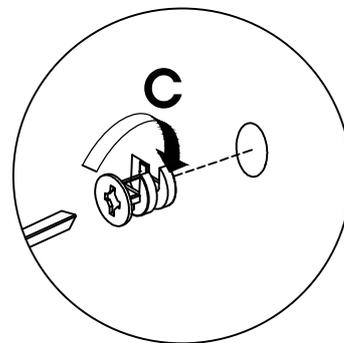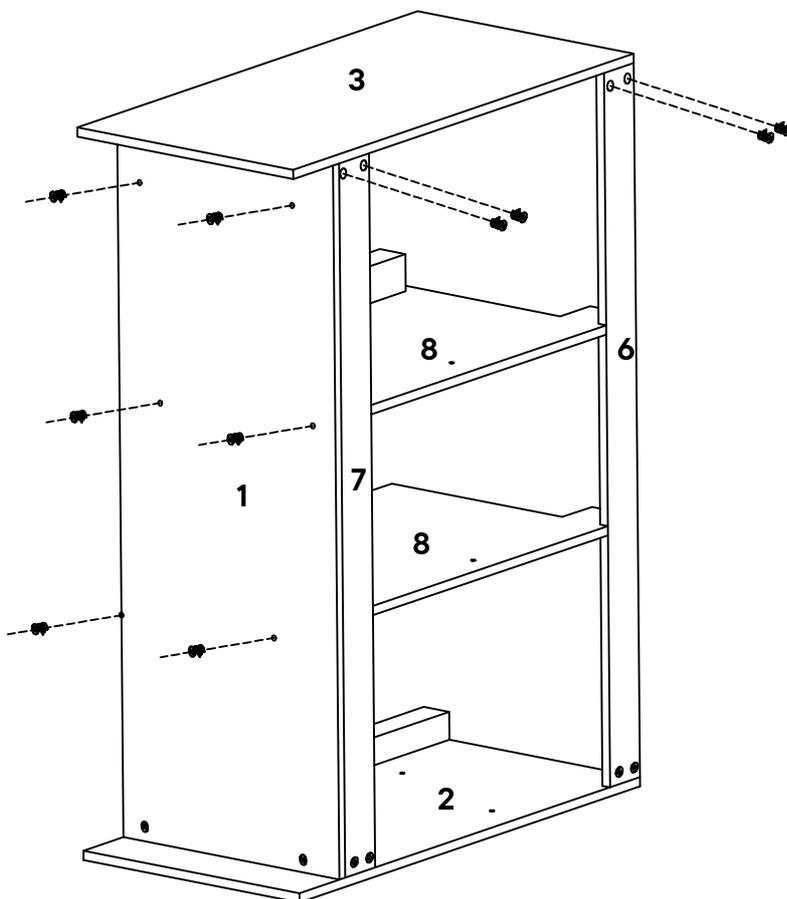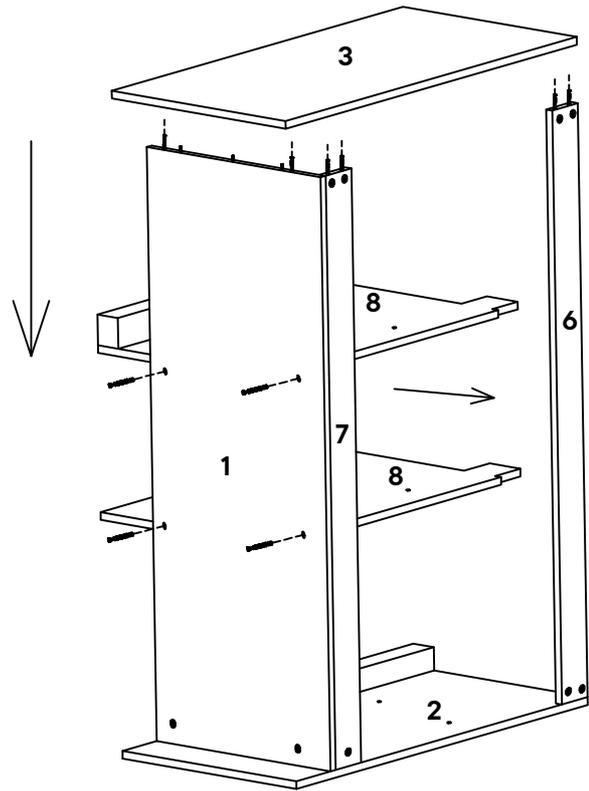




Step 4

HARDWARE

C Cam Lock 15 mm x12

COMPONENTS

- 1** Bottom Panel x1
- 2** Side Panel Left x1
- 3** Side Panel Right x1
- 4** Front Panel x1
- 6** Back Support Upper x1
- 7** Back Support Lower x1
- 8** Middle Support x2

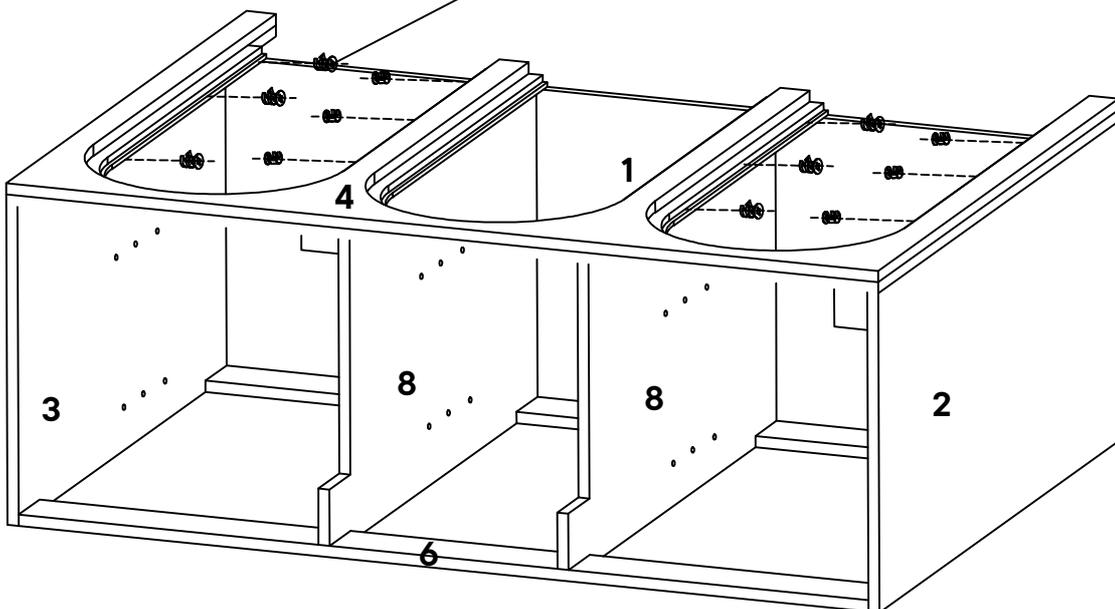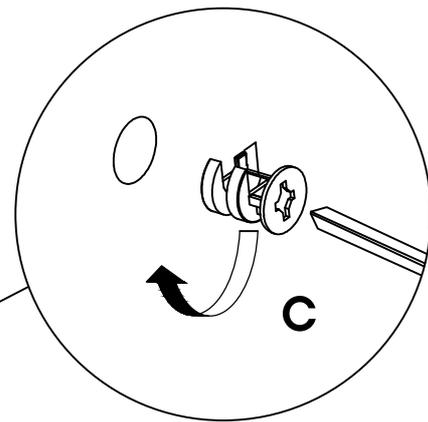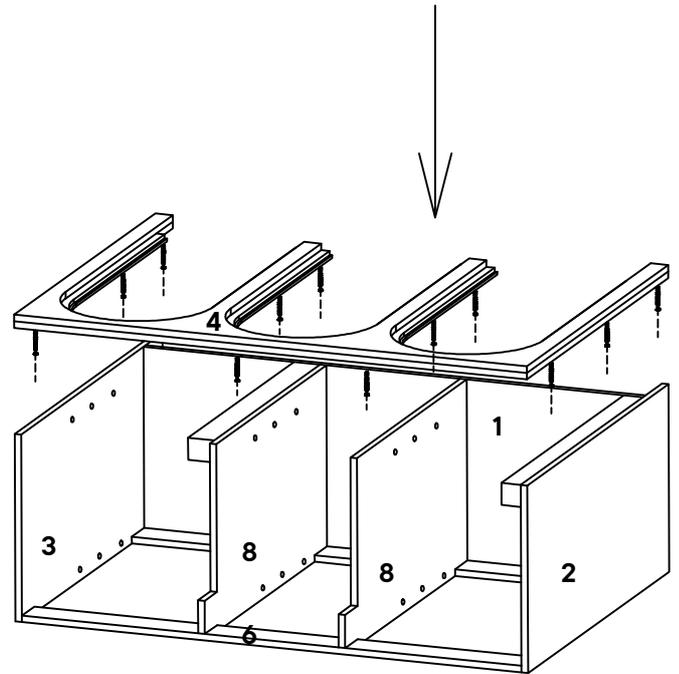

Note :- Full Tighten All Cam Lock here.



Step 5

HARDWARE

G Shelf Pin x12

COMPONENTS

9 Adjustable Shelf x3

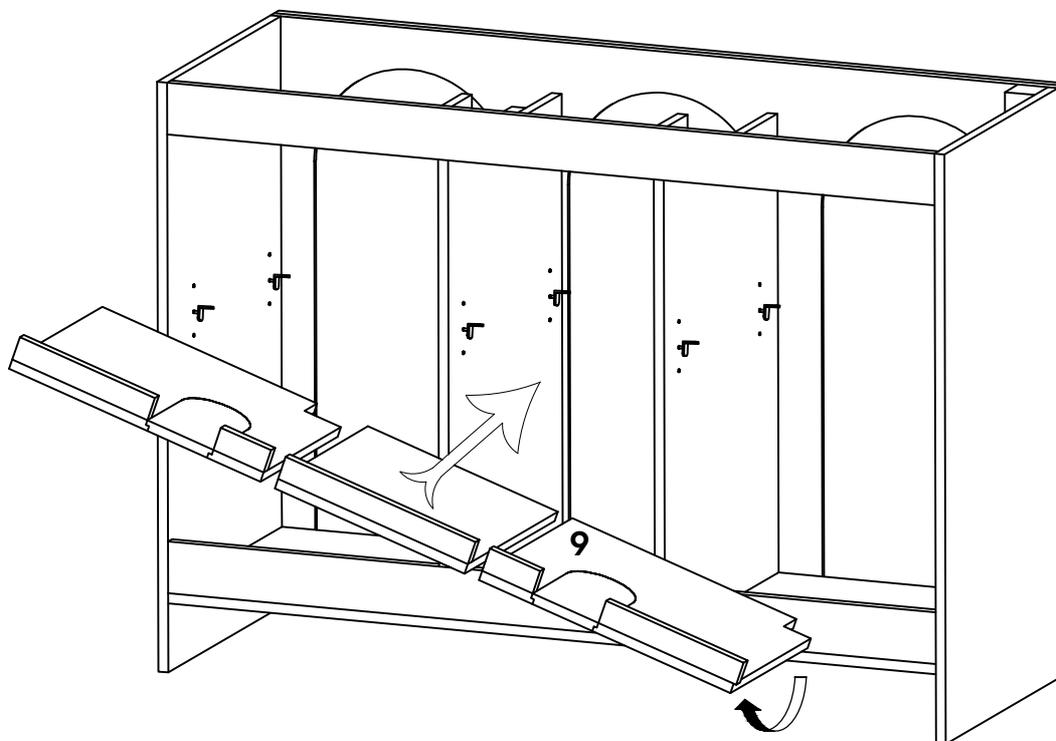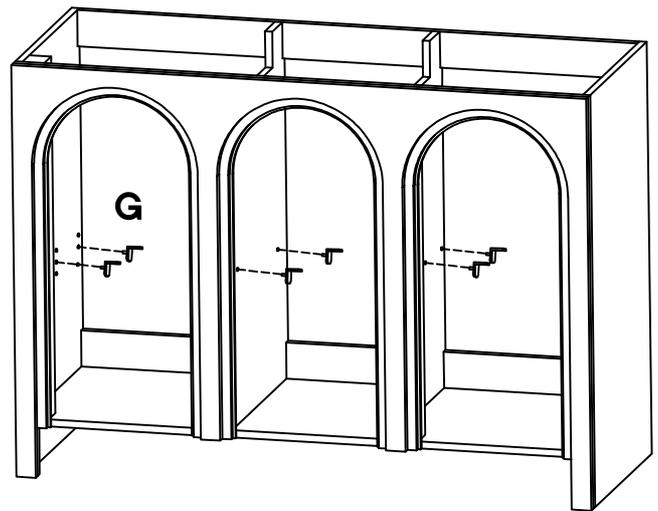


Step 6

HARDWARE


- D** Screw 6 x 16 mm x12
- E** Hinges x6
- F** Knob x3
- H** Screw 6 x 25 mm x3

COMPONENTS


- 5** Door Panel x3

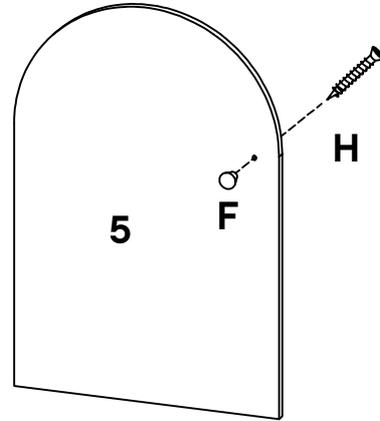



x3

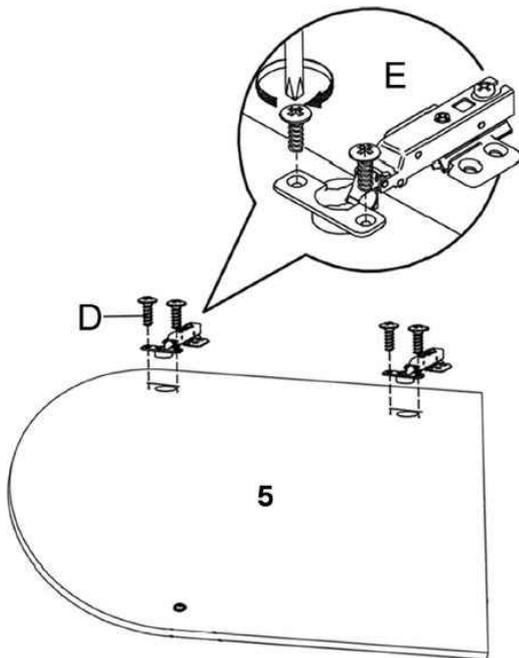


x3

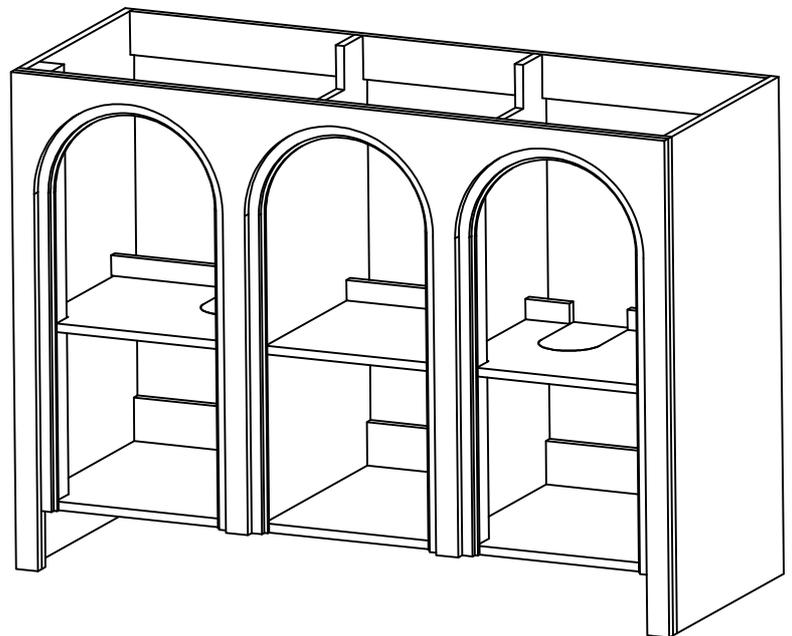

Step 7

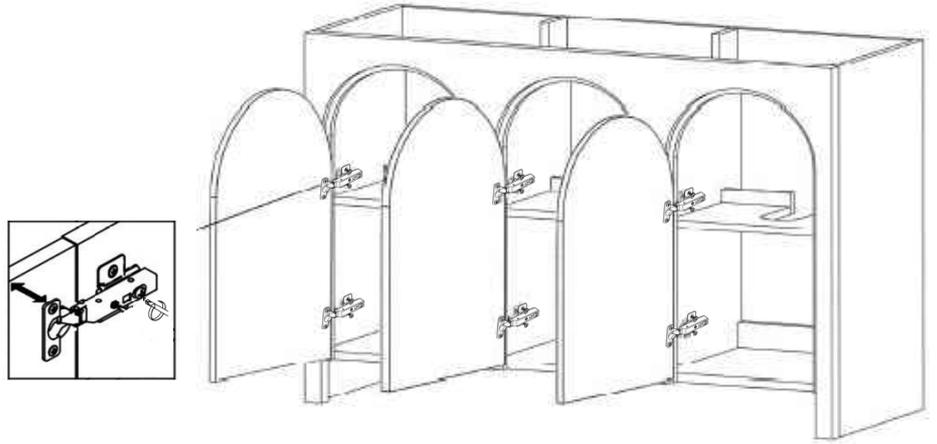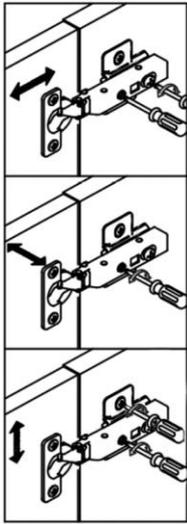

Step 8

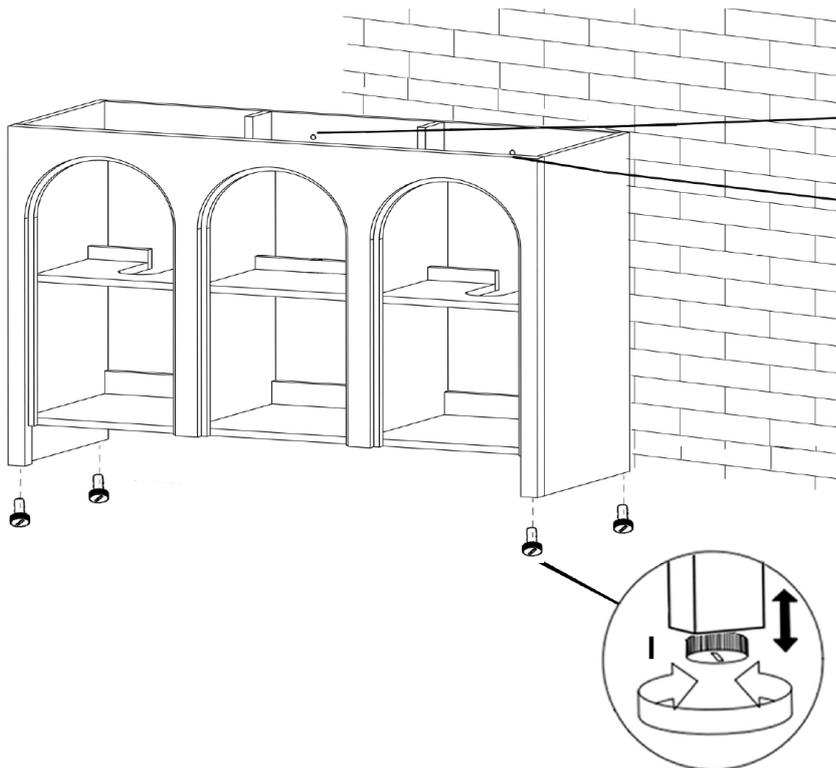


DETAIL HOLE CABLE

Note: Wall plugs, screws and tools are not included.
MOUNTING THE CABINET ON THE WALL
The cabinet may pose a danger if not properly mounted or secured to the wall.
Please ensure the correct hardware is used for particular wall type.
It is recommended to engage a professional installer.


Step 9

Apply a thin Bead of silicone compound around the vanity base and set the vanity top carefully in place. Remove any excess silicone compound with a wet rag

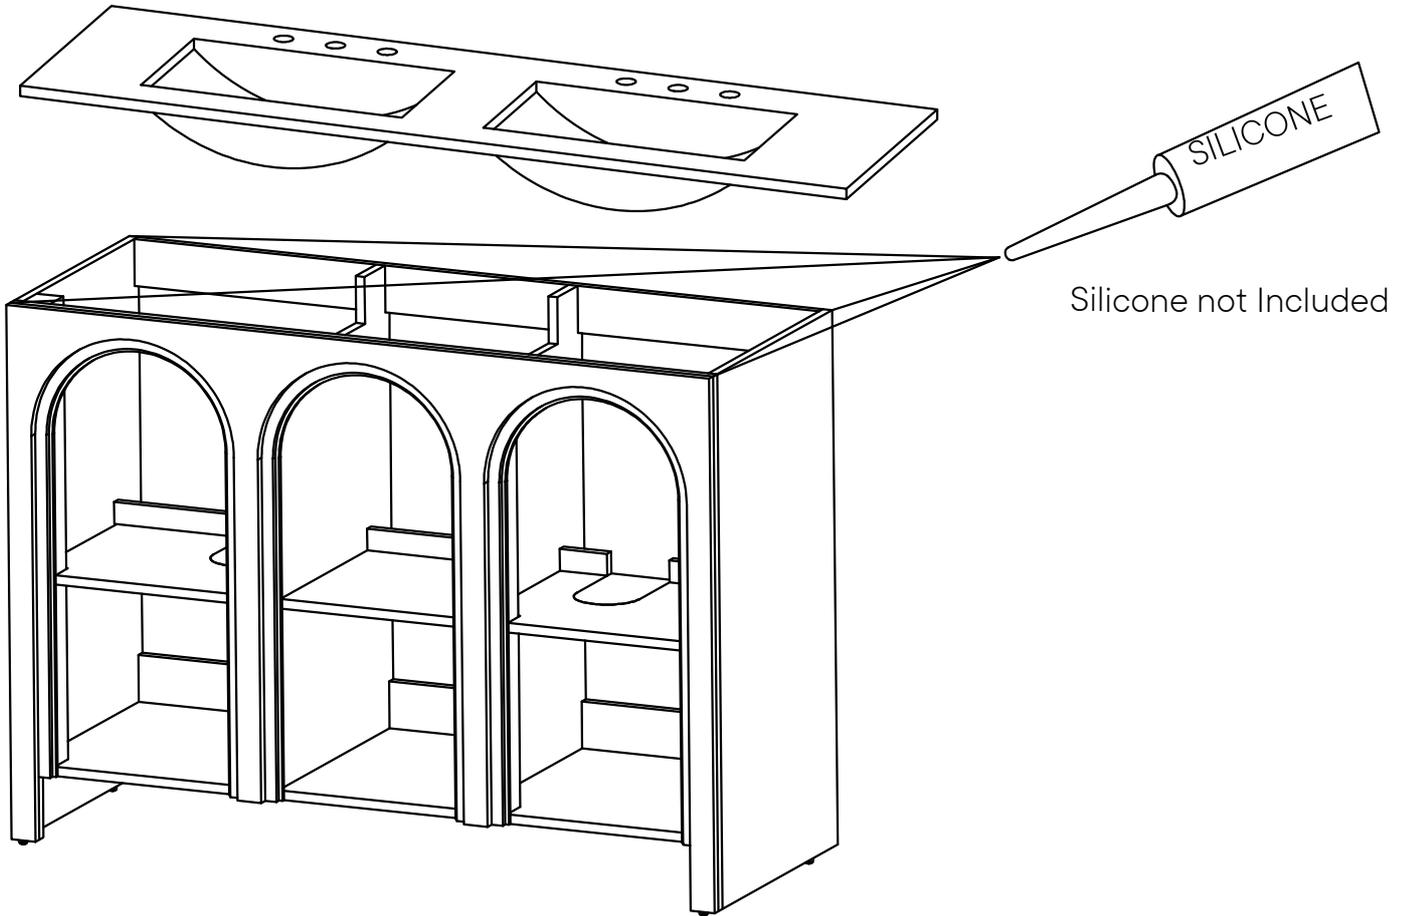

A quick note...

Your Sink Basin Comes Complete with a silver overflow ring. If you'd like to Remove this overflow ring, you can do so by hand.

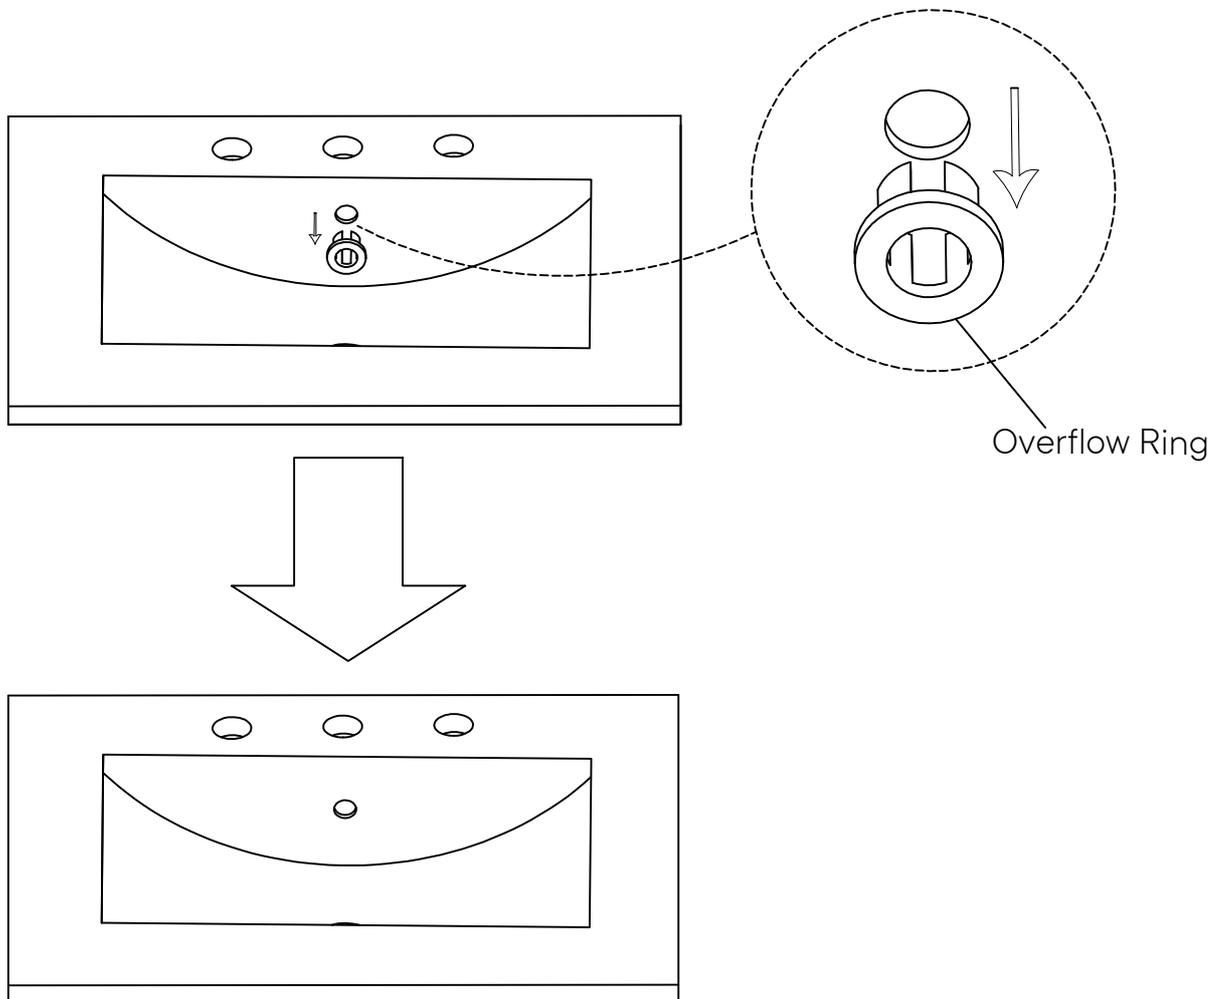

Great job!

Vanity assembly is complete.


♥ CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

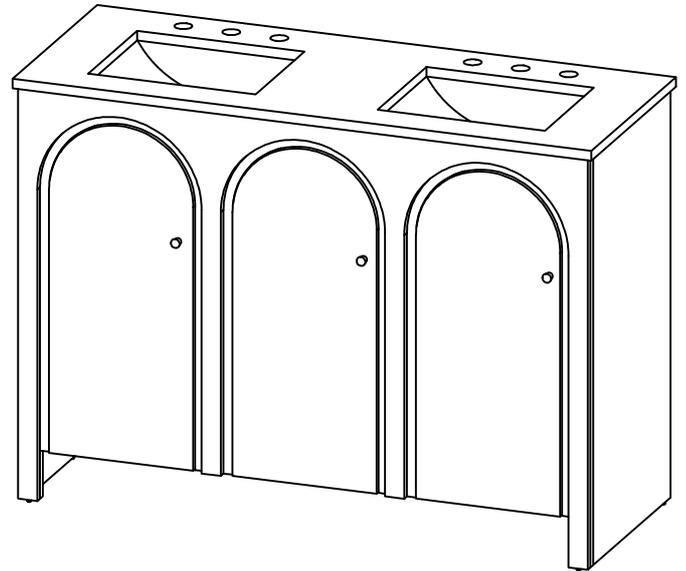

CONNECT WITH US!



Tag us [@modway_furniture](#) and [#modway](#) for a chance to be featured.