

Assembly Instruction Sheet #IS-PCIN1716C For Style PCIN1716C

 $Please go to {\color{red} www.quoizel.com} for product cleaning tips. Go to the {\color{red} Care+Maintenance} selection.$

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: Integrated 22W LED

Compatible Dimmer Switches: Lutron DVELV-300P or Lutron SELV-300P.


Estimated Assembly Time: 20-30 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

△ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

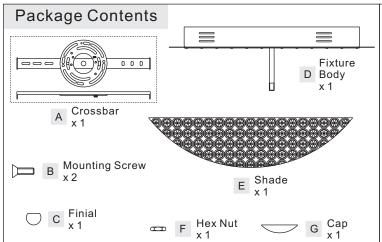


STEP 3 - Attach Fixture Body to Crossbar

A. Fit excess cord and electrical wires in the ceiling canopy properly.


Line up the holes on the side of the Fixture Body (D) to the mounting holes on the Crossbar (A). Secure them with Mounting Screws (B).

Tighten until sung.

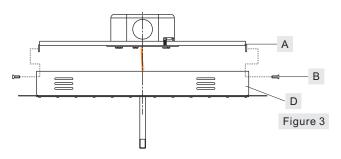

STEP 1 - Attach Crossbar to Outlet Box


A. Attach the Crossbar (A) to Outlet Box and secure by threading Outlet Box Screws (not supplied) into the Mounting Holes on the Outlet Box. Tighten until snug.

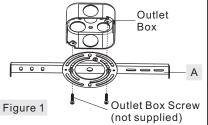

STEP 4 - Install Shade


- A. Place the Shade (E) over the end of the Stem and secure with the Hex Nut (F). Tighten gently until snug.
- B. Pass the Cap (G) over the end of the Stem and secure with the Finial (C). Hand tighten until snug.

Your fixture is now assembled and ready to use. Enjoy!

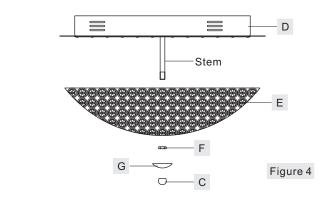

STEP 2 - Wire Connections

A. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.



#