

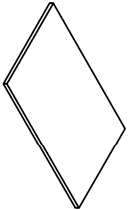


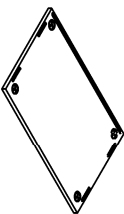











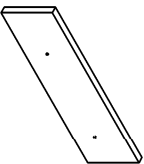


ASSEMBLY INSTRUCTIONS / NOTICE DE MONTAGE / INSTRUCCIONES DE MONTAJE

ITEM NO. / ARTICLE NO. / ARTICULO NO : DS-D374-009

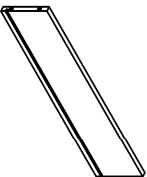DESCRIPTION / DESCRIPCIÓN/Description : Middle Rail/ Rail moyen/ Carril medio

	(A) X1 Top panel X1 Techo X1 Le toit		(B) X1 Left side panel X1 Panel izquierdo X1 Panneau gauche		(C) X1 Right side panel X1 Panel lateral derecho X1 Panneau latéral droit
	(D) X1 Bottom Panel X1 Piso intermedio X1 Étage intermédiaire		(E) X2 Middle rail X2 Plato medio X2 Plaque médiane		(F) X1 Back panel X1 Placa posterior X1 Fond de panier
	(G) X3 Drawer front X3 Panel de bombeo X3 Panneau de pompage		(H) X3 Left drawer sides X3 Placa lateral X3 Plaque latérale		(I) X3 Right drawer sides X3 Placa lateral X3 Plaque latérale
	(J) X3 Drawer Back Panel X3 Despues de bombear X3 Après pompage		(K) X3 Drawer bottom panel X3 Dibujiar la placa inferior X3 Dessiner la plaque inférieure		(L) X4 Legs X4 Panel izquierdo X4 Panneau gauche
	(M) X3 Rail X3 Rail X3 Carril		(N) X6 Handle screw Ø5/32"*22mm X6 Tornillo de la manija Ø5/32"*22mm X6 Vis de poignée Ø5/32"*22mm		(O) X14 Dowel Ø8*30mm X14 Hibisco Ø8*30mm X14 Hibiscus Ø8*30mm
	(P) X16 Bolt Ø1/4"*23mm X16 Perno Ø1/4"*23mm X16 Boulon Ø1/4"*23mm		(Q) X6 Knob 40*20*L70mm X6 Mancijar 40*20*L70mm X6 Poignée 40*20*L70mm		

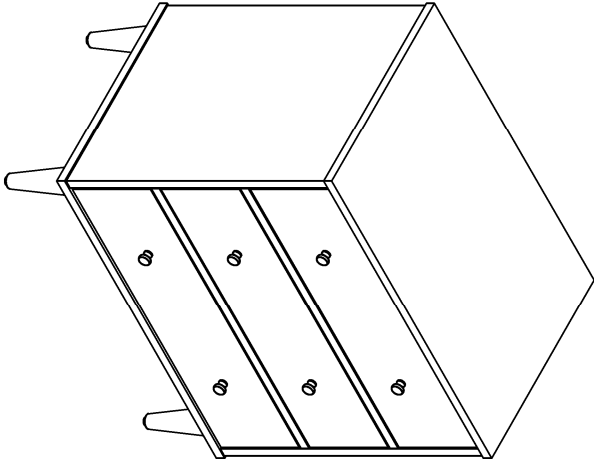


ASSEMBLY INSTRUCTIONS / NOTICE DE MONTAGE / INSTRUCCIONES DE MONTAJE

ITEM NO. / ARTICLE NO. / ARTICULO NO : DS-D374-009

DESCRIPTION / DESCRIPCIÓN/Description : Middle Rail/ Rail moyen/ Carril medio



Step 1.

Place L/R Side Panels (Parts B&C) on a soft dry surface. Insert the hardware on Middle Rails (Part E) into the Side Panels and press down to secure them into place making sure that the front edges are flush with the front edges of the side panels.

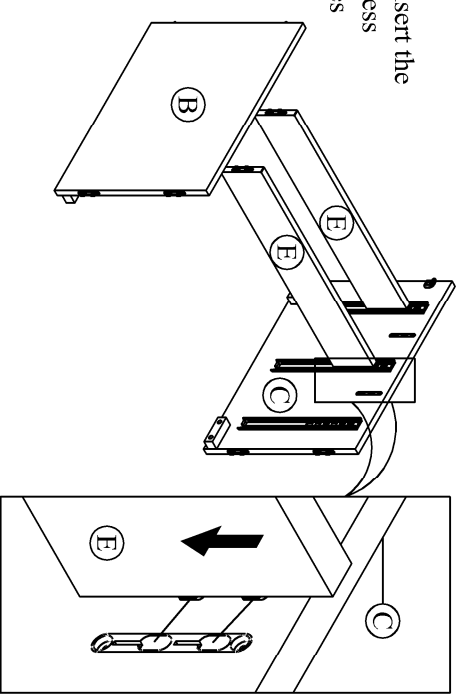

Step 2.

Align the hardware of Bottom Panel (Part D) with the hardware of the Side Panels (Parts B&C). Insert the hardware on the side panels into the hardware of the bottom panel, and press downward to secure them into place.

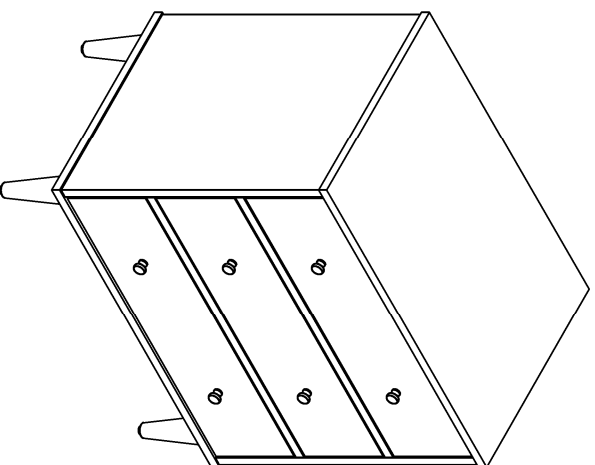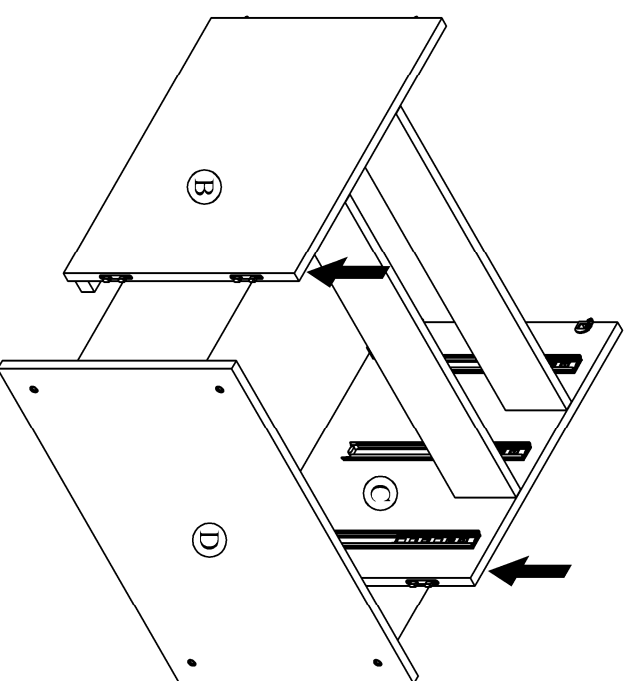


ASSEMBLY INSTRUCTIONS / NOTICE DE MONTAGE / INSTRUCCIONES DE MONTAJE

ITEM NO. / ARTICLE NO. / ARTICULO NO : DS-D374-009

DESCRIPTION / DESCRIPCIÓN/Description : Middle Rail/ Rail moyen/ Carril medio



Step 3.

Insert the bolts on Legs (Part L) into the holes of the bottom panel, and turn clockwise to tighten. **DO NOT OVERTIGHTEN.** Now turn the cabinet upright onto it's legs before the next step.

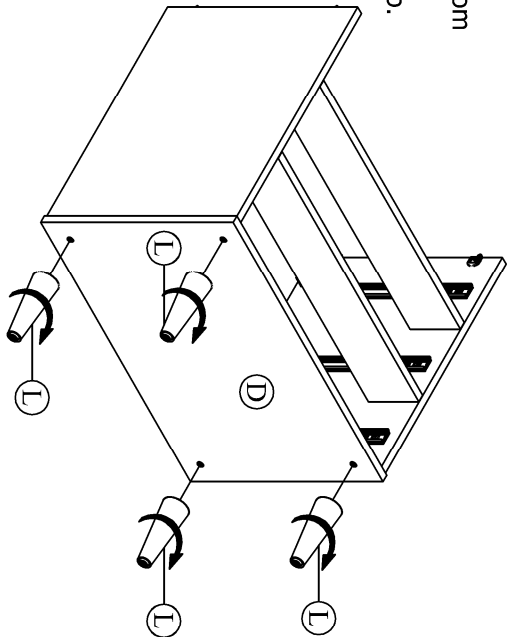

Step 4.

Add the Back Panel (Part F) to the cabinet. Insert Bolts (Part P) into the pre-drilled holes and turn clockwise to tighten. Remove the wing wrench from the bolts when completely tightened.

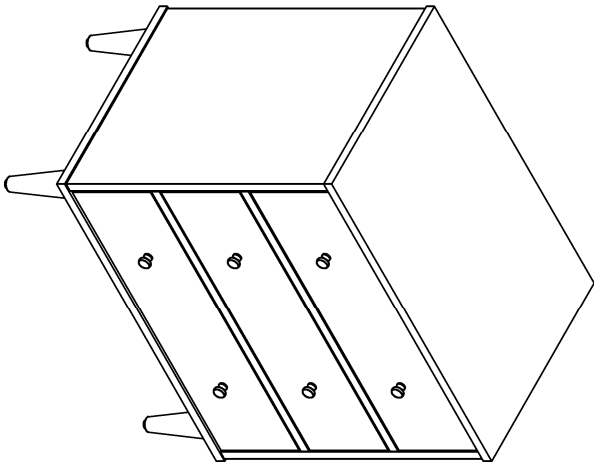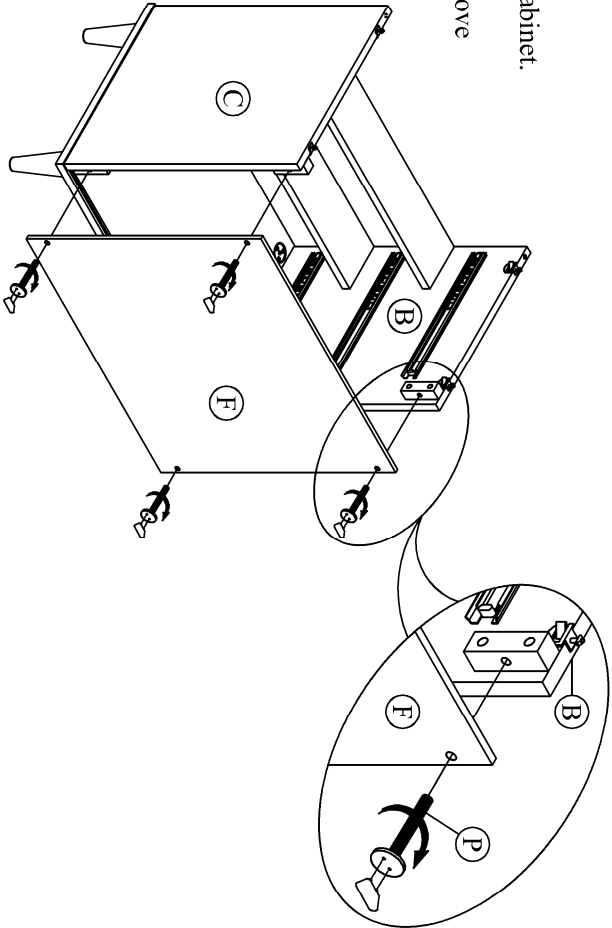


ASSEMBLY INSTRUCTIONS / NOTICE DE MONTAGE / INSTRUCCIONES DE MONTAJE

ITEM NO. / ARTICLE NO. / ARTICULO NO : DS-D374-009

DESCRIPTION / DESCRIPCIÓN/Description : Middle Rail/ Rail moyen/ Carril medio

Step 5.



Make sure that the switch locking hardware in Parts B & C are in the open position as indicated by the straight arrow in the diagram below. Align the hardware in the Top Panel (Part A) with the switch hardware in the side and back panels and lower it into place. Making sure that the hardware is completely inserted into the top turn the switches to secure it into place as indicated by the curved arrow below.

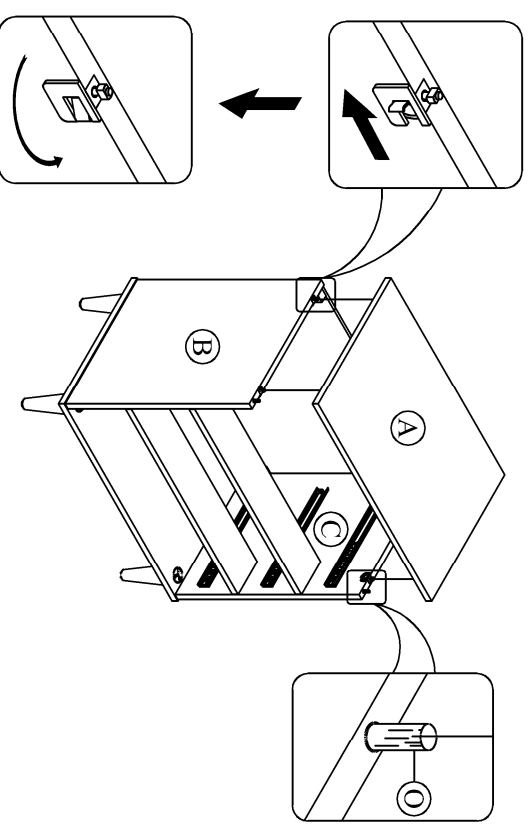

Step 6.

Align the hardware on the L/R Drawer Sides (Part H & I) with the hardware on the Drawer Front (Part G) making sure that the grooves on the drawer sides are facing in and at the bottom of the drawer. Also ensure the the drawer glides are facing out.

Press down on the drawer sides to secure them into place. Add Wood Dowels (Part O) to the support rail (Part M) and insert into the back of the drawer front.

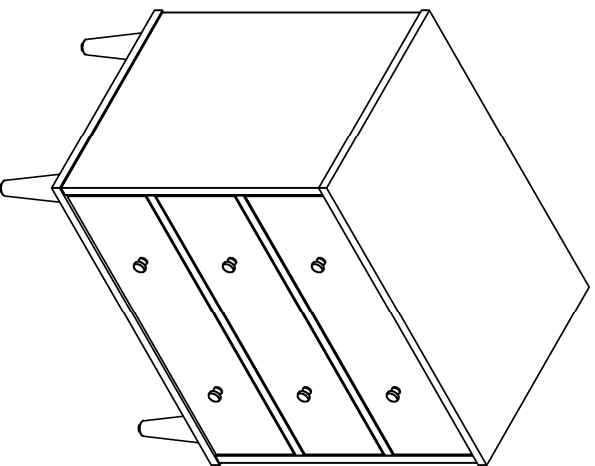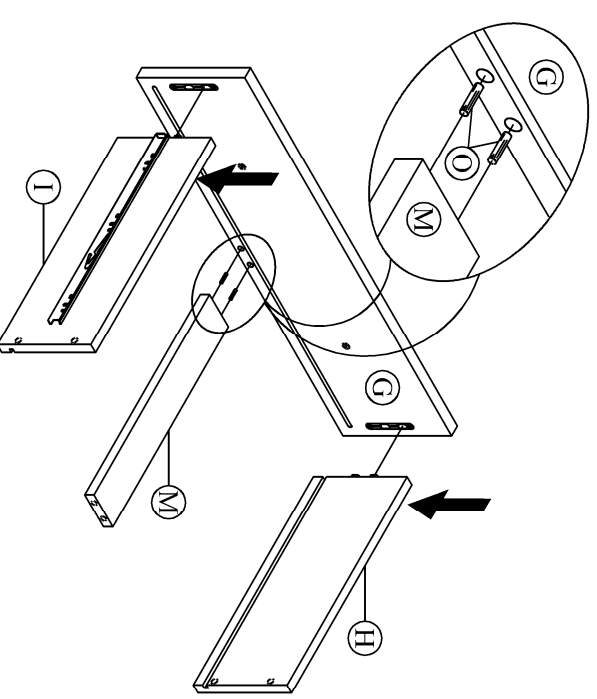


ASSEMBLY INSTRUCTIONS / NOTICE DE MONTAGE / INSTRUCCIONES DE MONTAJE

ITEM NO. / ARTICLE NO. / ARTICULO NO : DS-D374-009

DESCRIPTION / DESCRIPCIÓN/Description : Middle Rail/ Rail moyen/ Carril medio


Step 7.

Insert the Drawer Bottom (Part K) into the grooves in the side panels and press forward until the front edge goes completely into the groove in the drawer front. Add the Back Panel (Part J) making sure the bottom panel insert completely into the groove. Insert Bolts (Part P) and turn clockwise to tighten completely. Remove the wing wrench from the bolts when they are completely tightened. Repeat this step for the other two drawers.

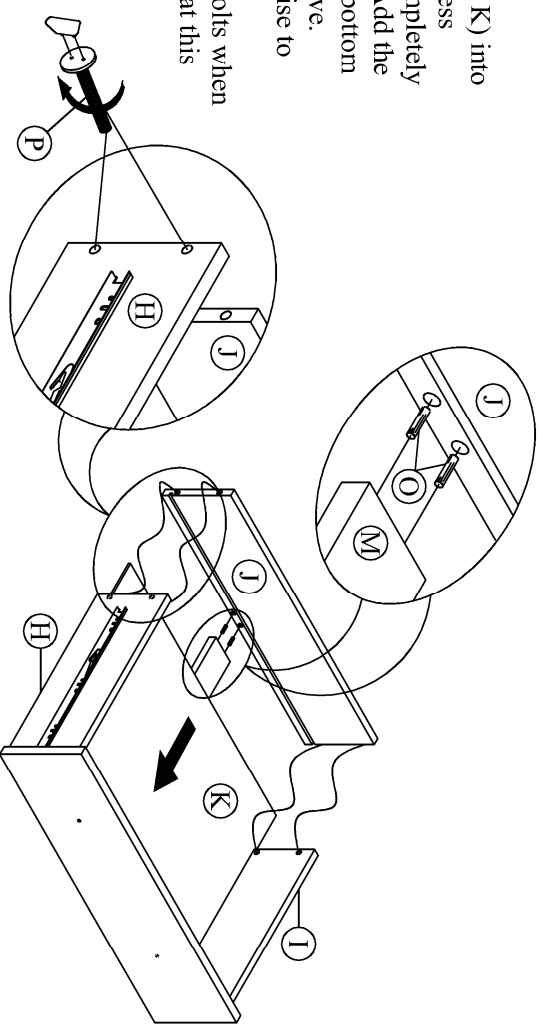

Step 8.

Insert the bolt (Part N) into the hole from the back side of the drawer front. Add the Handle (Part O). Use a Phillips head screwdriver to tighten the bolt by turning clockwise. do not turn the handle itself to tighten. you will scratch the drawer front if you do. Align the drawer glides with those in the cabinet and press forward. Open and close the drawer to get a smooth glide. Your cabinet includes levelers in the legs that can be adjusted by turning clockwise or counter clockwise.

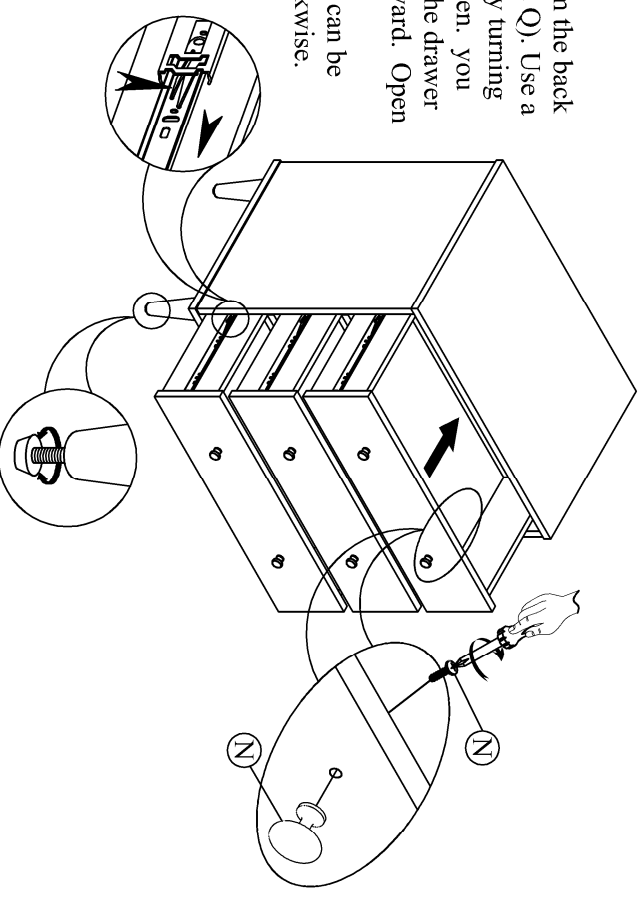


Furniture Safety Bracket Tip Resistant

- Designed to help prevent furniture tipover.
- Detachable strap allows for easy moving of furniture for cleaning .
- Also helps prevent furniture tipover during minor tremor.


Installation:

1. Locate a wall stud behind your furniture. Position a bracket on the stud approximately 1" below the top of the furniture. Mark and drill pilot hole into the center of the stud with a 3/32" drill bit. Attach a bracket to the stud with the long screws provided.

2. On the back of the furniture, a bracket will need to be attached to the furniture frame at the top. To do this, temporarily move the furniture into its final position and mark the location of the wall bracket on the furniture frame. Move the furniture away from the wall and place a bracket on the mark. Mark and drill holes for screws with a 3/32" drill bit. Attach the bracket to the furniture with the short screws provided.

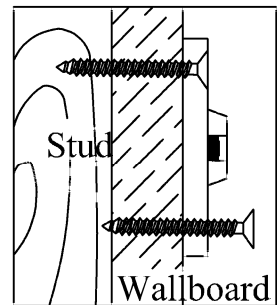

3. Move the furniture into its final position, taking care to line up the wall bracket with the furniture bracket. Thread a strap through the bracket as shown in the illustration. Tighten strap until snug. Do not over tighten.

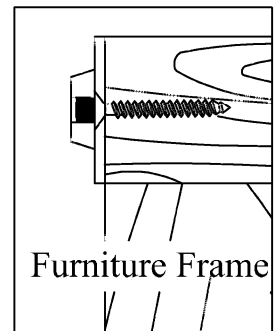

Important:

Check to be sure the wall bracket is firmly screwed into wall stud, the furniture bracket is firmly attached to the frame, and the strap is snug.

Caution:

This product is not to be a substitute for proper parental supervision. Manufacturer assumes no liability for improper installation or excessive loads placed on screws brackets or straps.

