


# CHE-TVS-003G-V1

## TV STAND

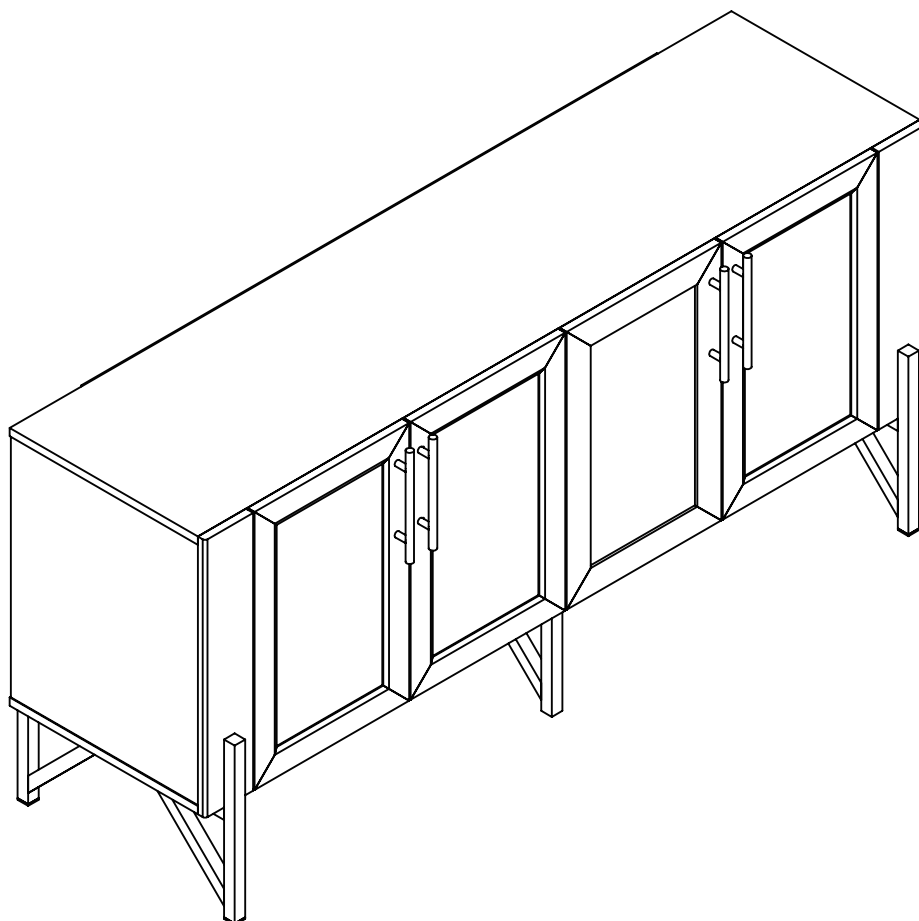


**ASSEMBLY INSTRUCTION**


ADULT ASSEMBLY REQUIRED

**THE PRODUCT MAY RECOMMENDED  
ASSEMBLING BY MORE THAN ONE  
PERSON.**

**PLEASE ASK FOR ASSISTANCE AT YOUR  
CONVENIENCE BEFORE ASSEMBLING.**

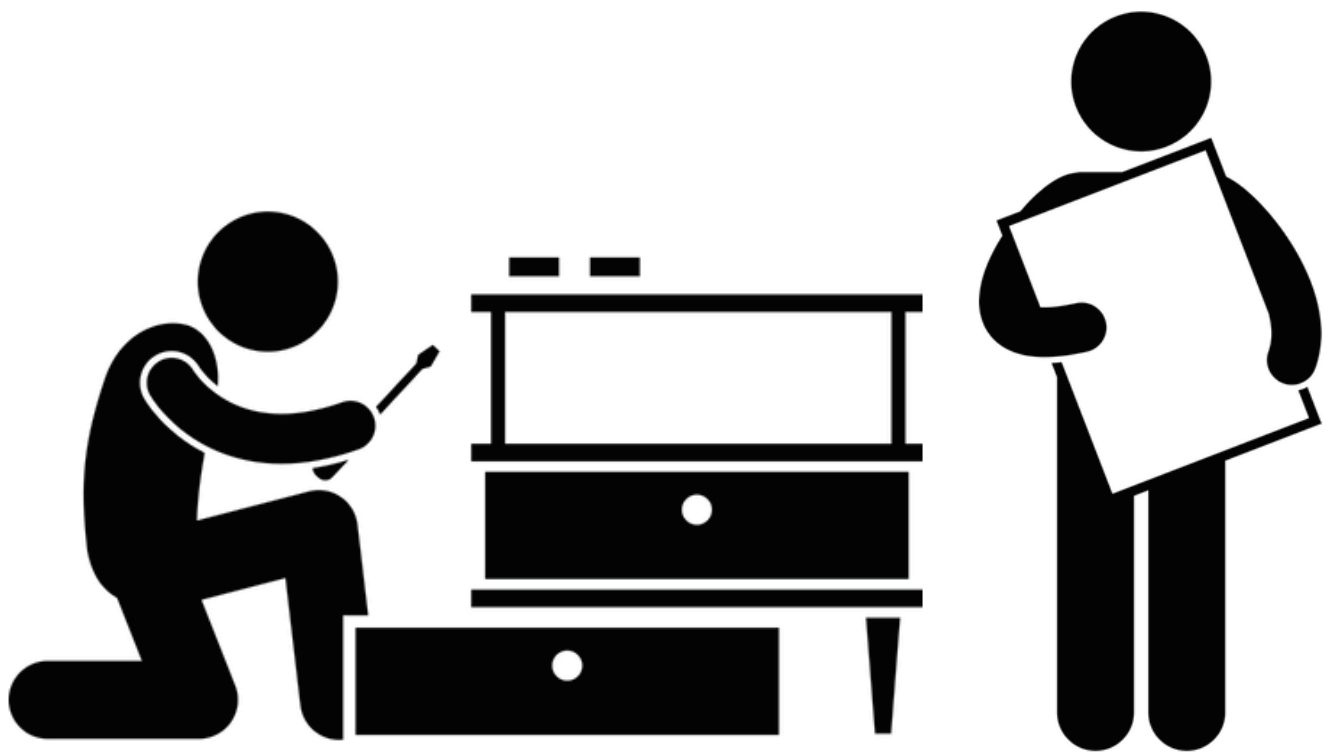

# Before You Start

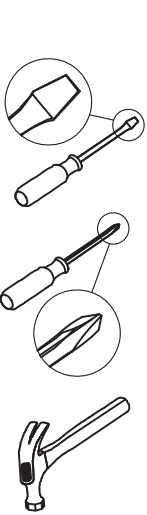

Read through each step carefully and follow the proper order

Separate and count all your parts and hardware

Give yourself enough room for the assembly process


Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer

Caution: If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.


# Cam Lock Fastening System

This Cam Lock Fastening System will be used throughout the assembly process.


1

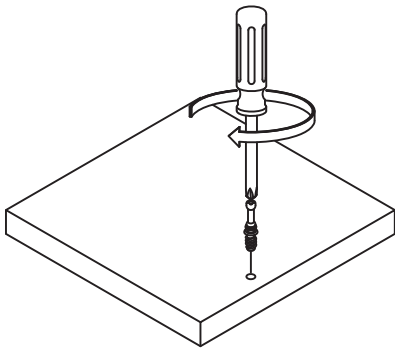


2

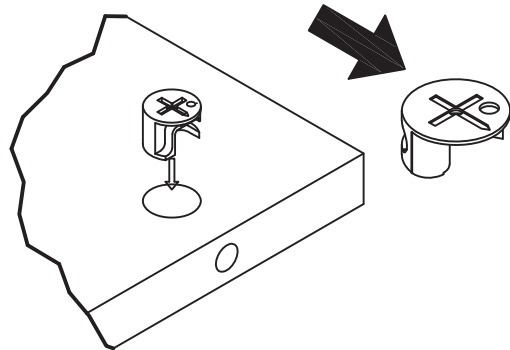


3

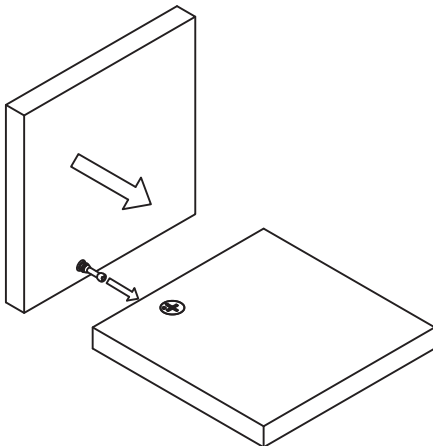


4

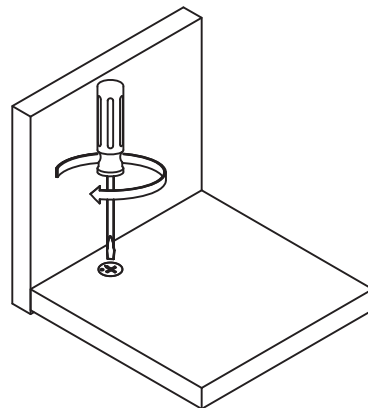

# Parts Identification

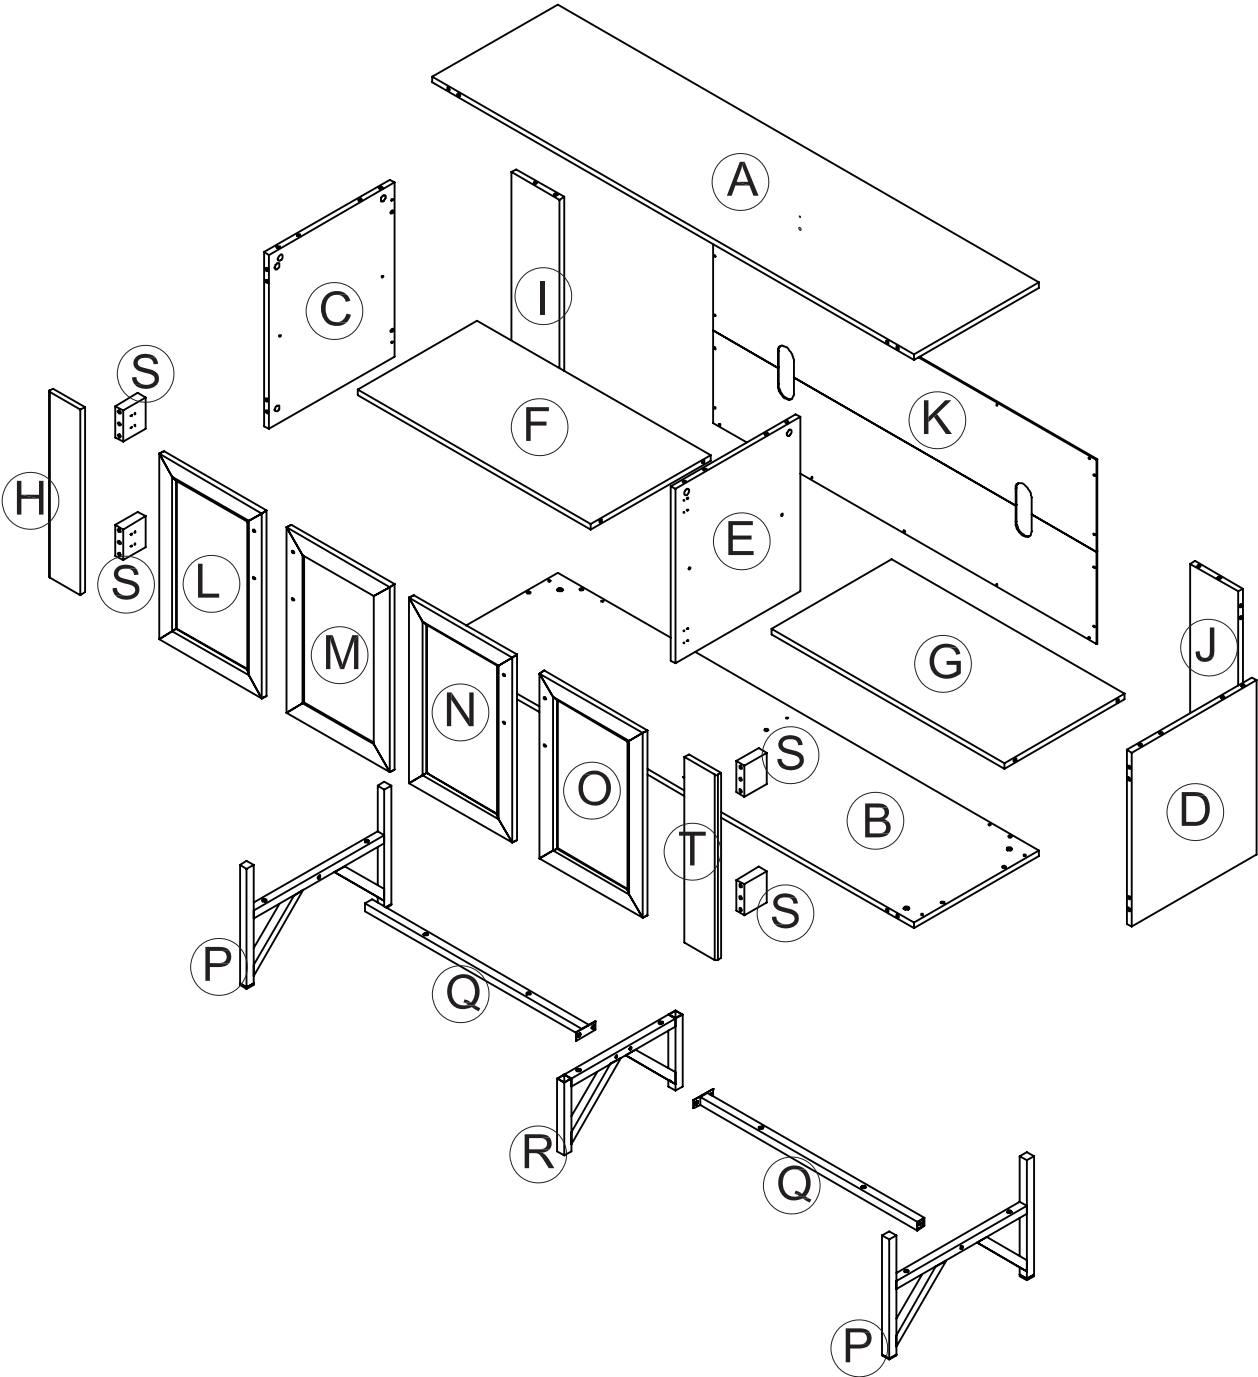


# Parts Identification

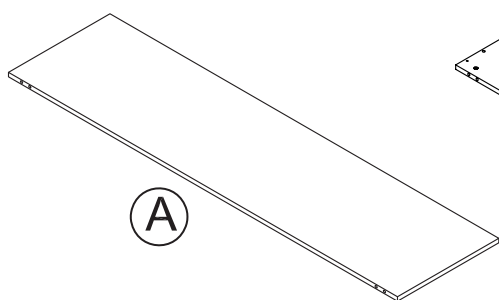


(A)

TOP

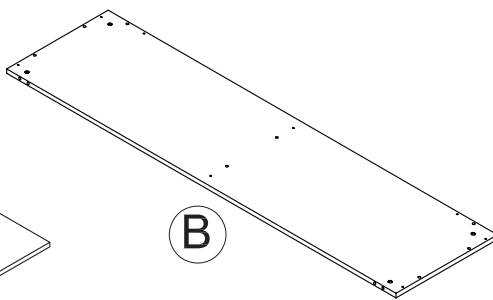


(B)

BOTTOM

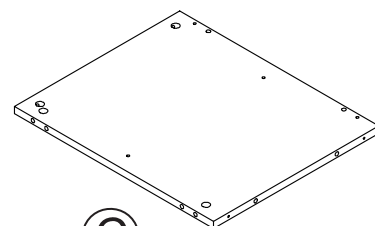


(C)

LEFT

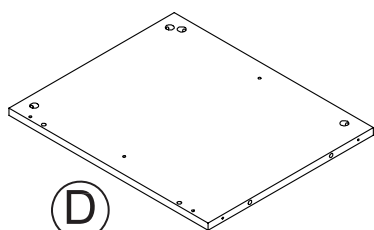


(D)

RIGHT

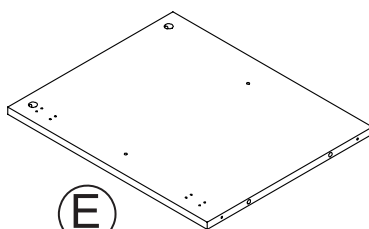


(E)

MID-VERTICAL SHELF

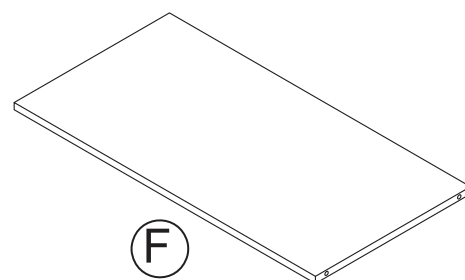


(F)

LEFT SHELF

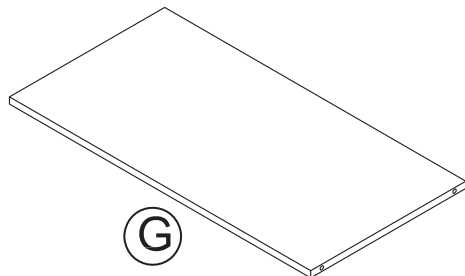


(G)

RIGHT SHELF

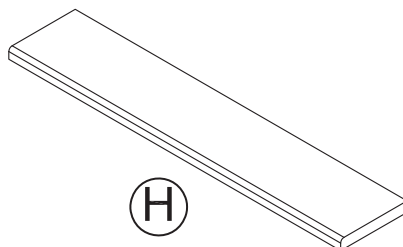


(H)

FRONT LEFT DECOR

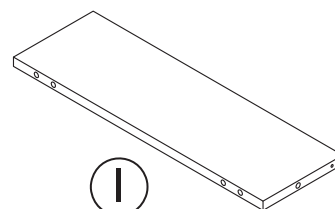


(I)

BACK LEFT DECOR

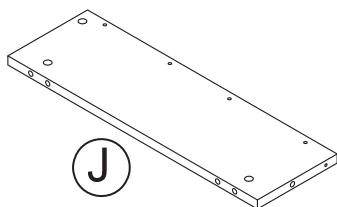


(J)

BACK RIGHT DECOR

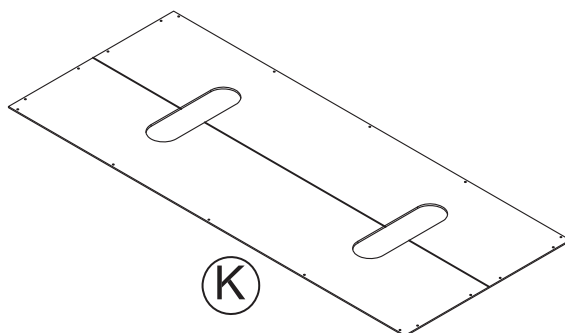

(K)


BACK PANEL

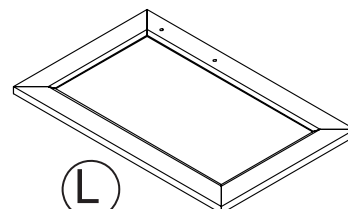


(L)

LEFT DOOR


# Parts Identification

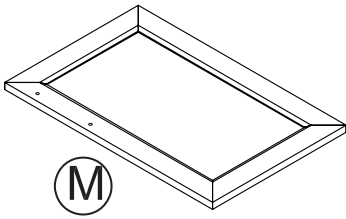


MIDDLE LEFT DOOR

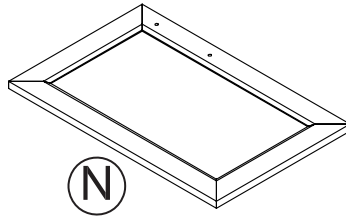


MIDDLE RIGHT DOOR

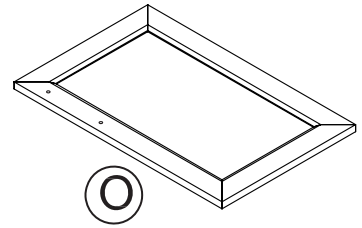


RIGHT DOOR

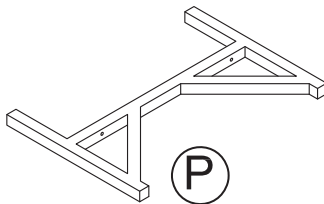


RIGHT AND LEFT END x 2

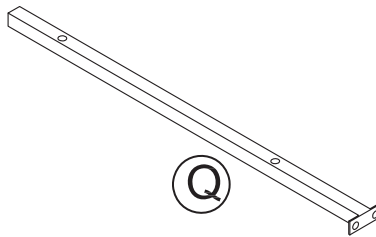


LOWER SUPPORT x 2

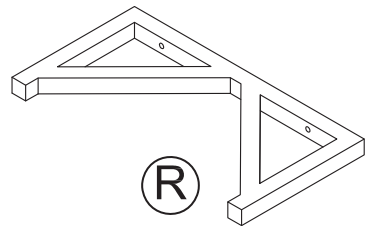

MIDDLE LEG

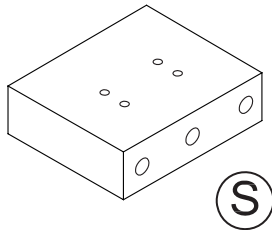


INNER SIDE SUPPORT x 4

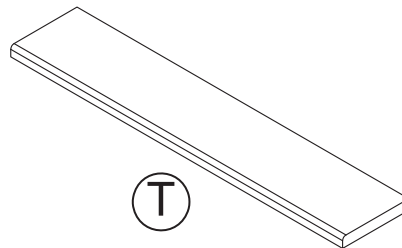
















FRONT RIGHT DECOR
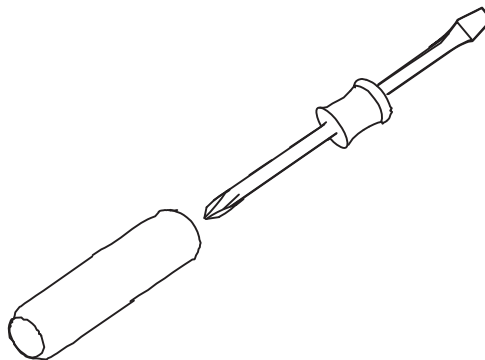
# Hardware Identification






**DOUBLE-HEADED SCREWDRIVER:**  
THIS TOOL ALLOWS YOU TO USE DIFFERENT HEAD FOR DIFFERENT  
TYPE OF SCREWS BY SWITCH THE YELLOW HANDLE

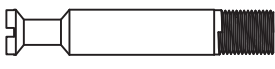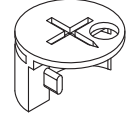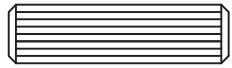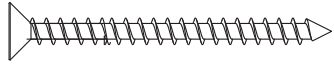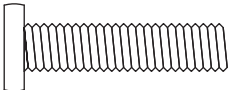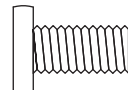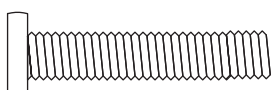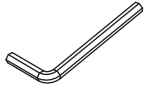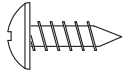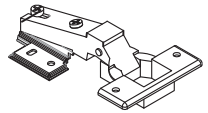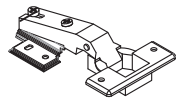
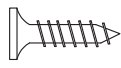
# Hardware Identification

 Ø6 x 33mm ① CAM BOLT QTY: 28+1 spare	 Ø15 x 10 mm ② CAM LOCK QTY: 28+1 spare	 Ø8 x 30mm ③ WOOD DOWEL QTY: 32+1 spare	 Ø4 x 40 mm ④ SCREW QTY: 8+1 spare
 1/4" x 30mm ⑤ BOLT QTY:10+1 spare	 1/4" x 10mm ⑥ BOLT QTY:4+1 spare	 1/4" x 40mm ⑦ BOLT QTY:10+1 spare	 4mm ⑧ HEX KEY QTY: 1
 Ø4 x 14mm ⑨ SCREW QTY: 18+1 spare	 Ø35 ⑩ EUROPE HINGE QTY: 4	 Ø35 ⑪ EUROPE HINGE QTY: 4	 Ø 4 x 14mm ⑫ SCREW QTY: 48+2spare
 M4 x 19 mm ⑬ BOLT QTY: 8+1 spare	 ⑭ HANDLE QTY: 4	 ⑮ TIPPING RESTRAINT HARDWARE KIT QTY:1	

# Step 1

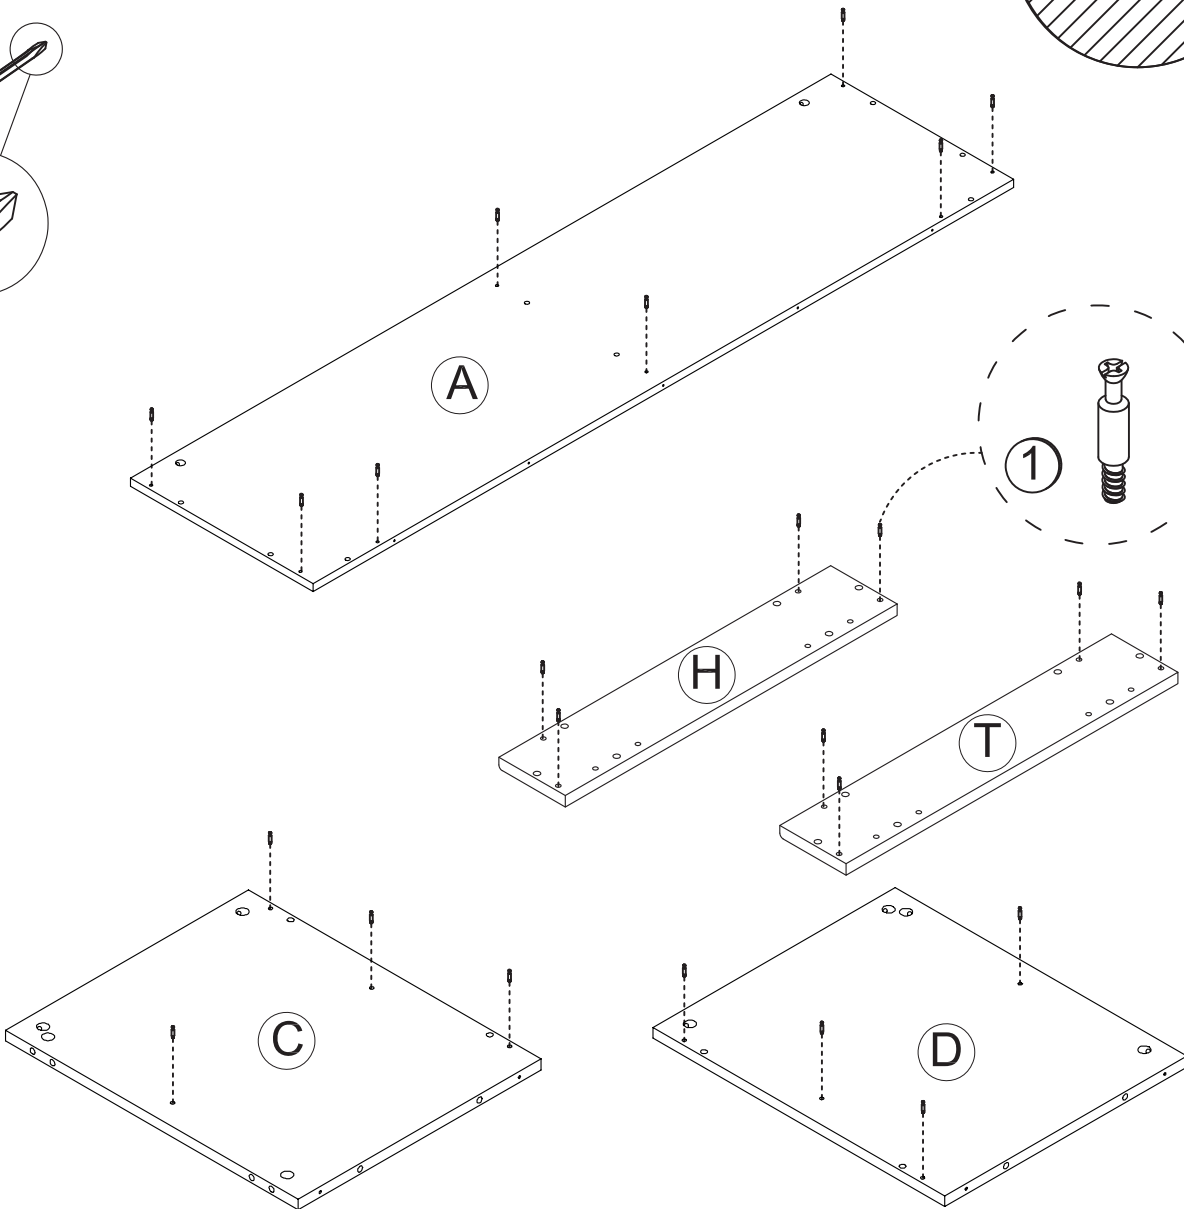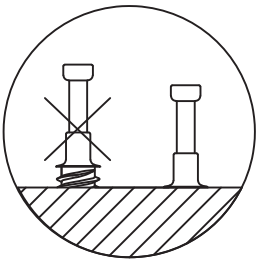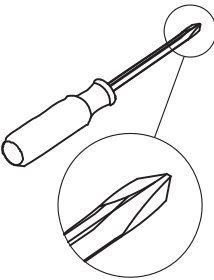


Turn part E over

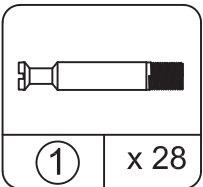
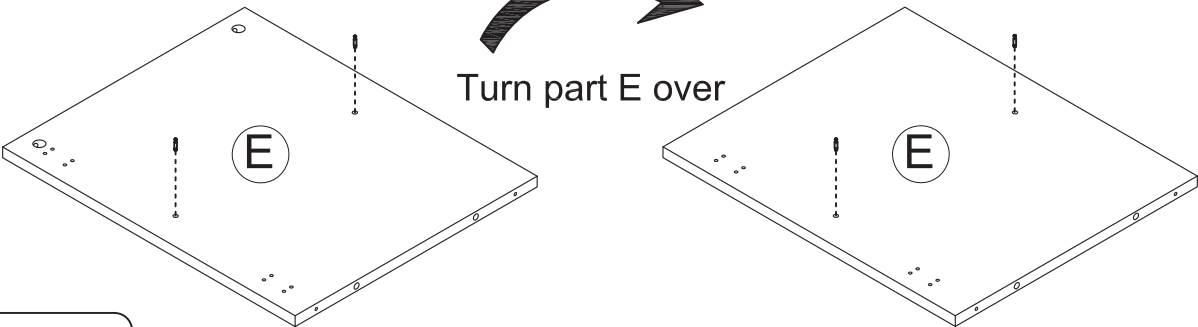






# Step 2

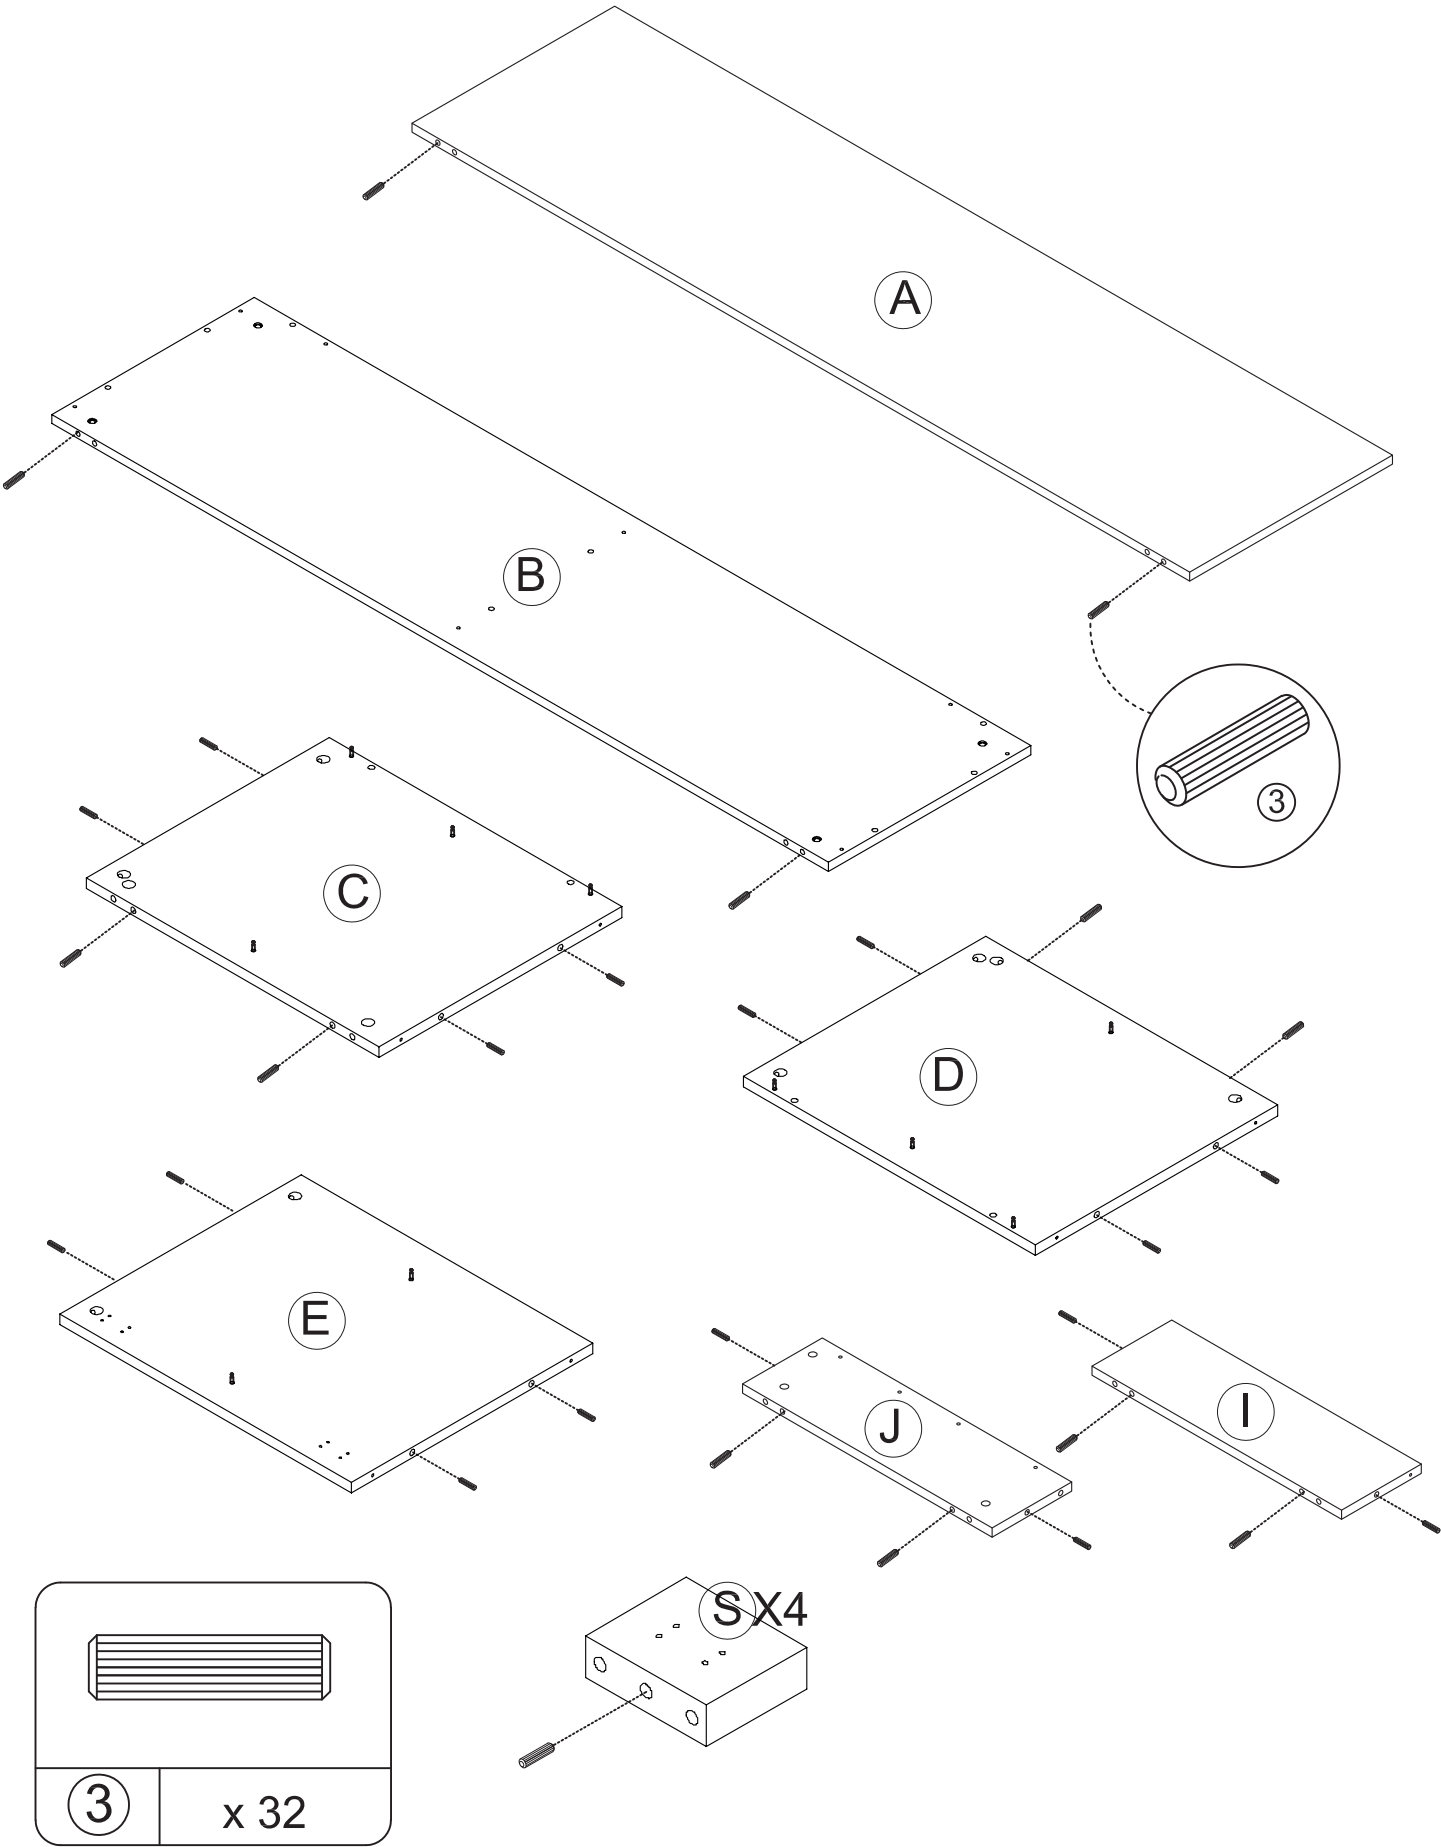


# Step 3

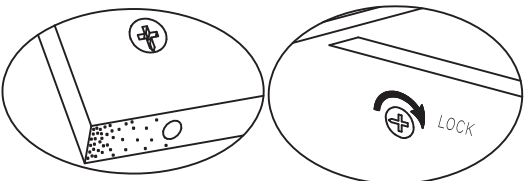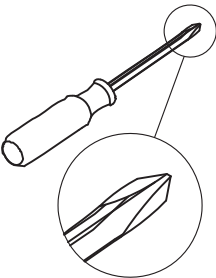

Proper orientation of CAM LOCK

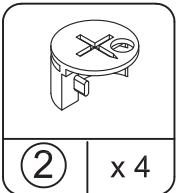
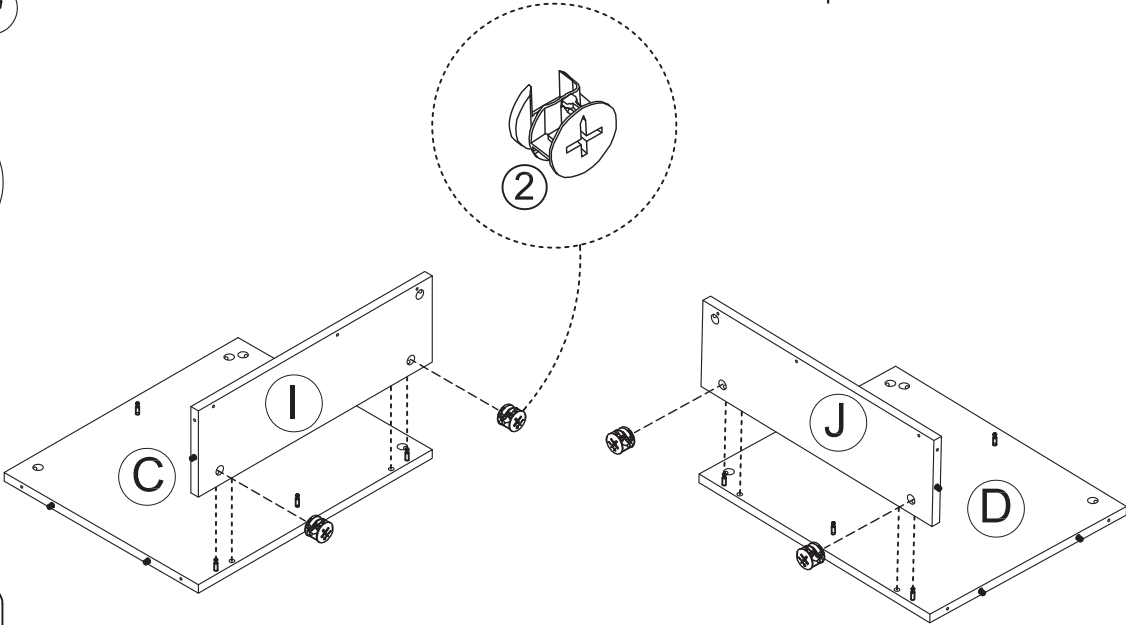


# Step 4

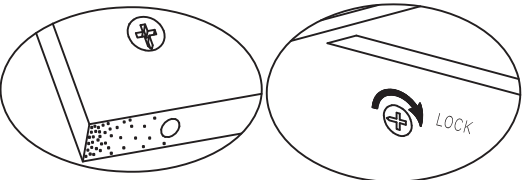


Proper orientation of CAM LOCK


FINISHED EDGE

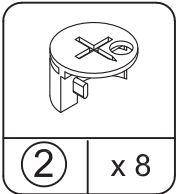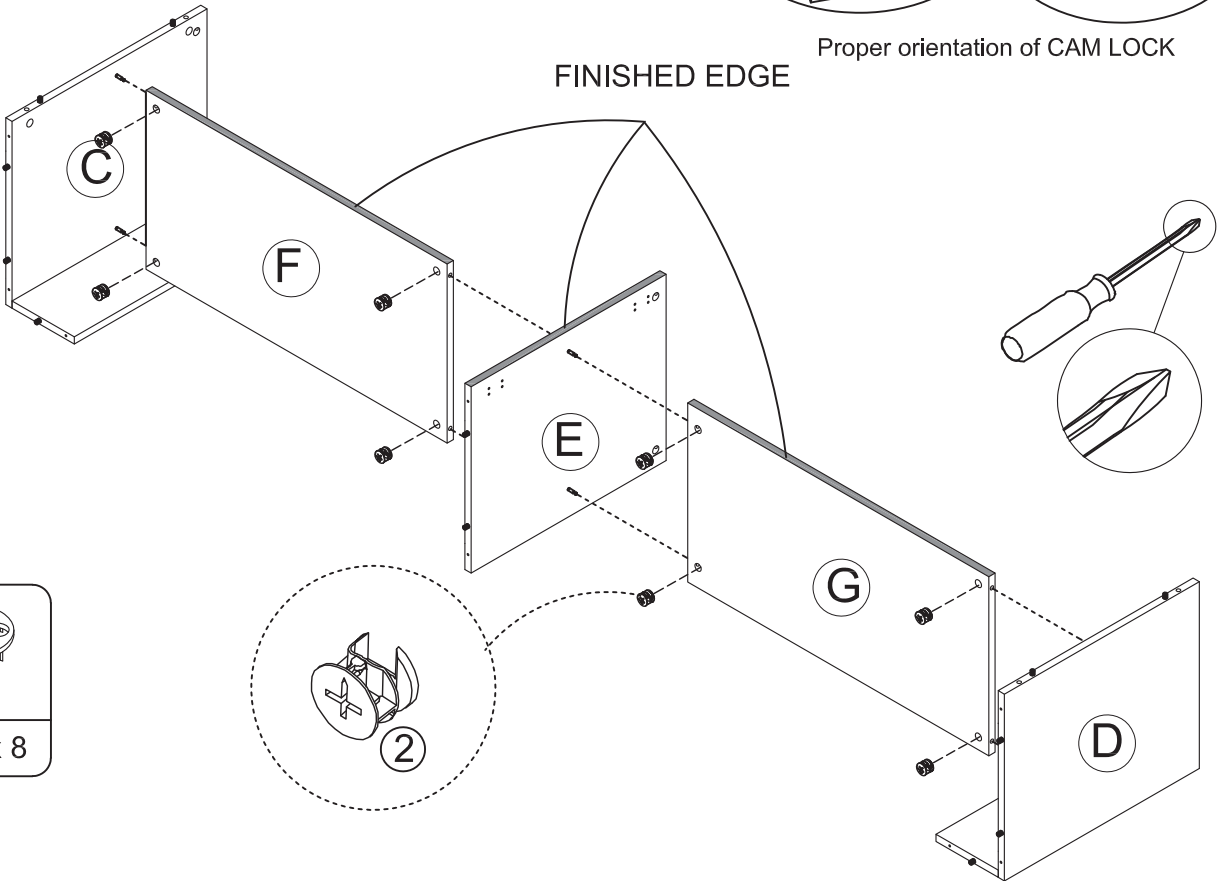


# Step 5

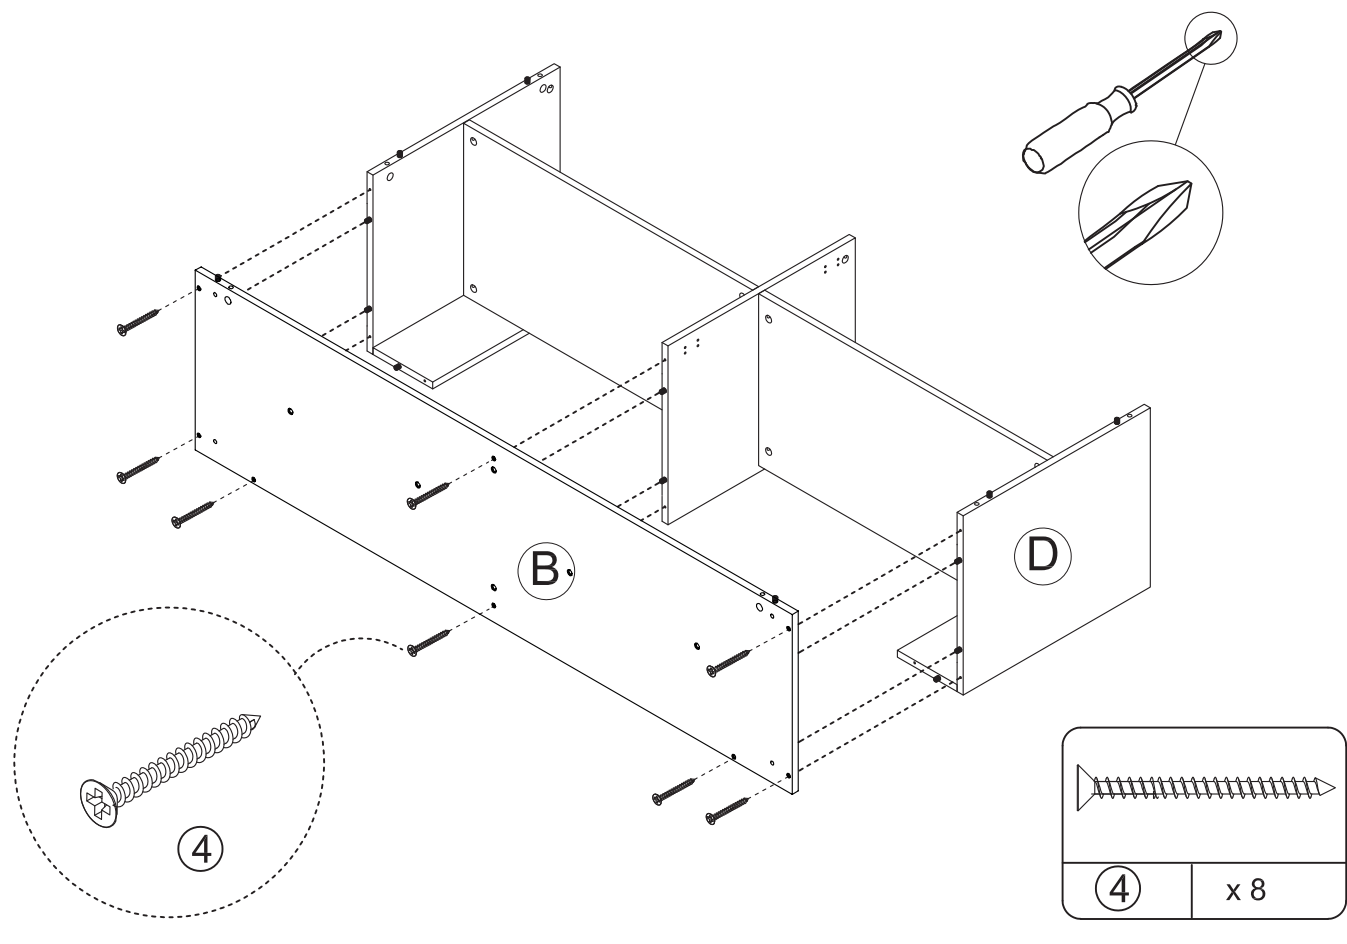

# Step 6

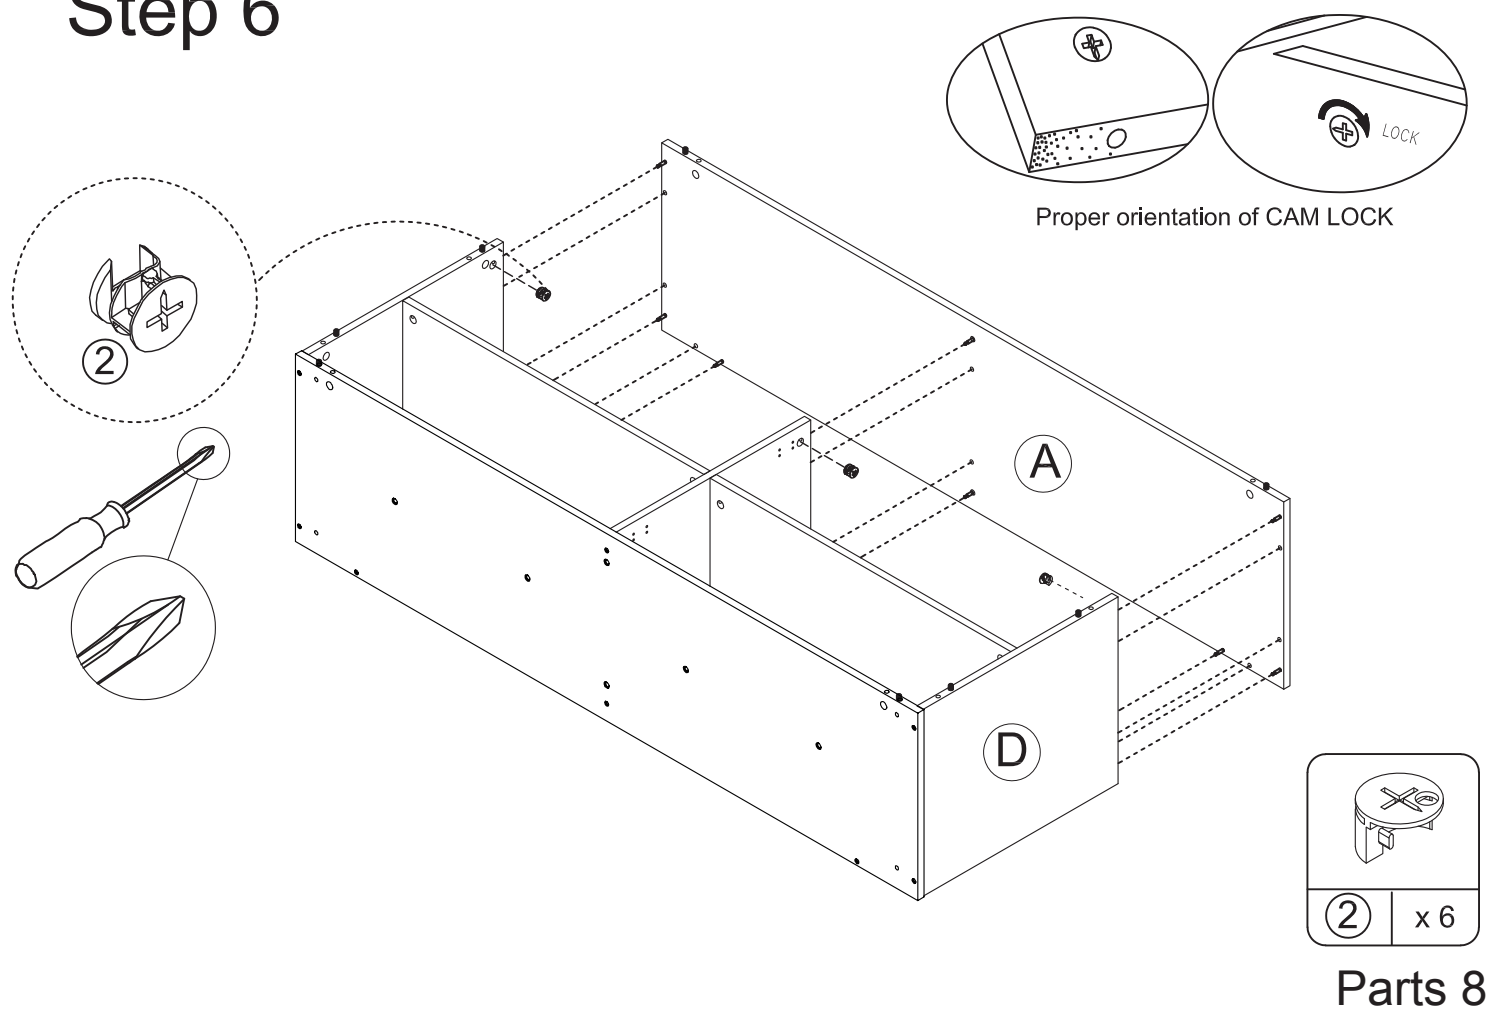


# Step 7

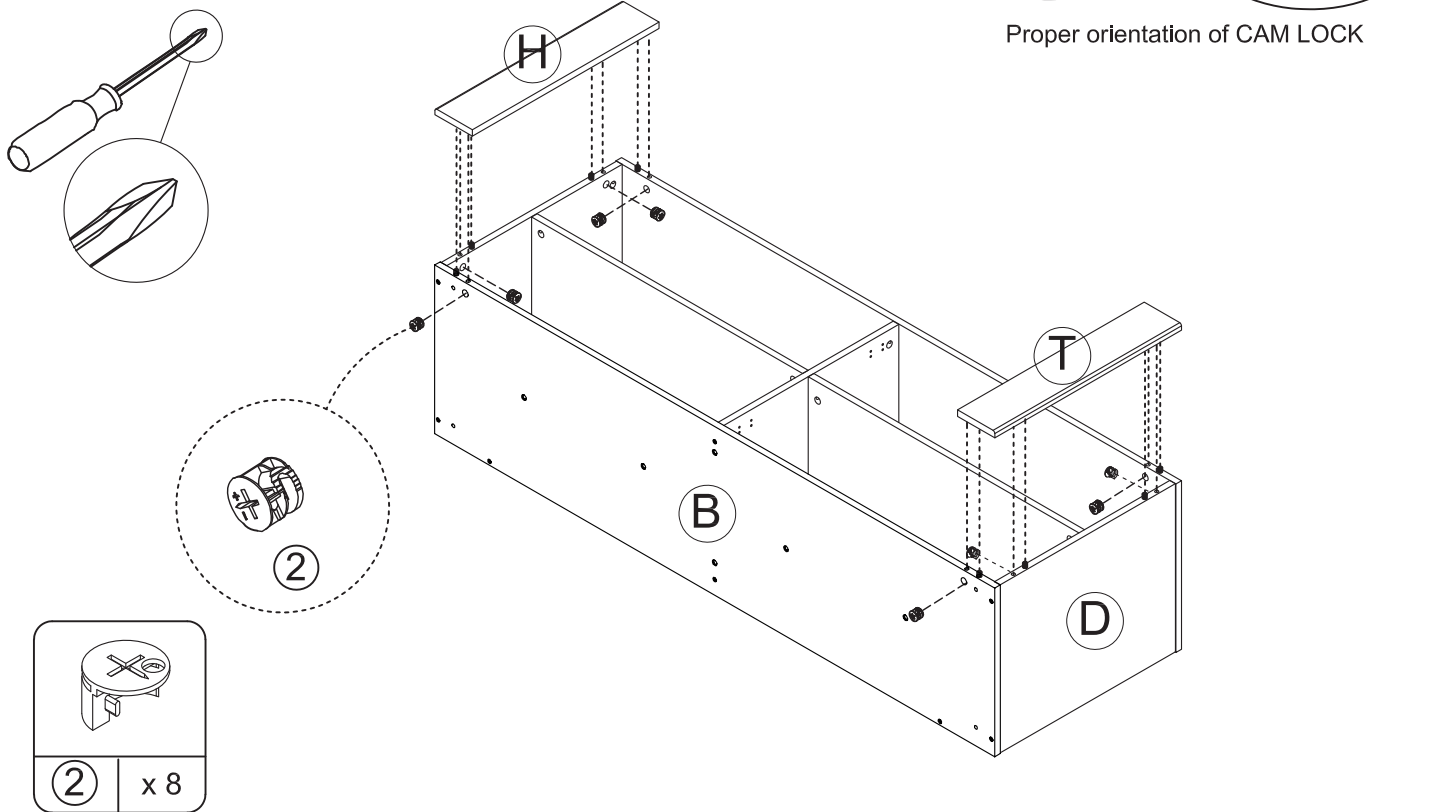

# Step 8


Do Not Screw Hardware Part 6 Tightly At This Step

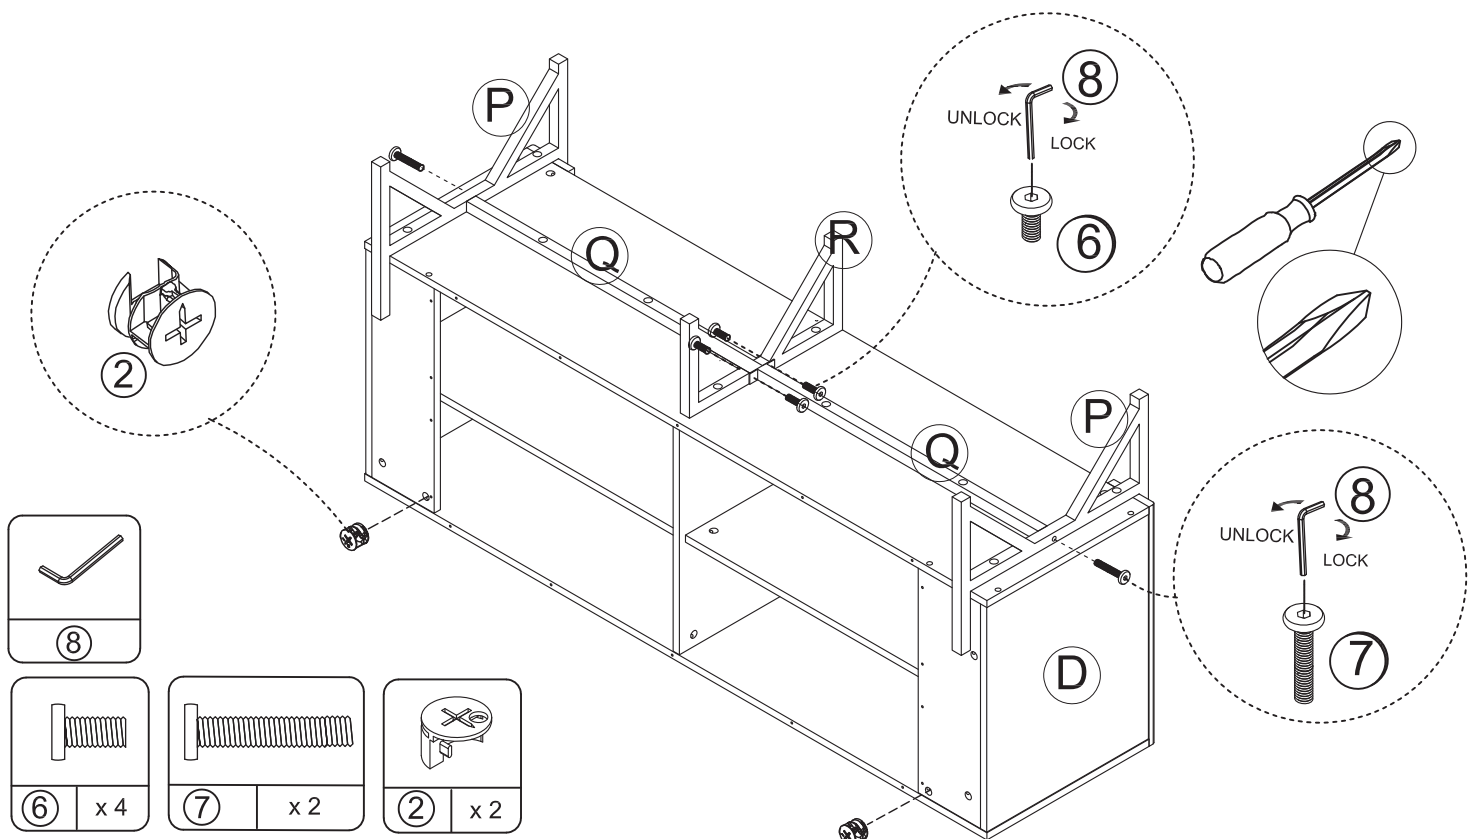


Parts 9

# Step 9

Please Lock All Screws Tightly At This Step

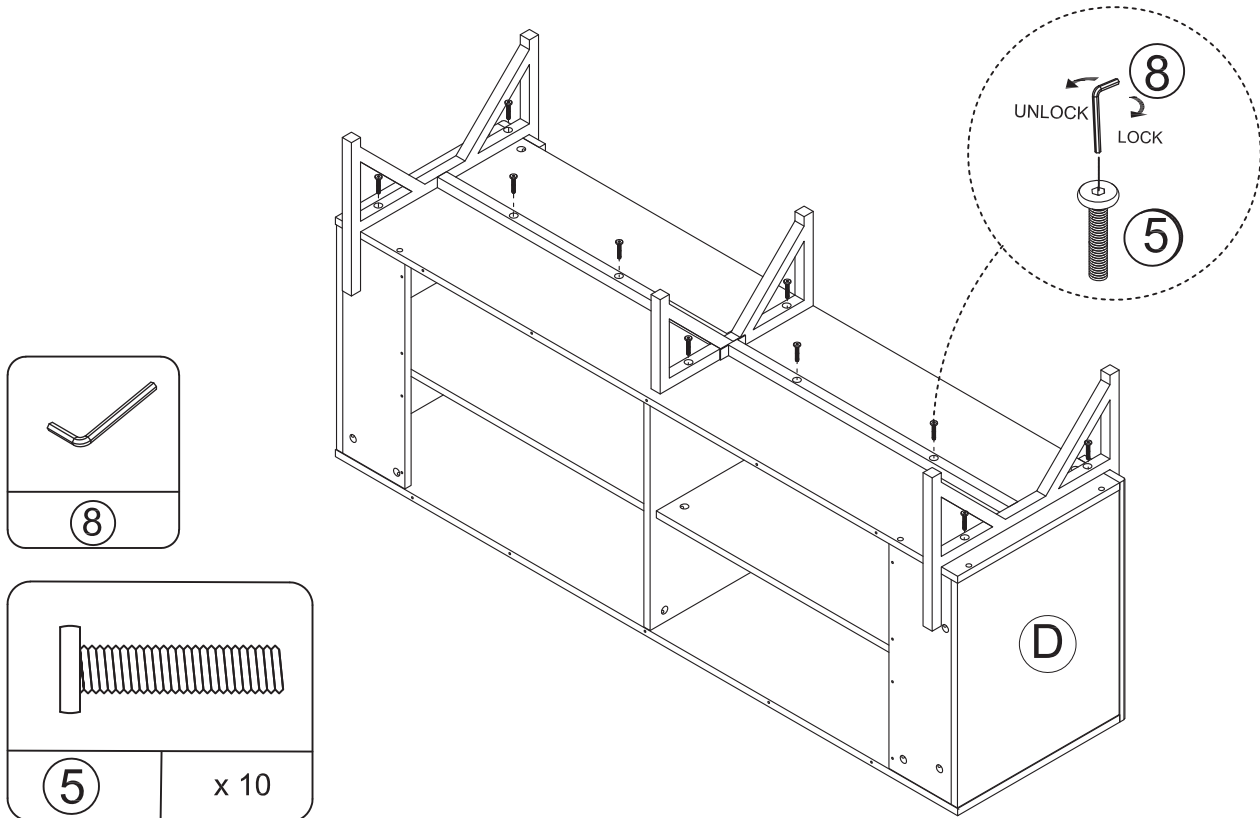


# Step 10

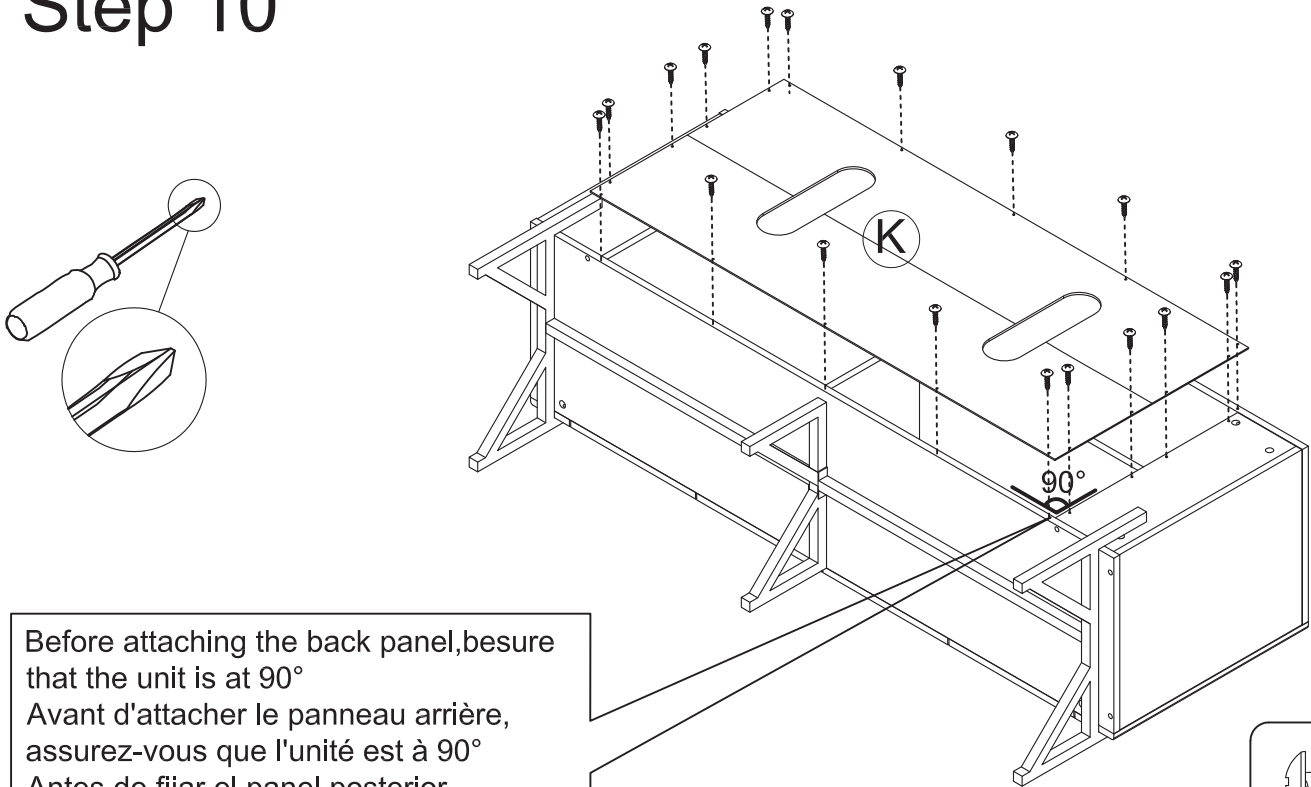

Before attaching the back panel, ensure that the unit is at 90°


Avant d'attacher le panneau arrière, assurez-vous que l'unité est à 90°

Antes de fijar el panel posterior, asegúrese de que la unidad esté a 90°

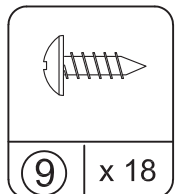


Parts 10

# Step 11

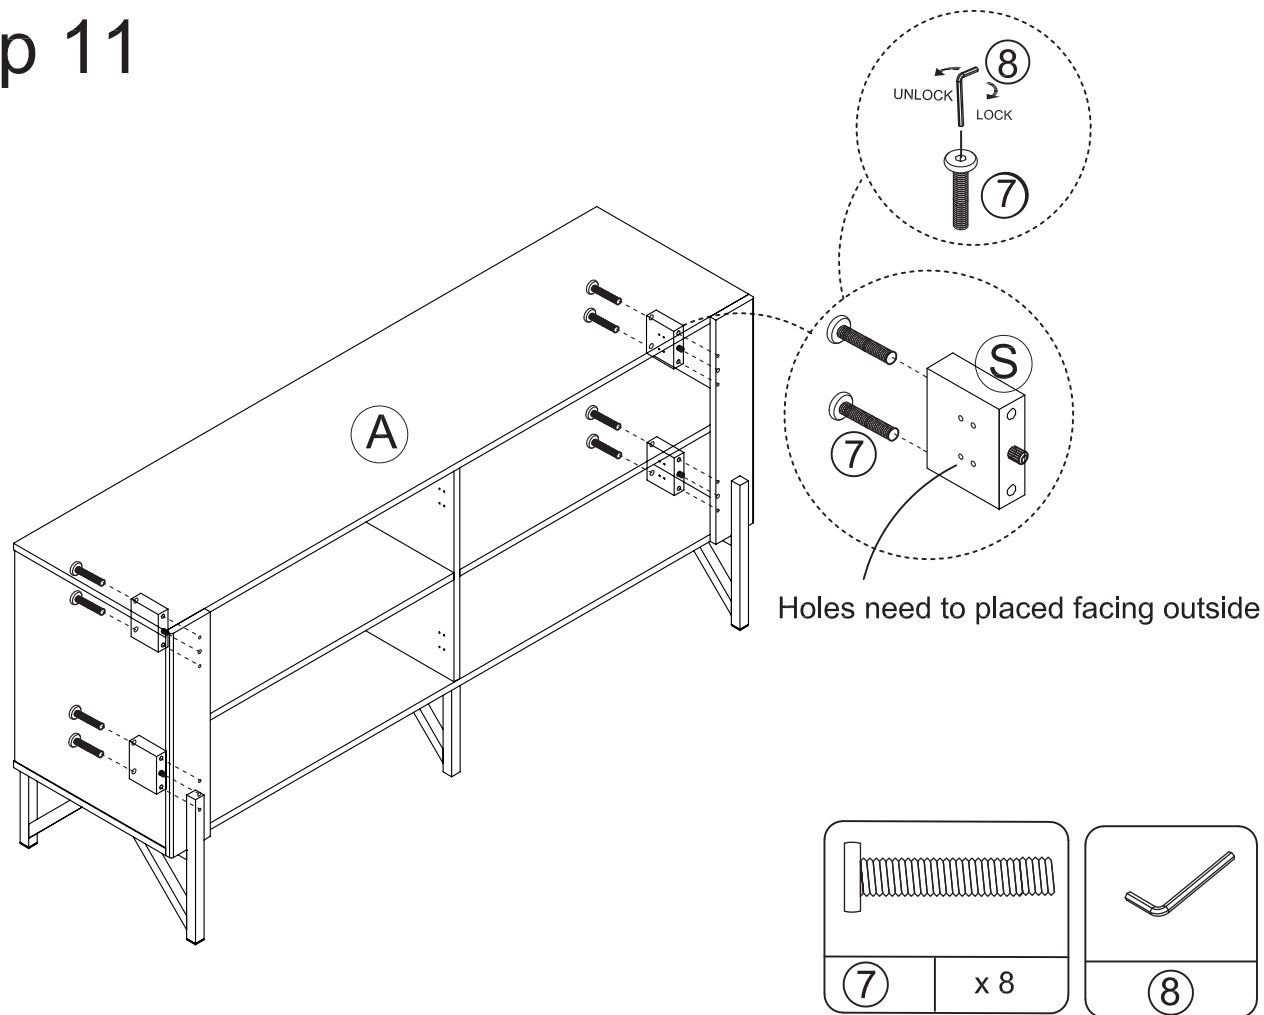


# Step 12

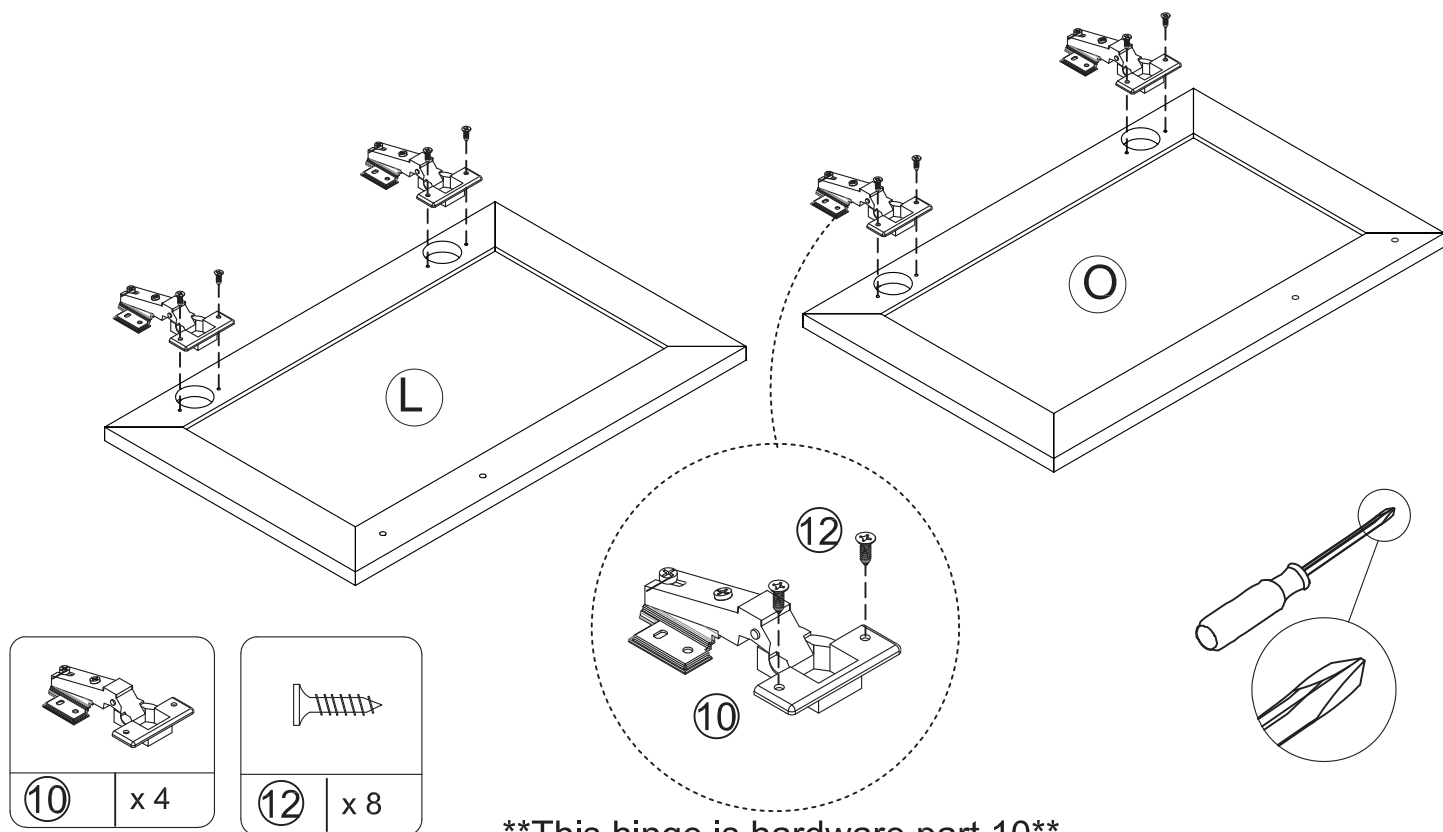





Parts 11

# Step 13

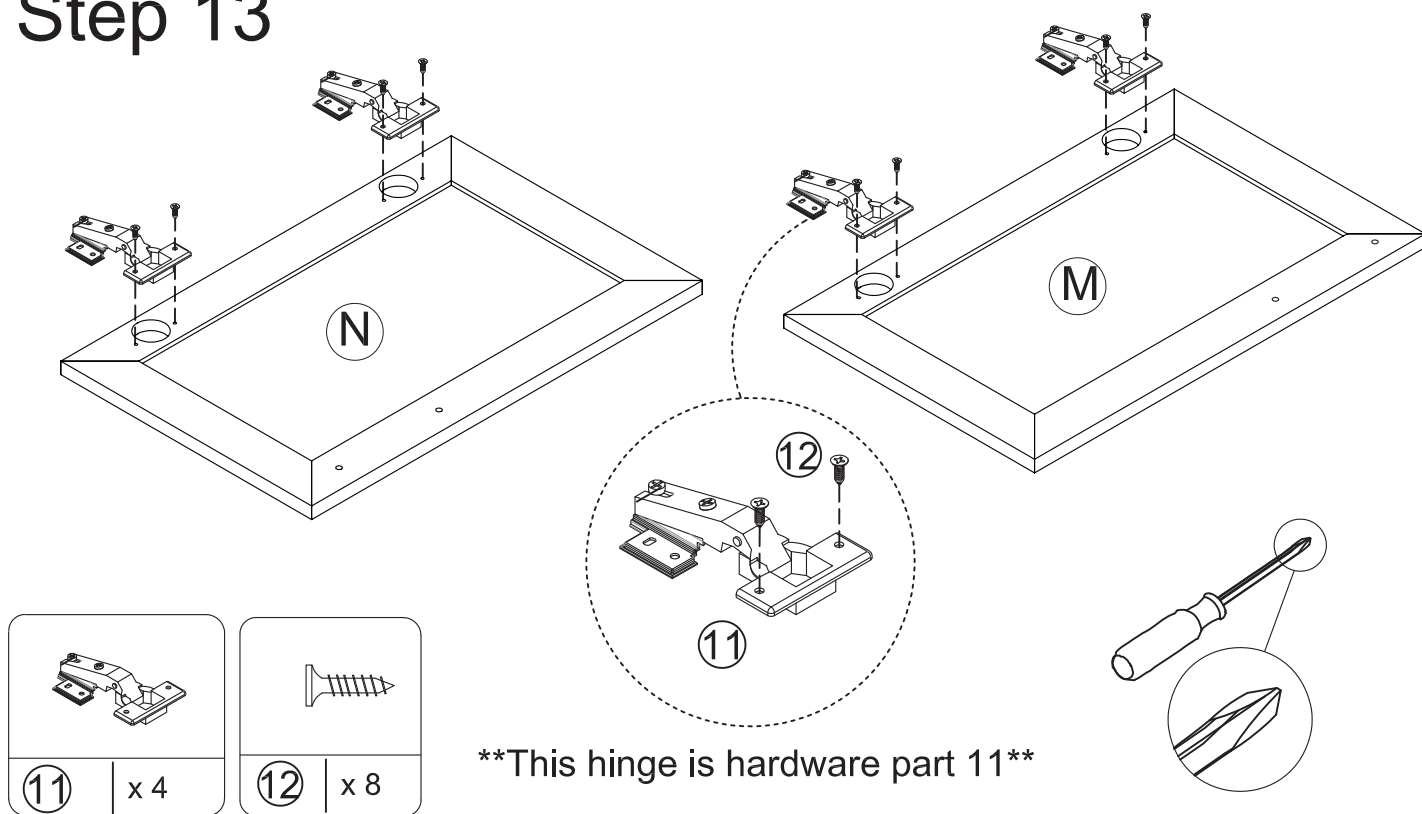



# Step 14

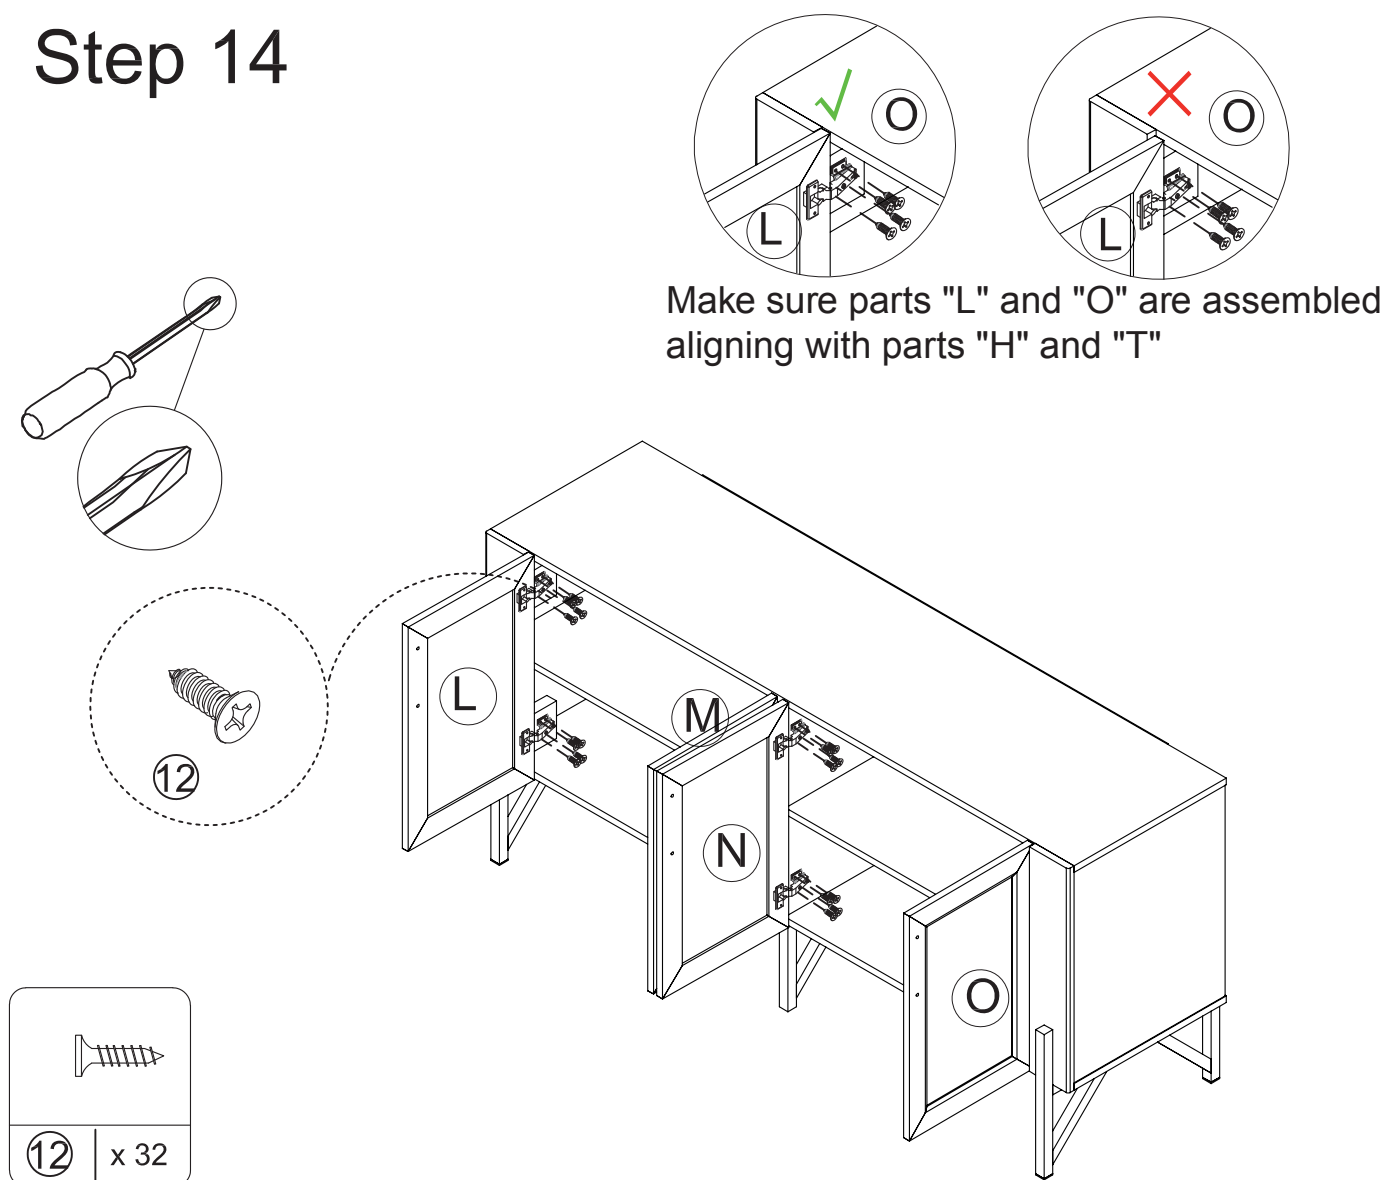

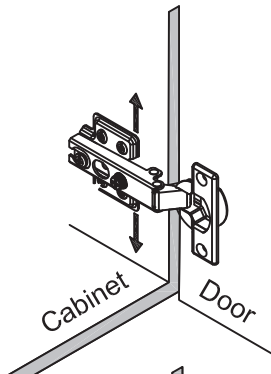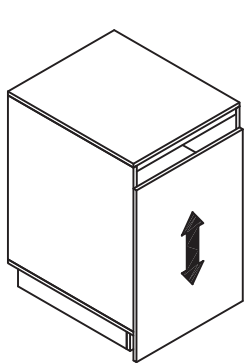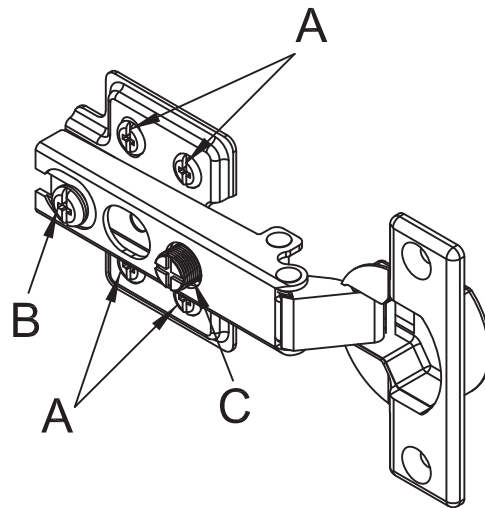



#### **To adjust the vertical height.**

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

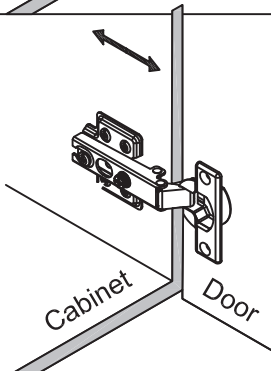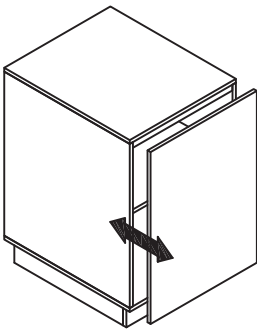

#### **To adjust depth.**

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

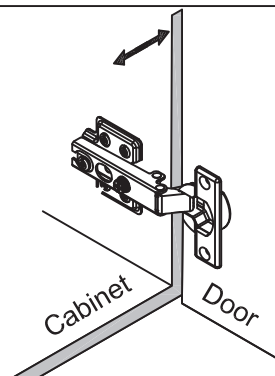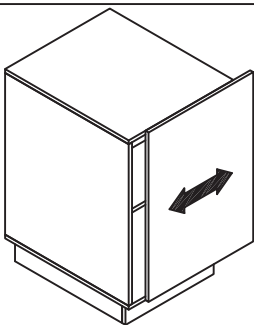


#### **To adjust side ways.**


Turning the screw "C" on BOTH hinges on each door.



# Step 15

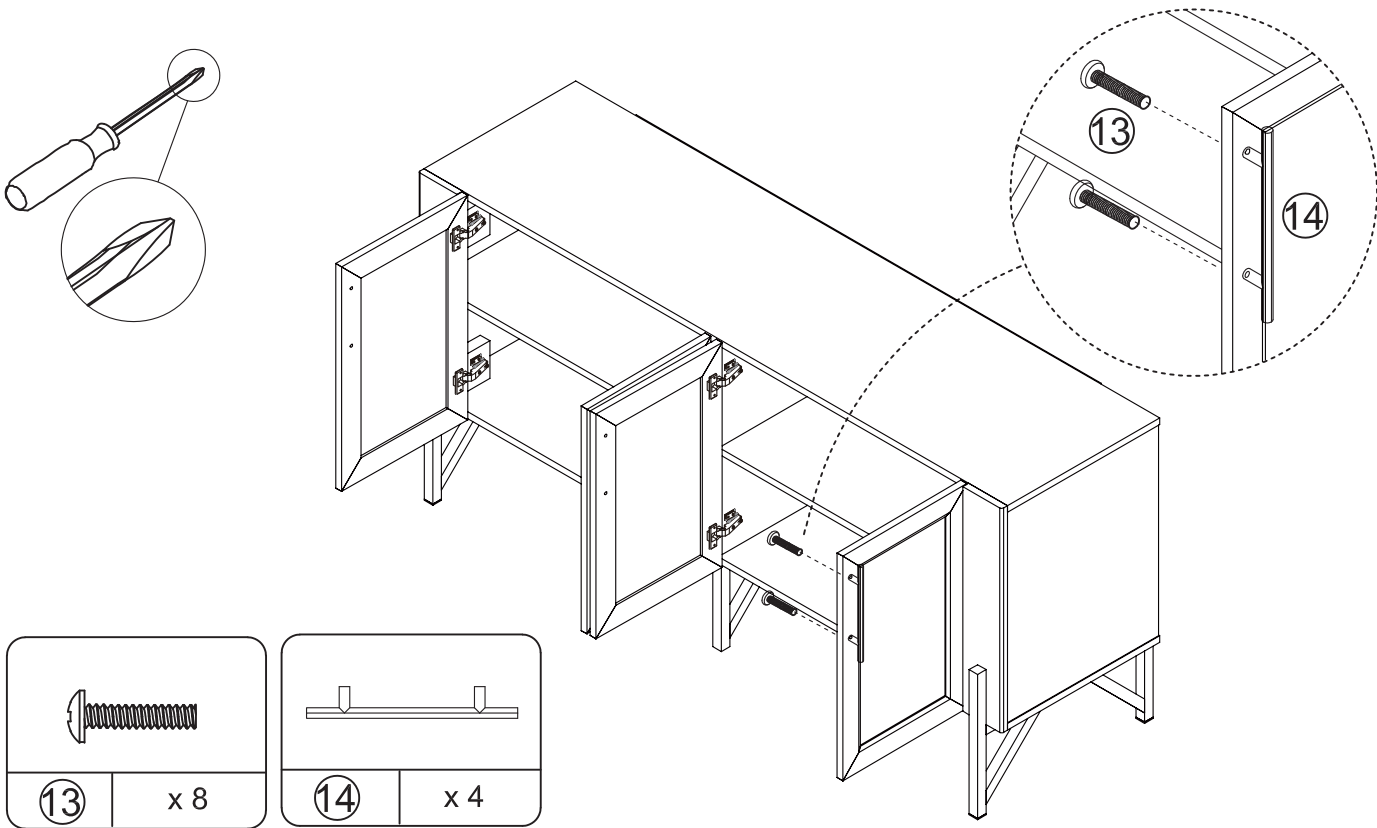

# Step 16

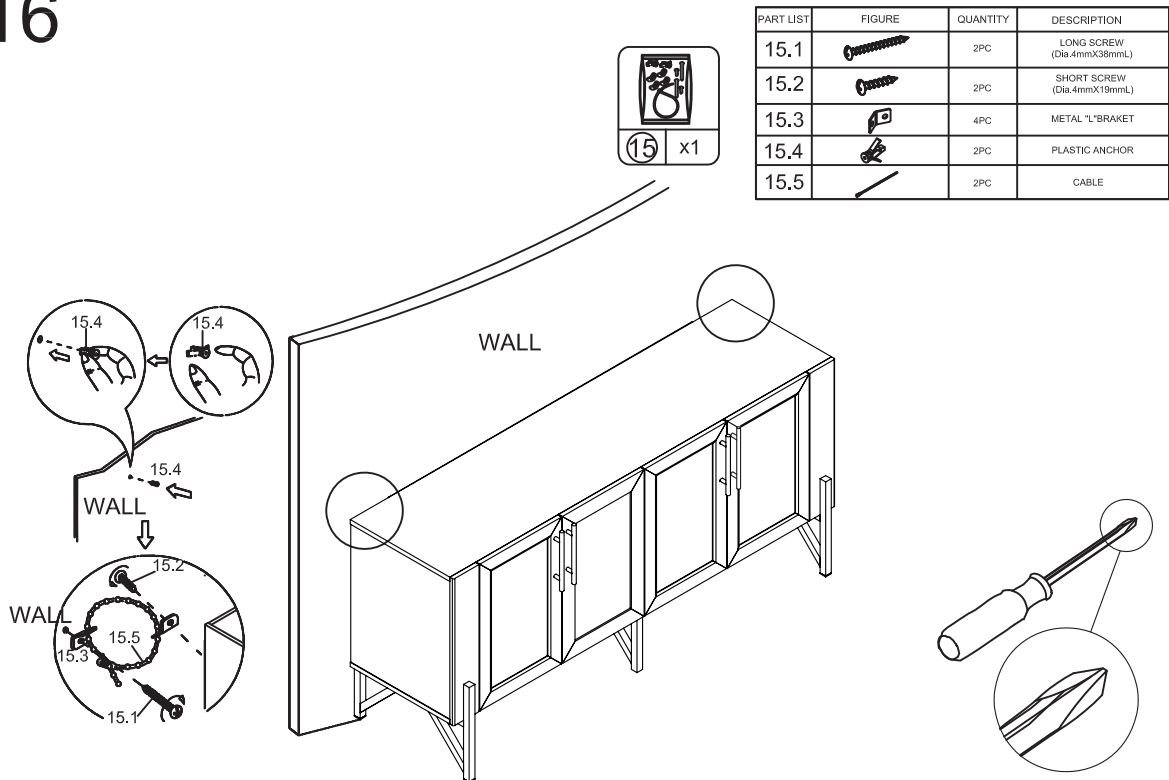


Follow the instructions printed on the plastic bag containing the tipping restraint hardware to attach the tip-over restraints to the unit and the wall.

NOTE: The tipping restraint hardware included is for drywall construction. It will be necessary to drill holes for the wall anchors. Depending upon your wall construction, different anchor hardware may be required. Please contact your local hardware store for assistance.

# Maximum Loads

This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.

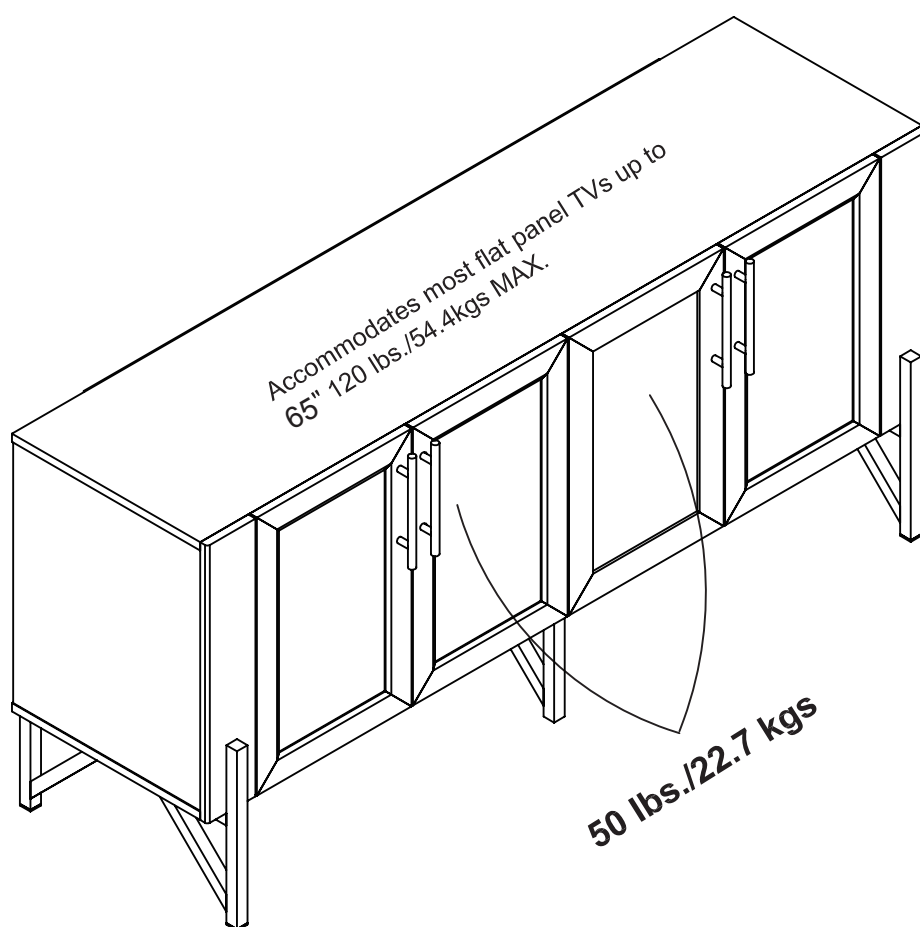

## **WARNING**

Please make sure that all objects are removed before moving the assembled unit. The unit must be team lifted, not dragged or pushed. Failure to do so could cause instability, product collapse, and/or serious injury.