


ASSEMBLY INSTRUCTIONS

LOFT BED WITH DESK AND STAIRS

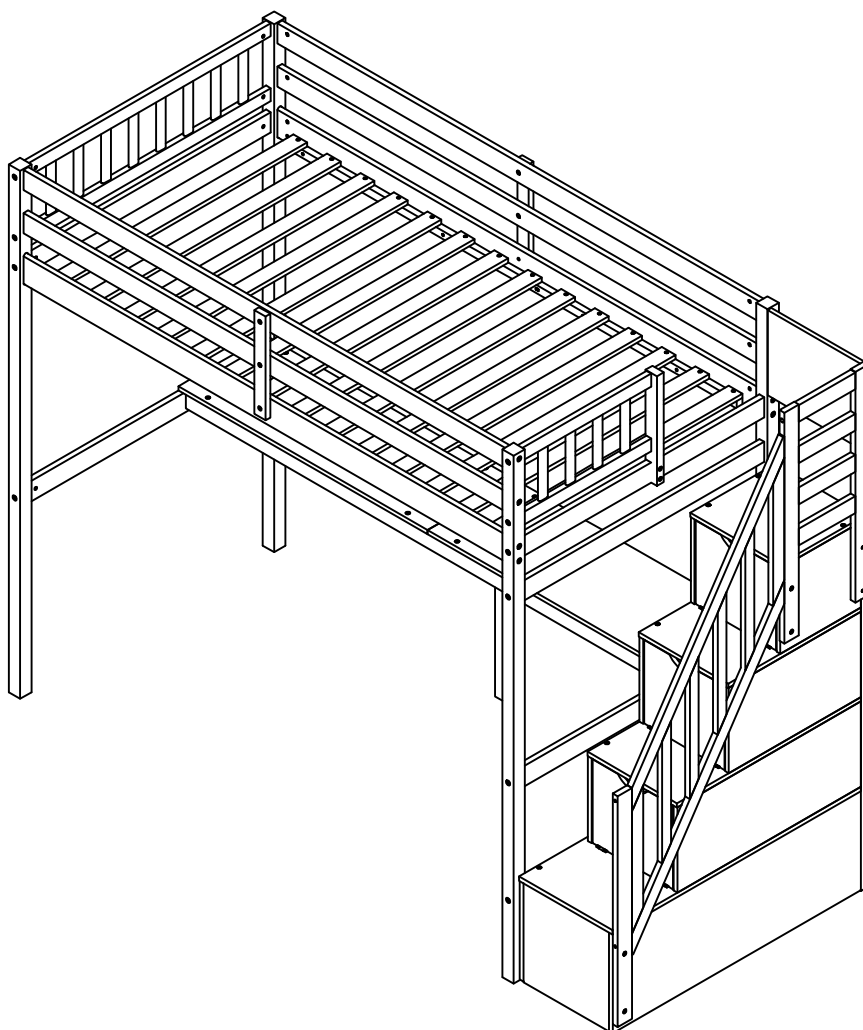

If you have any questions, please feel free to contact us.

Email: service@qualfurn.net

WF298160/WF298161

SAFETY WARNINGS AND GENERAL NOTES :

Follow the information on the warnings on the loft bed end structure and on the carton. Do not remove the warning label from the bed. Always use the recommended size mattress on mattress support, or both, to help prevent the likelihood of entrapment or falls.

The top surface of the mattress must be at least 5*inch (127mm) below the upper edge of the guardrail.

Do not allow children under 6 years of age to use the upper bunk.

Periodically check and ensure the guardrail, ladder and other components are in their proper position, free from damage, and all connectors are tight.

Do not allow horseplay on or under beds.

Always prohibit jumping on the bed.

Prohibit more than one person on upper bunk.

Always use the ladder for entering and leaving the upper bunk.

Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.

Use of a night-light may provide added safety precaution for a child using the upper bunk.

Always use guardrails on both long sides of the upper bunk.

If the loft bed will be placed next to a wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.

The use of water or sleep flotation mattresses is prohibited.

STRANGULATION HAZARD-Never attach or hang items to any part of the loft bed that are not designed for use with the bed.

Keep these instructions for future reference.

We recommend assembling your loft bed on the shipping carton to protect your floor or carpet.

Be certain all staples are out of the box before beginning assembly on the shipping carton.


USE ONLY MATTRESSES WHICH ARE 74"-75" LONG AND 38 1/2" WIDE ON UPPER AND ON LOWER BUNKS. ENSURE THICKNESS OF MATTRESS DOES NOT EXCEED 6".

SURFACE OF MATTRESS MUST BE AT LEAST 5" (127MM) BELOW THE UPPER EDGE OF GUARDRAILS.

Replacement Parts:















Replacement Parts, including additional guardrails, may be obtained from any of our (GIGACLOUD TECHNOLOGY (USA) INC. 18961 ARENTH AVENUE, CITY OF INDUSTRY , CA, 91748.) dealers

Detail View

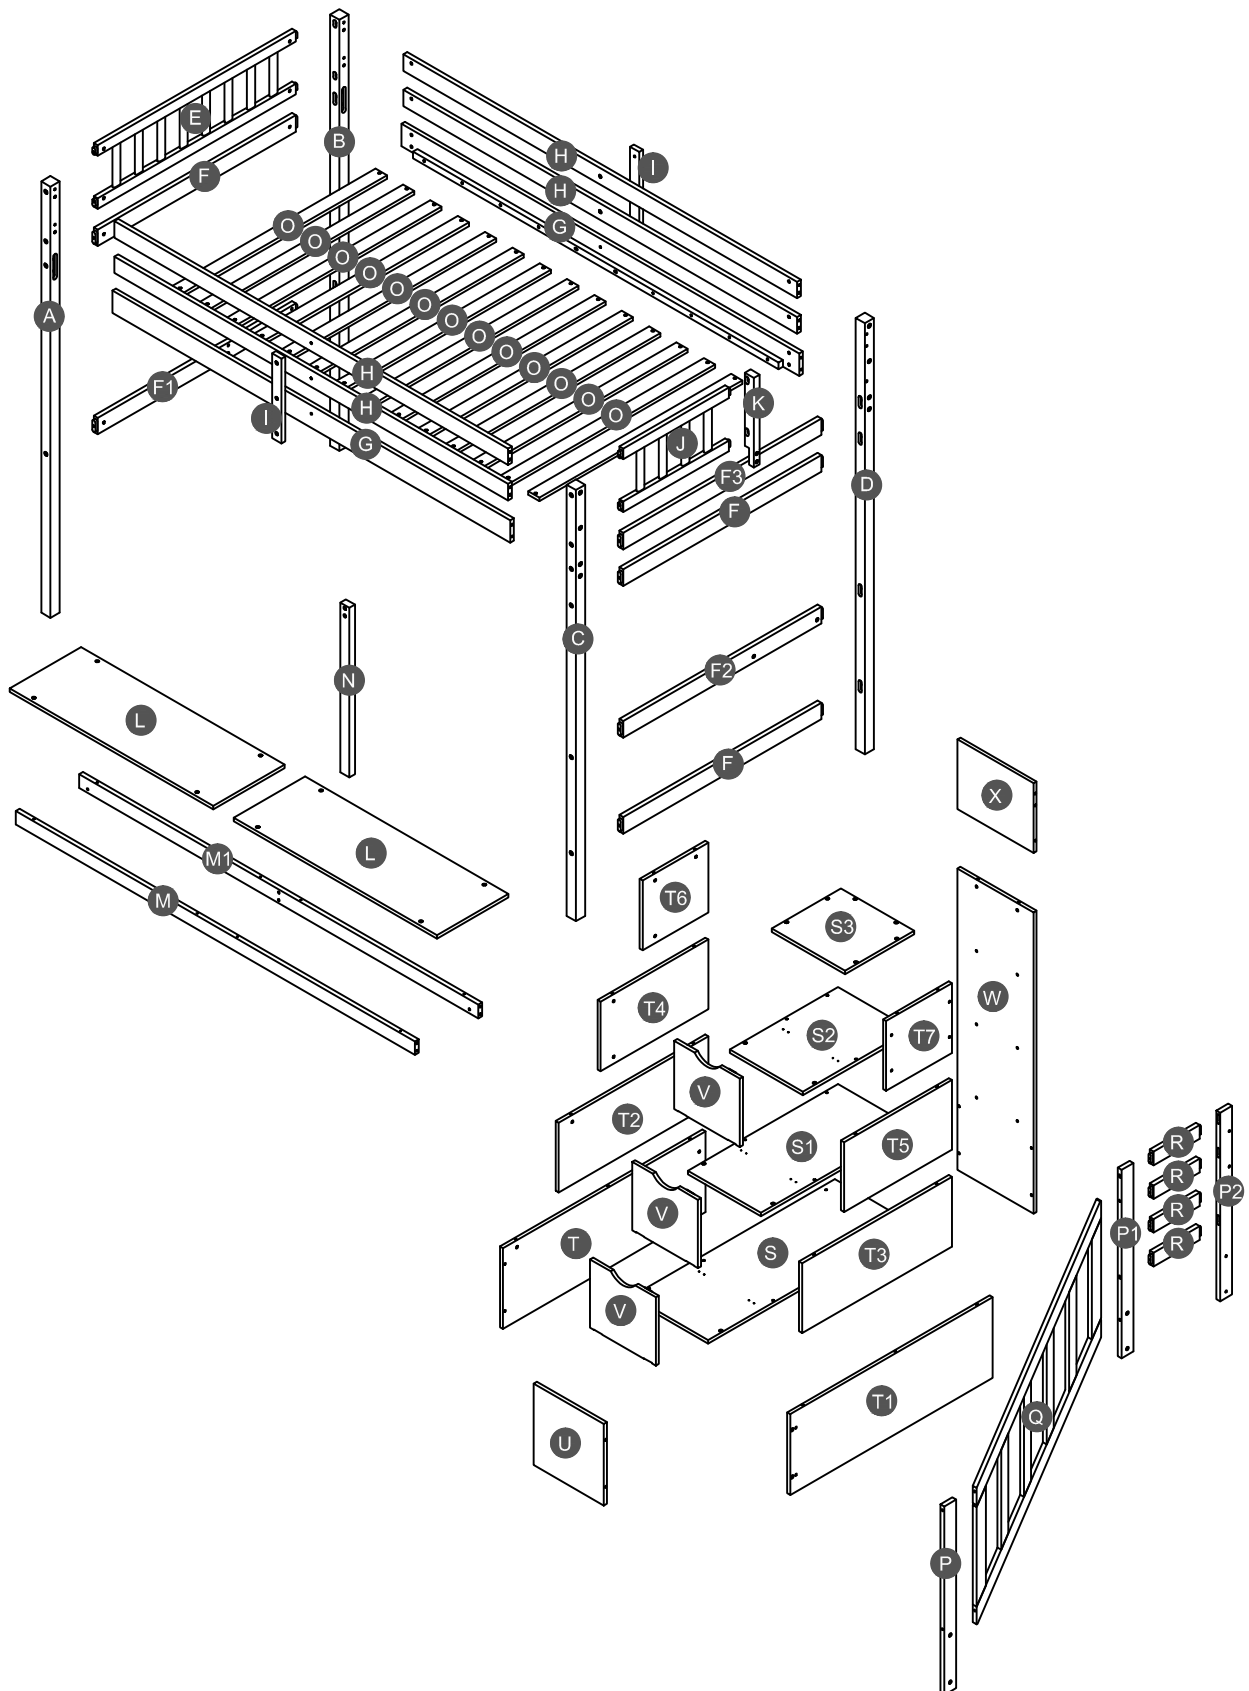












Part List

Hardware List WF298160





A  Leg (Left front) - 1pc	B  Leg (Left back) - 1pc	C  Leg (Right front) - 1pc
D  Leg (Right back) - 1pc	E  Frame HB - 1pc	F  Horizontal bar HB/FB - 3pcs
F1  Lower horizontal bar HB - 1pc	F2  Divider horizontal bar FB - 1pc	F3  Upper horizontal bar FB - 1pc
G  Side rail - 2pcs	H  Long guard rail - 4pcs	J  Frame FB - 1pc
M  Horizontal bar (front) - 1pc	M1  Horizontal bar (back) - 1pc	O  Slat - 14pcs
P  Vertical guard rail - 1pc	P1  Vertical guard rail - 1pc	P2  Vertical guard rail - 1pc
Q  Guard rail - 1pc	R  Horizontal bar - 4pcs	

Part List


WF298161

I  Vertical guard rail - 2pcs	K  Guard rail support - 1pc	L  Top panel - 2pcs
N  Leg support - 1pc	S  Lower step ladder panel -1pc	S1  Lower center step ladder panel -1pc
S2  Upper center step ladder panel -1pc	S3  Upper step ladder panel -1pc	T  Lower left side panel - 1pc
T1  Lower right side panel - 1pc	T2  Center left side panel - 1pc	T3  Center right side panel - 1pc
T4  Upper center left side panel - 1pc	T5  Upper center right side panel - 1pc	T6  Upper left side panel - 1pc
T7  Upper right side panel - 1pc	U  Lower front panel - 1pc	V  Upper front panel - 3pcs
X  Upper guard back - 1pc	W  Back panel - 1pc	

Hardware List WF298160


1	 Ø8*30mm Wood dowel (24pcs)	2	 (Ø15)1/4"*100mm Hex-Head bolts (16pcs)	3	 (Ø15)1/4"*80mm Hex-Head bolts (24pcs)
4	 (Ø12)1/4"*70mm Hex-Head bolts (2pcs)	5	 (Ø12)1/4"*60mm Hex-Head bolts (28pcs)	6	 (Ø12)1/4"*35mm Hex-Head bolts (4pcs)
7	 (Ø12)1/4"*30mm Hex-Head bolts (12pcs)	8	 (Ø12)1/4"*65mm Hex-Head bolts (4pcs)	9	 (Ø12)1/4"*40mm Hex-Head bolts (14pcs)
10	 1/4"*15 (9.5mm) Horizontal-Hole bolts(70pcs)	11	 40*17*17*1.6mm Metal bracket (3pcs)	12	 (1/4")4.5*58mm Allen key (1pc)
13	 Ø4*30mm Wood screws (28pcs)	14	 Ø3.5*12mm Wood screws (24pcs)	15	 45*17*13mm Door catch (3pcs)
16	 42*12*1mm Metal magnet (3pcs)	17	 Ø10*40mm Wood dowel (8pcs)	18	 Ø3.5*15mm Wood screws (12pcs)

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE
POSITION WHEN YOU USE POWER TOOLS !


STEP 1:

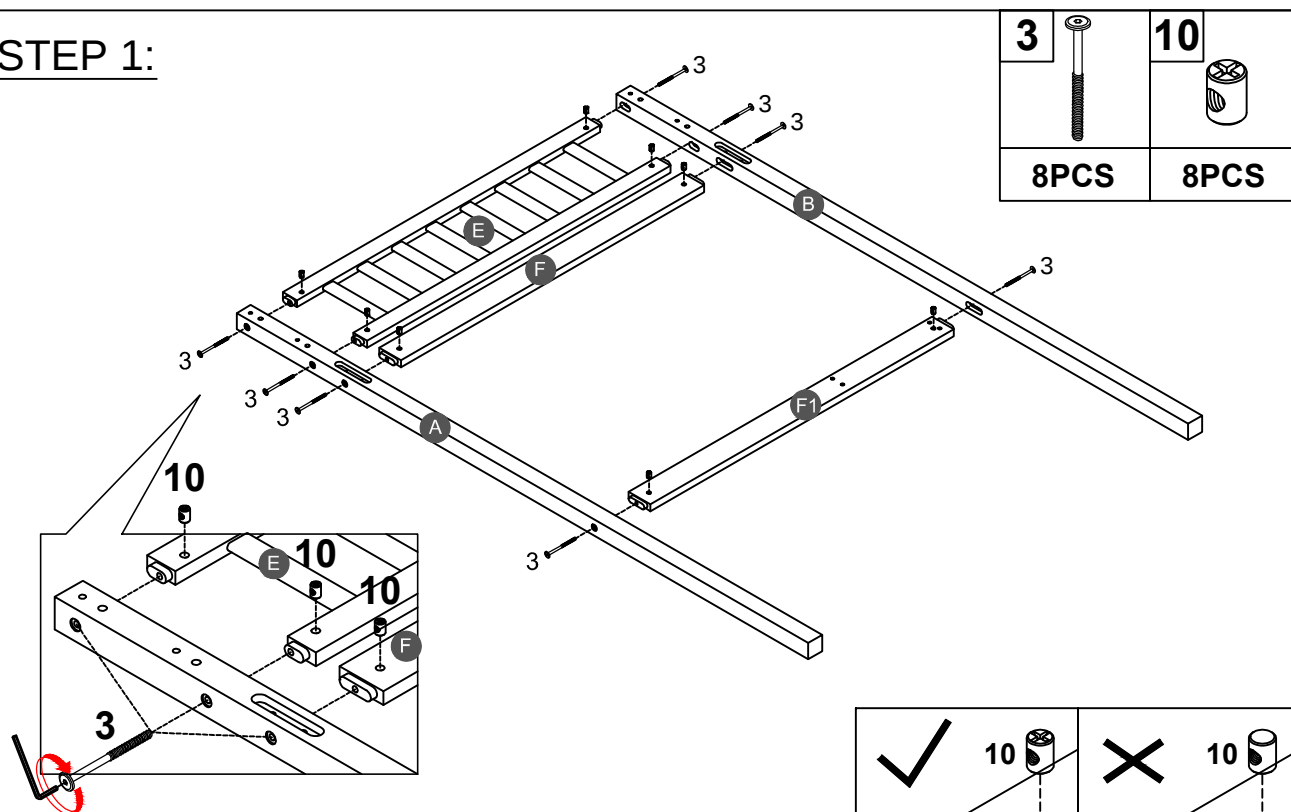


Note: Part 10 will face up with the "x" mark on it, otherwise it cannot be tightened

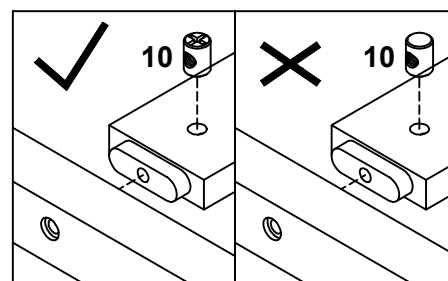


STEP 2:

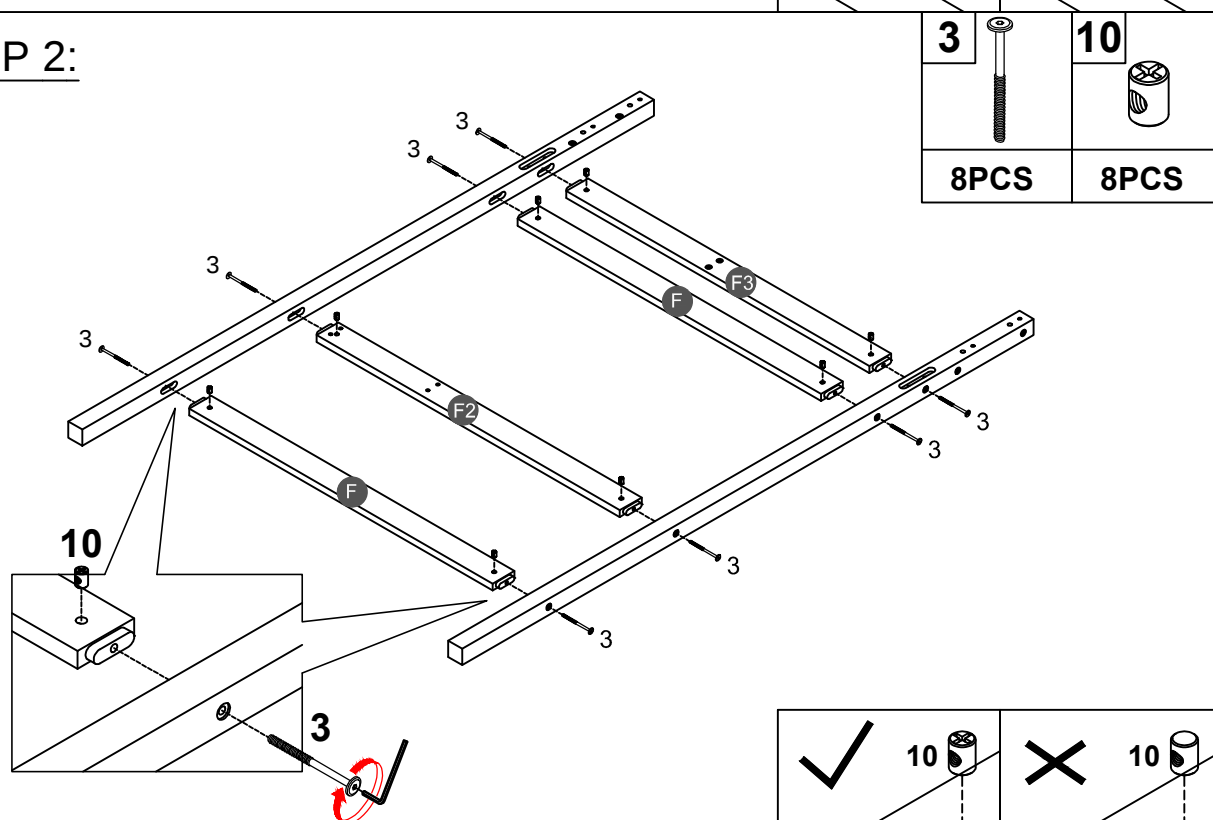

Note: Part 10 will face up with the "x" mark on it, otherwise it cannot be tightened

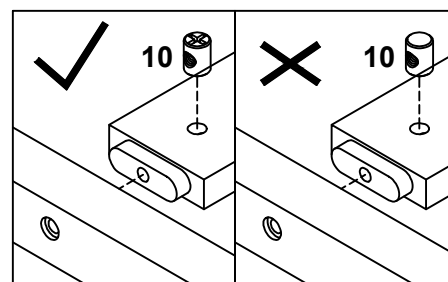


STEP 3:

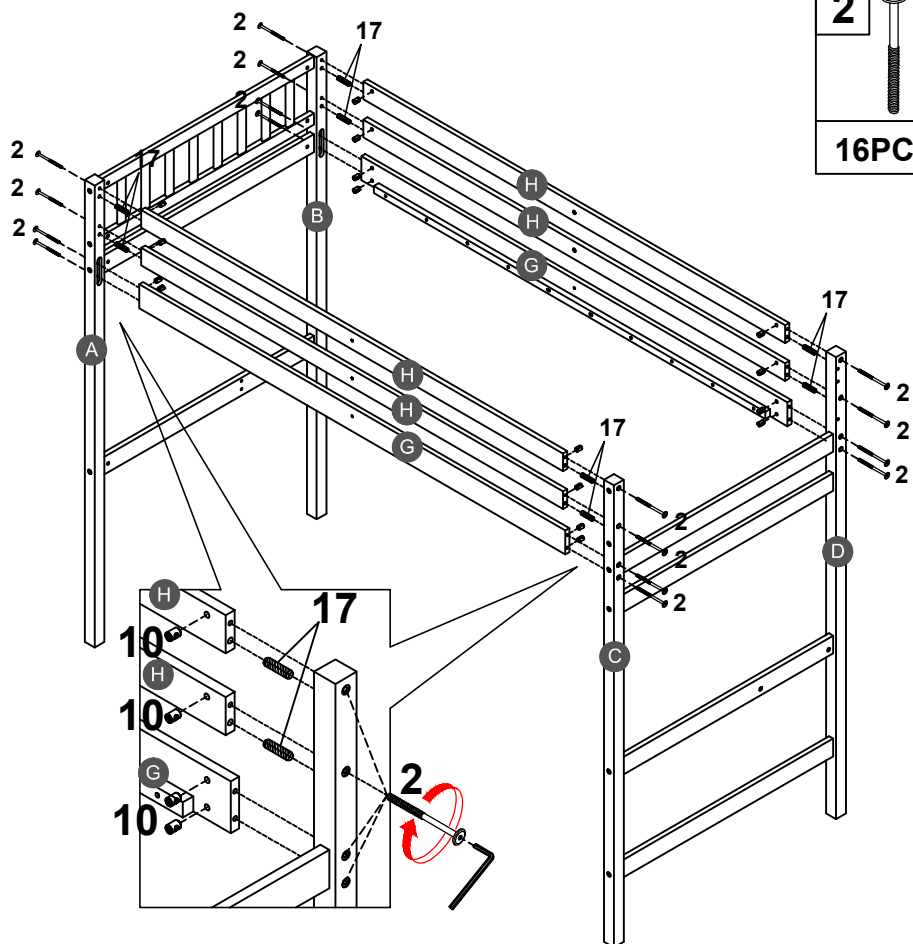


2		10	
16PCS		16PCS	
		17	
		8PCS	

STEP 4:

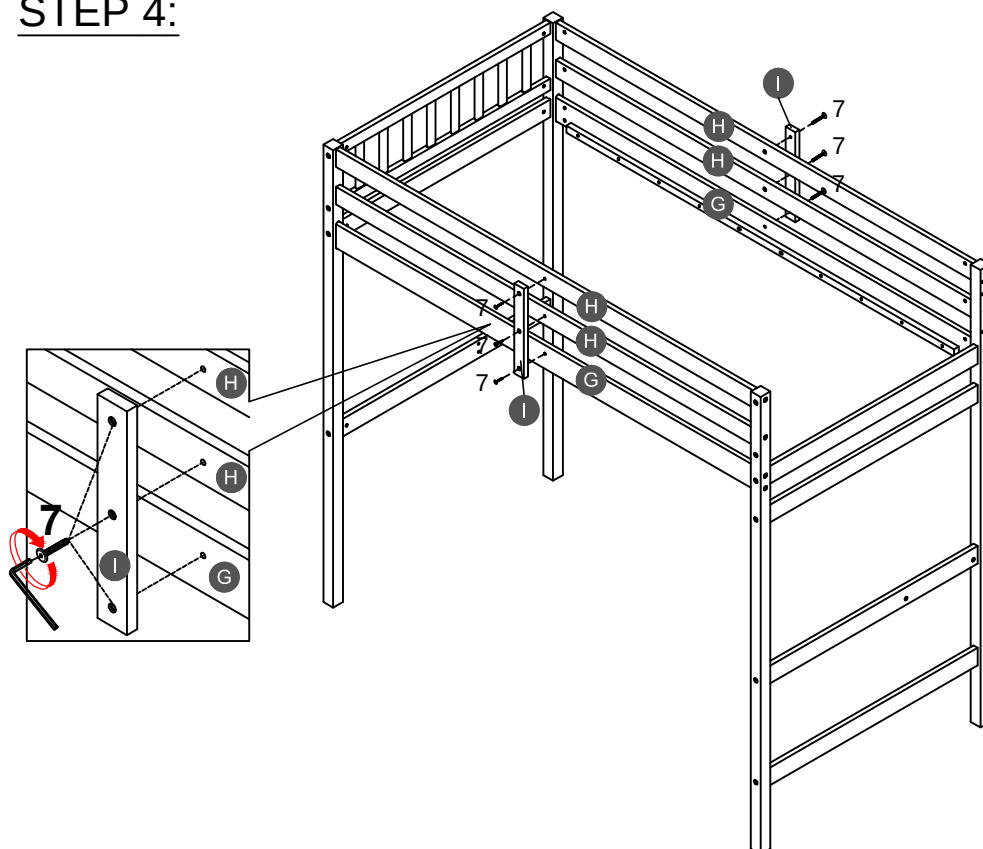


7	
6PCS	

STEP 5:

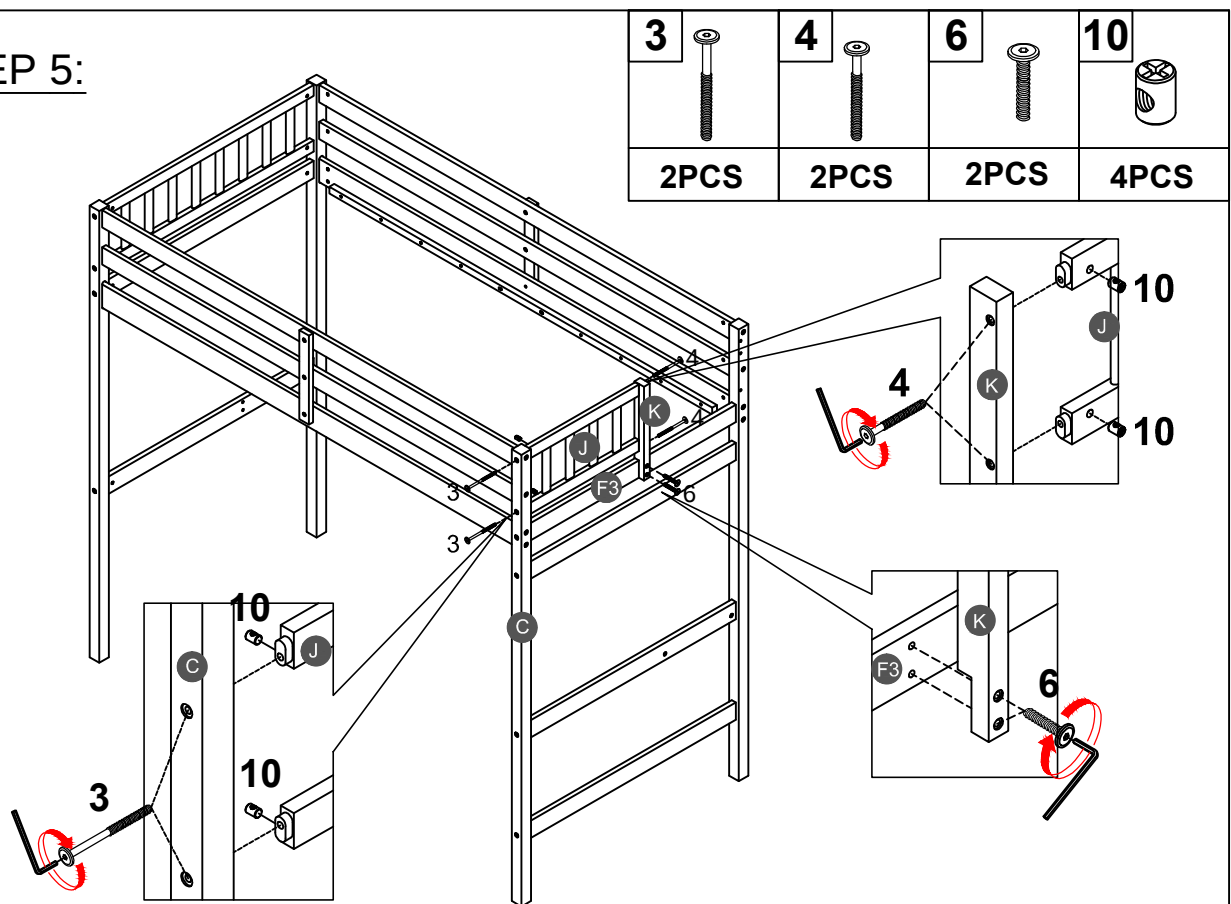

STEP 6:

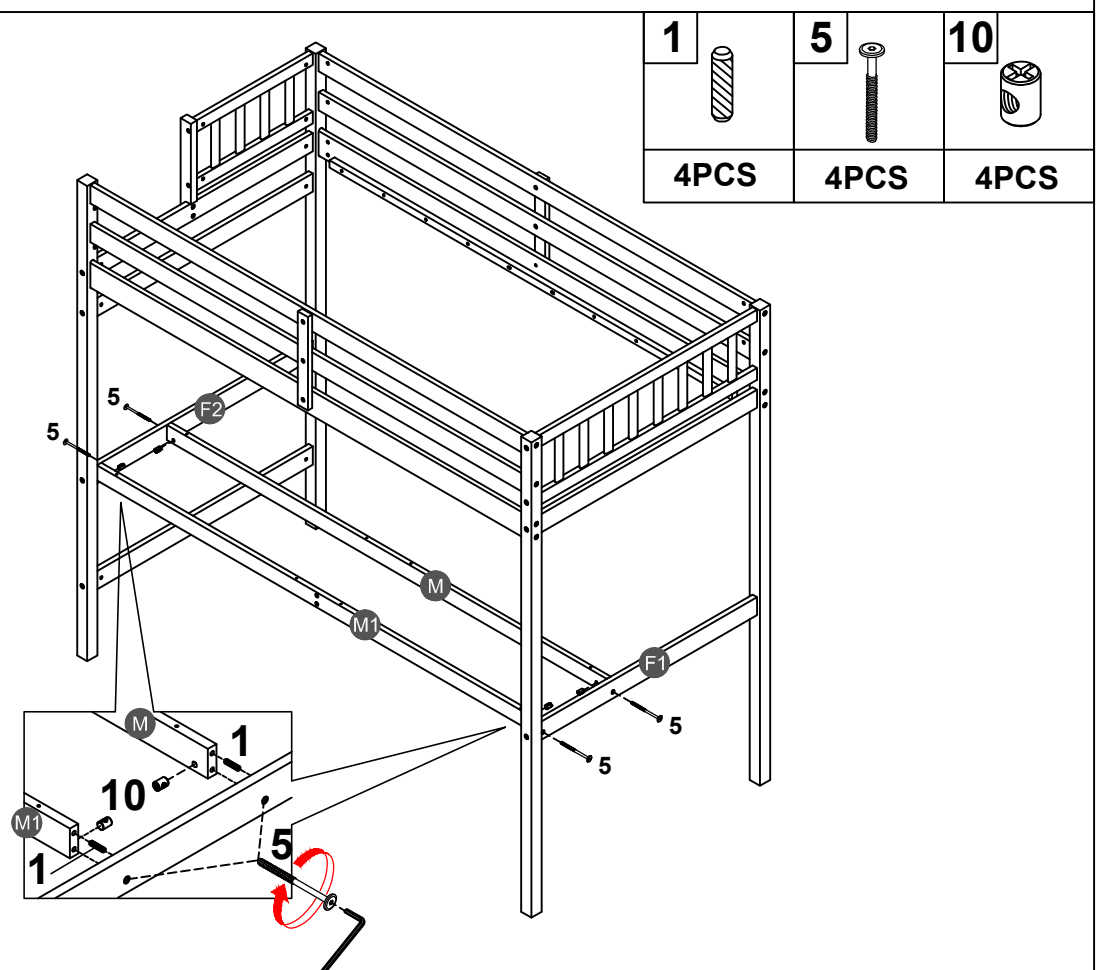


STEP 7:

6



2PCS

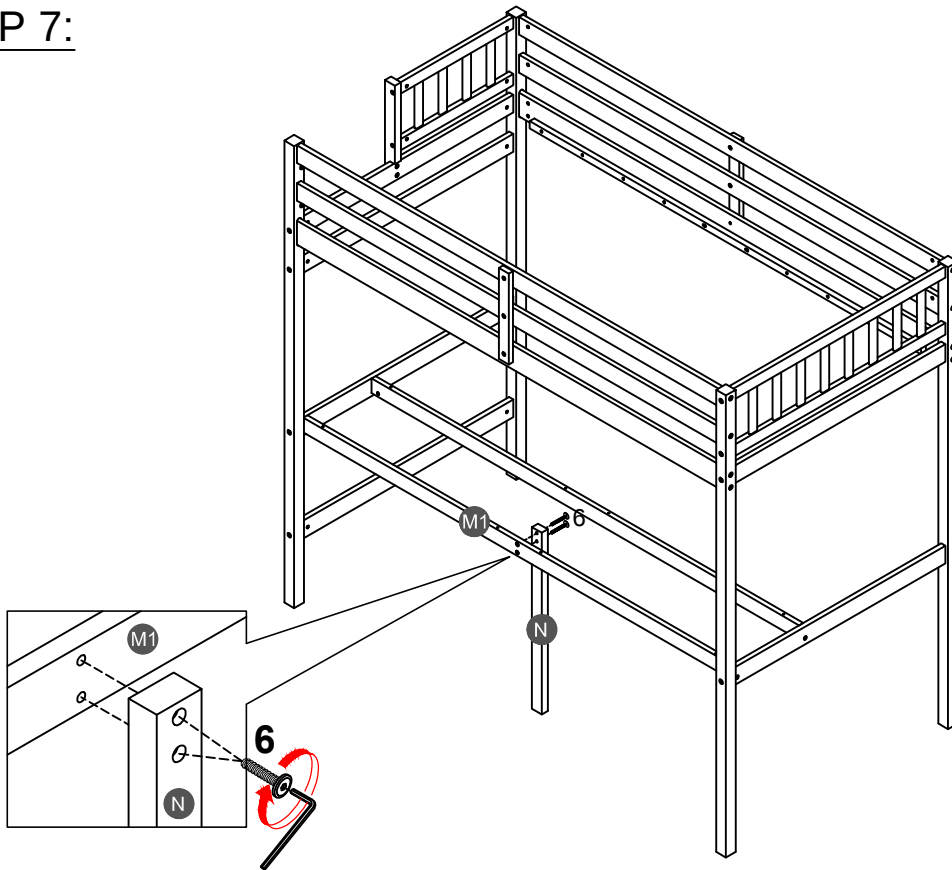


STEP 8:


9



8PCS

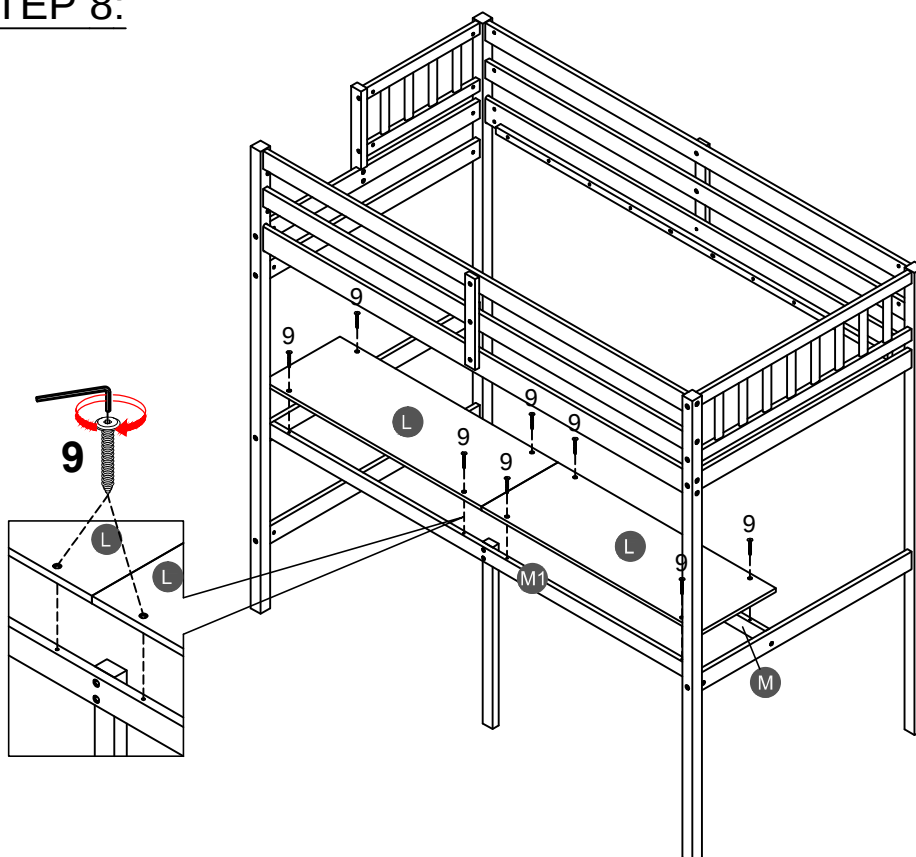


STEP 9:

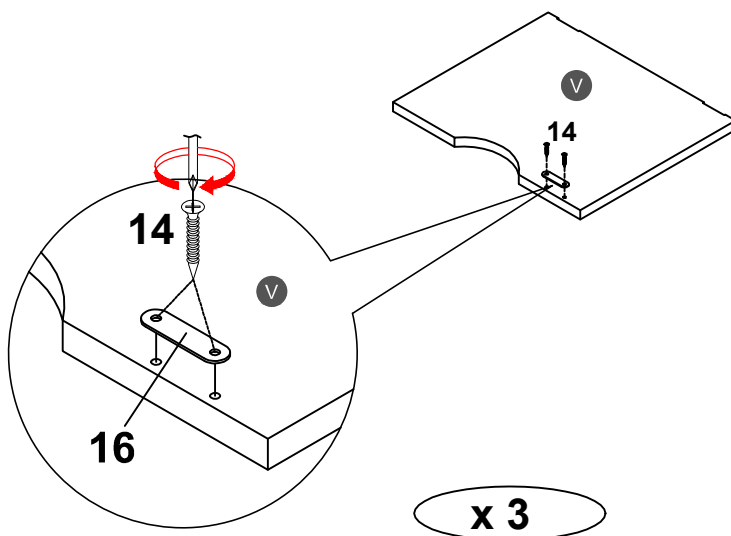


14		16	
6PCS		3PCS	

STEP 10:

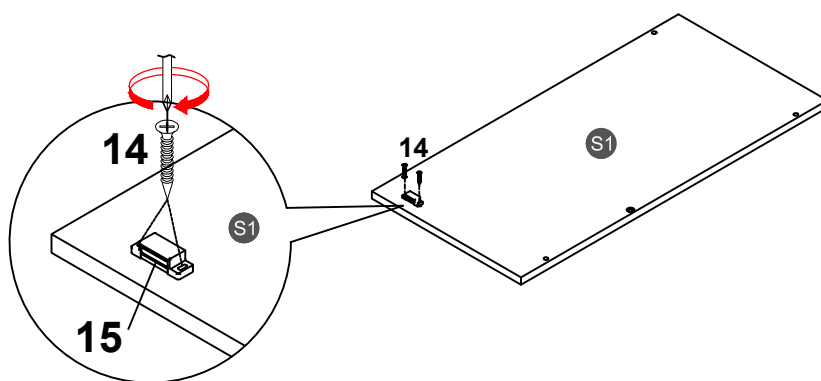


14		15	
2PCS		1PC	


STEP 11:

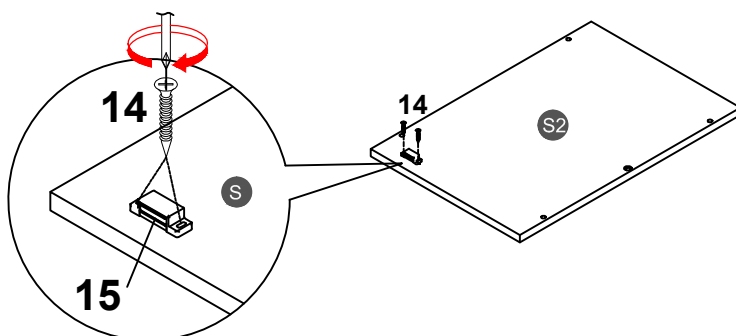

14		15	
2PCS		1PC	


STEP 12:

14		15	
2PCS		1PC	

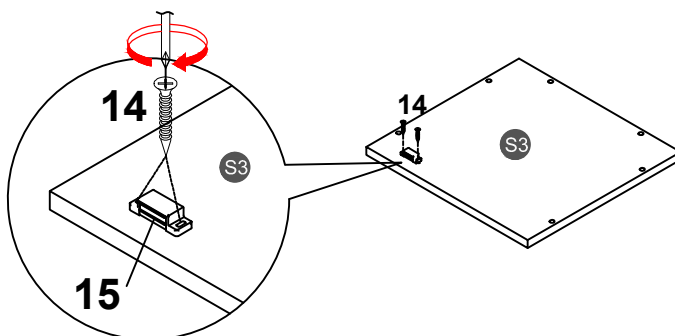


STEP 13:

5		10	
4PCS		4PCS	

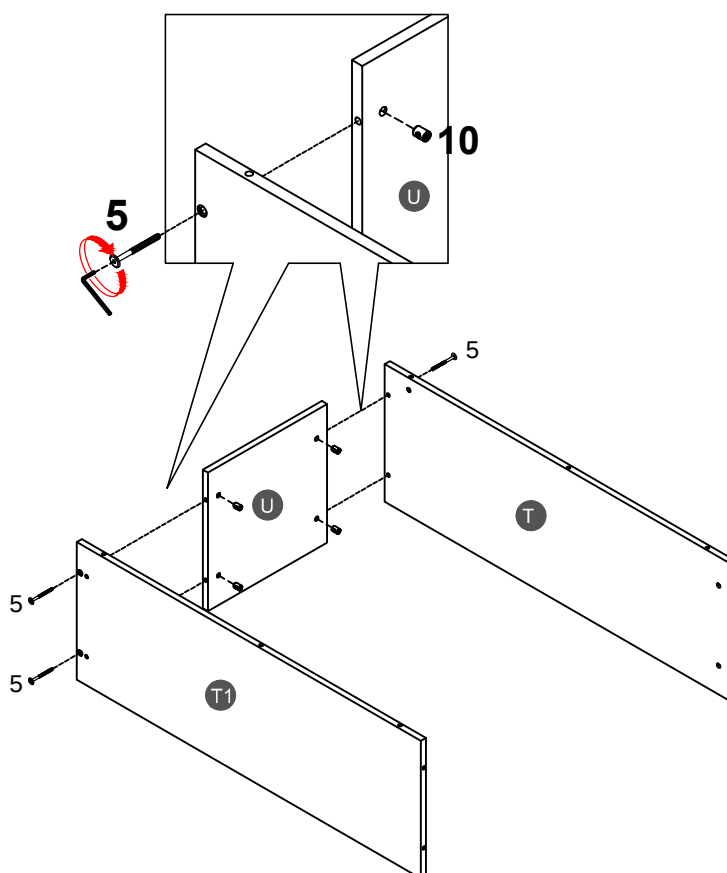


STEP 14:

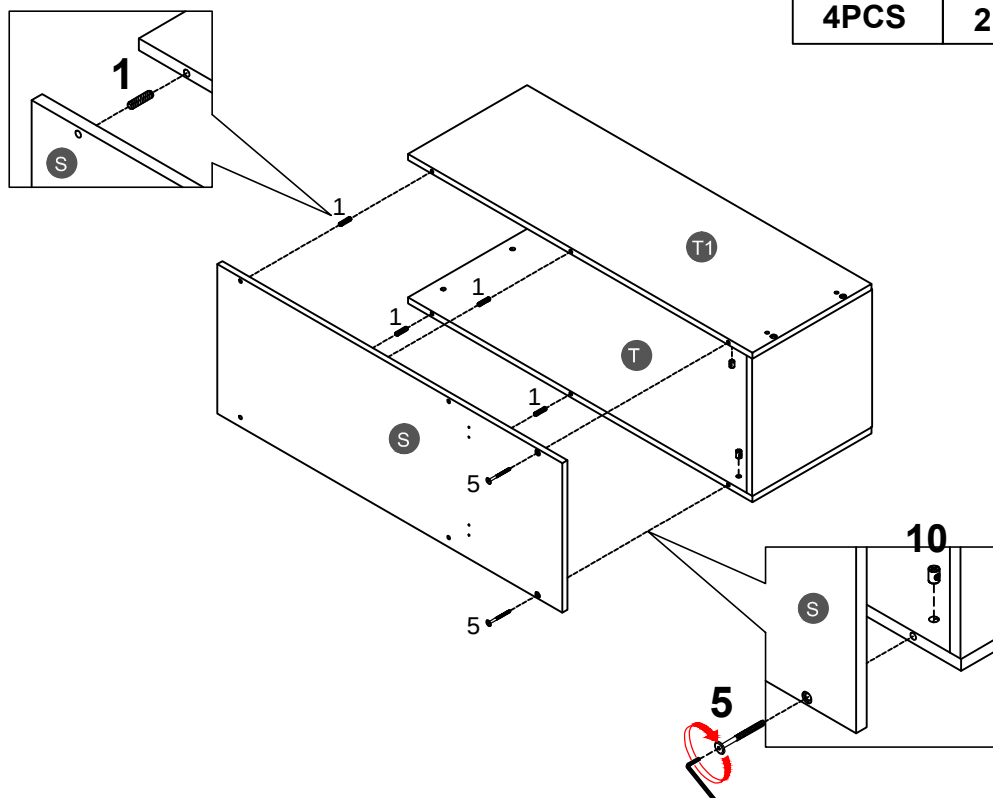


1	5	10
		
4PCS	2PCS	2PCS

STEP 15:

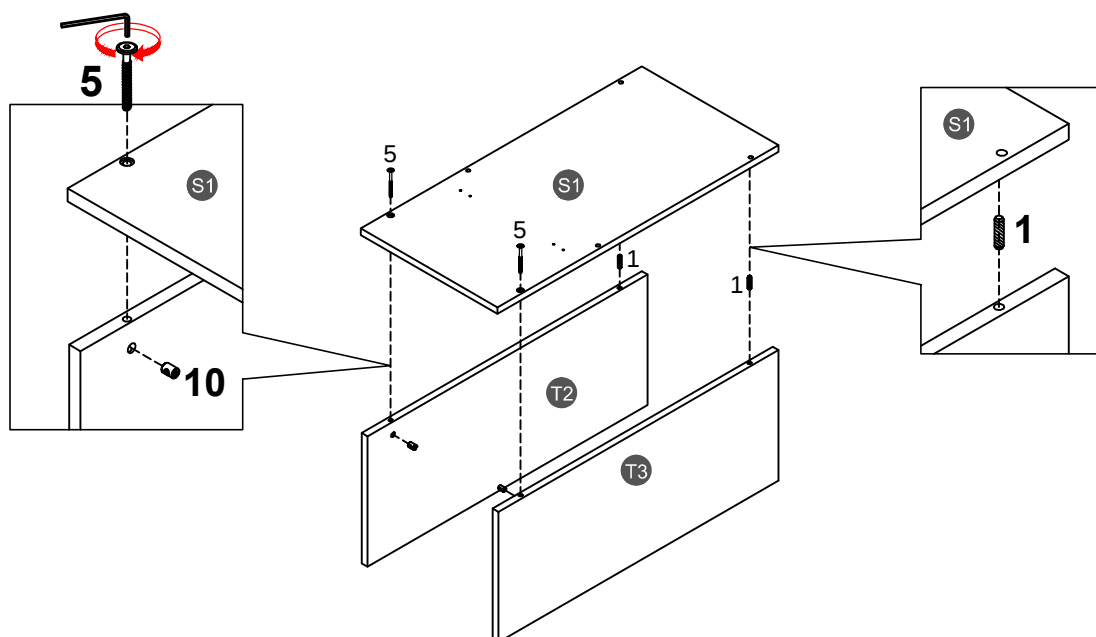


1	5	10
		
2PCS	2PCS	2PCS

STEP 16:

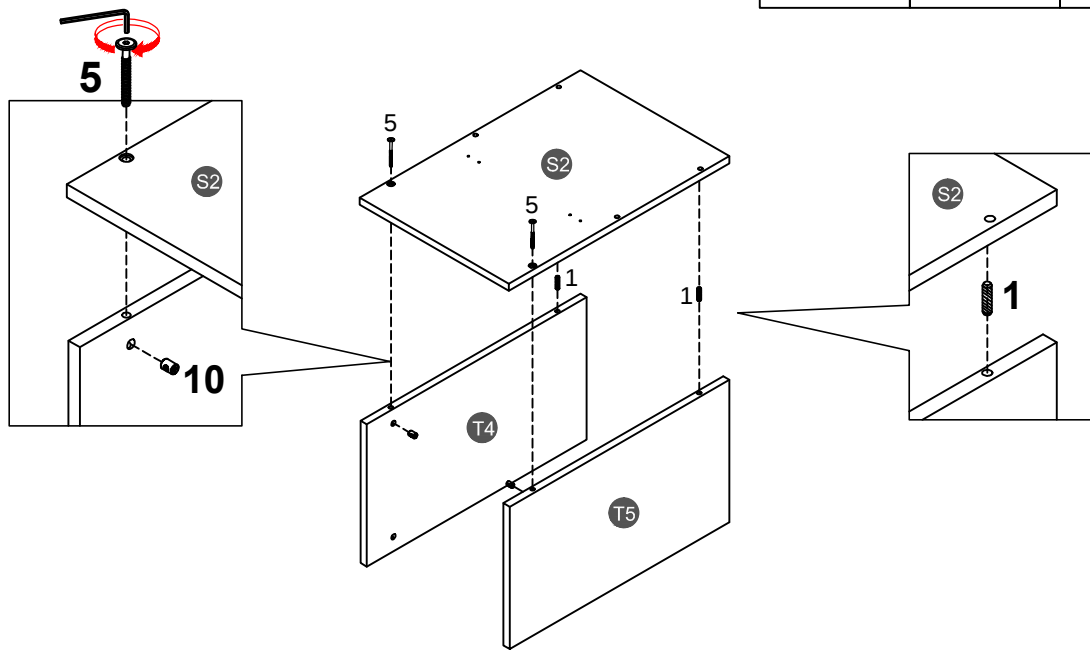


1		5		10	
2PCS		2PCS		2PCS	

STEP 17:

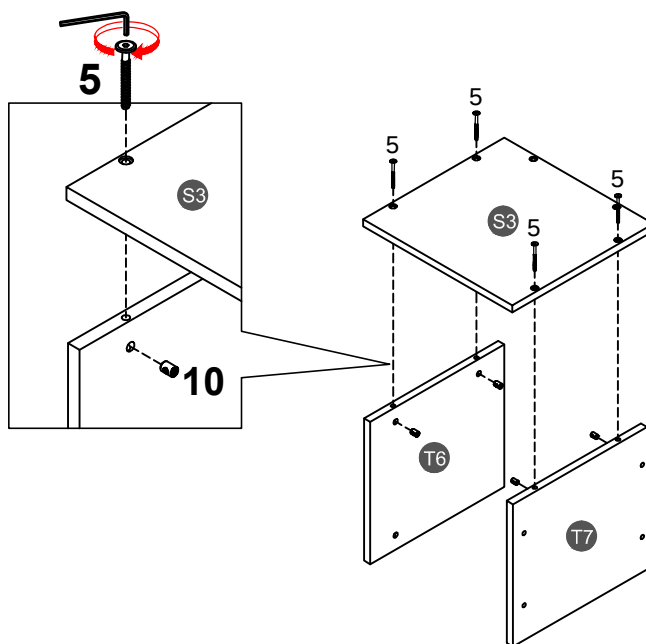


5		10	
4PCS		4PCS	

STEP 18:

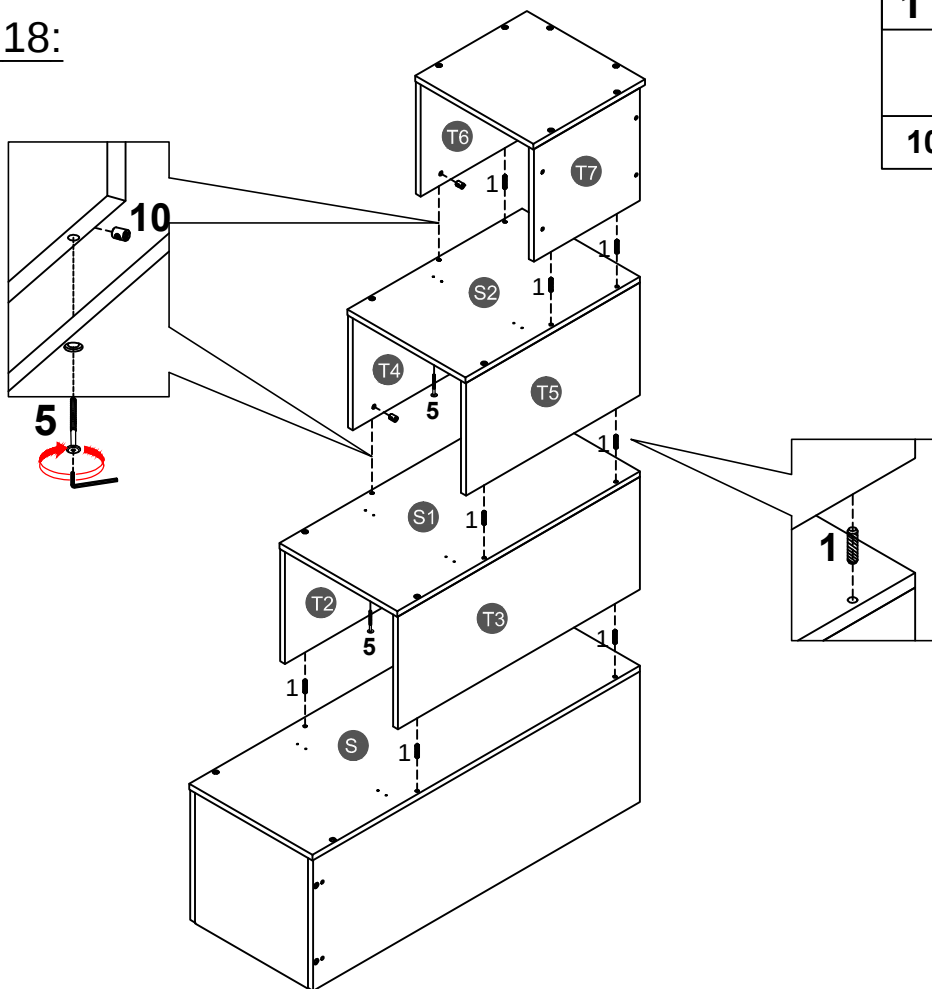

1		5	
10PCS		2PCS	
		10	
		2PCS	

STEP 19:

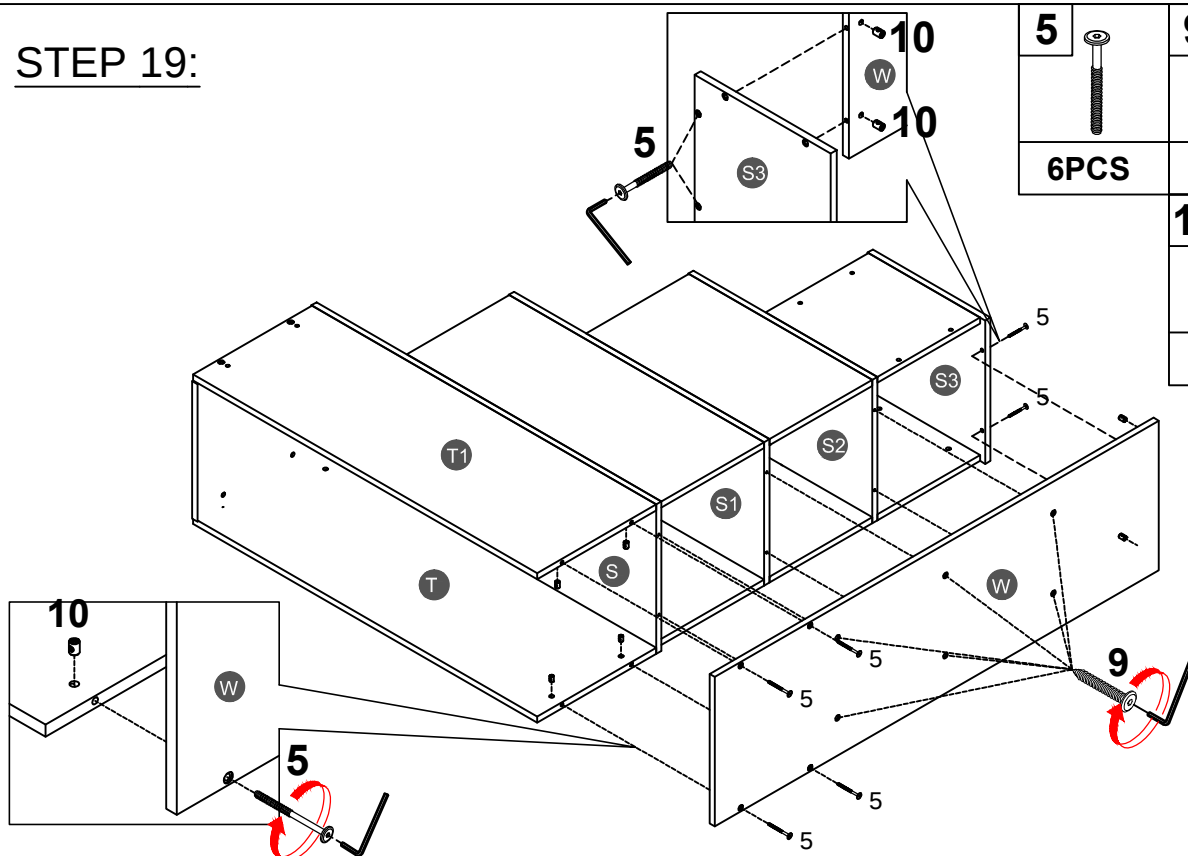


5		9	
6PCS		6PCS	
		10	
		6PCS	

STEP 20:

14



12PCS

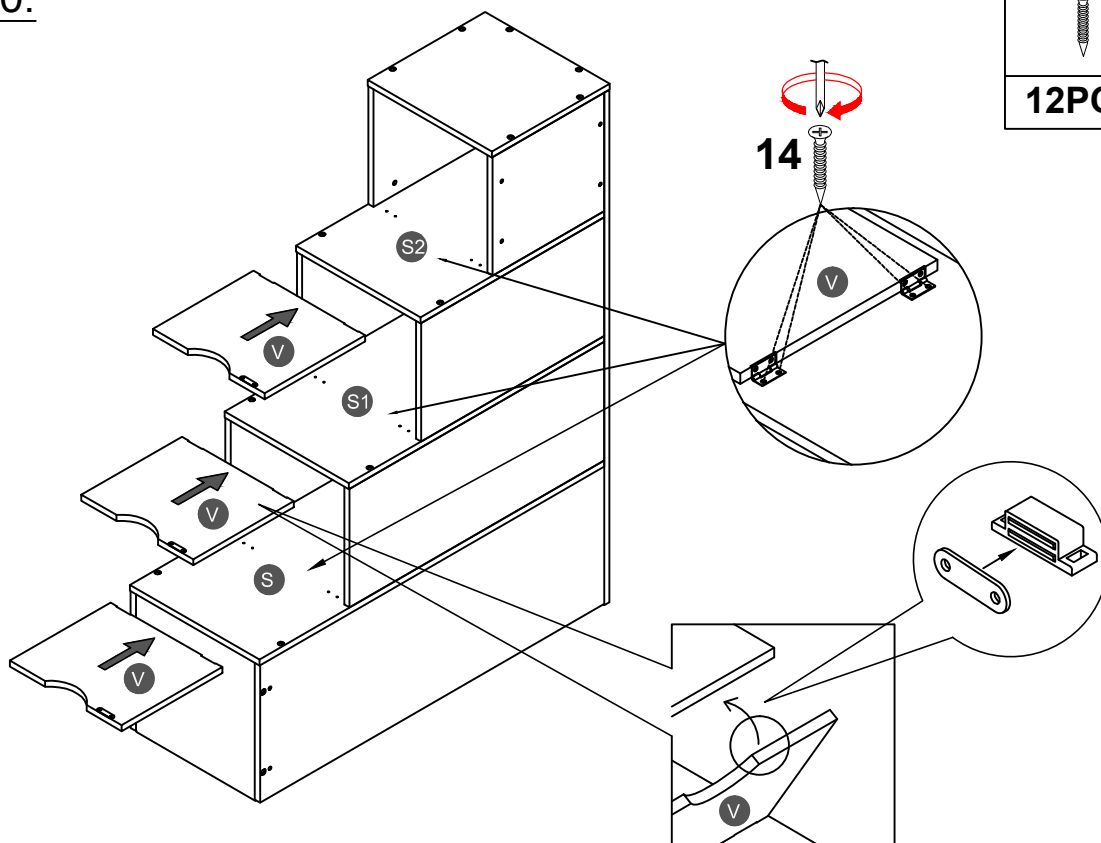


STEP 21:


8



4PCS

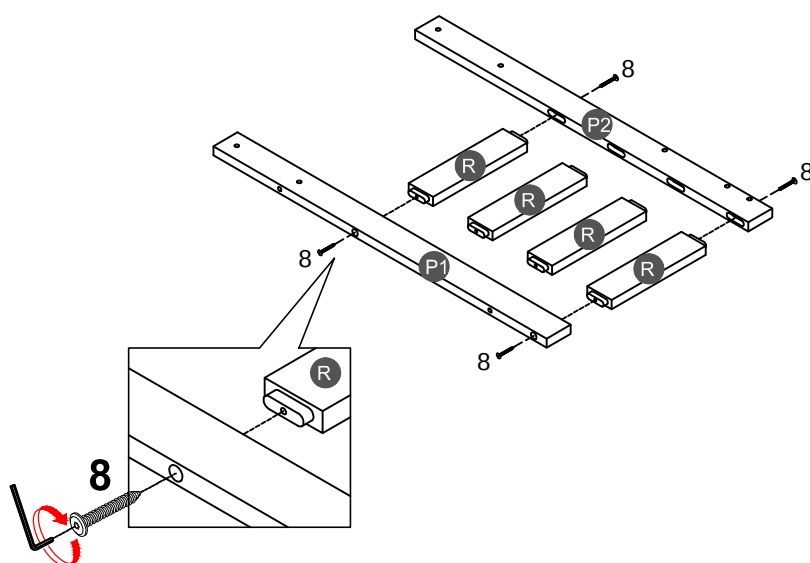


STEP 22:

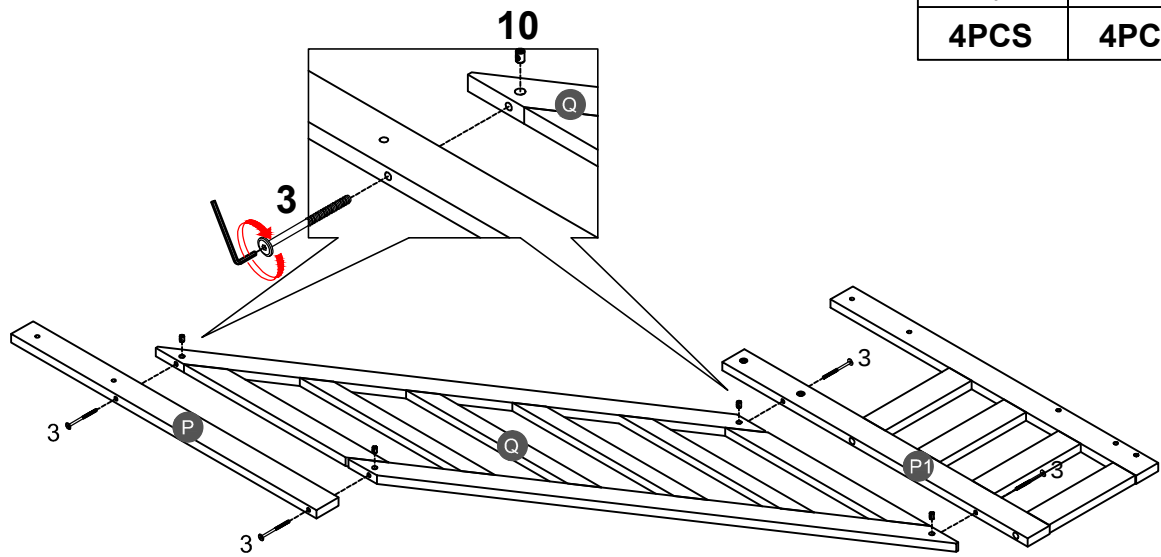

3		10	
4PCS		4PCS	


STEP 23:

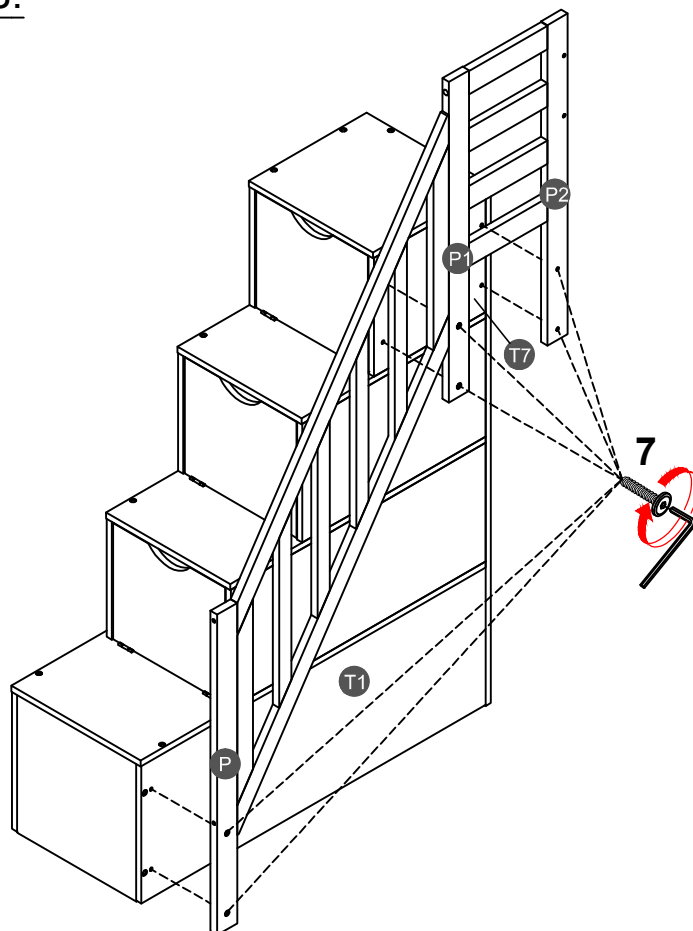

7	
6PCS	


STEP 24:

1		3	
1PC		2PCS	
		10	
		2PCS	

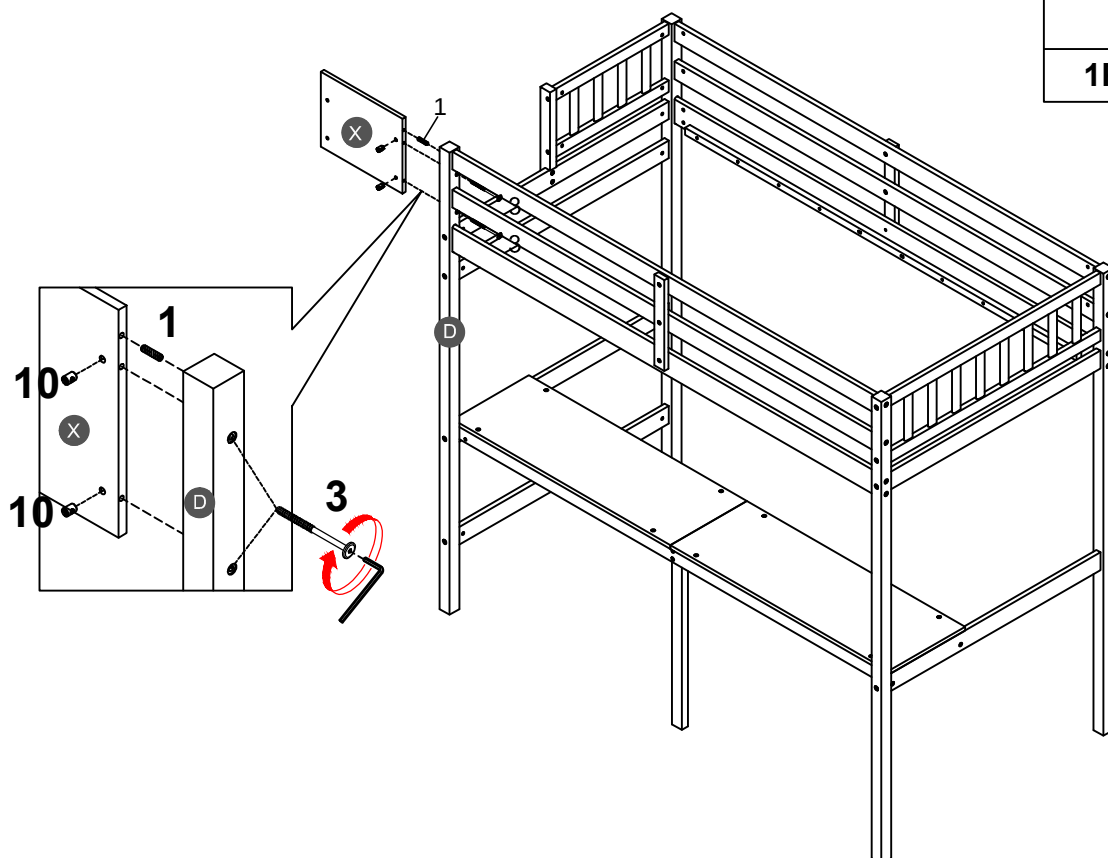


STEP 25:

1		5	
1PC		2PCS	
		10	
		2PCS	

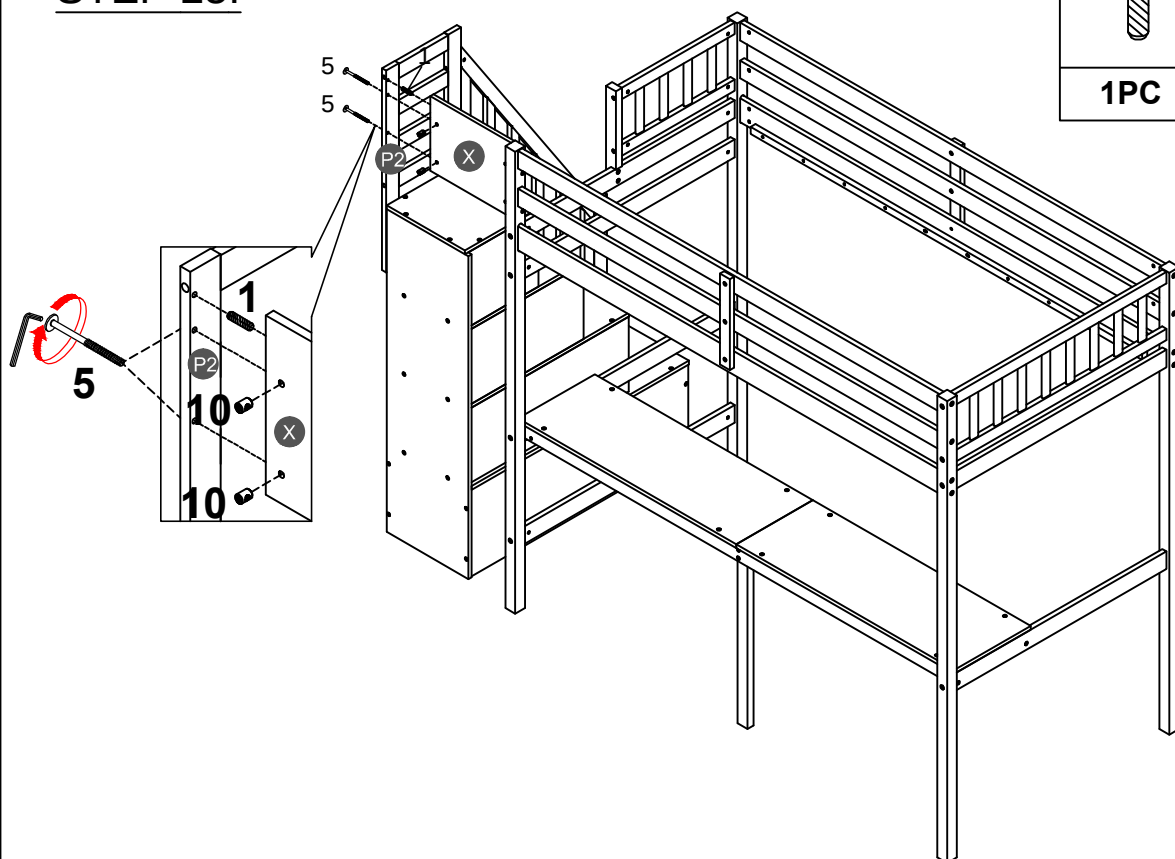


STEP 26:

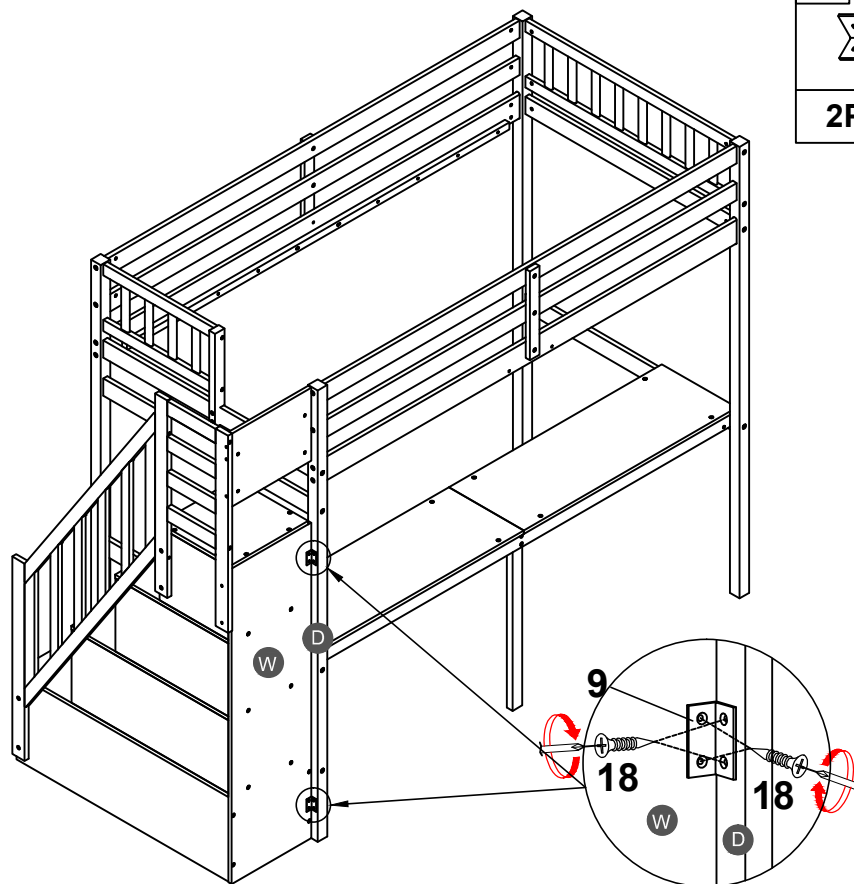

11	18
	
2PCS	8PCS

STEP 27:

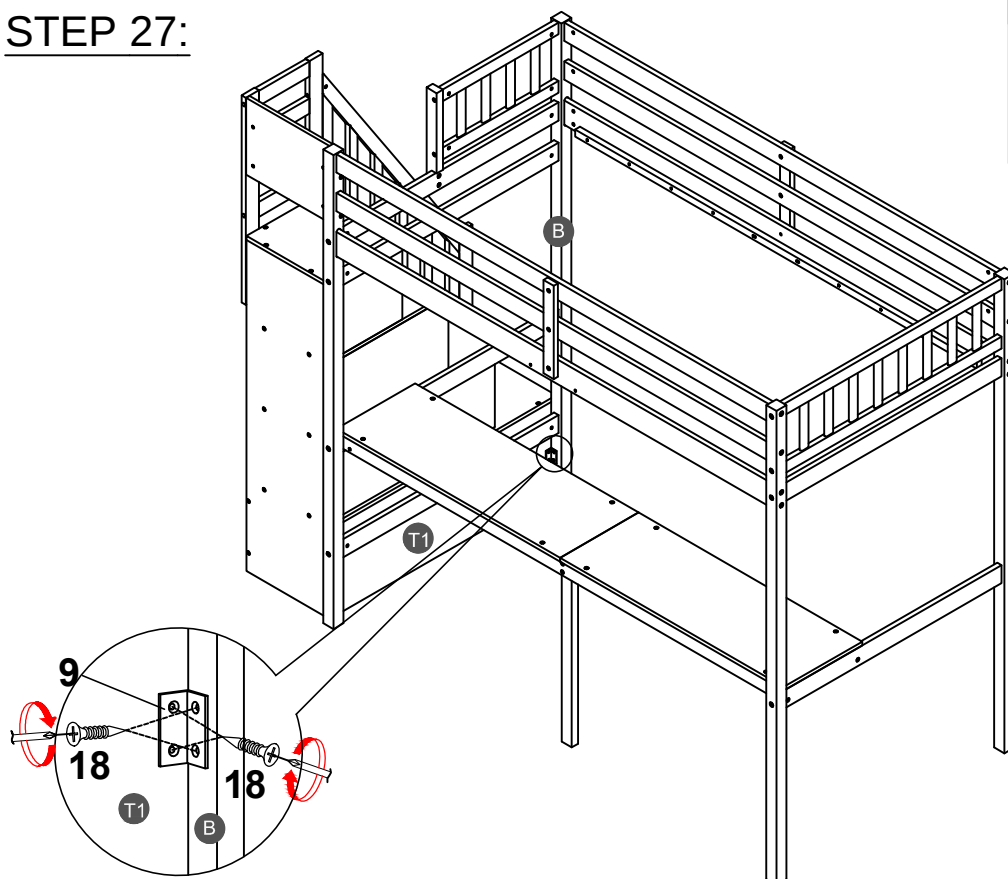





11	18
	
1PC	4PCS

STEP 28:

13



28PCS

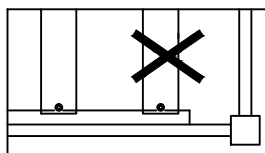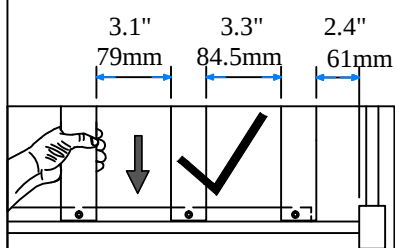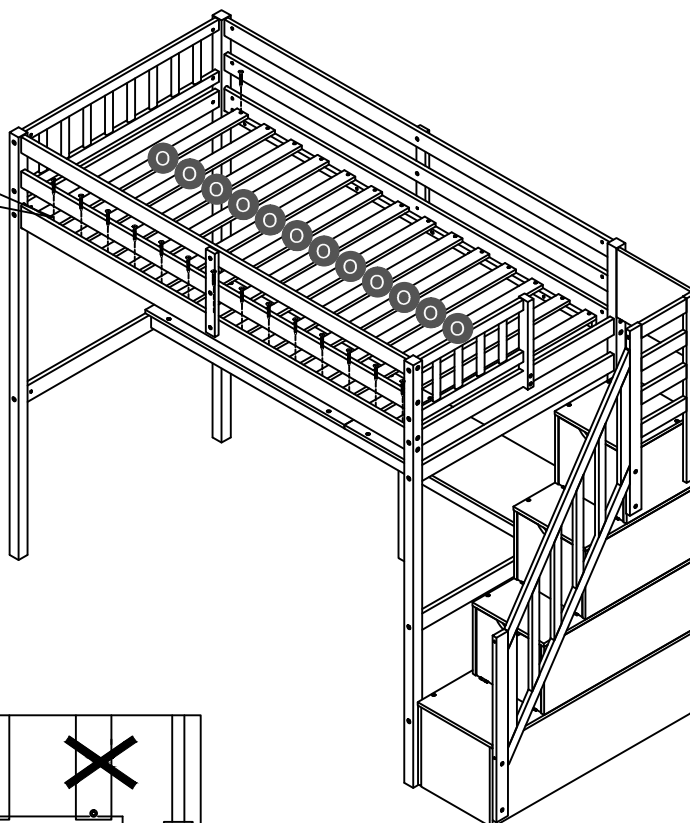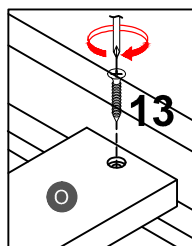

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

