

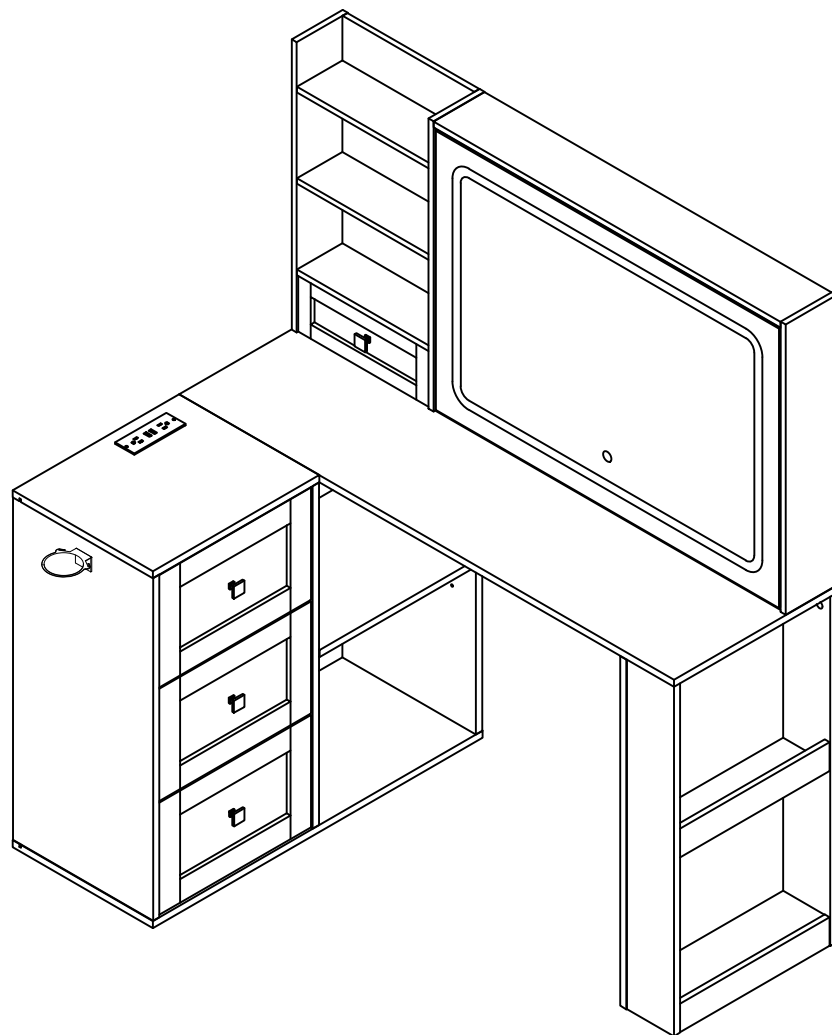
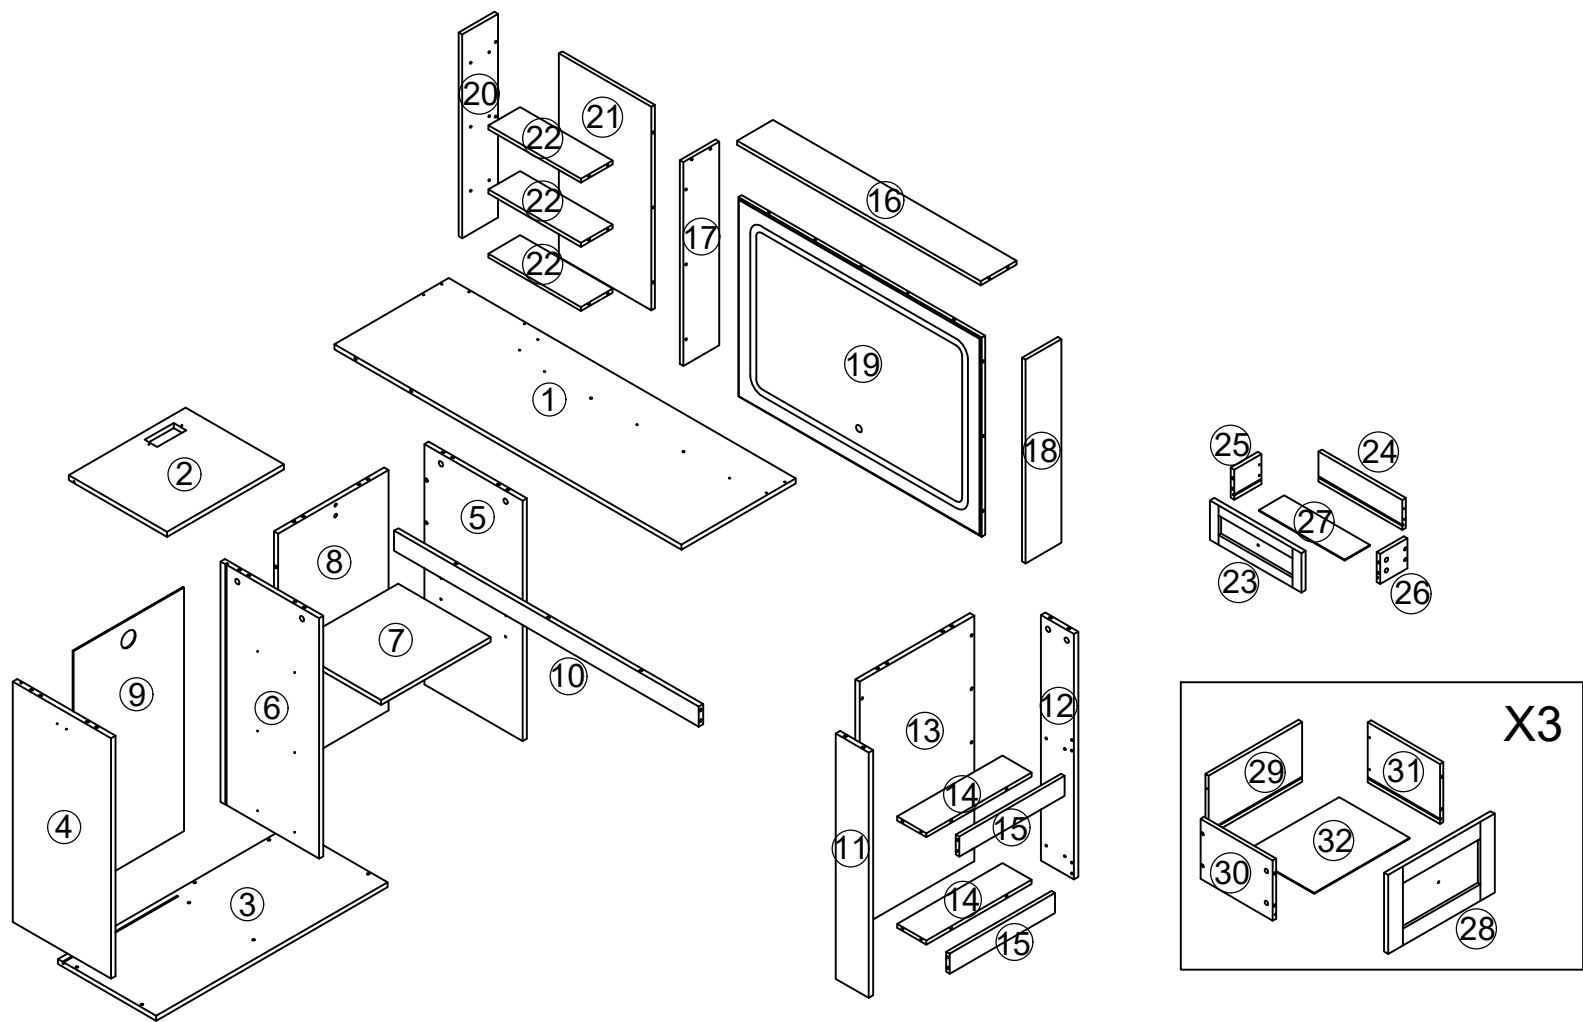


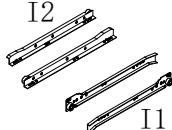



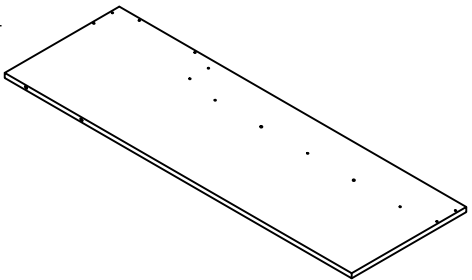
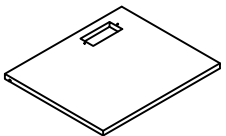
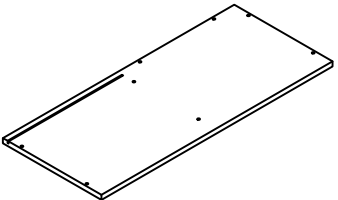
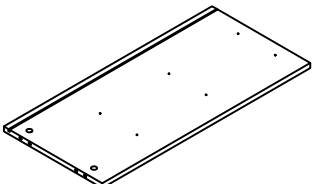
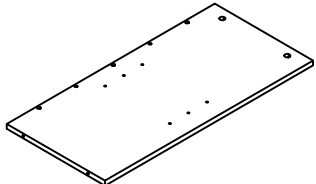
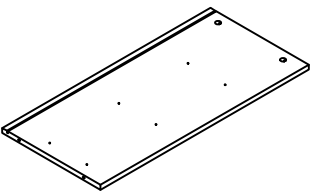
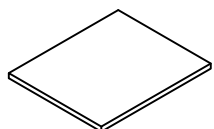
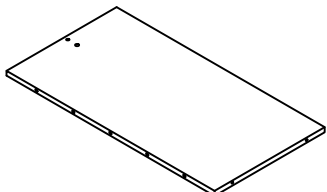
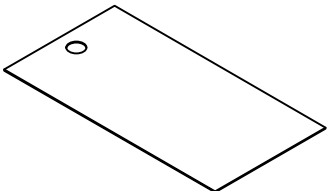
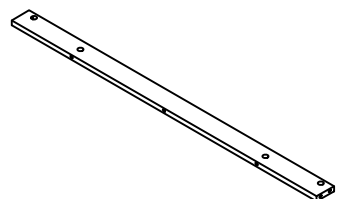
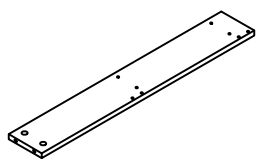
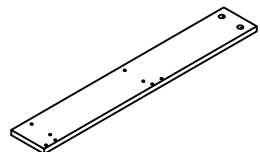
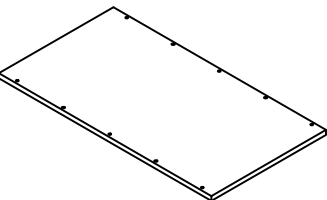


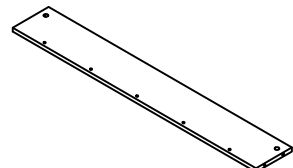
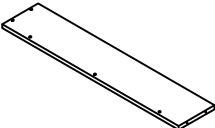
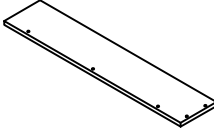
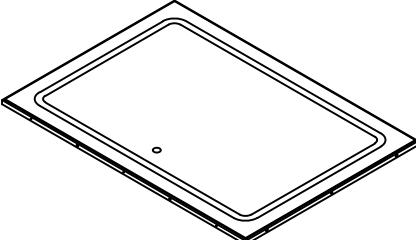
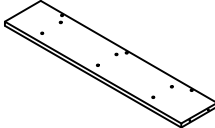
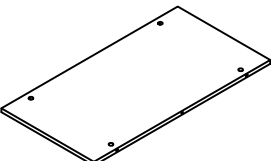












A  24PCS	B  24PCS	C 8*40  21PCS	D 3.5*12  28PCS	E 3.5*30  27PCS	F 6*30  24PCS	G  47PCS	H  4PCS	I 250mm  3PCS	J 6*64  2PCS
K 7*50  14PCS	L  4PCS	M 4*10  4PCS	N  1PCS	O  6PCS	P  1PCS				

1  1200*396 1PS	2  404*340 1PS	3  800*340 1PS	4  720*340 1PS
5  720*340 1PS	6  720*340 1PS	7  378*318 1PS	8  720*381 1PS
9  730*382 1PS	10  1054*60 1PS	11  735*114 1PS	12  735*114 1PS
13  735*396 1PS	14  364*101 2PS	15  364*60 2PS	16  842*124 1PS


17  610*124 1PS	18  610*124 1PS	19  842*597 1PS	20  610*124 1PS
21  610*320 1PS	22  320*110 3PS	23  316*118 1PS	24  290*90 1PS
25  94*90 1PS	26  94*90 1PS	27  397*88 1PS	28  368*236 3PS
29  323*180 3PS	30  250*180 3PS	31  250*180 3PS	32  330*244 3PS




Hardware installation demonstration

NOTE: Please make sure "A" hardware tightened and can't be pulled out!


I

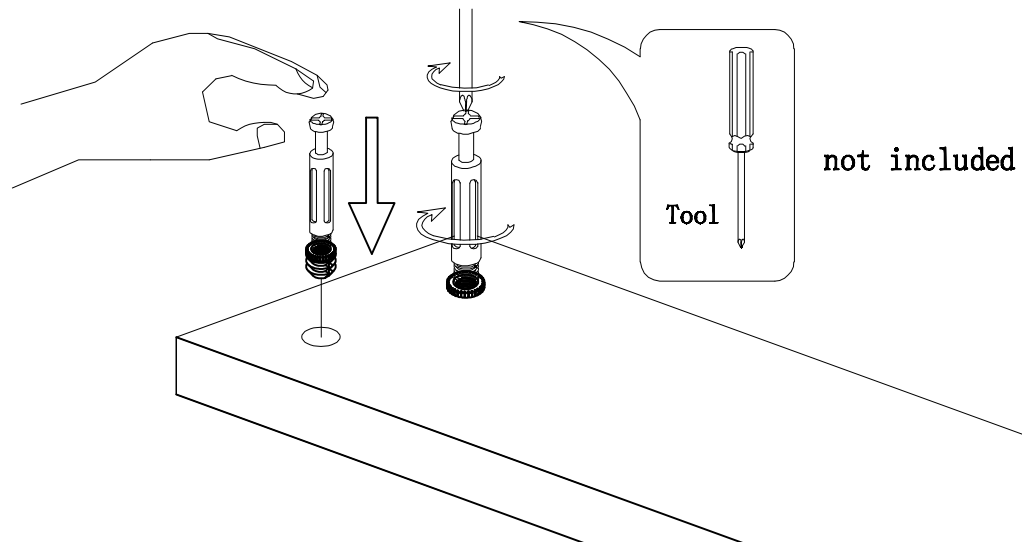

II

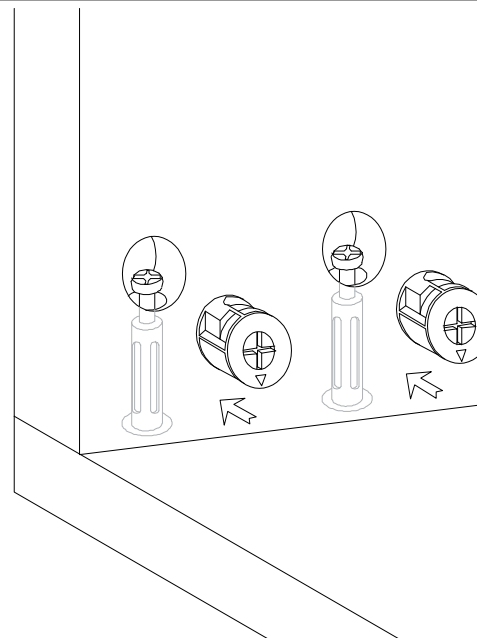

III








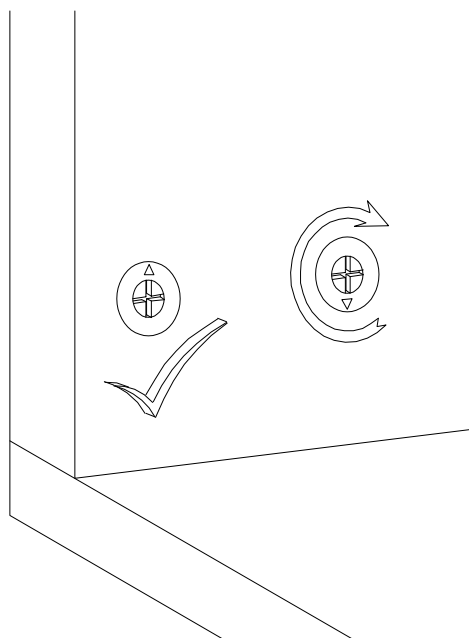


IV




Scan QR code for assembly video

1

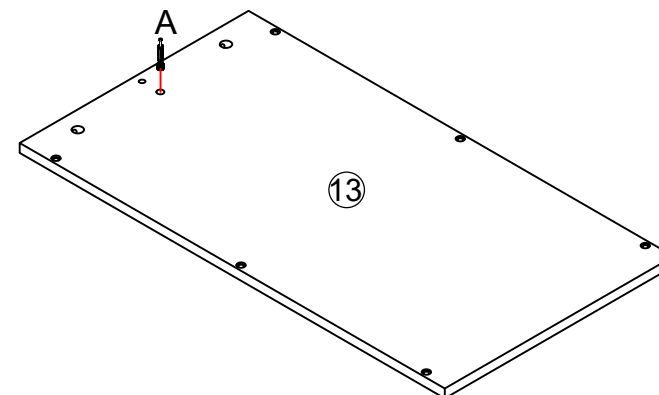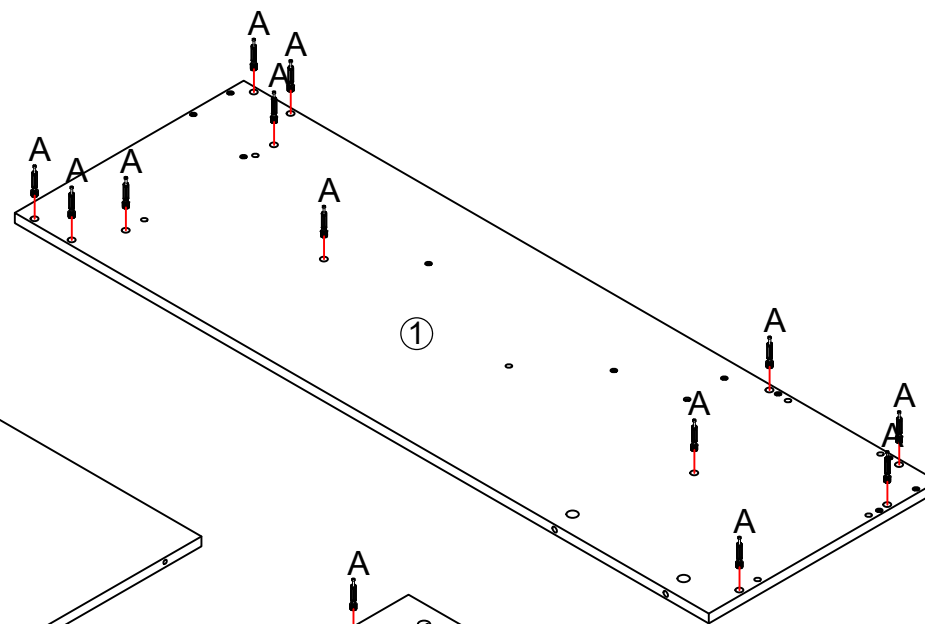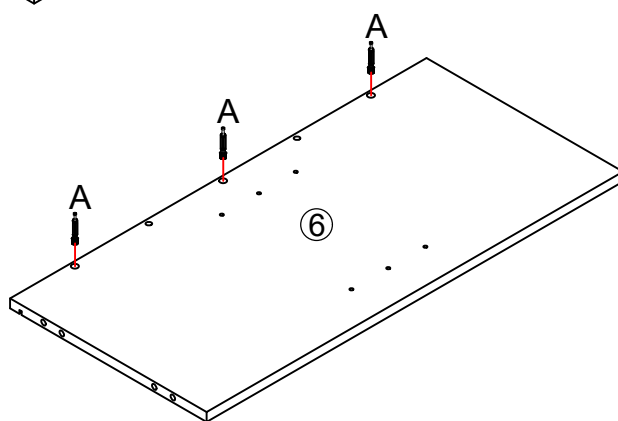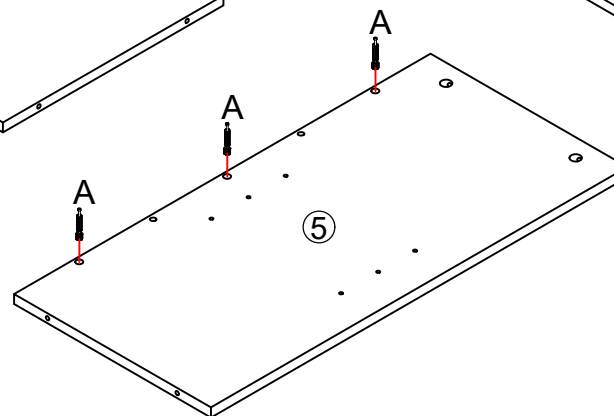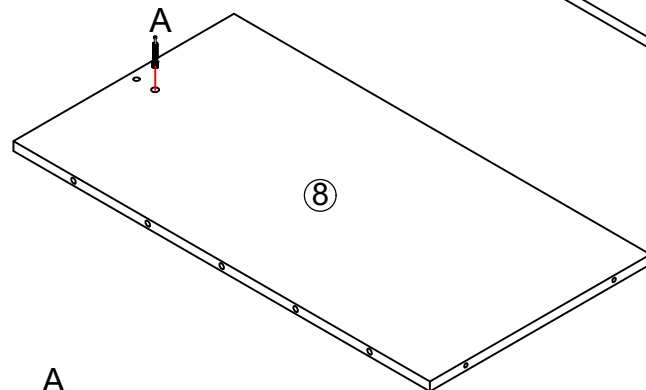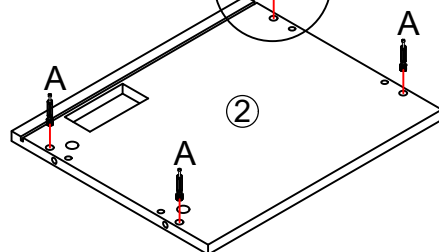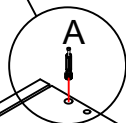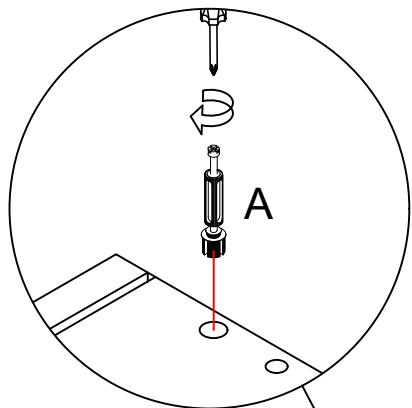





A*24

2

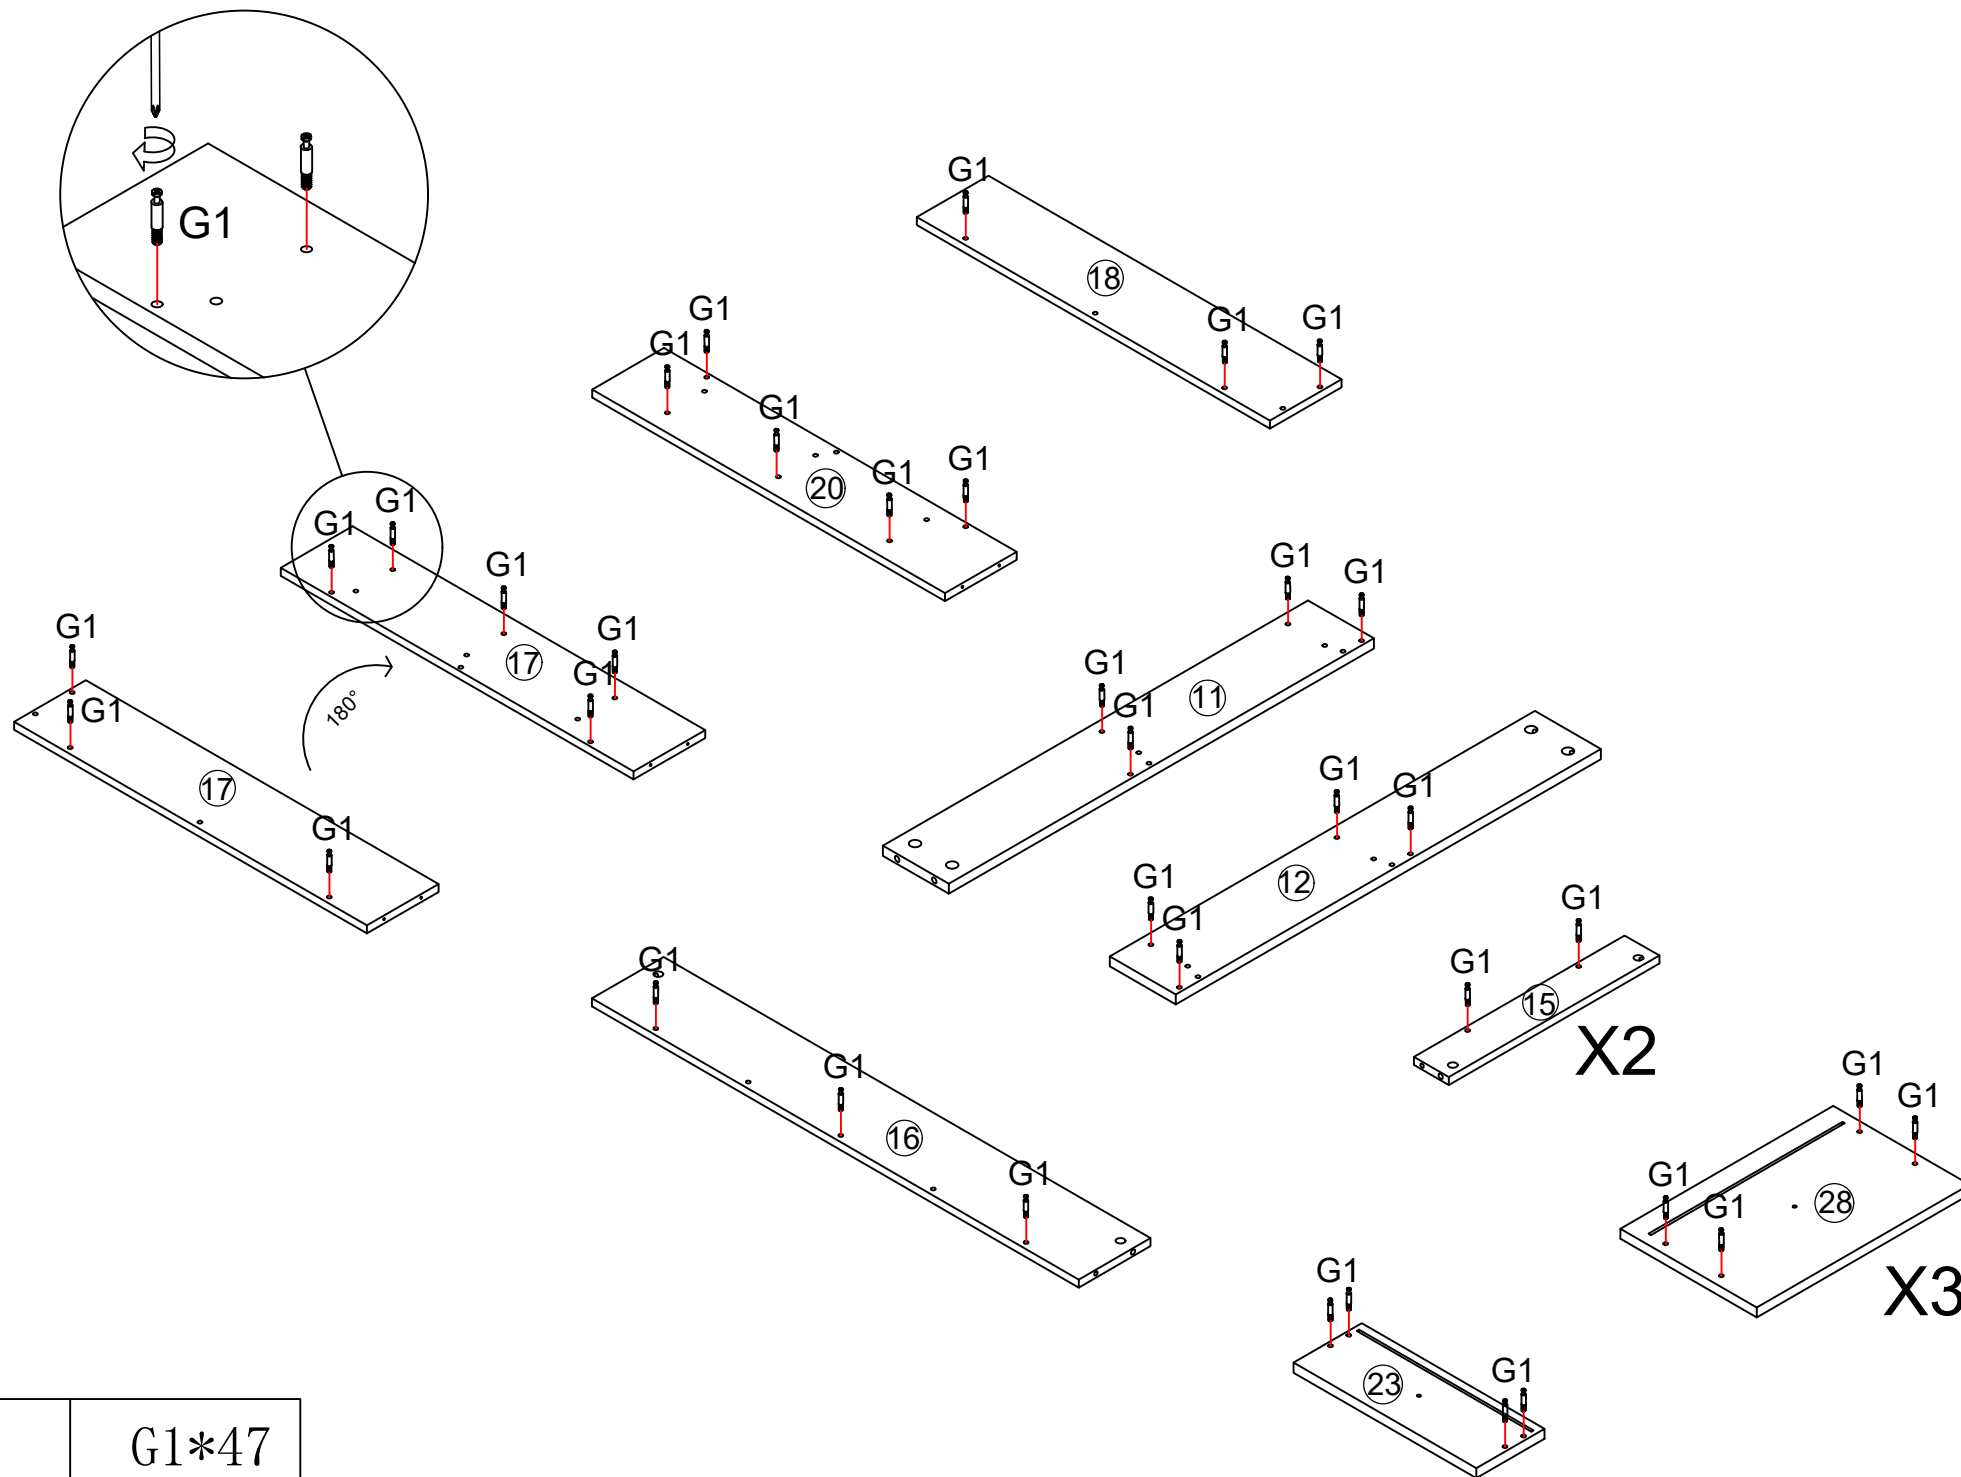


G1*47

3

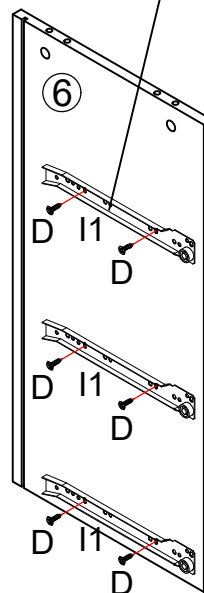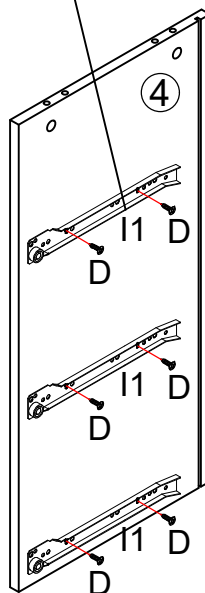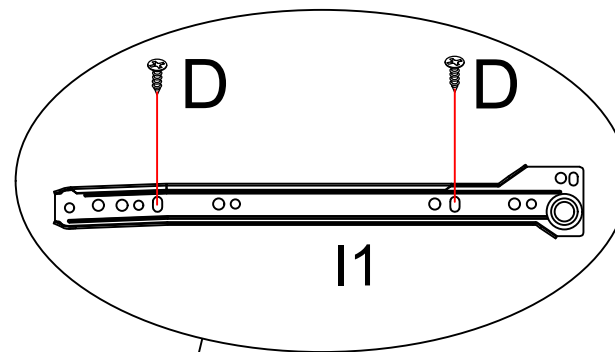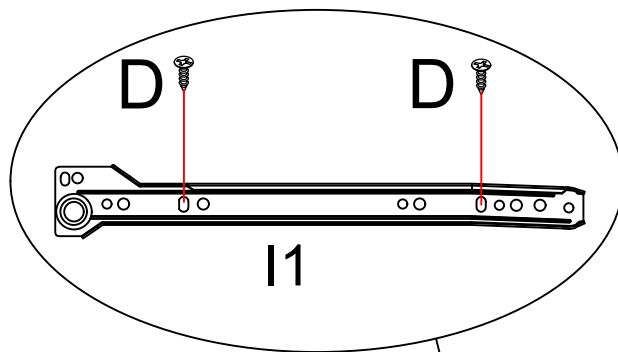





D*12



I1*3

4

Make sure the arrow on the screw align to the hole on the side.

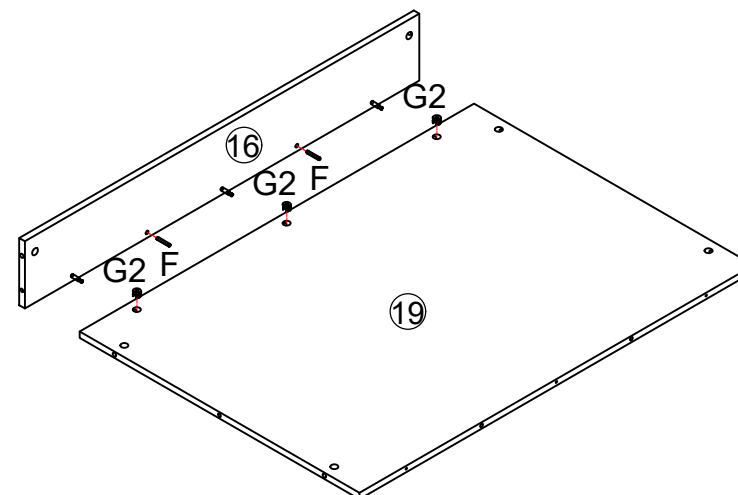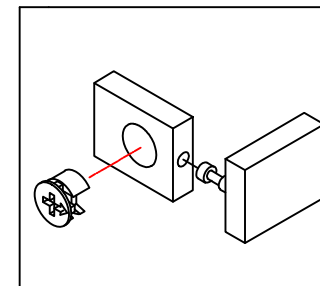
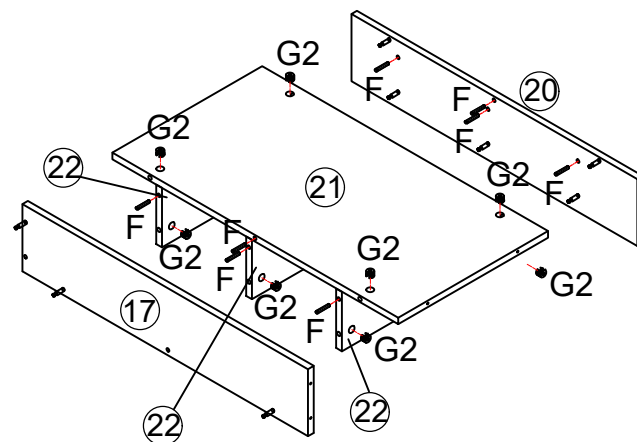


F*10



G2*13

5

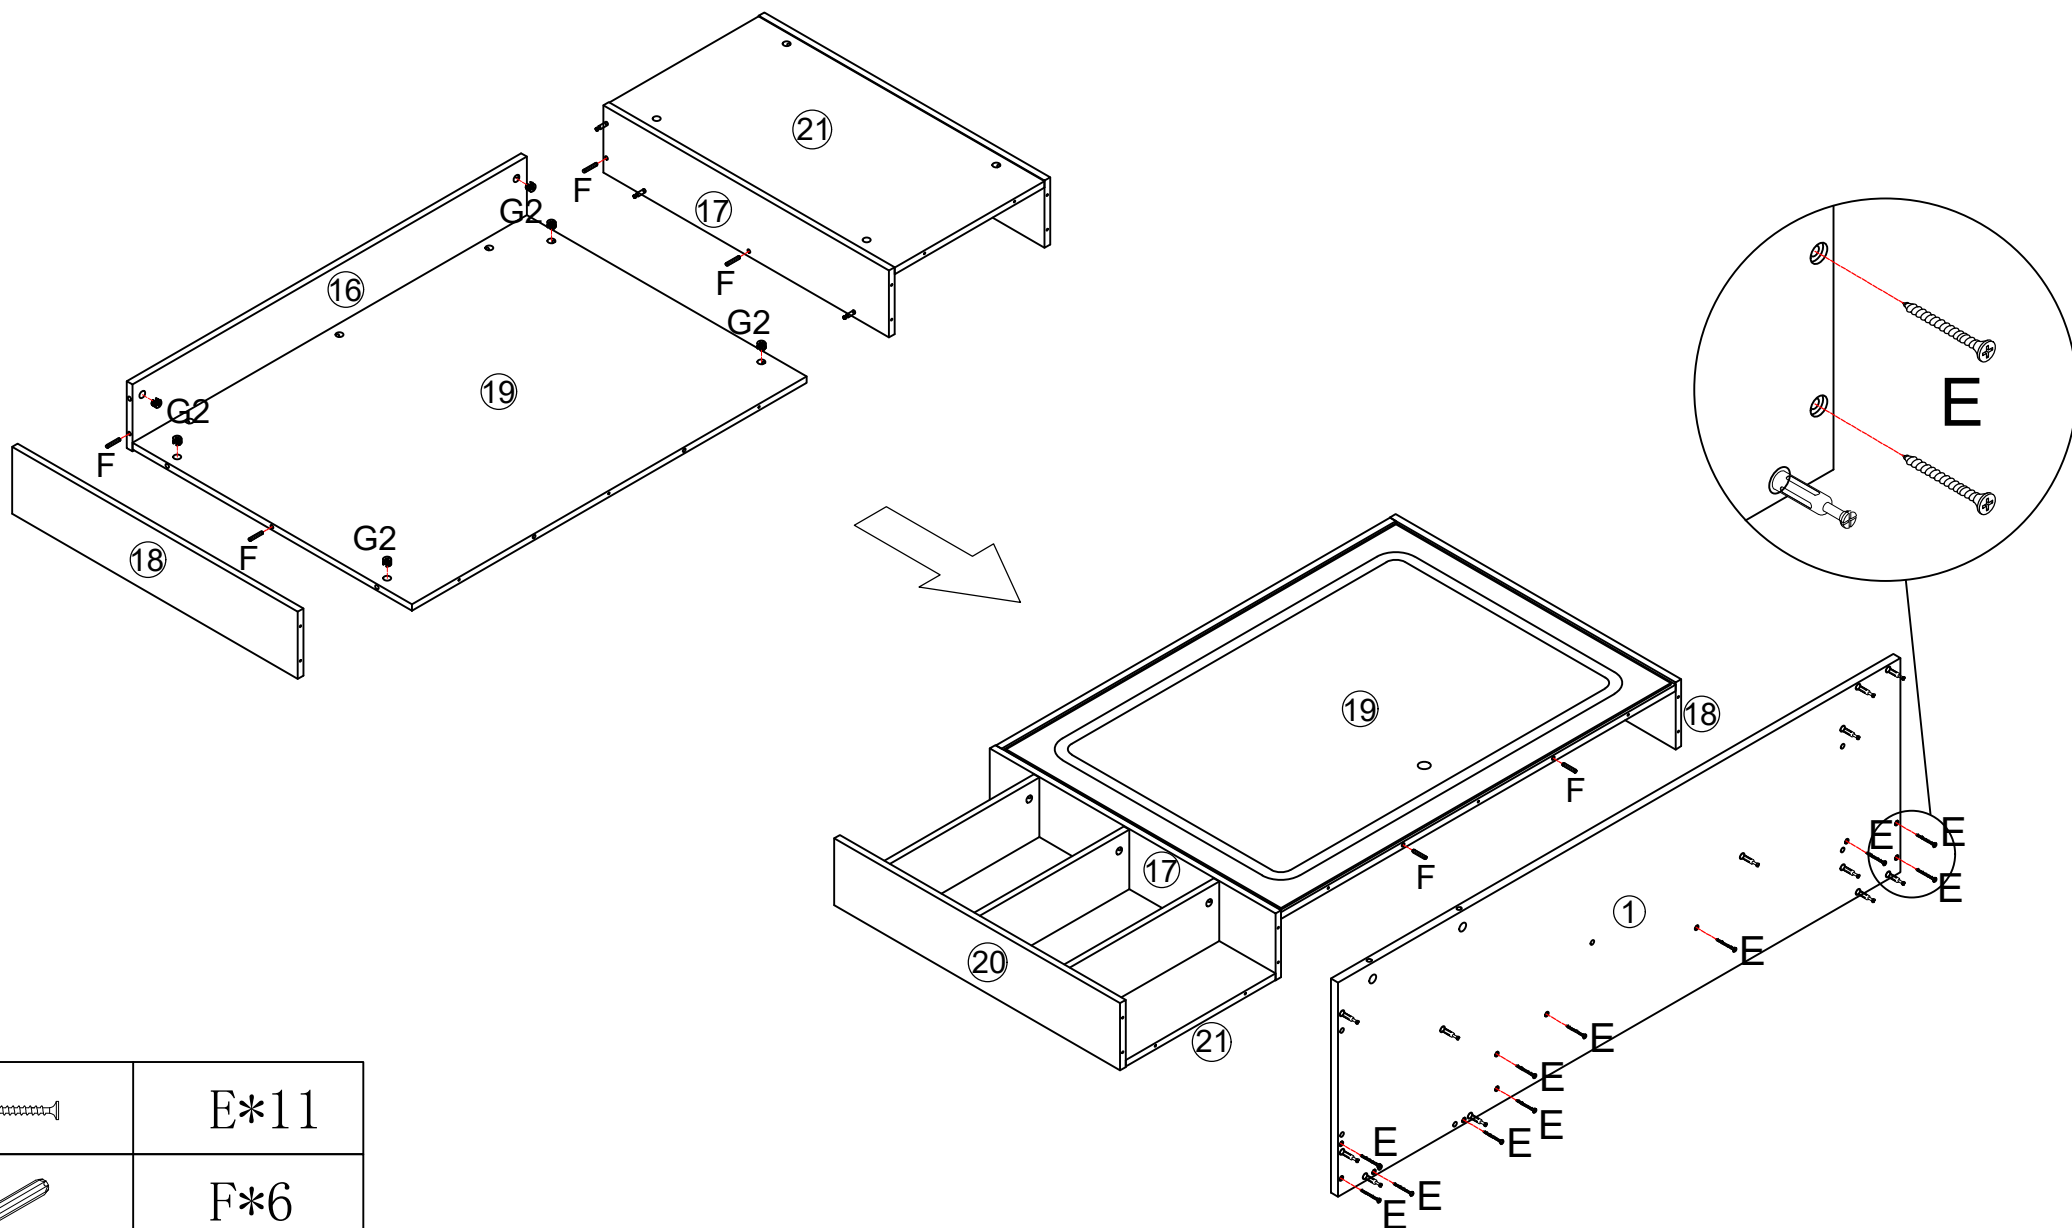

E*11







F*6




G2*6

6

Make sure the arrow on the screw align to the hole on the side.

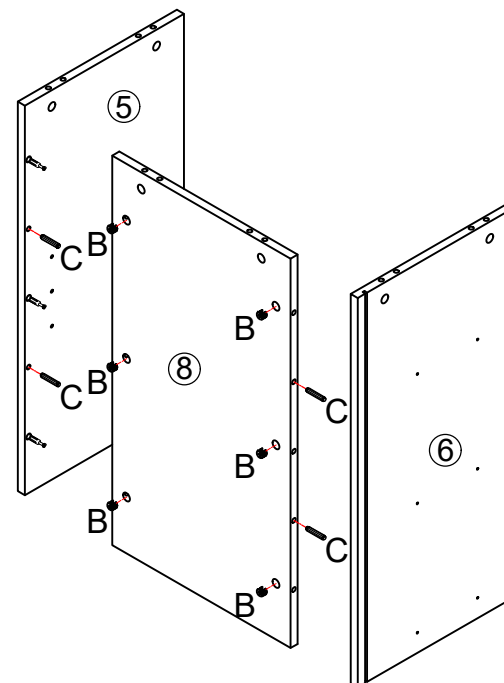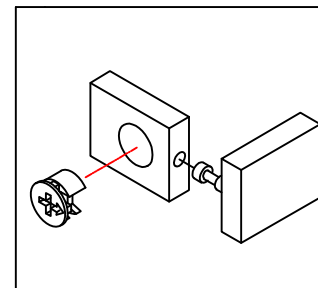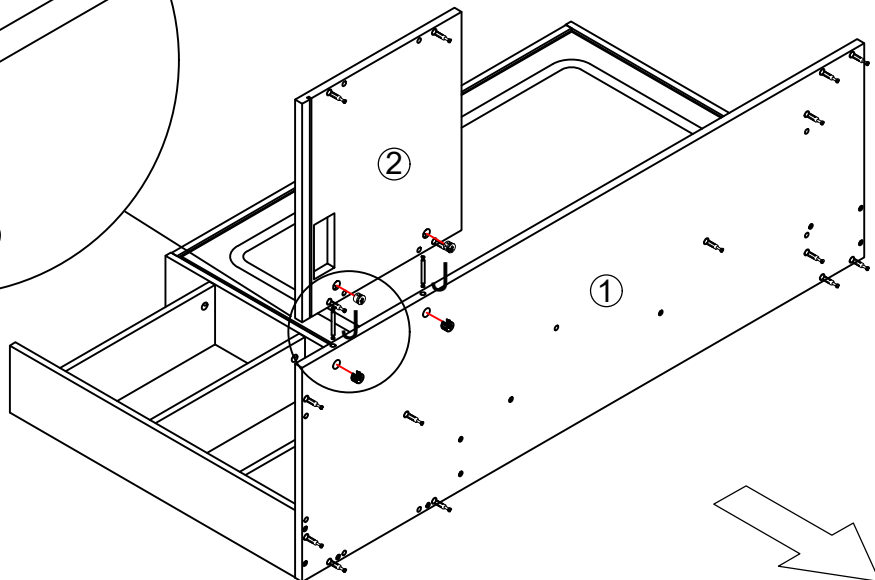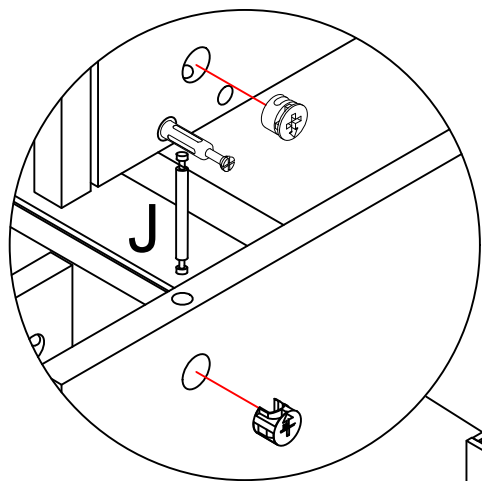

B*6





C*4



J*2

7



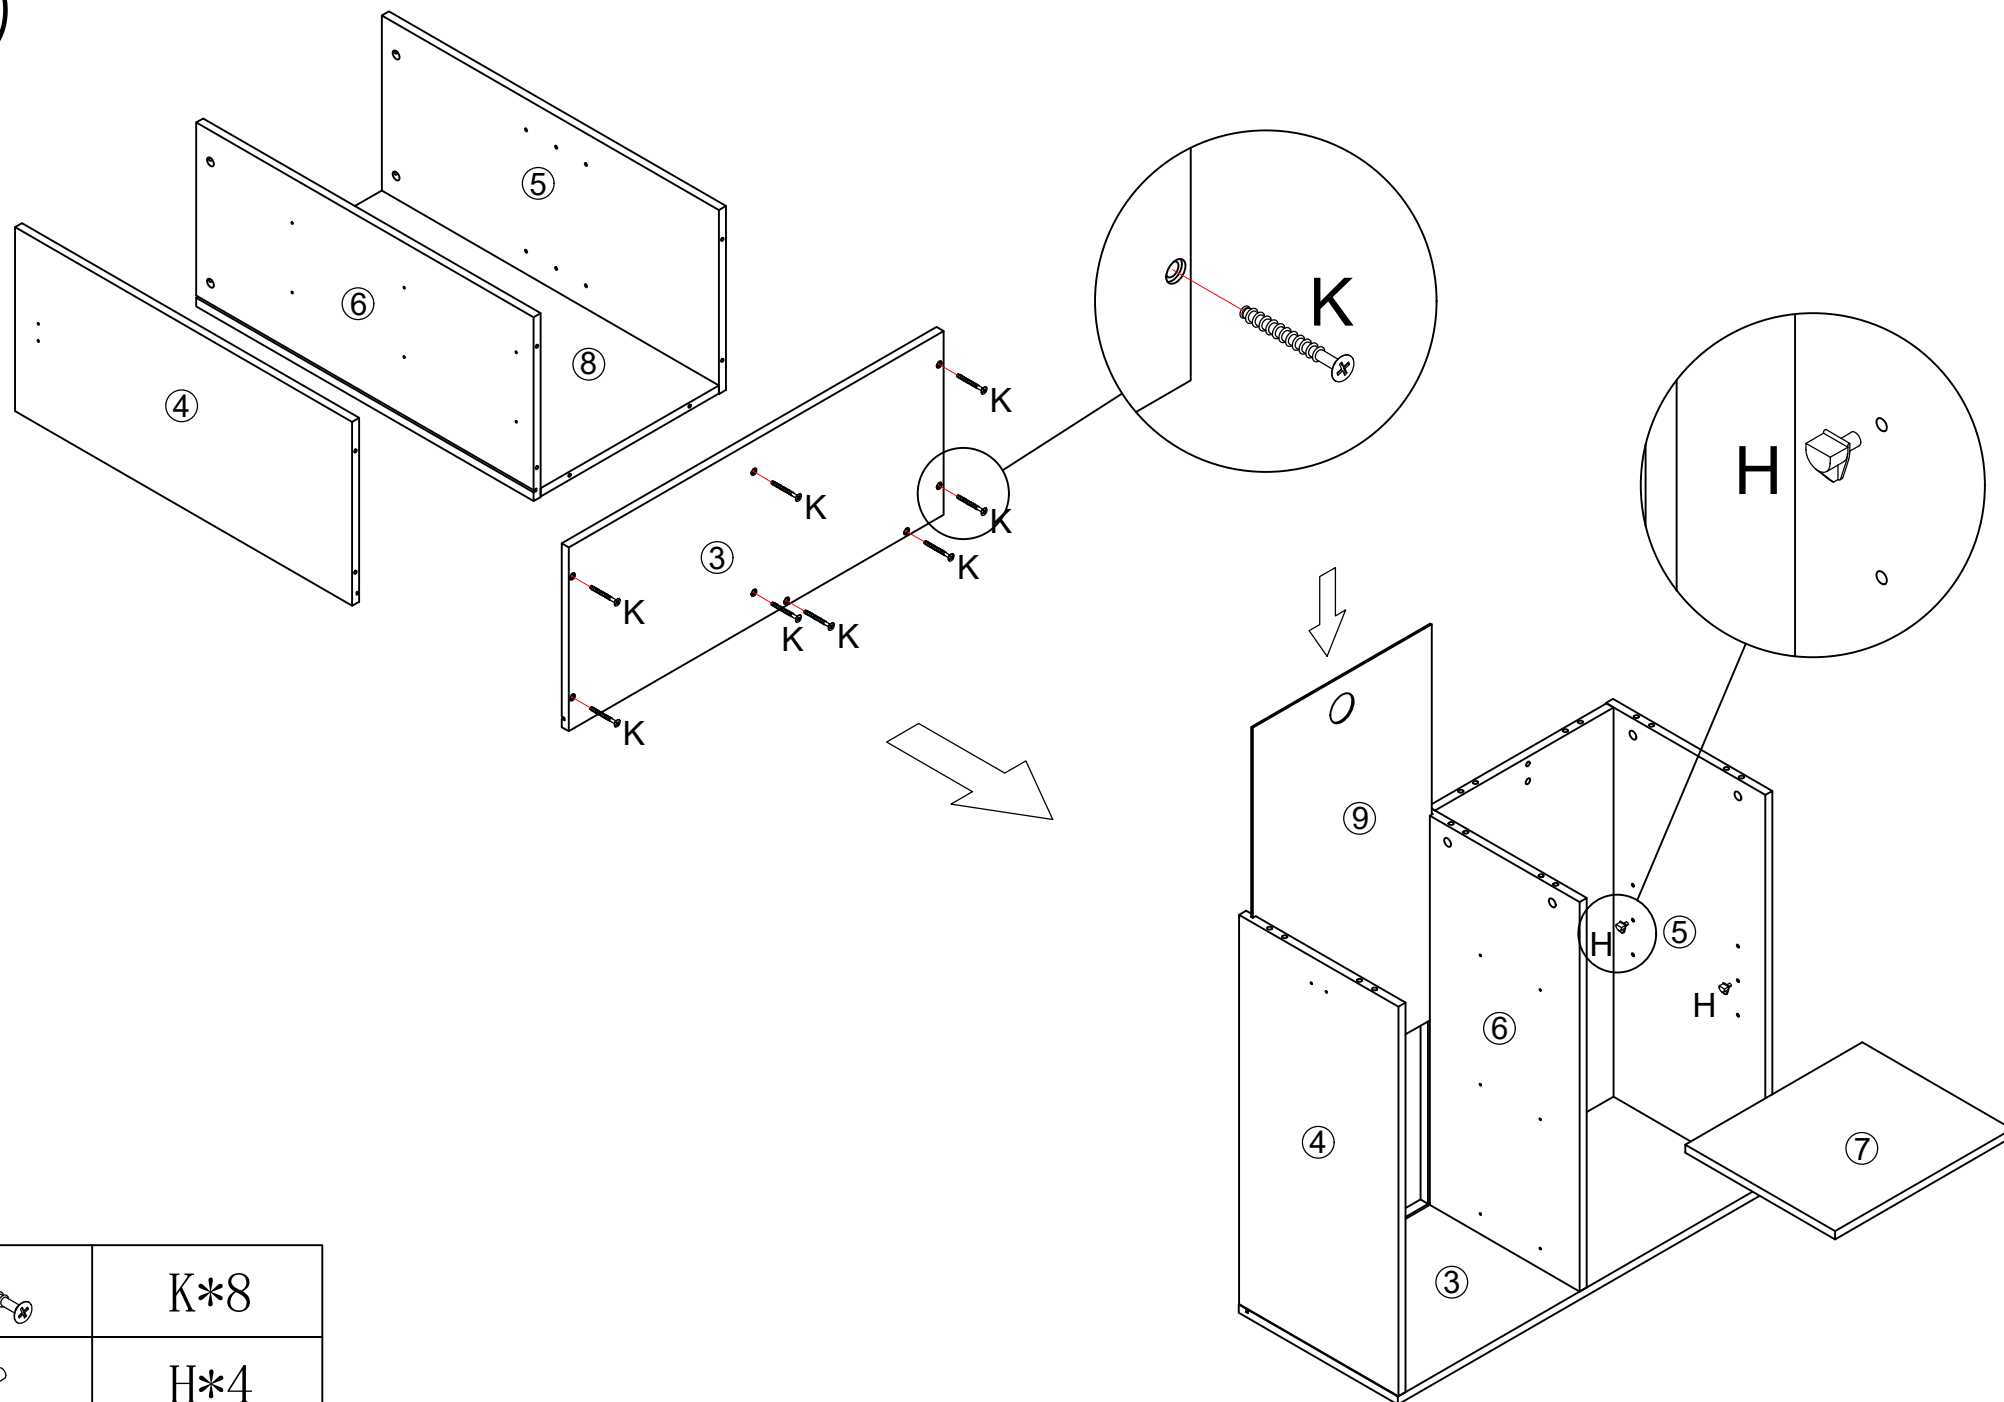


K*8



H*4

8

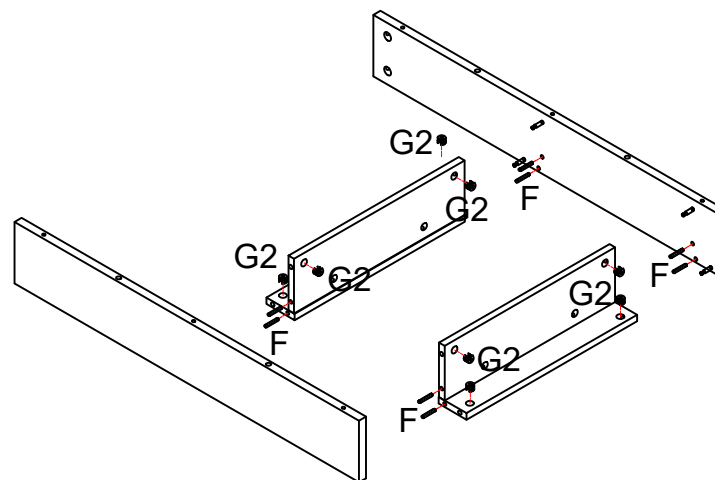

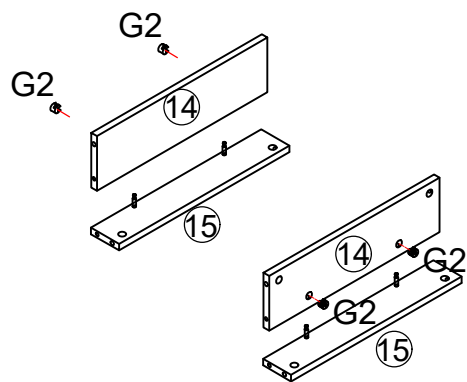


F*8




G2*12


9

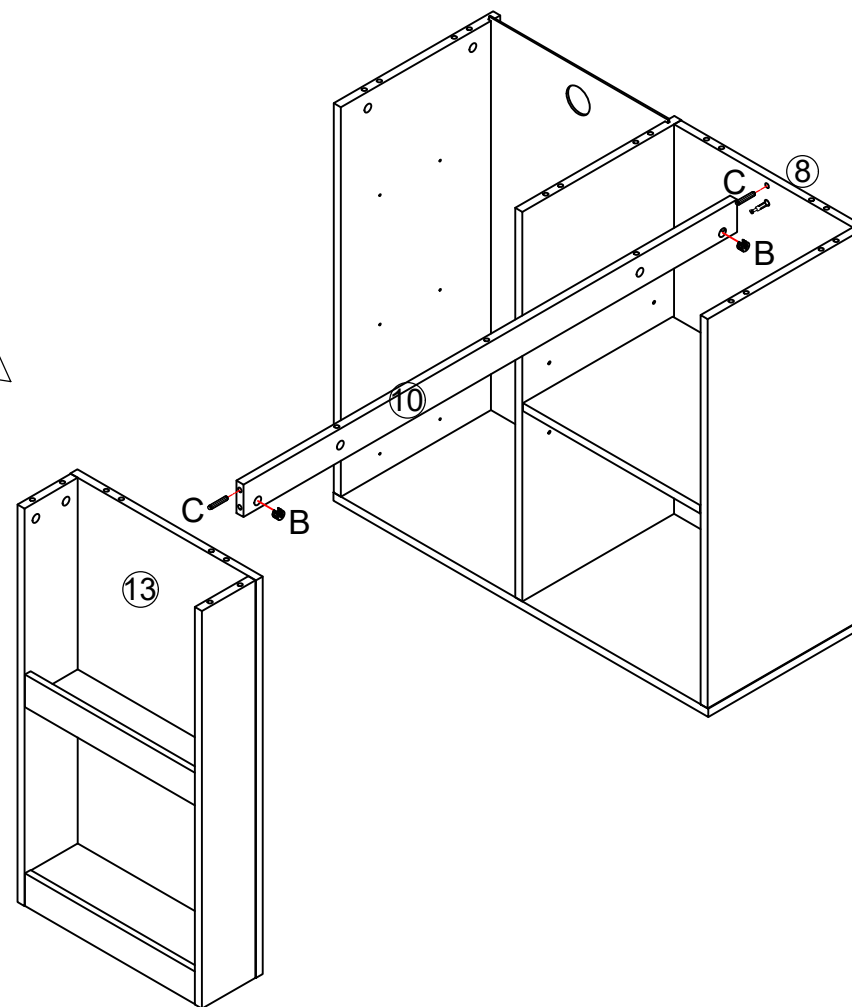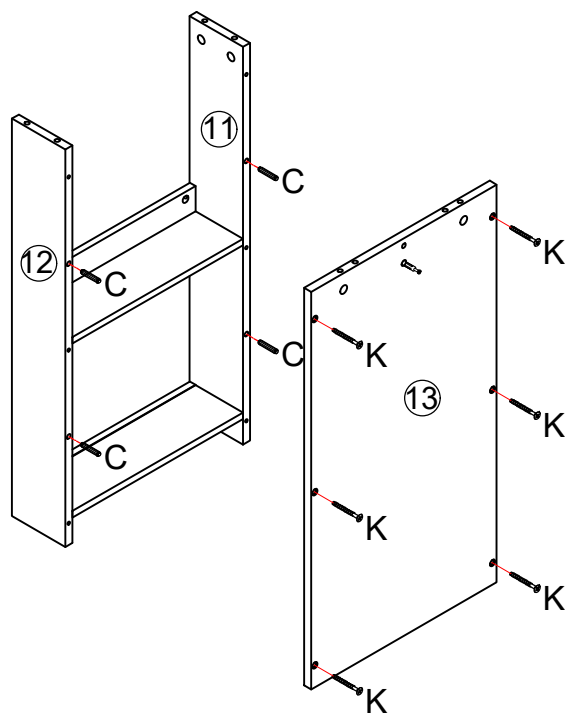

B*2




C*6



K*6

10

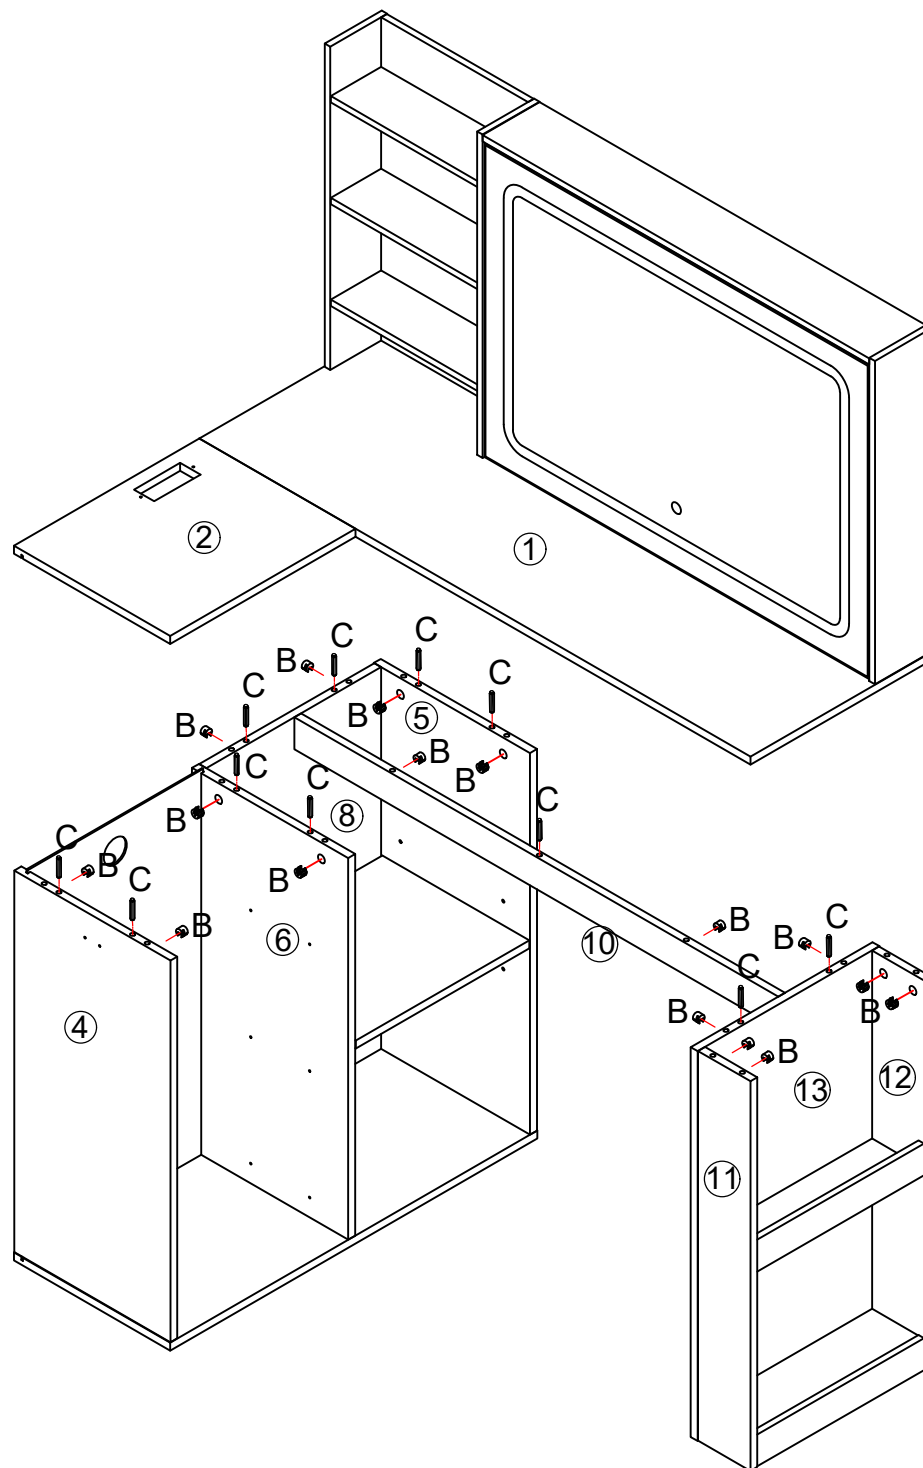







B*16



C*11

11

X3

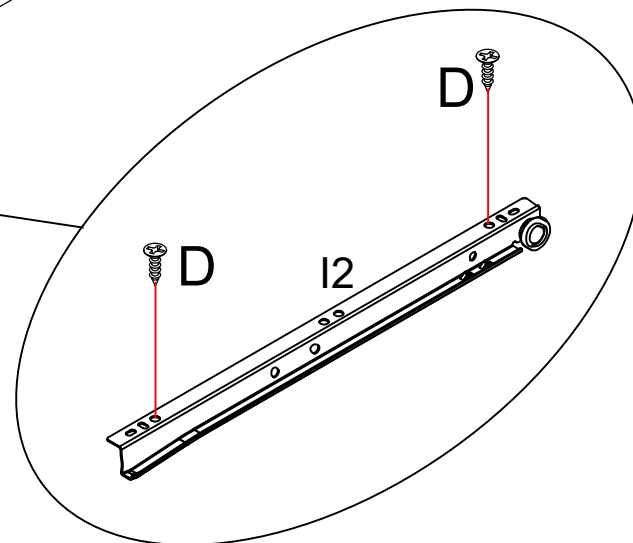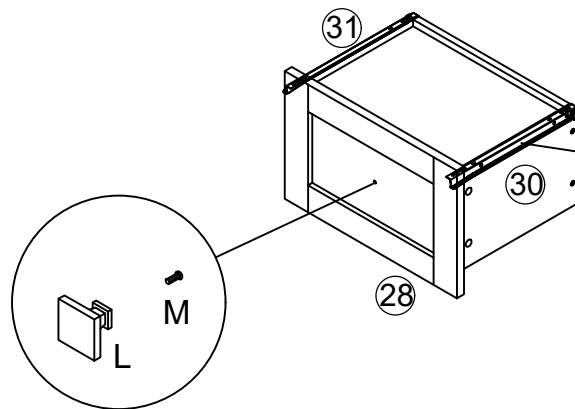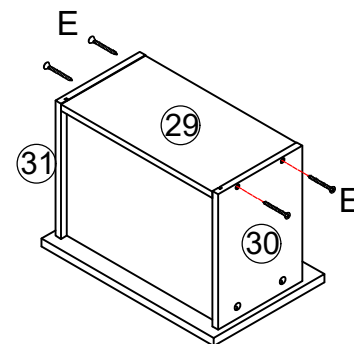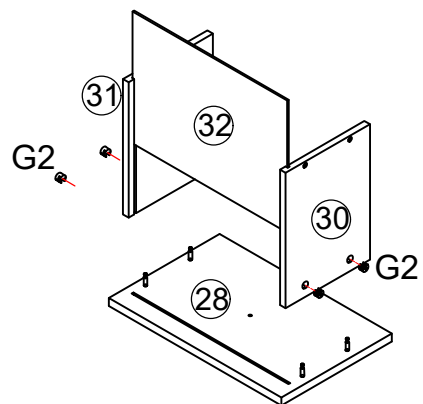


G2*12



D*12



E*12



I2*3








L*3




M*3

12

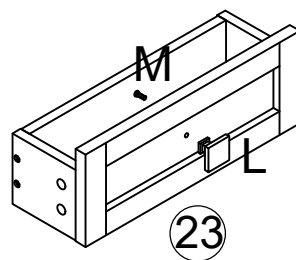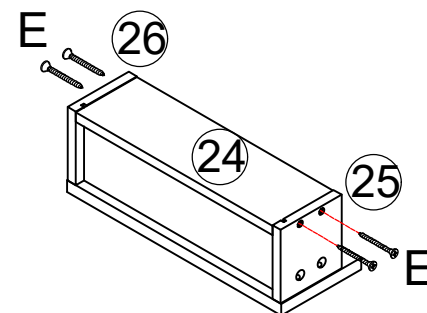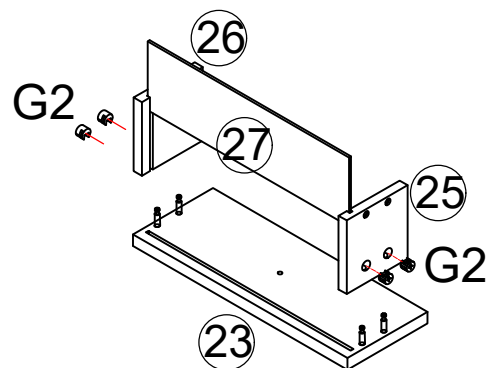

G2*4



E*4




L*1



M*1

13

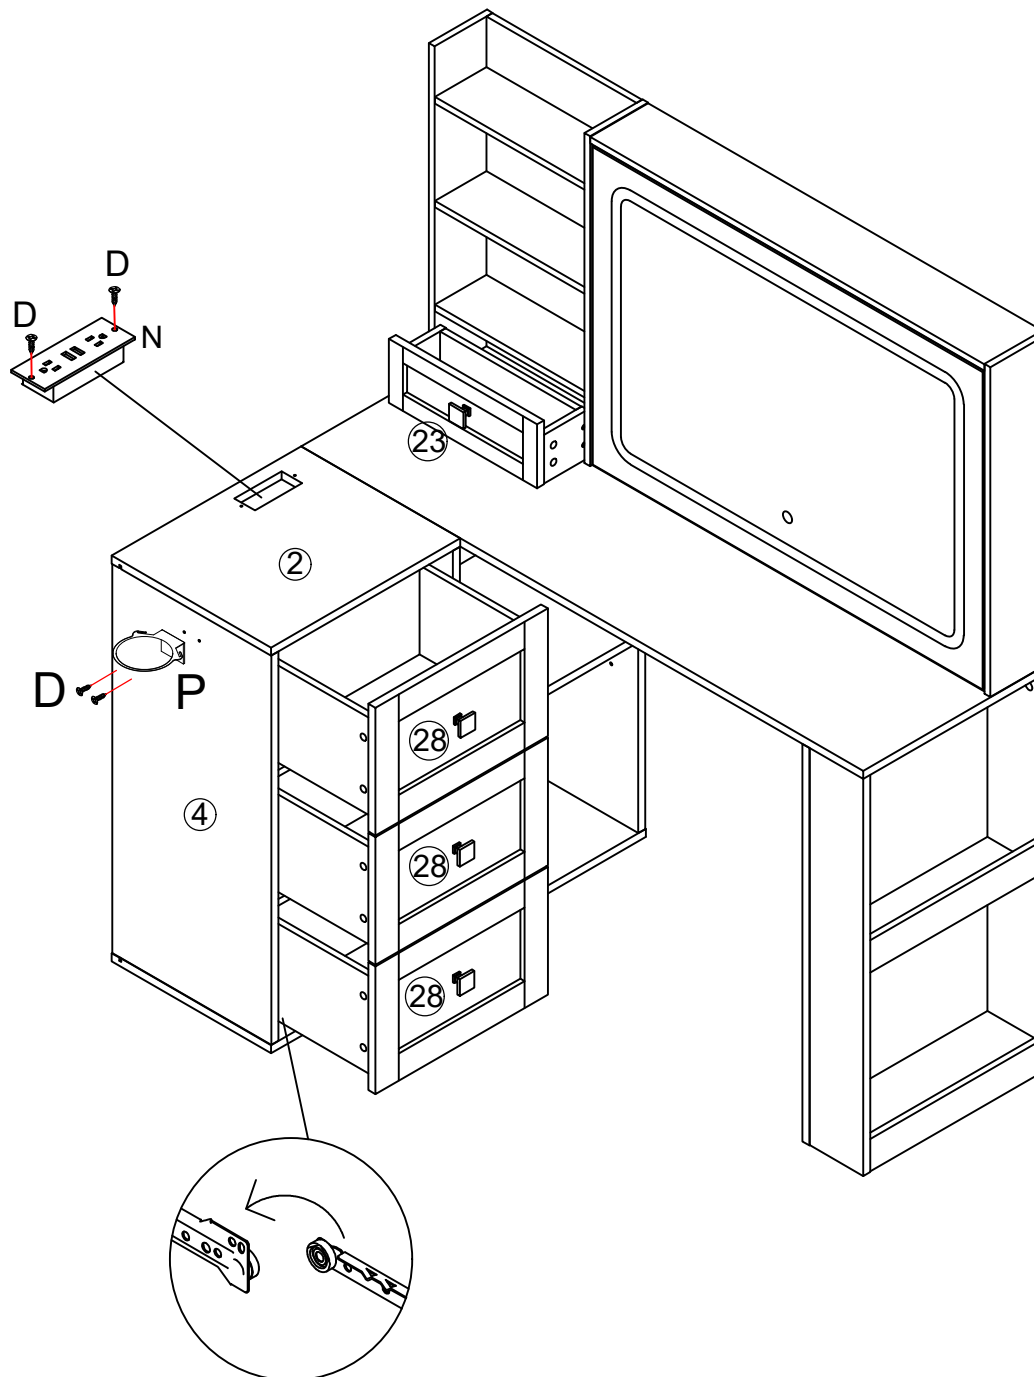

D*4




N*1



P*1

14

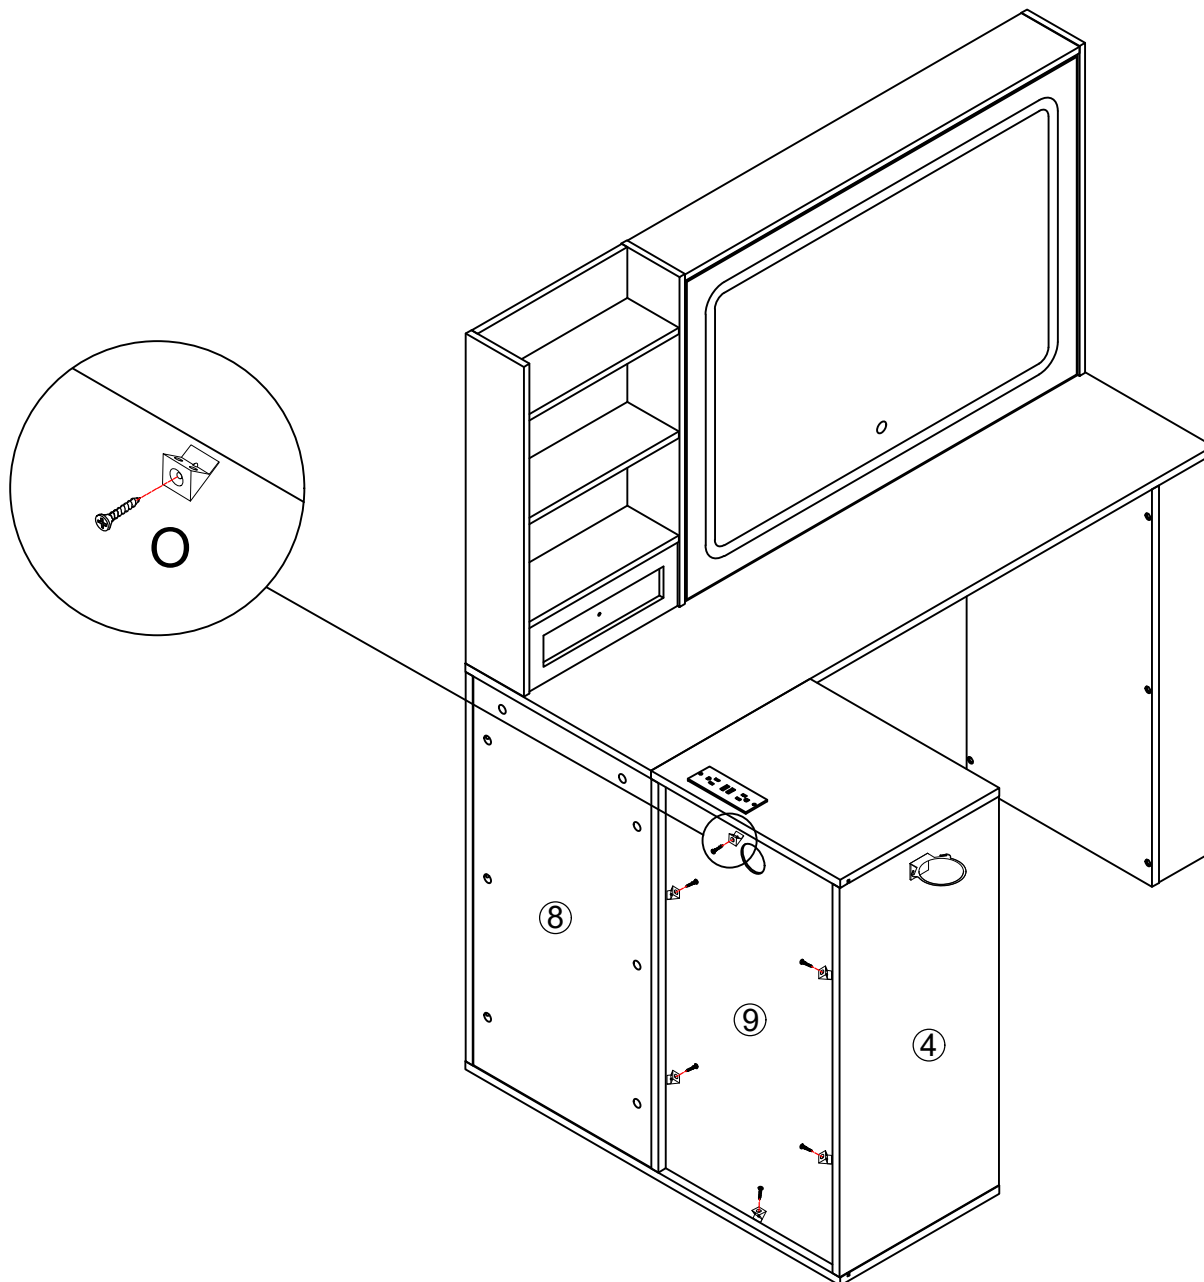

0*6

15

