

# FOUNDATION ASSEMBLY INSTRUCTIONS

## Full/Queen/King/California King Sizes

### Parts List



Legs (12 Pieces)



Headboard  
Bracket  
(2 Pieces)



A. Corner Posts  
(8 Pieces)



B. Center Cross  
Supports (2 Pieces)



C. Head & Foot  
Panel (4 Pieces)



D. Top Panel  
(10 Pieces)



E. Side Panel with Velcro  
Lip (4 Pieces)



F. Center Panel  
(2 Pieces)


### ASSEMBLY STEPS

1. Attach Legs. The use of the legs to lift the foundation off the floor is an option. If you choose to use them, screw the legs into the 8 Corner Posts labeled A (Figure 1) and the 2 Center Cross Supports labeled B (Figure 2). If you prefer the foundation to set directly on the floor, on a bed frame, or on a bed, skip this step and proceed directly to Step 2.

Figure 1



Figure 2

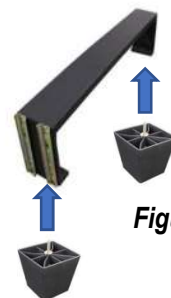

2. Attach Corner Posts labeled A to Head & Foot Panels labeled C. Insert the metal slide bracket on the Corner Posts into the slide bracket on the Head & Foot Panels at the bottom of the panel and slide up to the top. Make sure the other slide bracket on the Corner Post is facing outward (Figure 3). Do this with all 8 Corner Posts.



Figure 3

3. Attach Side Panels labeled E and Head & Foot Panels labeled C. Attach the Side Panels labeled E (with the Velcro at the top), to the Center Cross Supports labeled B by aligning the metal slides and sliding downward toward the bottom. Attach the Center Panels labeled F and the Head & Foot Panels labeled C in the same way (Figure 4).



*Figure 4*

4. Attach the Top Panels. Place the Top Panels labeled D on the foundation with the Velcro side mating with the Velcro Lip on the Side Panels (E) and Center Panels (F) (Figure 5).



*Figure 5*

5. The completed foundation should look as depicted in Figure 6.



*Figure 6*

6. The included headboard brackets may be used to support a headboard. Locate the pre-drilled screw holes under the fabric by feeling for the indentations on Head Panels (C). Attach the headboard brackets (with the headboard attachment bolts supplied with your headboard already inserted into the bracket) to the headboard panel using the included screws.

