

Preston Technical Specification


Vanity Shelf

DN8490

Stock Numbers:

- **DN8490CH – Vanity Shelf**
Chrome Finish

Dimensions:

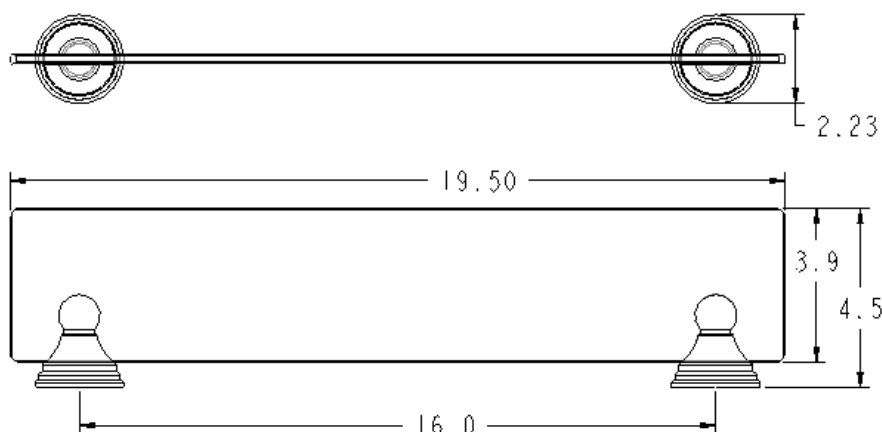

Materials:

Vanity Shelves are constructed of zinc and tempered glass.

Installation Instructions:

1. Position the mounting template on the wall in the desired location. Using a level, align the template and tape it to the wall.
2. Place each mounting plate on the template with "UP" facing you.
3. One at a time, place each anchor screw through the mounting plate, centered in each large hole. Using a Phillips screwdriver, turn the anchor screw while applying pressure. Screw will self drill and tap into drywall. Do not over tighten.
4. Only insert screw $\frac{1}{2}$ to $\frac{3}{4}$ of the way into wall.
5. After all screws are installed, tear the template away from the wall
6. Tighten all 4 screws. Do not over tighten.
7. Place each post over the mounting plate (setscrew down). Tighten both setscrews.
8. Loosen the large plastic screw on the bottom of each post. Do not remove.
9. Place the glass shelf into both slots. Tighten both plastic screws.

Cleaning Instructions:

To preserve the fine finish of this product, clean only with a soft damp cloth. Dry well. Do not use commercial or abrasive cleaners.



Stock Number: _____ **Vanity Shelf**
By CSI Bath Furnishings

25300 AL MOEN DRIVE • NORTH OLMSTED, OH 44070 (800) 321-8809 •
FAX: (800) 848-6636 • INTERNATIONAL: (440) 962-2000 •
FAX: (440) 962-2726 CUSTOMER SERVICE (USA): 800-882-0116
WWW.MOEN.COM

©Copyright Creative Specialties International

Literature #BA1099