For Style 1220P52-601-0 Assembly Instruction Sheet #IS- 1220P40-601-O

STEP 4 - Wire Conta


rdiver, plans, wire culturs, wire strippers, electrical tape, safety glasses

ools Required: Pathed coreative; Philips coreative; pilon, who culten, who stippen, electrical laps, safety glasses. Aget Seases: 120V LED '95W DHAMASE (4000) Topusation: Idaniy and Impact all parts below beginning installation. Check puckage content let and diagrams below to be sure all parts are resent. If any parts are missing or damaged, do not alternat to assemble, Install, or operate the titule. Context outsiner service for replacement

Marnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a ficensed electricism if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the ficture. We strongly recommend that a licensed, professional electricism perform the installation.

Disconnect fixture from power source before replacing builbs. Make sure builbs are given sufficient time to cool before removal

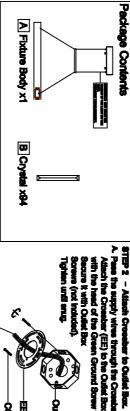

A. Pees the supply wires through the Croseber (EE).
Attach the Croseber (EE) to the Outlet Box (CC)
with the head of the Green Ground Sorew facing you.
Secure it with Outlet Box
Sorews (not included). ighten until erup. Supply Wires with Outlet Box Screws Ground Wire Figure 2 8

Hardware Contents

PART

DESCRIPTION QUANTITY

8

Outlet Box Screw 2pos

STEP 1 - Attach Mounting 8 Screws, Lock Western

STEP 3 — Fit Calling Canopy to Crossber Assembly

and Hex Nuts to Grossbar. A. Line up a set of hoise on the

on the ceiling carrapy. Thread Mounting Screws (DD) nto the holes on the

A. Fit the ceiling canopy to Mounting Screwe (DD) and secure with Mounting Balls (AA). Note: The ceiling canopy should be snug against the ceiling and the Mounting Balls (AA). If not, adjust the length of the Screws (DD) in or out of the Croseber (EE) until the mecrewing the Hex Nut nd Look Weather and founting Screws (DD) by en screwing Mounting

8

Once the ceiling canopy is secure, remove the Mounting Ball (AA) and ceiling canopy and proceed to Step 4. correct length is achieved. Figure 3

1 of 2

ReleasedDate:2020-08-14

tend lighten until enug

luts onto the Mounting wher (EE). Pees Lock thers and thread Hex

> A. Carrefully truck all wires into the outliet box and position the ceiling campy of the Foture Body (A) over the outliet box. Align the holes in the ceiling campay with the Mounting Screwe (2014).
>
> Secure with Mounting Balle (AA) and hand fighten until erug. STEP 5 - Install Ceiling Canopy to Calling from outlet box outlet box (or Red) Heack wire from rom outlet box iere, or Green from outlet box Sare, or Green Ground win Figure 4 on the Crossbur Green Ground Screw from fluture from fixture Ground wire from fixture Black wire

A. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are fightly bired together. Wrap each connection with approved stacified tope and carefully stuff all the connected wires into the Outlet Box. from floture STEP 6 - Install Ceiling Canopy to Ceiling A Atlach Crystals to the Fixture Body (A). (B) Crystal

Figure 0

Figure 5