


ASSEMBLY INSTRUCTIONS

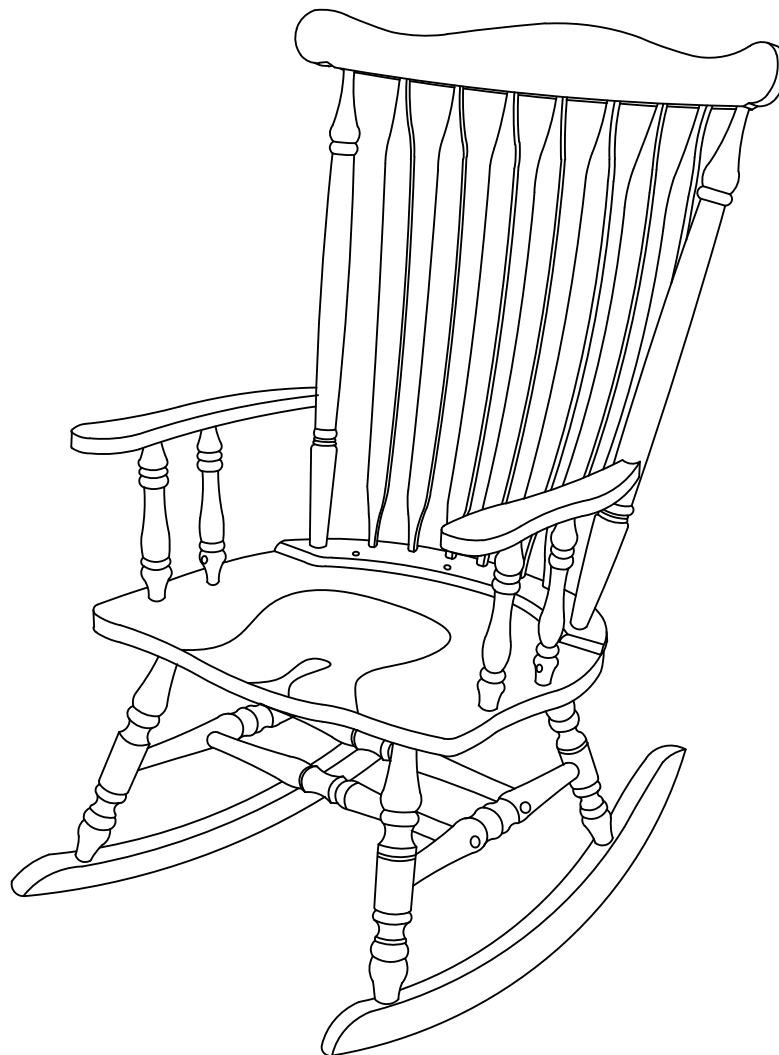

Description : COLONIAL ROCKER
Item No. : R37-120

BEFORE ASSEMBLY

Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. Please take the time to read and follow the assembly instructions carefully.

Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Please separate, identify, and count all parts and metal hardware. Compare with part list to be sure all parts are present. If hardware is missing or you have difficulty assembling this product, please call Toll Free: 1-888-944-8396.

IMPORTANT NOTE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until completely assembled.
- Keep all hardware parts out of reach of children.







ASSEMBLY TOOLS REQUIRED

NOT INCLUDED







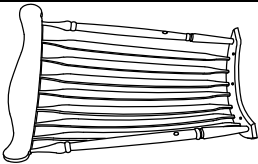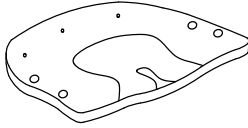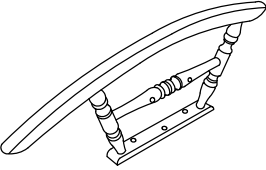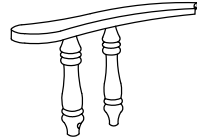




PART LIST

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:

NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
A	Chair back	1		B	Chair Seat	1	
C	Leg (L-R)	2		D	Front Stretcher	1	
E	Back Stretcher	1		F	ARM (L-R)	2	


HARDWARE LIST

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have all of the following hardware:

NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
1	Short bolt (M6 x 35mm)	9		2	Long bolt (M6 x 60mm)	8	
3	Wood plug (Ø10.5 x 8mm)	2		4	Lock Washer (Ø6.5 x 11mm)	17	
5	Flat Washer (Ø6.5 x 13mm)	15		6	Flat Washer (Ø6.5 x 19mm)	2	
7	Barrel nut	6		8	Wood plug (Ø14.5 x 10mm)	9	
9	Allen Key (M4x80mm)	1					


STEP 1

Attach Front Stretcher (D) and Back Stretcher (E) to the Legs (C) with bolts (2), and washers (4) and (5) and nuts (7), as shown below. Tighten with Allen key (9). Then insert wood plugs (8) over bolts to cover them.

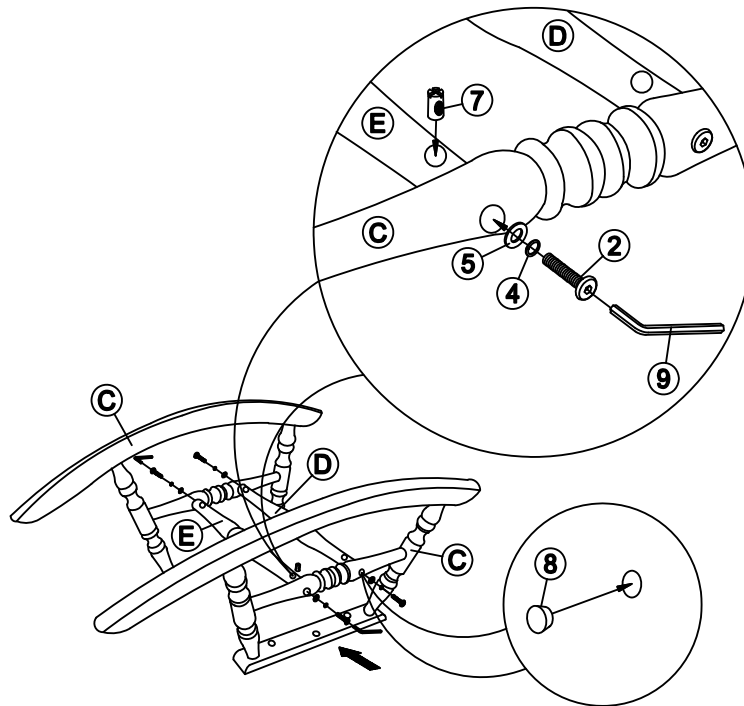

STEP 2


Attach the Legs (C) to the seat (B) with bolts (1), and washers (4) and (5), as shown below. Tighten with Allen key (9).

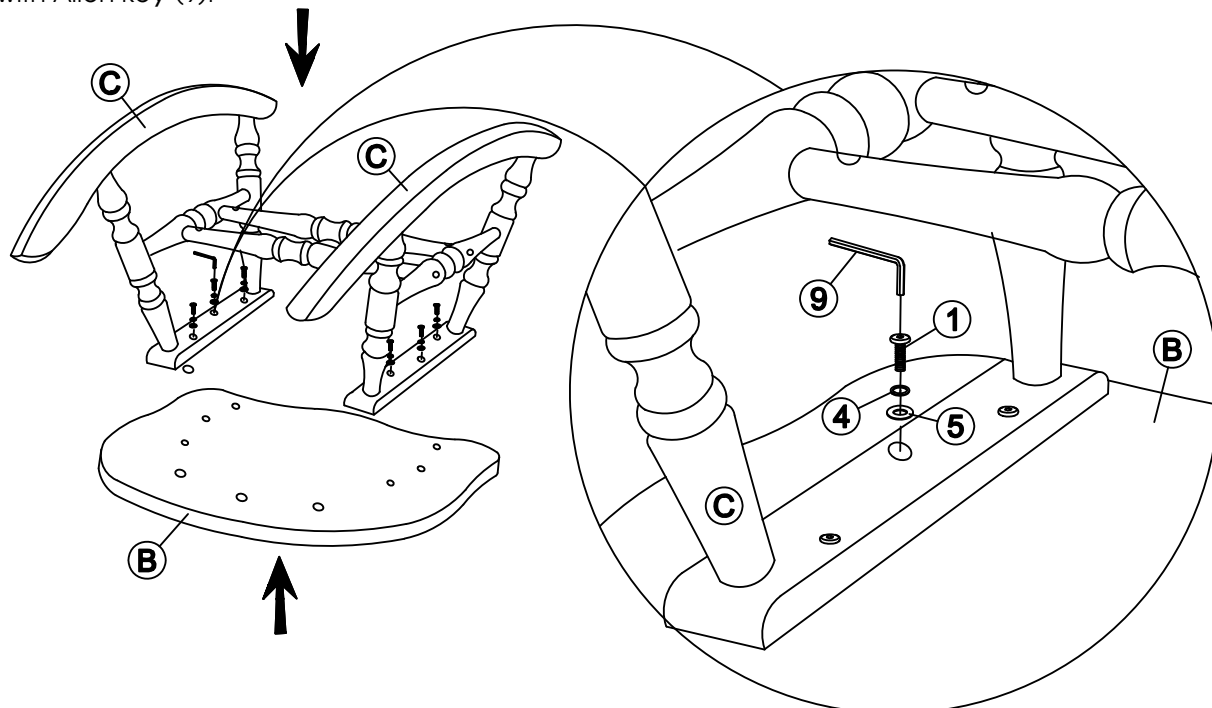

STEP 3

Attach the back (A) to the Seat (B) with bolts (1), and washers (4) and (5), as shown below. Tighten with Allen key (9).

Then insert wood plugs (8) over bolts to cover them.

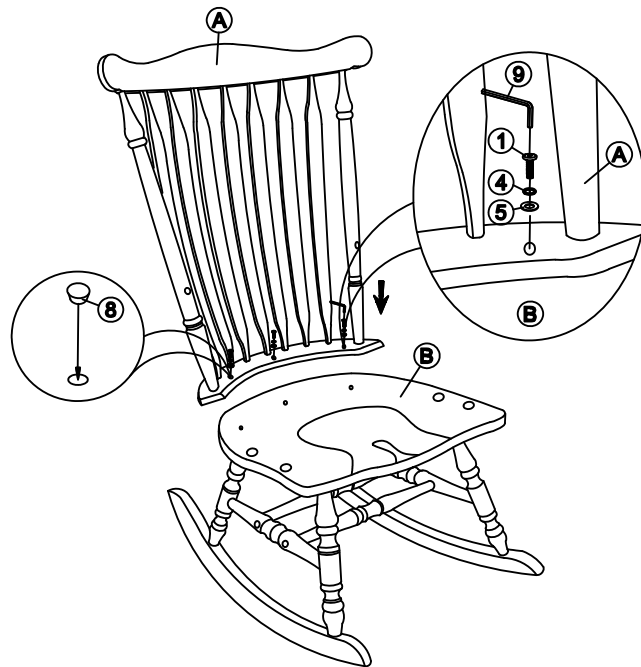

STEP 4

Attach arms (F) to the seat with bolts (1) and washers (4) and (6) and nuts (7) as shown below.

Tighten with Allen Key (9). Insert wood plugs (3) over nuts to cover them.

Then attach arms (G) to the back with bolts (1), and washers (4) and (5) as shown below. Tighten with Allen Key (9). Insert wood plugs (8) over bolts to cover them.

