

ASSEMBLY INSTRUCTIONS

ITEM #: WF319398

WF319399

WF319400

WF319401

If you have any questions, please feel free to contact us.


Email: lowesteam@aminalife.com

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small Hardware which may have come loose inside the carton during shipment. Identify and count all hardware and compare with the hardware list below.


ASSEMBLY INSTRUCTION:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast and easy.


1. Don't attempt to repair or modify parts that are broken or defective. please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.
3. Two persons are required for assembly.
4. Approximate assembly time: 1/2 hours.
5. Component parts and fittings contained in the box.
Please sort out all parts before you begin to assemble the item.
This is to make sure you always use the correct part.
6. It is **STRONGLY RECOMMENDED** that you **ANCHOR** this product.
Toppling furniture can cause serious injuries and death.
This product has not been fitted with an anchor strap.
To prevent your furniture from tipping forward it is strongly recommended.
That you securely attach this product to a wall or other solid surface, using the anchor straps
Provided and appropriate fixings.

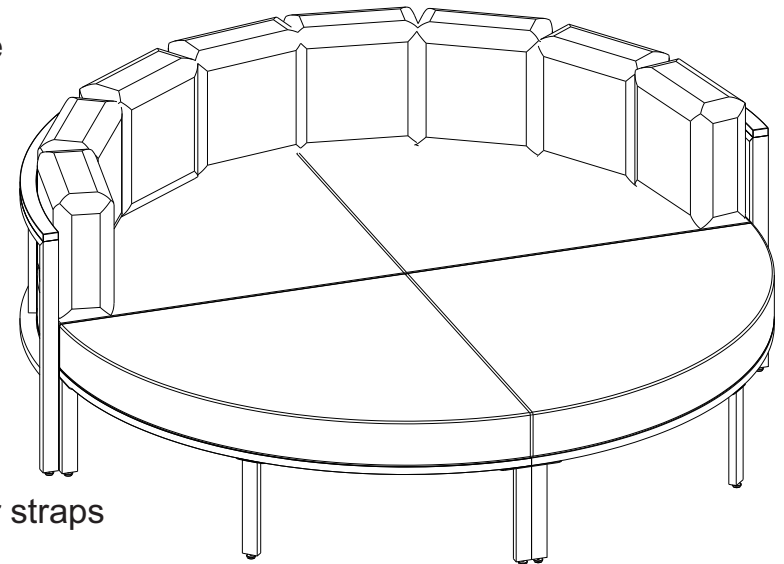


ITEM #: WF319398

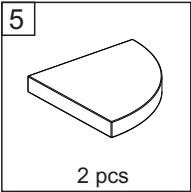


ITEM #: WF319400

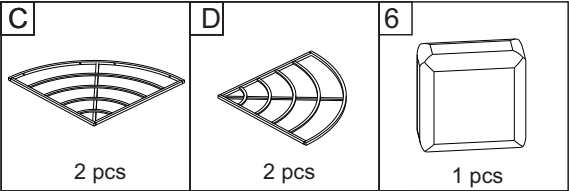


HARWARE

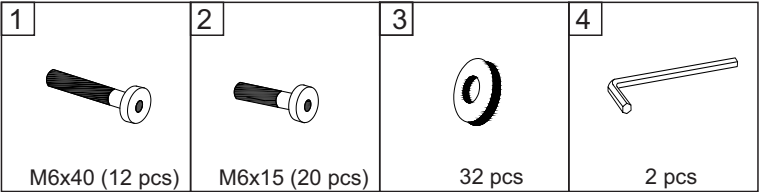


ITEM #: WF319399

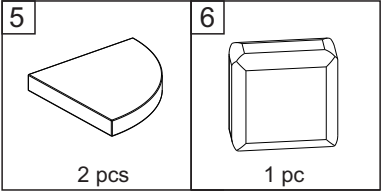

ITEM #: WF319401

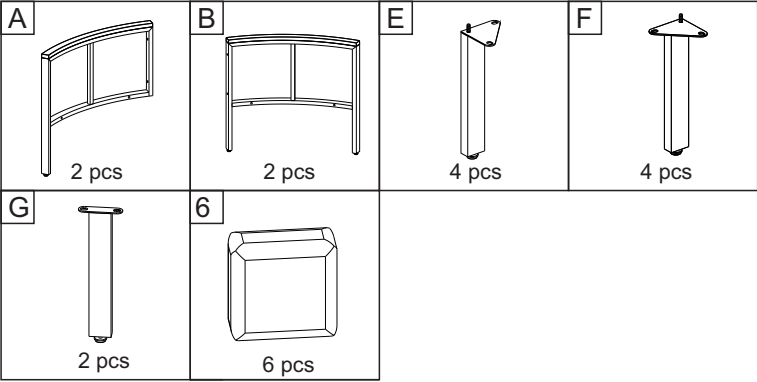


ASSEMBLY INSTRUCTION

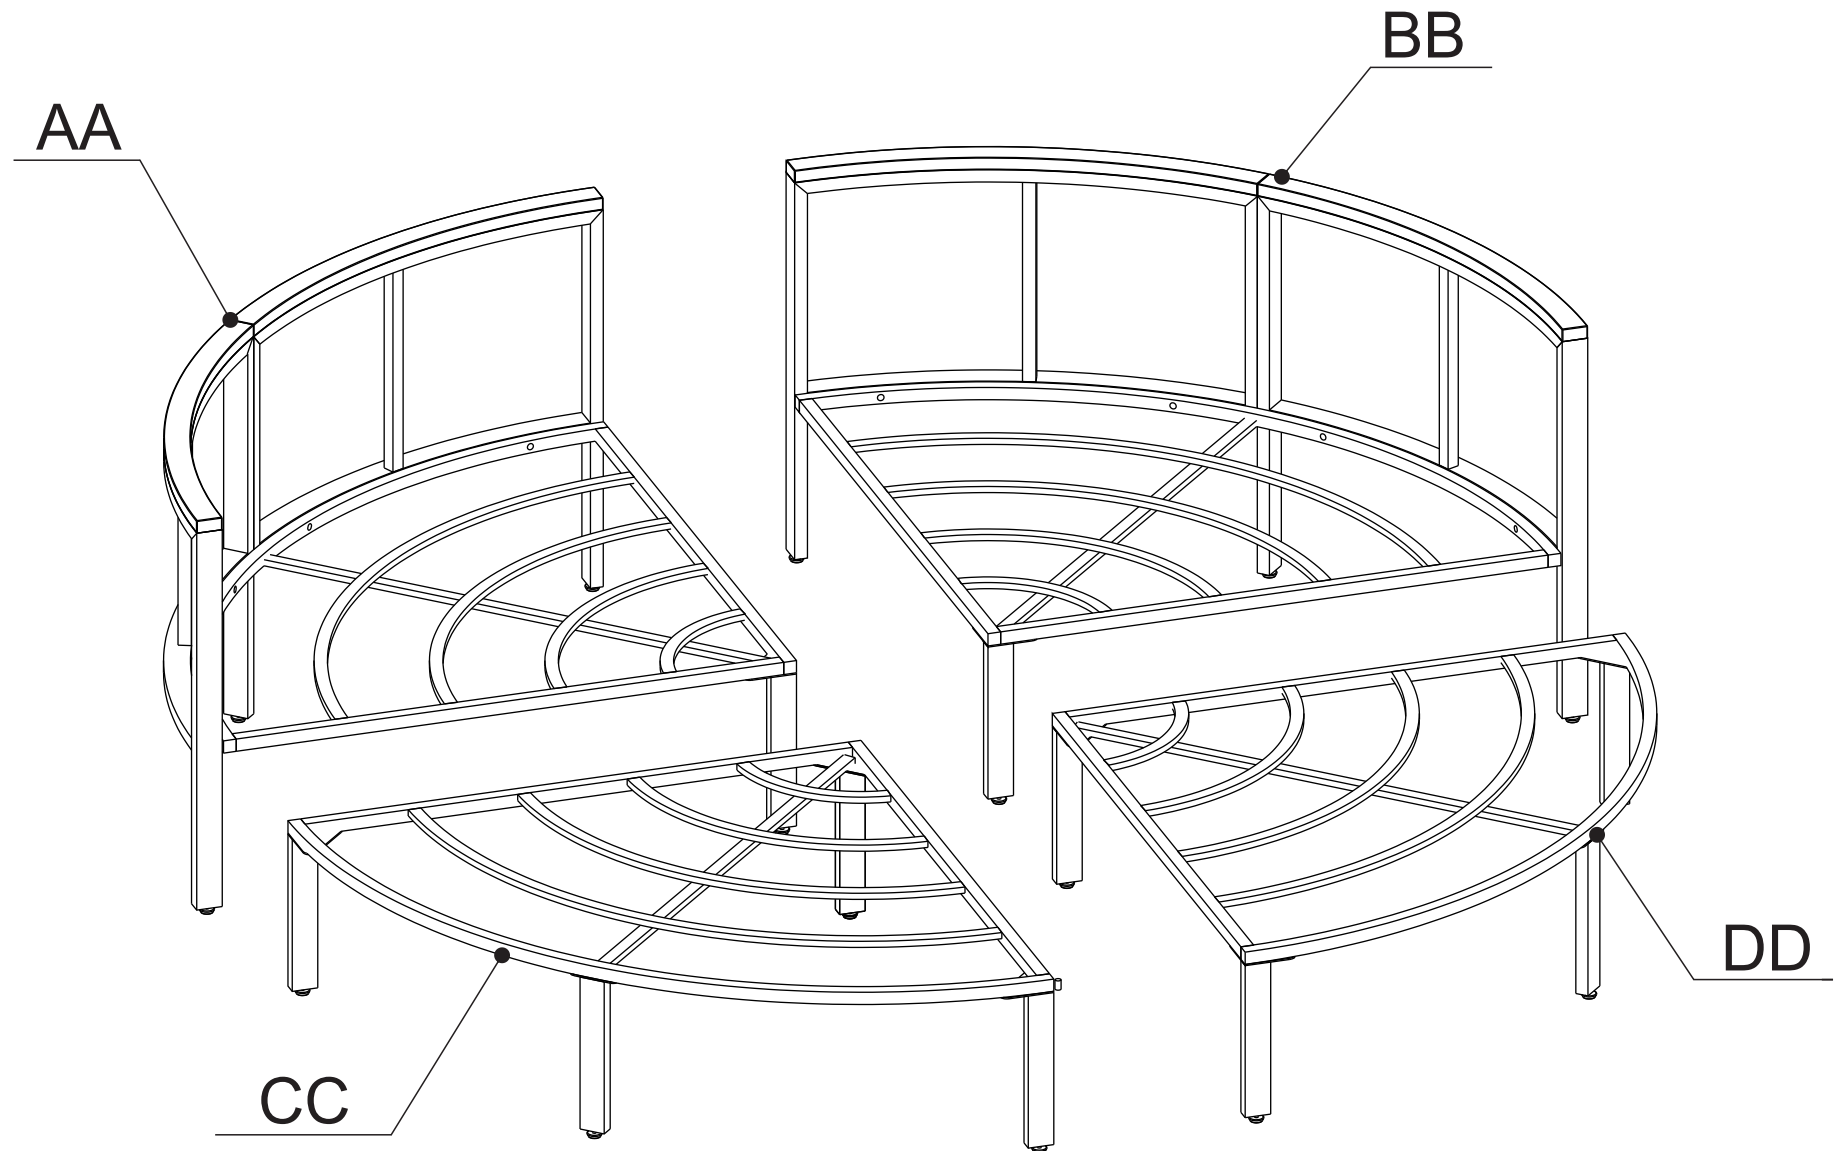


Part list & Hardware

A

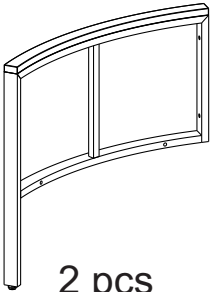


2 pcs

B

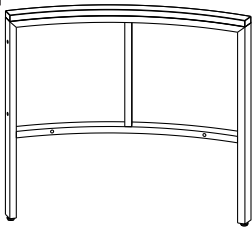


2 pcs

C

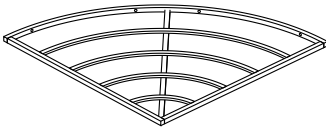


2 pcs

D

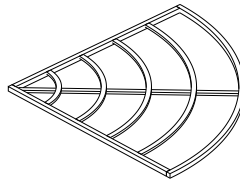


2 pcs

E




4 pcs

F

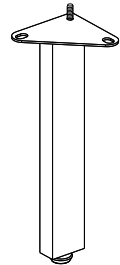


4 pcs

G




2 pcs

1



M6x40 (12 pcs)

2




M6x15 (20 pcs)

3




32 pcs

4




2 pcs

5

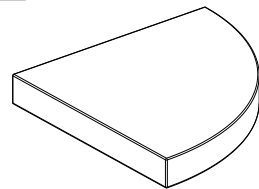

4 pcs

6


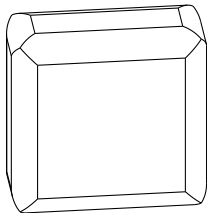


8 pcs


ASSEMBLY INSTRUCTION

The image displays four diagrams illustrating the assembly of a curved metal frame, likely for a chair or stool. Each diagram is labeled 'X1' and shows the frame from a different perspective, highlighting the attachment points for various components.


- Top Left Diagram:** Shows the frame from a side-on perspective. Attachment points are labeled A (top left), B (top right), C (bottom right), and E (bottom left).
- Top Right Diagram:** Shows the frame from a side-on perspective. Attachment points are labeled A (top left), B (top right), C (bottom right), and F (bottom left).
- Bottom Left Diagram:** Shows the frame from a side-on perspective. Attachment points are labeled D (top right), F (top right), E (bottom left), and G (bottom right).
- Bottom Right Diagram:** Shows the frame from a side-on perspective. Attachment points are labeled D (top right), F (top right), E (bottom left), F (bottom left), G (bottom right), and F (bottom right).

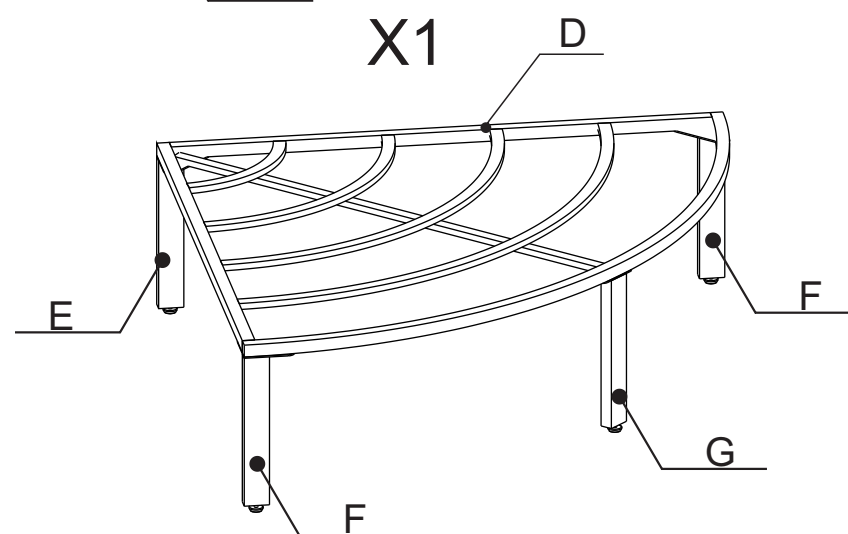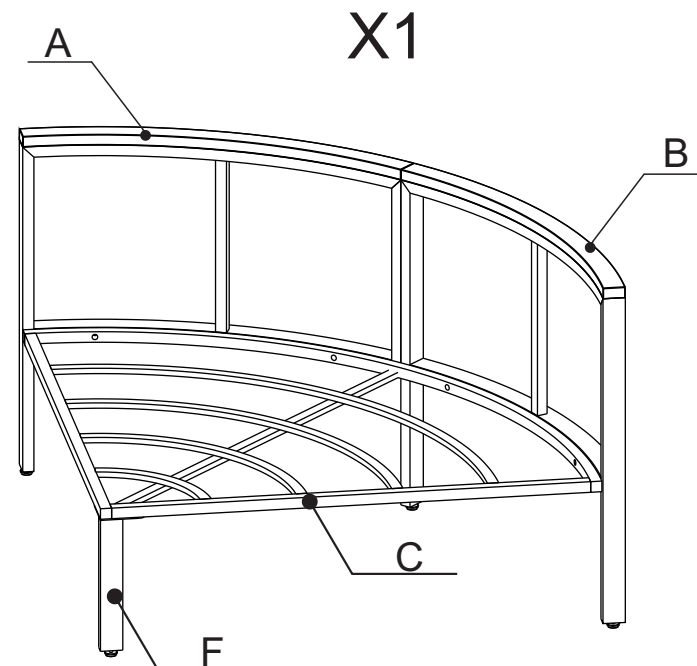


STEP 1

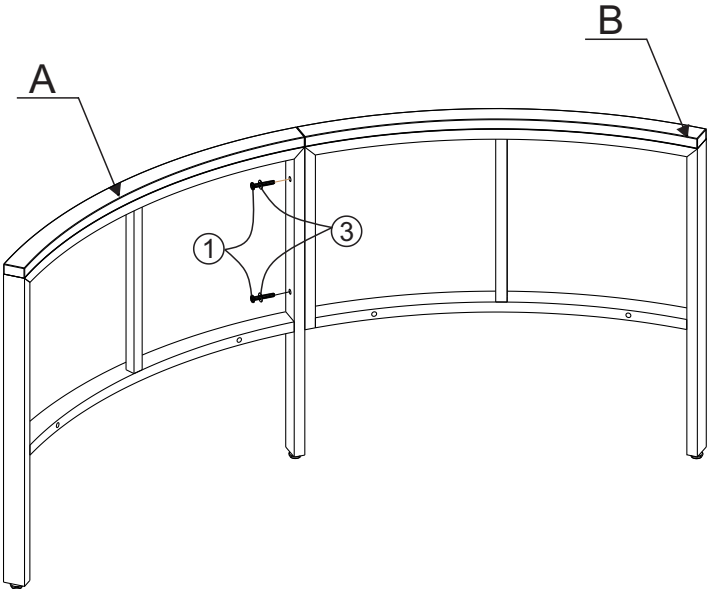

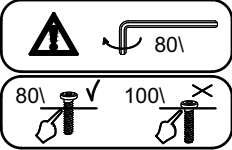


1	 M6x40 mm	2
3		2

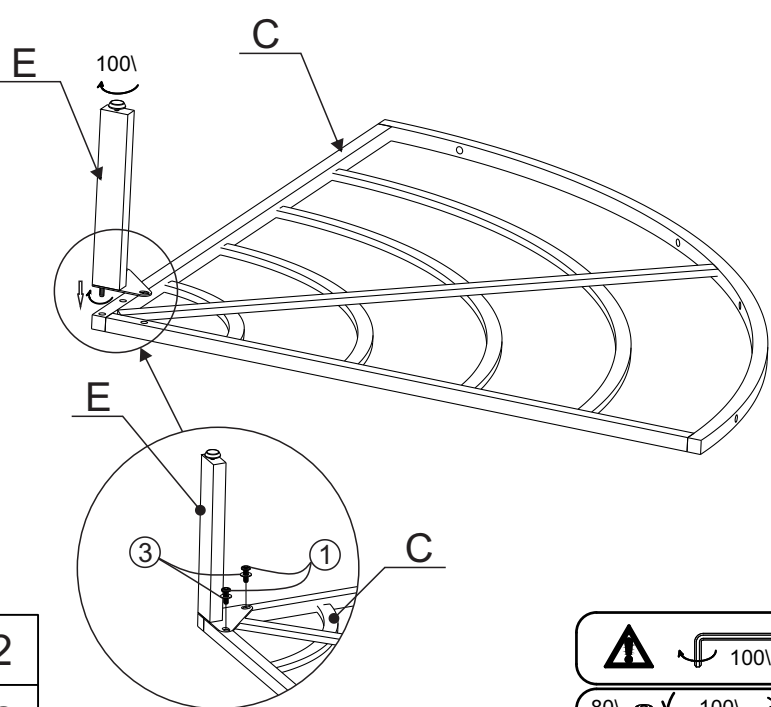


STEP 2



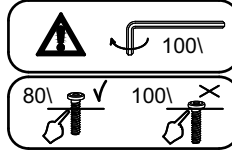


2	 M6x15 mm	2
3		2

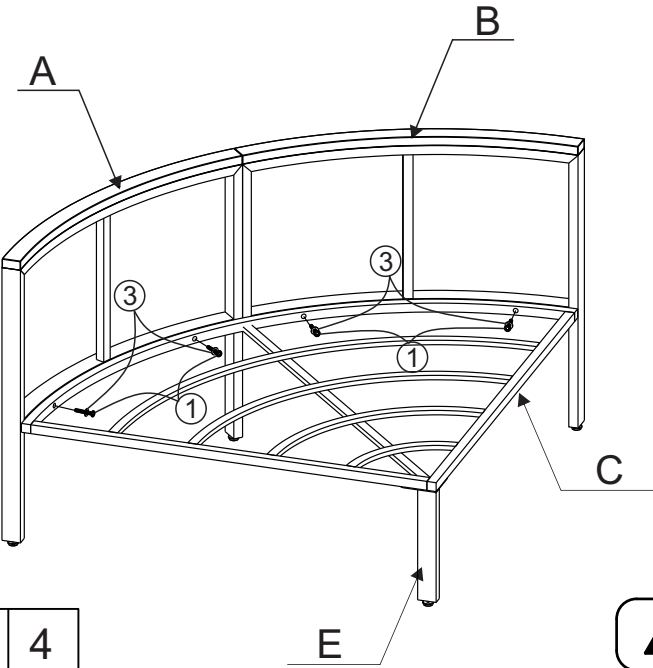


STEP 3




1	 M6x40 mm	4
3		4

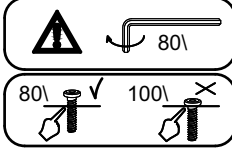


STEP 4

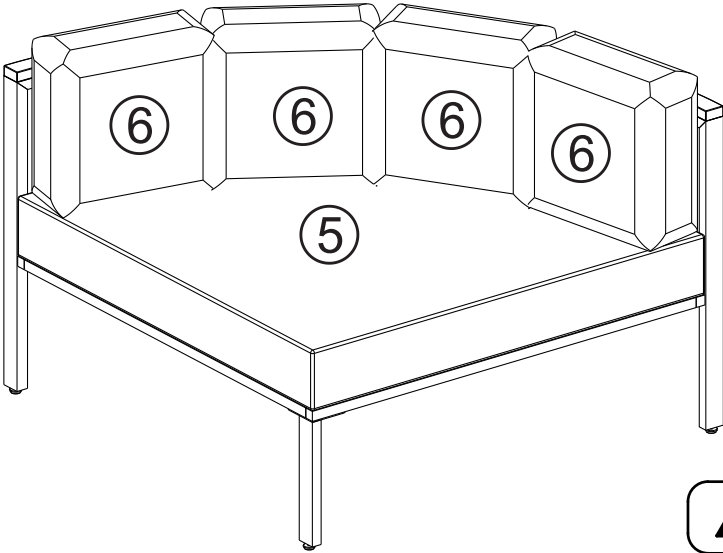


AA x 1

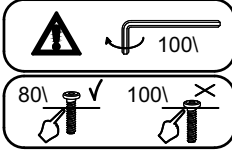


STEP 1

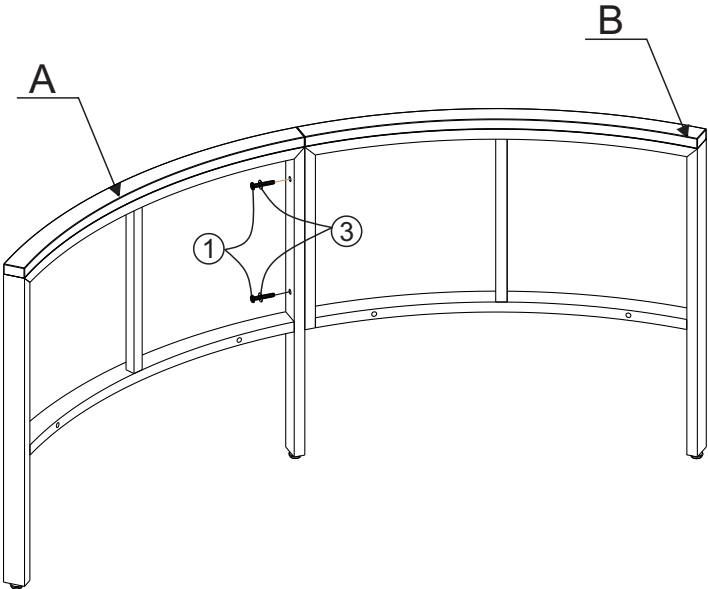

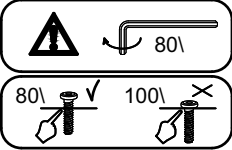


1	 M6x40 mm	2
3		2

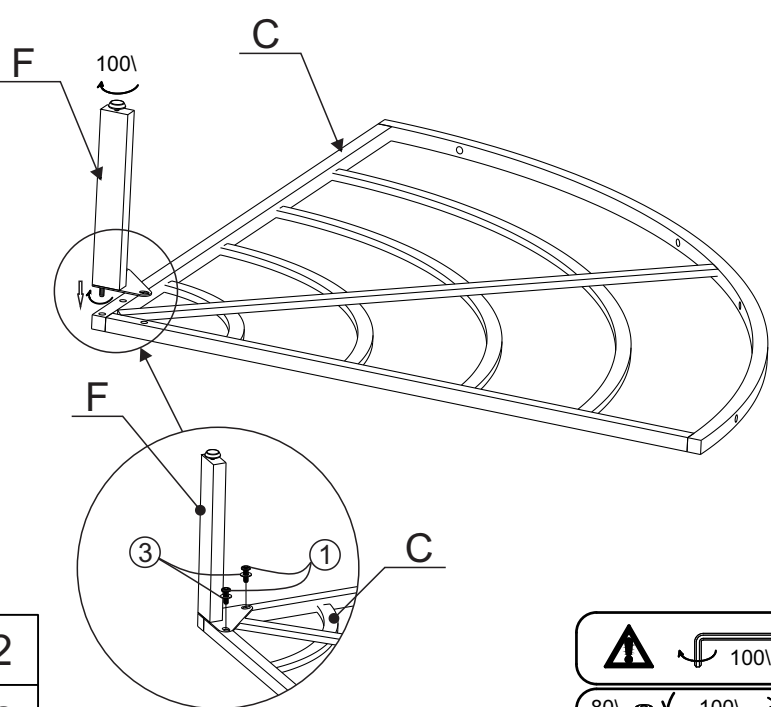


STEP 2



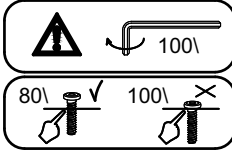


2	 M6x15 mm	2
3		2

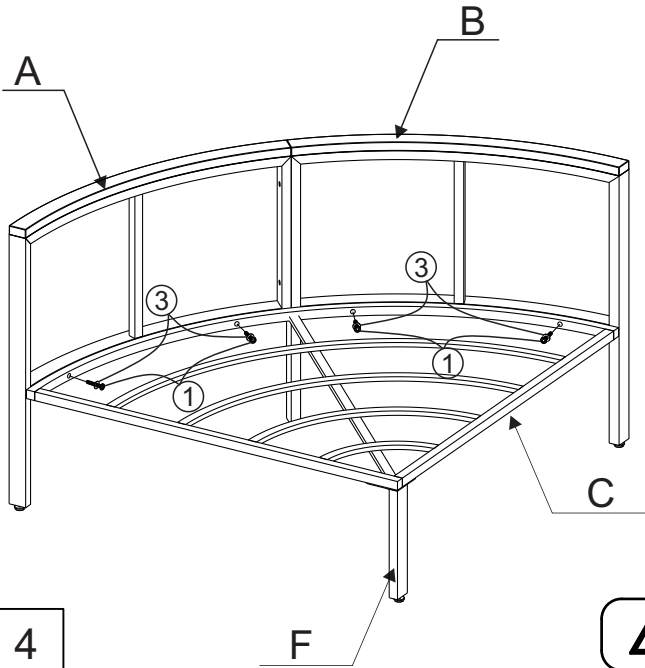


STEP 3





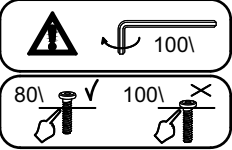
1	 M6x40 mm	4
3		4

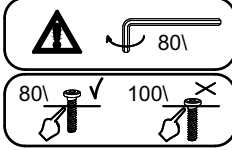

STEP 4

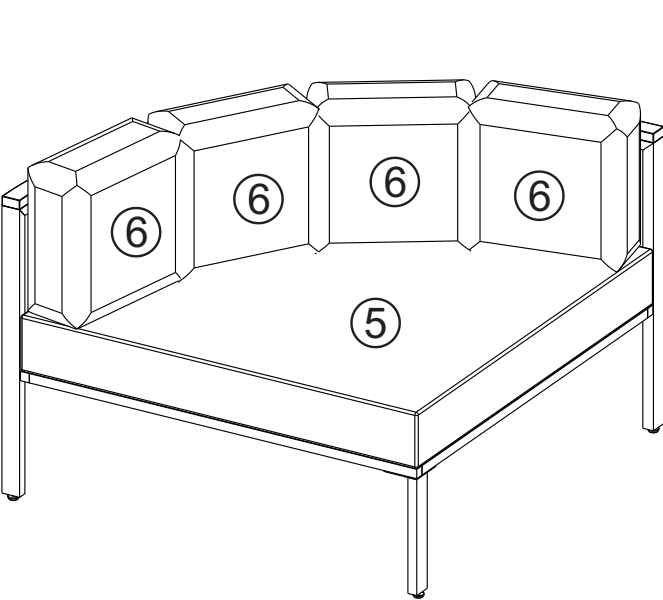

5		1
6		4



BB x 1

STEP 1

Diagram illustrating the assembly of the table base. The base is formed by connecting the legs (E, F, G) to the frame (D) using screws. The diagram shows the correct orientation and tightening level (100%) for the screws.


2	M6x15 mm	8
3	0	8

STEP 2

Diagram illustrating the assembly of the table top. The table top (2) is attached to the base frame (3) using screws. The diagram shows the correct orientation and tightening level (100%) for the screws.


2	M6x15 mm	8
3	0	8

STEP 3

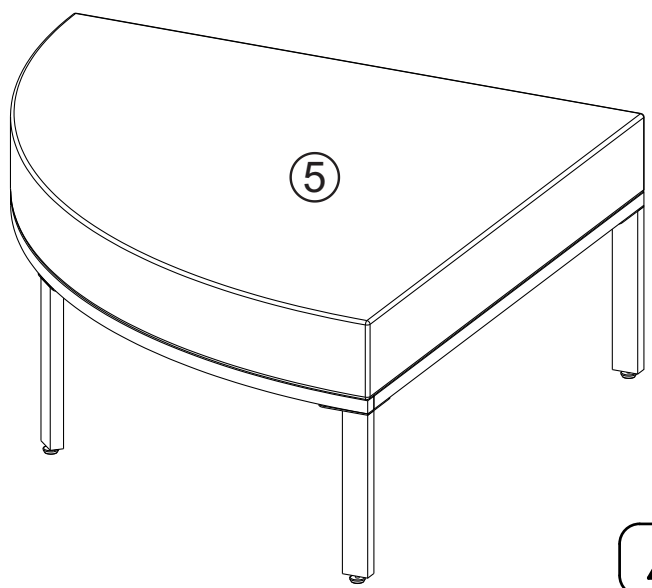

5		1
---	--	---


STEP 4

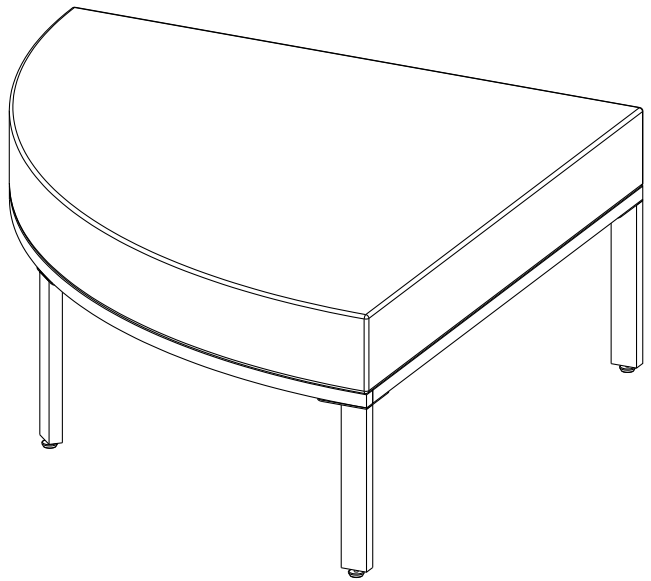





CC x 1

80%	100%


STEP 1

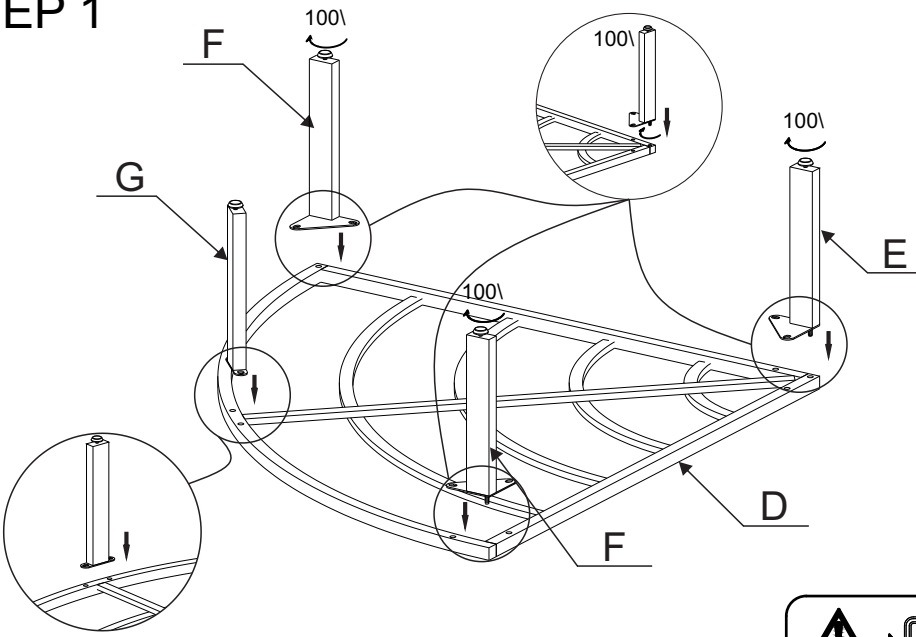










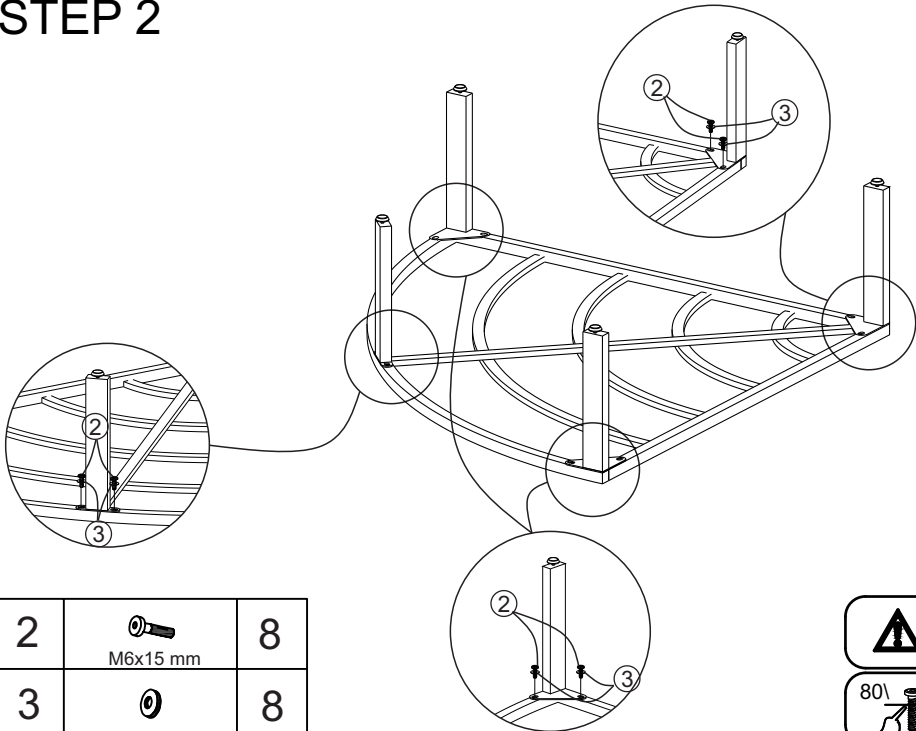
STEP 2






2	 M6x15 mm	8
3		8








STEP 3

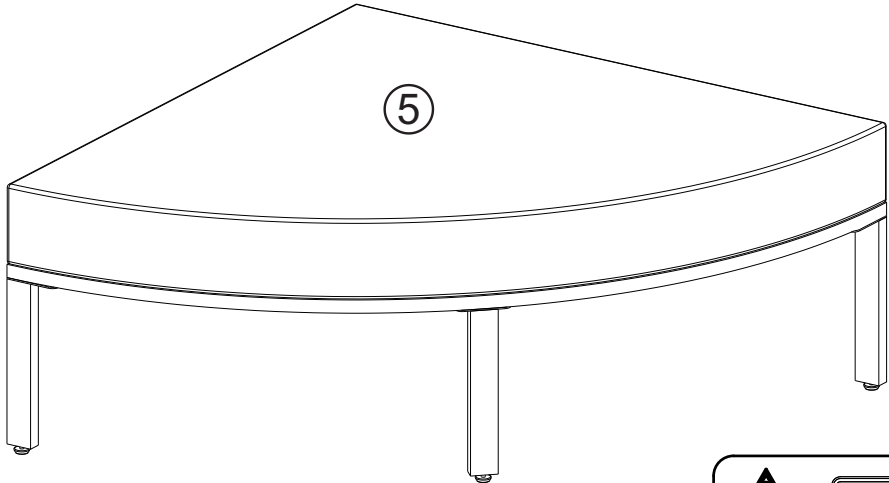





5		1
---	---	---

STEP 4

DD x 1

