

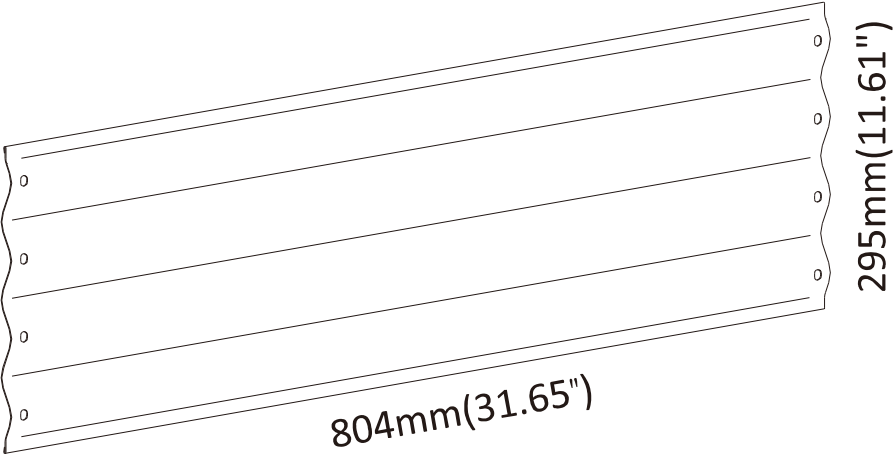
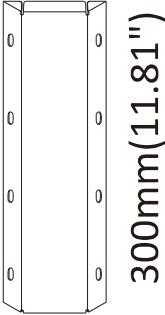
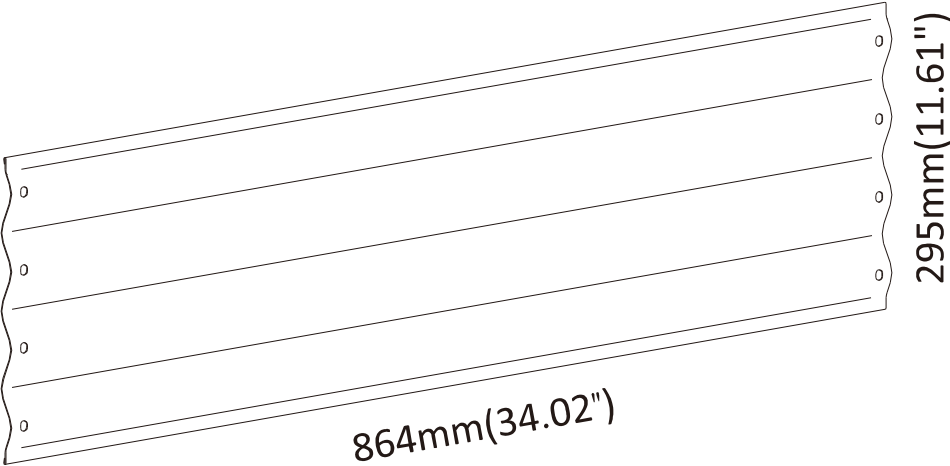
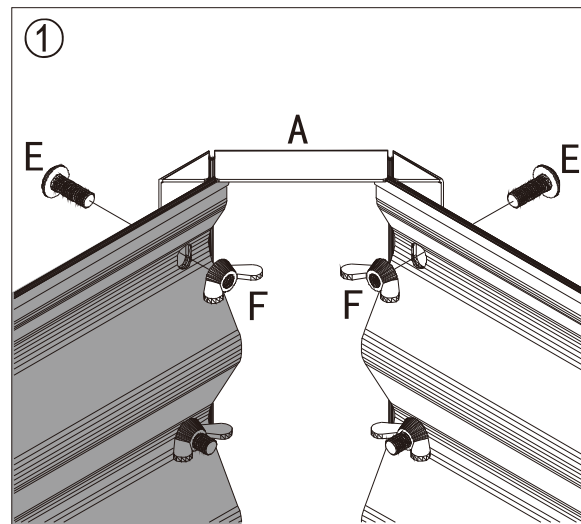
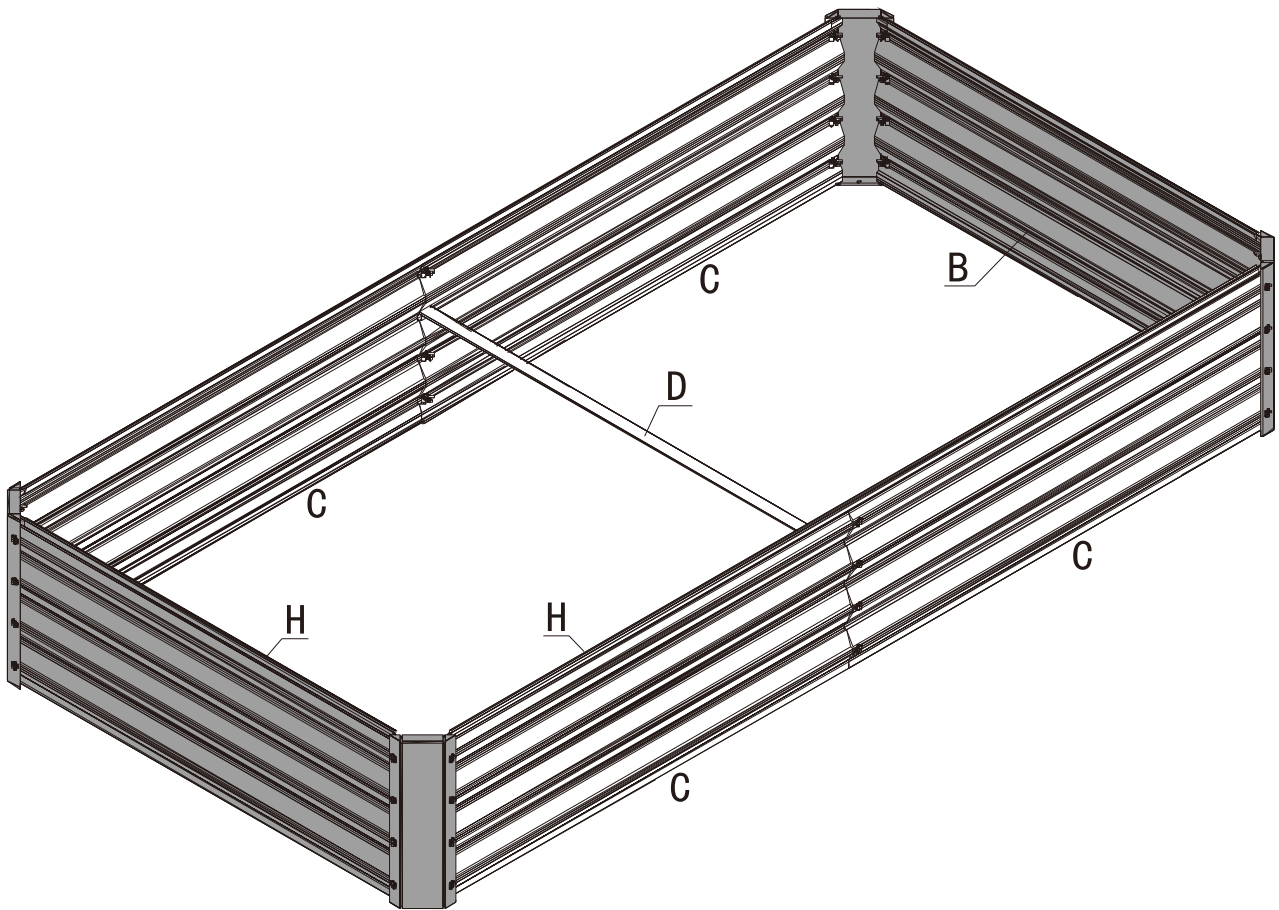


 Short Sheets B(X2)	 Corner Connectors A(X4)
 Long Sheets C(X4)	 Screws E(X40)
	 Wingnuts F(X38)
	 Stakes G(X4)
 Bracing Rods D(X1)	
LNCF0567 70.87"x35.43"x11.81"	 Rubber Strip H(X1)

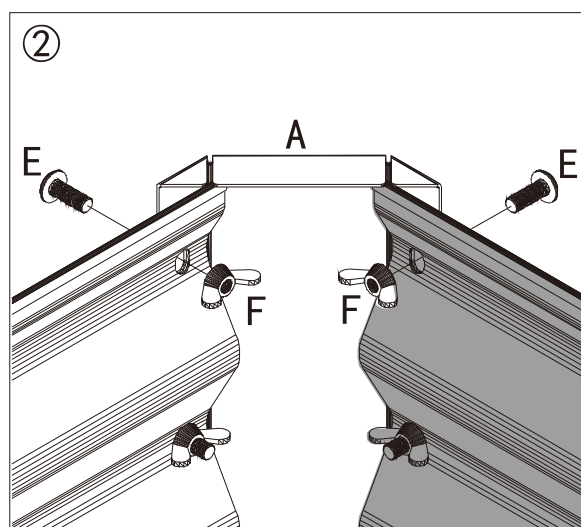



① Attach 2 Corner Connectors #A to 1 Short Sheets #B with 8 screws #E, and secure with 8 wingnuts #F .

Repeat the above procedures to assemble another end.

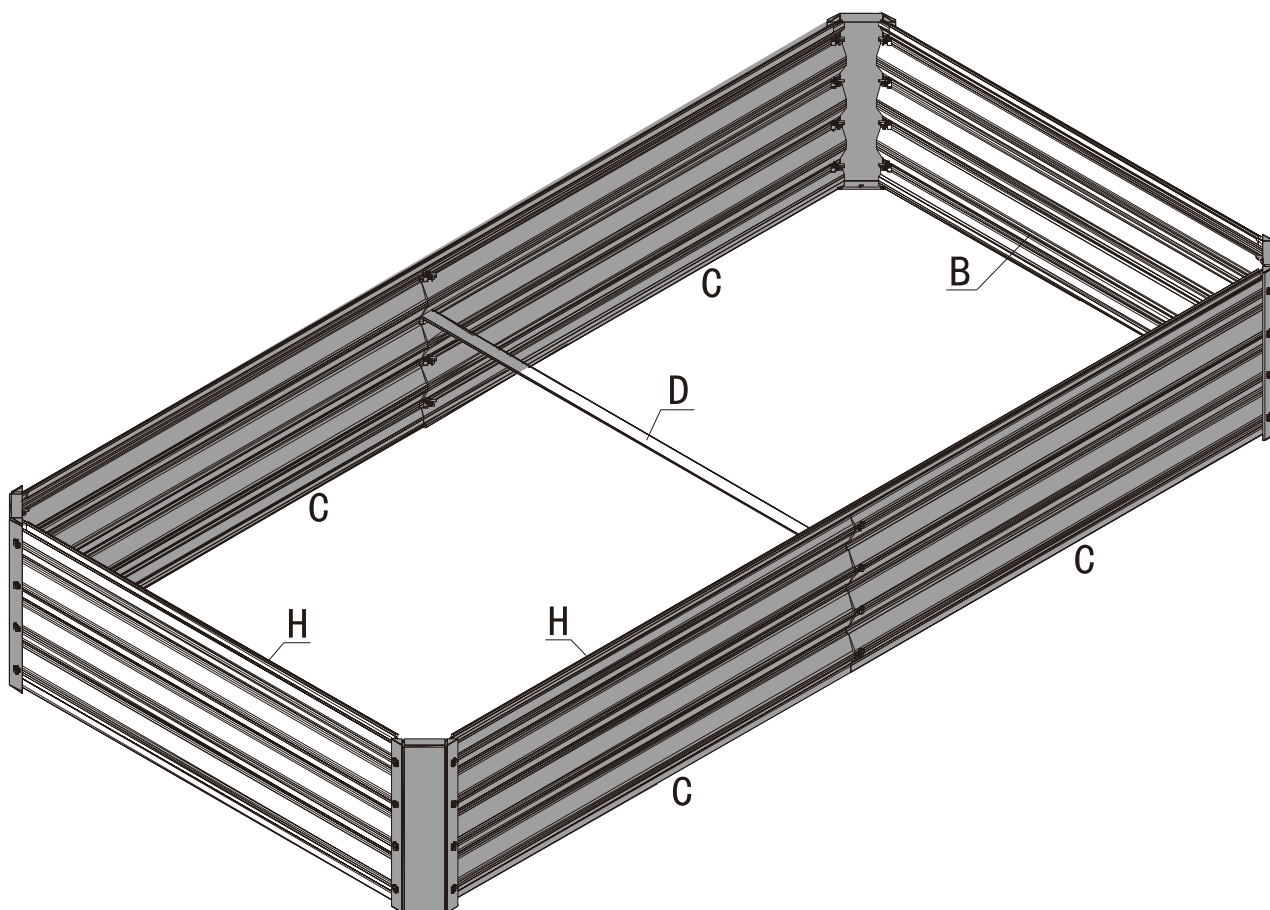


② Attach 2 Long Sheets C to 2 Corner Connectors #A with 8 screws #E, and secure with 8 wingnuts F.



Repeat the above procedures to assemble another side.

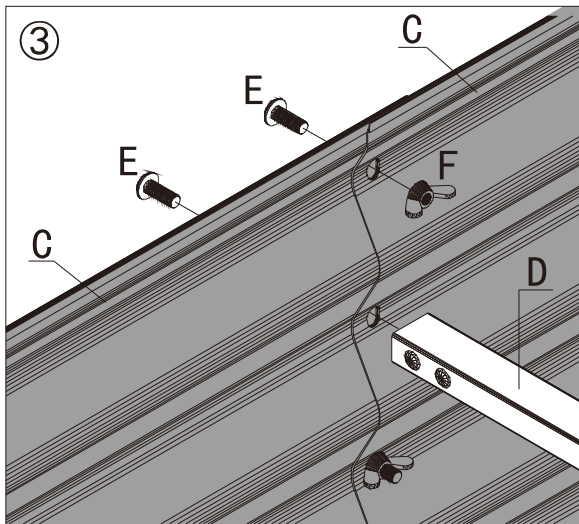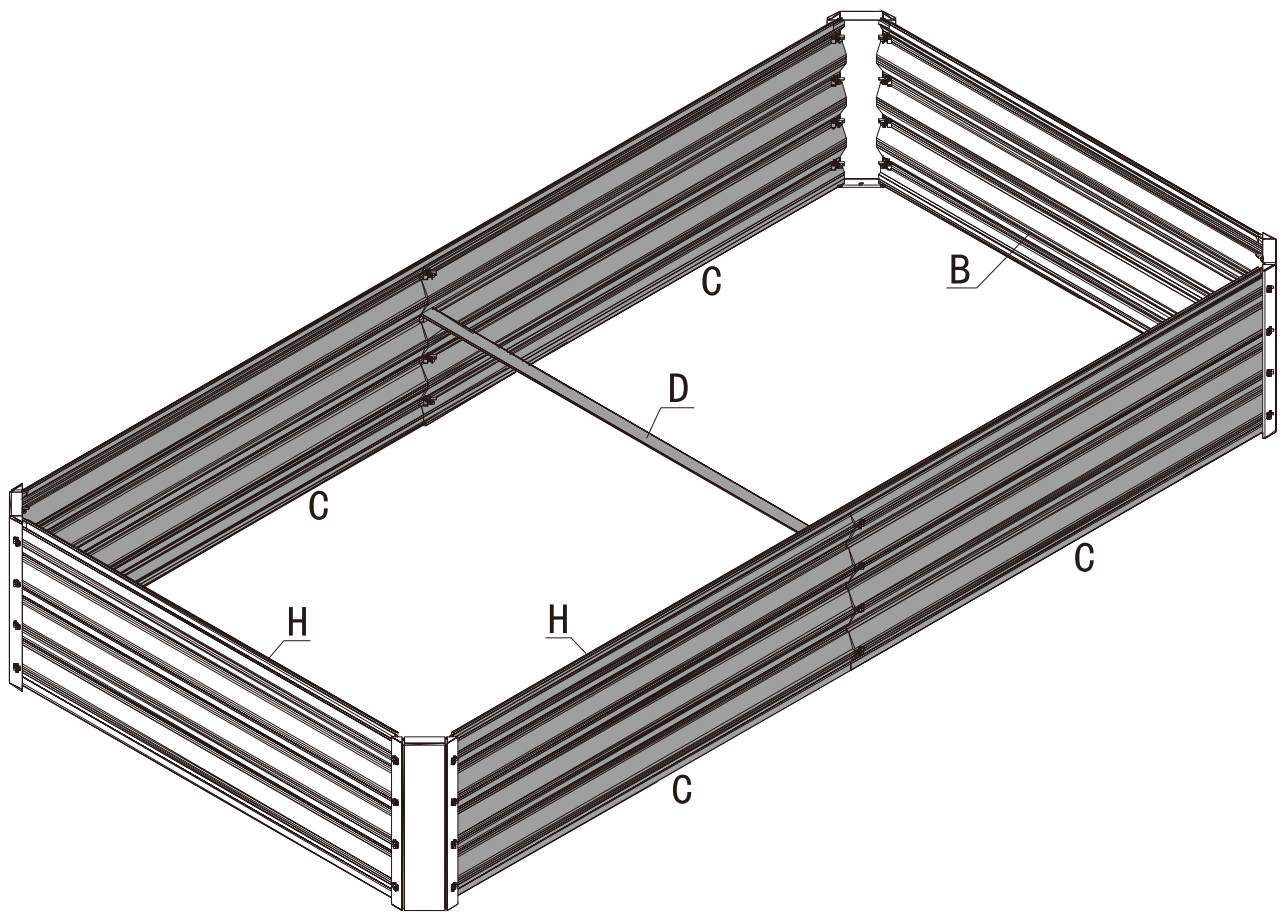


③ Overlap the 2 halves of the garden bed, then connect with 6 screws #E, and secure with 6 wingnuts #F. **Leave the second set of connector holes empty.**

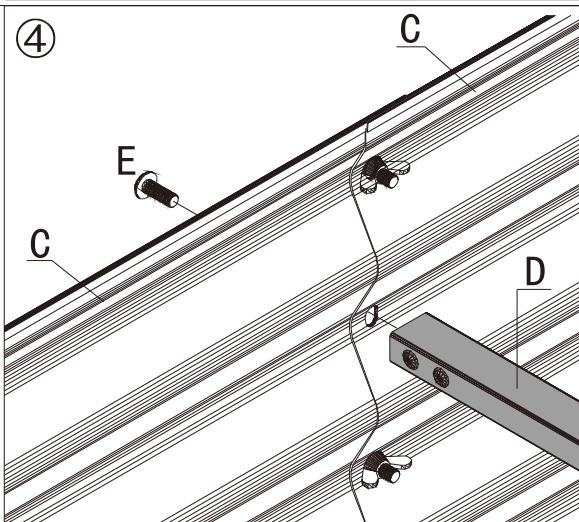

④ Attach the Bracing Rod #D with 2 screws #E.

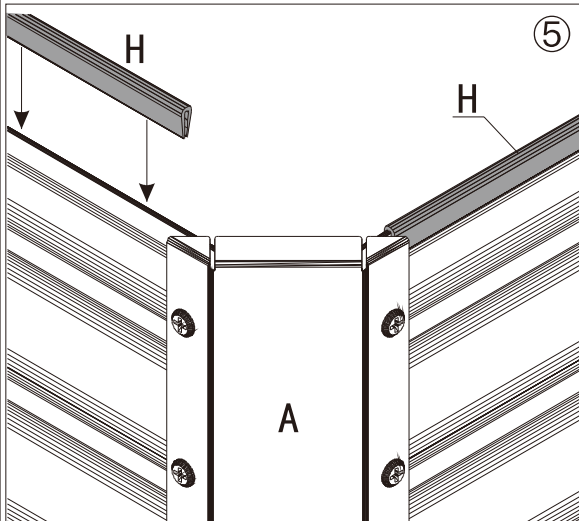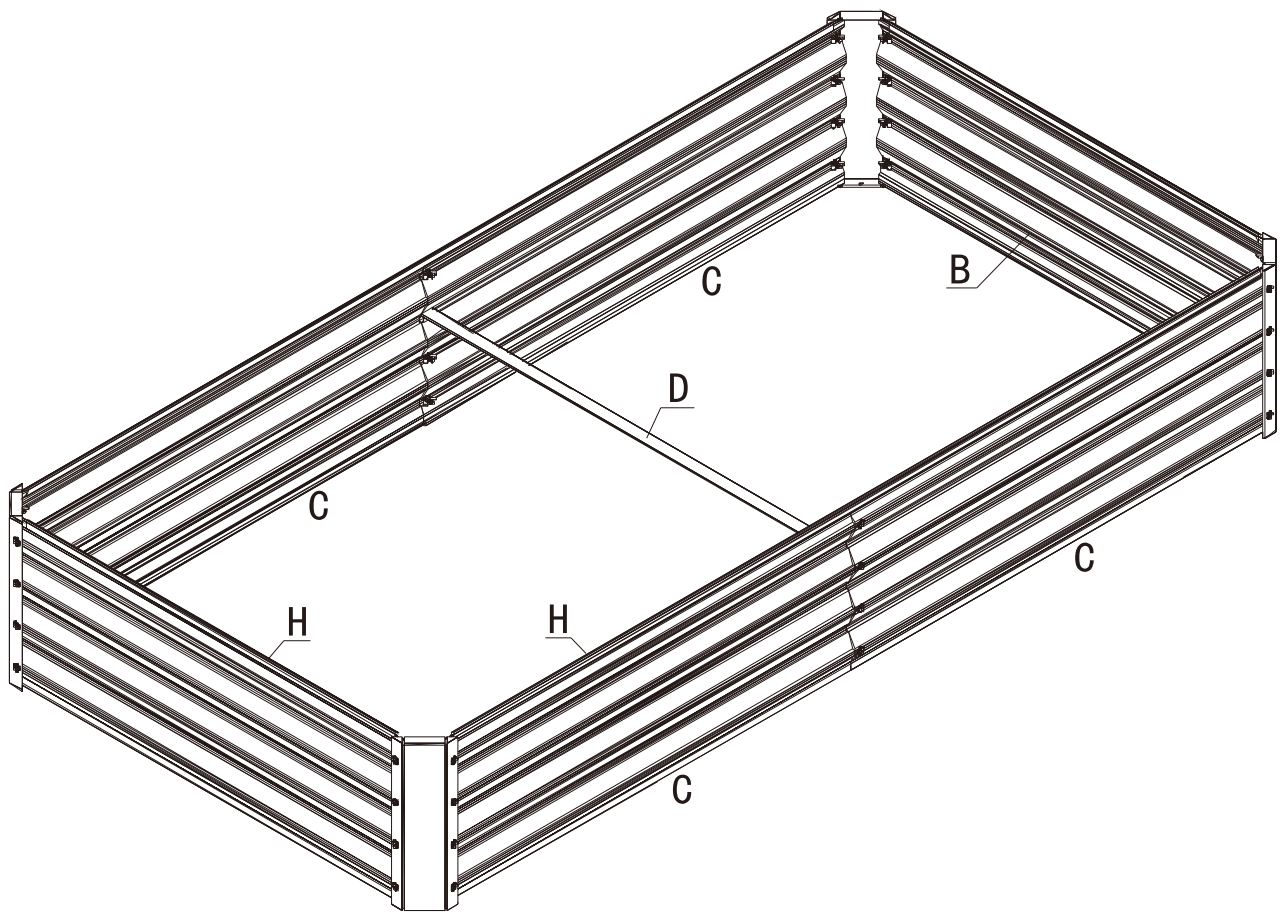

⑤ Cut the Rubber Strip #H into 4 pieces equal to the length/width of the garden bed then place them on the top edges.

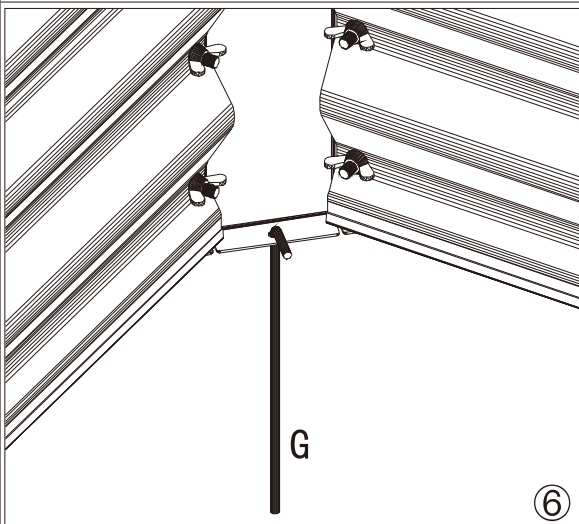

⑥ Secure the Corner Connectors with 4 stakes #G, 1 stake per Corner Connector.