


If you have any question or need help,
please visit **PARLOS®** website
<http://www.parlos.com>




- 1 Fit the gasket onto the underside of the spout. Insert the spout through the sink opening. Slide the bracket and washer onto the stud. Thread the nut onto the stud and tighten.

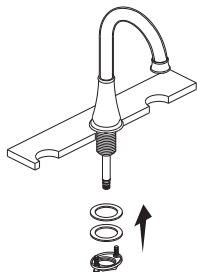


or


- 1 Place spout with gasket through mounting hole in sink. Secure spout with bracket and nut.
Note: If sink is uneven, use silicone under the gasket.

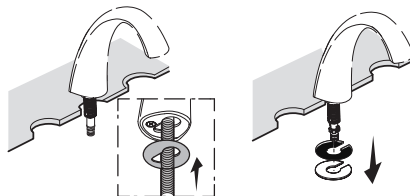


- 2 Loosely attach each handle with a washer and a threaded ring. Ensure the handles are in the OFF position. Align the handles as shown.

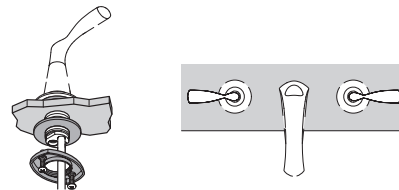


- 3 Align spout tube ① outlet tubes ② on quick connect hose ③. Push quick connect hose ③ firmly upward and snap onto tubes ① ②. Pull down moderately to ensure each connection has been made.

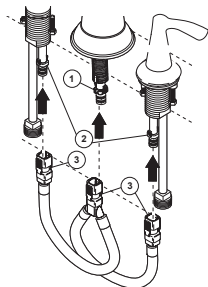

- 4 Connect To Water Supplies.

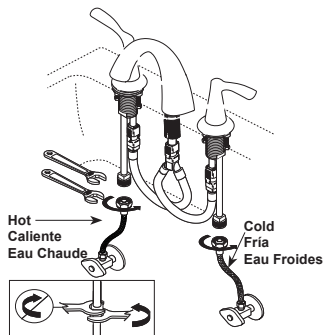


- 5 Turn on the water supplies. Check all connections for leaks.

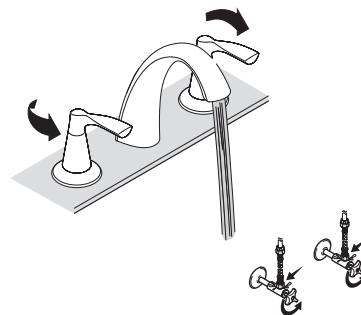




NOTES:


- Fits for sink WITH overflow hole.
- Clean the sink hole, make sure to remove debris.
- Please avoid using plumber's putty. The seal on top is leak-free. Plumber's putty might cause damage.
- Silicone and plumbing tape can be used for sealing requirement.

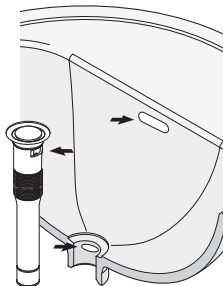


1 Unscrew components A & B to the seal.

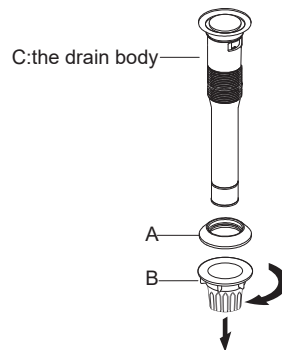


2 Slide the drain body C through the hole in the sink.

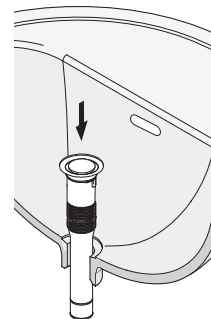

3 Screw components A & B back on as shown.

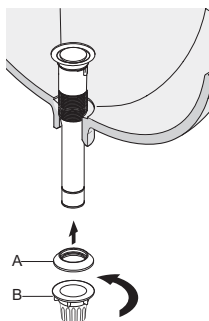

4 Connect the rear end of the drain to the Drain Pipe.

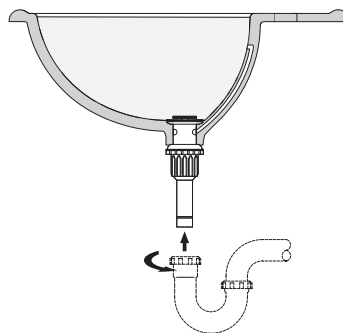

5 Push to activate.

