










CARE AND MAINTENANCE

Wipe clean with a soft, dry cloth. The seat board can be cleaned with a mild cleaner. Test the cleaning method on a hidden area before using them over the entire area.

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finished product during assembly.
- * This item may require periodic tightening.
- * Do not tighten bolts until completely assembled.


Part List and Hardware List

| PIECE | DESCRIPTION | PICTURE | QUANTITY |
|-------|--------------------|---|----------|
| A | Chair Back |  | 1 X |
| B | Seat Frame |  | 1 X |
| C | Side Frame (Left) |  | 1 X |
| D | Side Frame (Right) |  | 1 X |
| HW1 | Hex Socket Bolt |  5/16" - 18x2-1/2" | 4 X |
| HW2 | Hex Socket Bolt |  5/16" - 18x1-1/2" | 4 X |
| HW3 | Hex Socket Bolt |  1/4" - 20x2" | 4 X |
| HW4 | Allen Key |  M4 | 1 X |
| HW5 | Allen Key |  M5 | 1 X |

 **SAFAVIEH**
FURNITURE

Model# FOX6287

Product Dimensions: 26-1/2"W*32-1/2"D*32-1/2"H

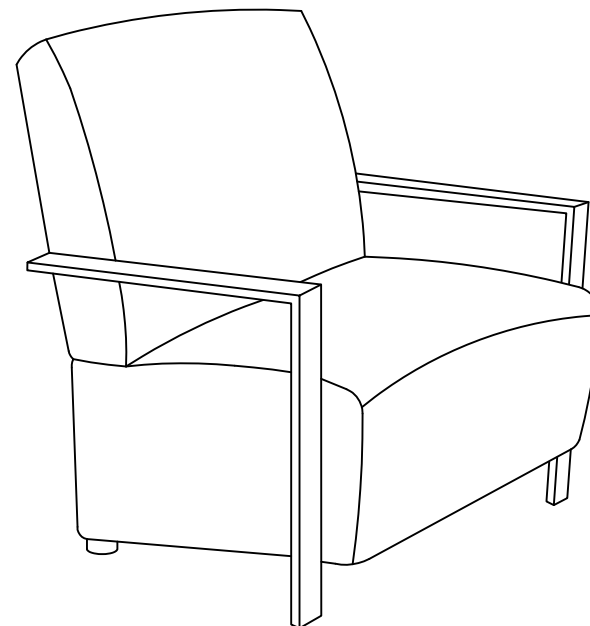


Wtght capacity:275lbs
WARNING : DO NOT STAND ON THE PRODUCT
WARNING : DO NOT OVER TORQUE BOLTS

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time: 20 minutes.

Tools Required for Assembly (included): Allen Key.

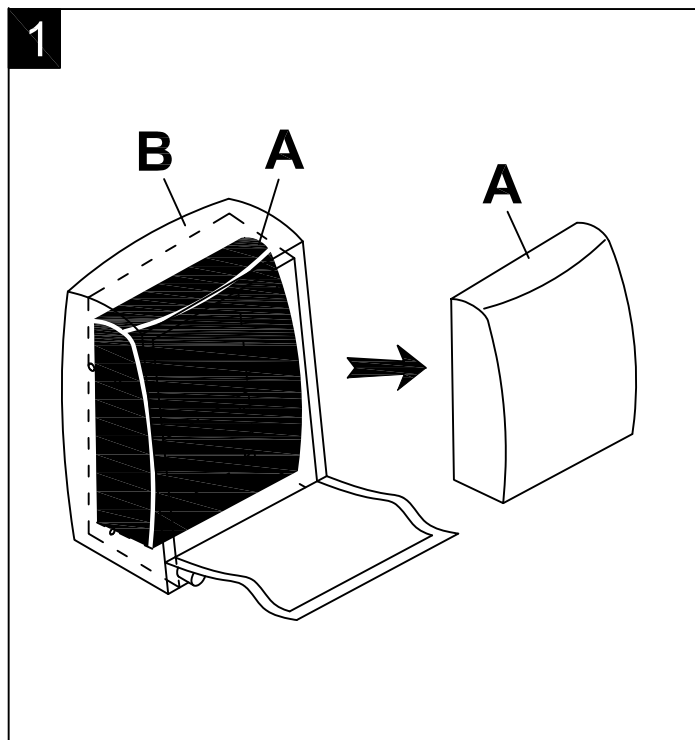


Step 1

Uncover the Velcro fabric at bottom of Seat frame (B), Then take out the Chair Back (A) from here.

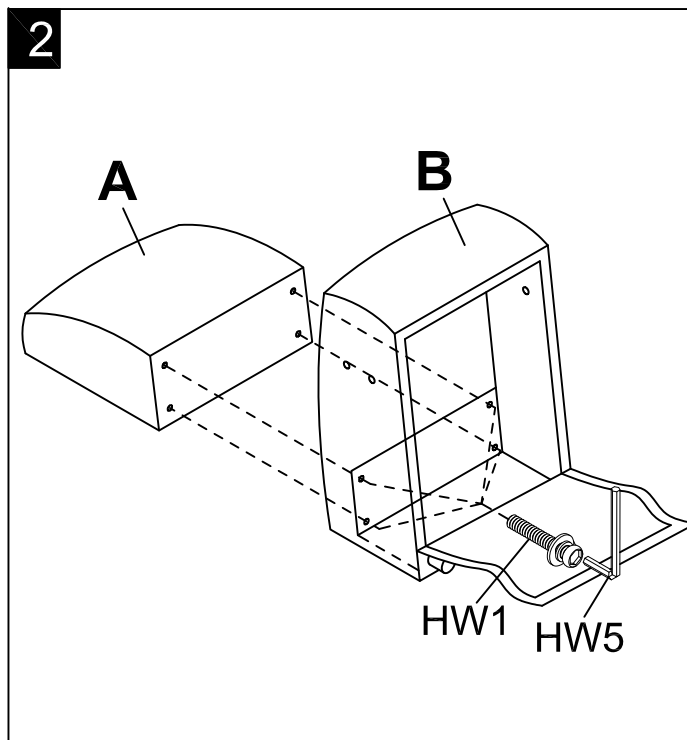

Step 2

Align rear of Seat Frame (B) with the bottom of chair back (A), Using Allen Key (HW5) to lock with 4*Hex Socket Bolts (HW1).

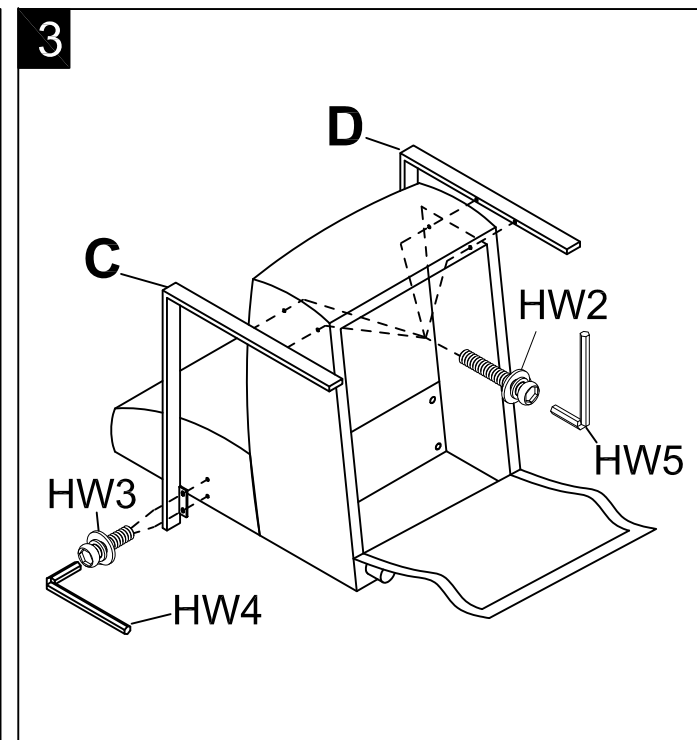

Step 3

Assemble Side Frame (Left) "C" and Side Frame (Right) "D" to the assembled of chair back/ seat frame. Using Allen key (HW5) & 4*Hex Socket Bolts (HW2) to lock on seat frame(B); and Using Allen key (HW4) & 4*Hex Socket Bolts (HW3) to lock on chair back(A), as picture.

Cover the Velcro fabric to bottom side of Seat Frame (B) and press together to close tight.