




1. Install the rubber washer, metal washer and metal nut onto shank under countertop and hand tighten. Ensure the spout is in the proper position and tighten down firmly.

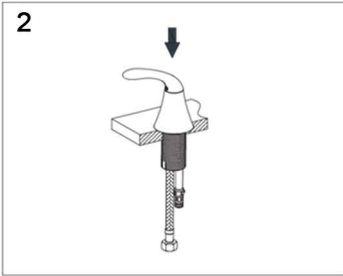


2. install the hot handle into the left side hole and the cold into the right side hole.

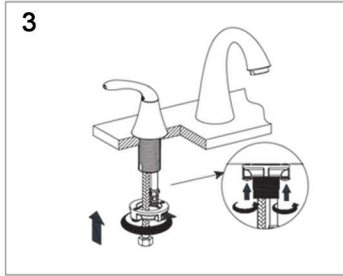


3. Install metal washer onto shank under countertop and hand tighten. Ensure the handles are in the proper position and tighten down firmly.

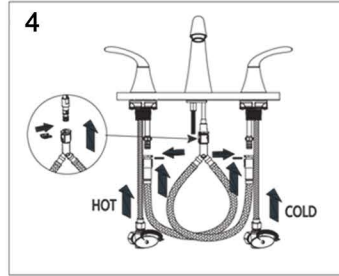


4. Connect the hot and cold supply lines to the shut off valves. Insert the trident fitting onto the spout shank adapter. Connect the hot and cold trident lines to the adapters on the bottom of the handles. Turn on shut off valves and check for leaks on the water supply lines.

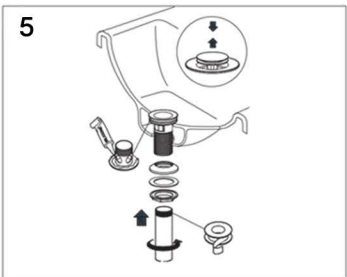


5. Apply a thin bead of putty/silicone onto the flange insert the drain body into the sink slide the nut up and thread it counter clockwise on the drain body underneath the sink until it is firmly screwed to the bottom of the sink. Do not over tighten the nut.

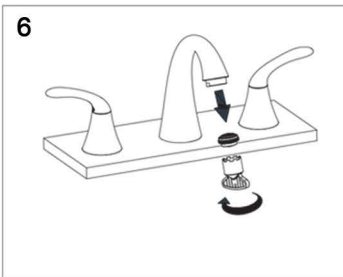

6. Remove the aerator from the spout, turn on the shut off valves. Check for leaks on supply line connections.

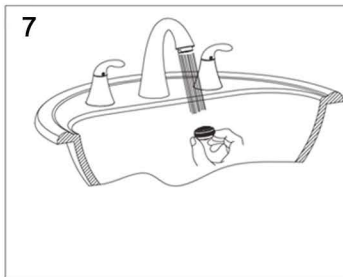


7. Flush out the water lines of any possible debris. Close the pop up assembly and fill the sink with water to check.

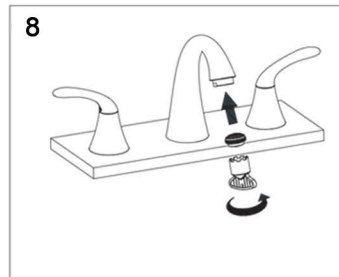

8. Replace aerator.

Widespread Faucet

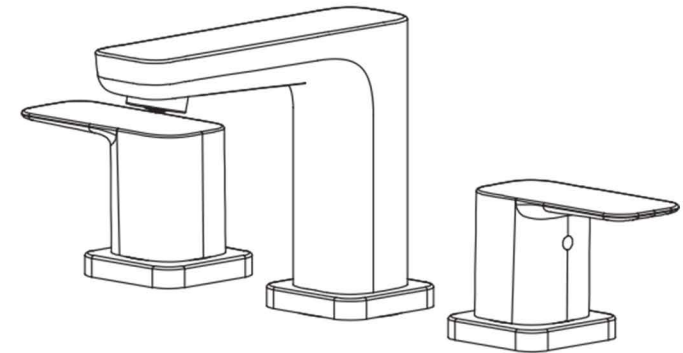

KCLT0041