# Assembly Instruction Sheet #IS-8318P36C-16+8+1 For Style 8318P36C-16+8+1

Tools Required: Flatheed screwiriver, Philips screwiriver, pliers, wire culiers, wire strippers, electrical tape, safety glasses. Light Source: (25) Candelstra Base Buibs 60W Maximum.

Entimated Assembly Time: 20-30 minutes

Proparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the foliare. Contact customer service for replacement parts.

### ▲ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electricien if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fodure.

We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

#### STEP 1 -Install Support Arms

A.(Refer to SUPPORT ARMS DISTRIBUTION) Pass supply wires from support arms through plate with coupling and plate with socket as shown. Secure them together by threading lock screw onto the plates. Hand lighten until anug with screwdrivers.


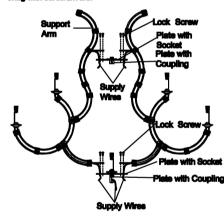


Figure 1

SUPPLY WIRES DISTRIBUTION

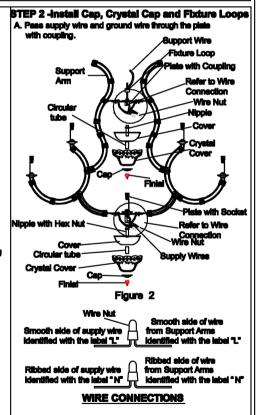

#### (Step 2 Continued)


and fixture loop. Use supplied who nuts to make all who connections (Rufer to WIRE CONNECTIONS A and B). Twist connectors until whoe are tightly joined together. Wrap each connection with approved electrical tape.

- Thread one end of the ripple into the coupling on the plate with coupling.
   Place one cover, one crystal cover and one cap over the end of the ripple and secure with one final. Hand fainten unil anua.
- C. Thread the hex nut end of the nipple with hex nut into the hex coupling on the pales with social. By using plans, thread the hex nut against the hex coupling and hand digitine until anua. Place another cover, crystal cover and cap over the end of the nipple with hex nut. Secure them with another this and hend tighten until anua.
- D. Thread the folure loop onto the top center of the plate with coupling and hand fighten until anus.

#### STEP 3 - Install the Crossber to the Celling

- A. Place the crossber to the ceiling and make (4) marks from the holes of the crossber on the ceiling for anchors. Remove the crossber and drill proper holes from the (4) marks for enchors.

  B. Insert anchors into drilled holes properly. Place the crossber, till t
- B. Insert anchors into drilled holes properly. Place the crossbar, fa. t westers and spring wasters onto the anchors and secure with hex ruds. Hand Schlein until area with place.



#### STEP 4 - Install Chain System and Fixture Body together

- Remove the bolt from the quick connector. Place the quick connector onto the chain link of the boltom end of the chain swatem.
- B. Piace the fidure loop inside of the quick connector. Thread the bolt back onto the quick connector and the fidure loop. Hand fighten until enug to connector the chain system to the fidure.


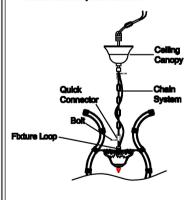


Figure 4

#### STEP 5 - Install Fluture to Crossbar


- Remove the bolt from the quick connector. Piece the quick connector onto the hook of the crossber.
- B. Insert the loop on the top end of the chain system inside of the quick connector. Thread the bolt back onto the quick connector and through the loop of the chain system. Hand tighten until anug to hang the fixture assets.
- C. Refer to Step 6 for wire connection instructions.
- D. Lift the ceiling canopy upward, over the crossber, attach onto the ceiling. Using screwdriver, thread set screw on the ceiling canopy until anug to secure the ceiling canopy.

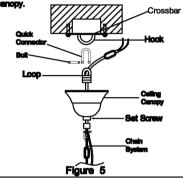


#### STEP 6 - Making the Wire Connections

- A. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into outlet box.
- Note: If the electrical wire is going to be cut shorter than provided you will need to identify the "L" line wire and the "N" neutral wire before you cut the excess wire off. One is labeled N and the other labeled L. To do this separate the "L" line wire and the "N" neutral wire as far as you need to. Re-label the wire near where you want to make the cut. Be sure to mark the wire on the side of the follure and not on the excess wire being cut and removed.





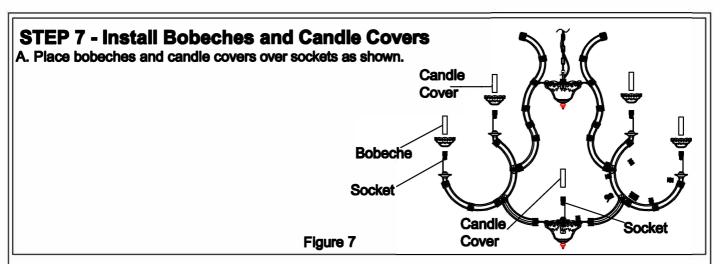

## STEP 8 - Attach Crystals, Crystal Strings and Install Bulbs

A. Attach crystals, crystal strings onto support arms, bobeches and bottom center of finials as shown in the Illustration.

