




Teza Doors

BIFOLD | SLIDING | FRENCH | WINDOWS


INTERIOR & EXTERIOR

DOORS & WINDOWS


FRENCH DOOR INSTRUCTION GUIDE

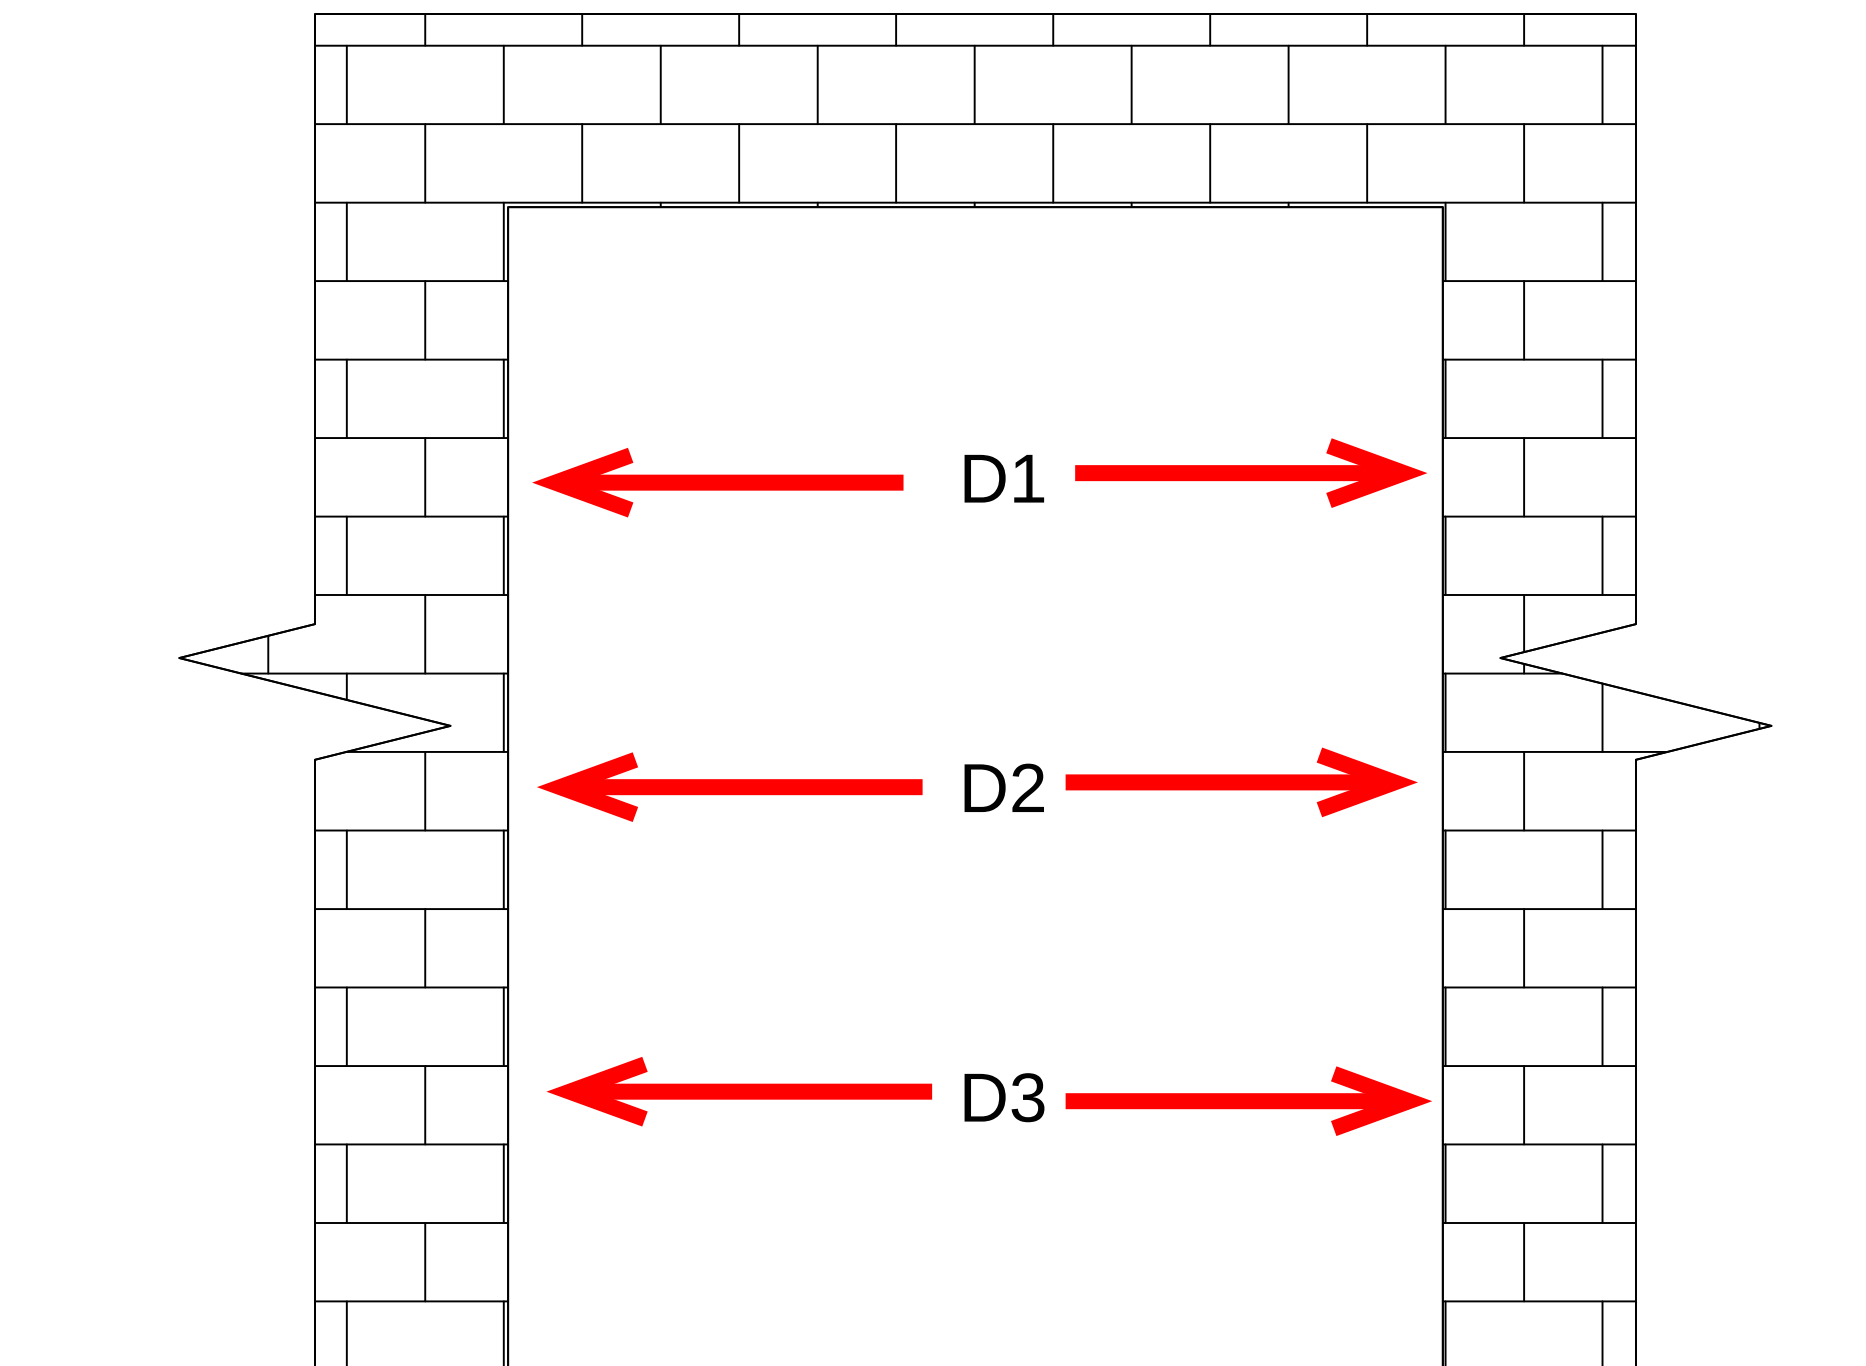


1. Check the size of the door opening again.
 $D1=D2=D3$

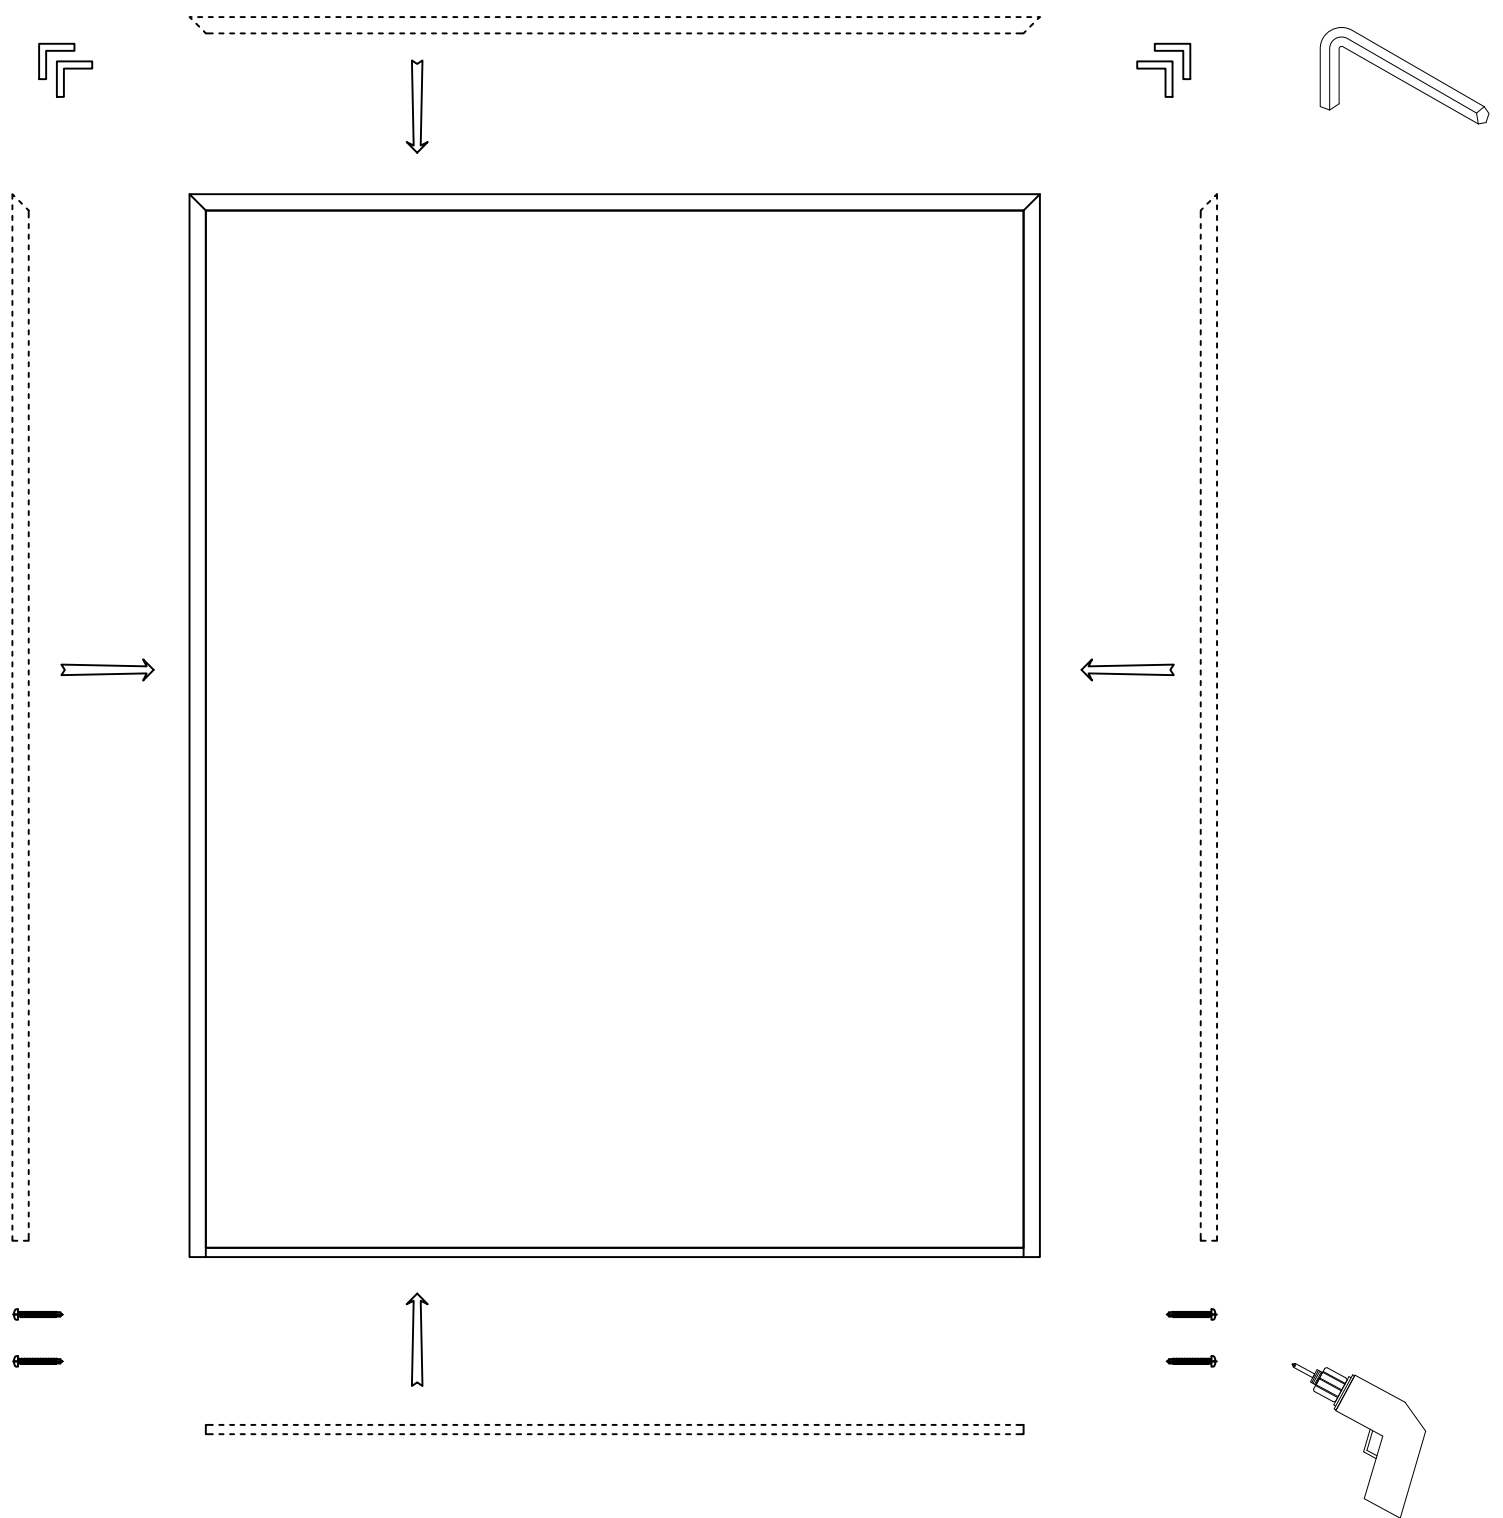


2.Assemble the frame on the plane.

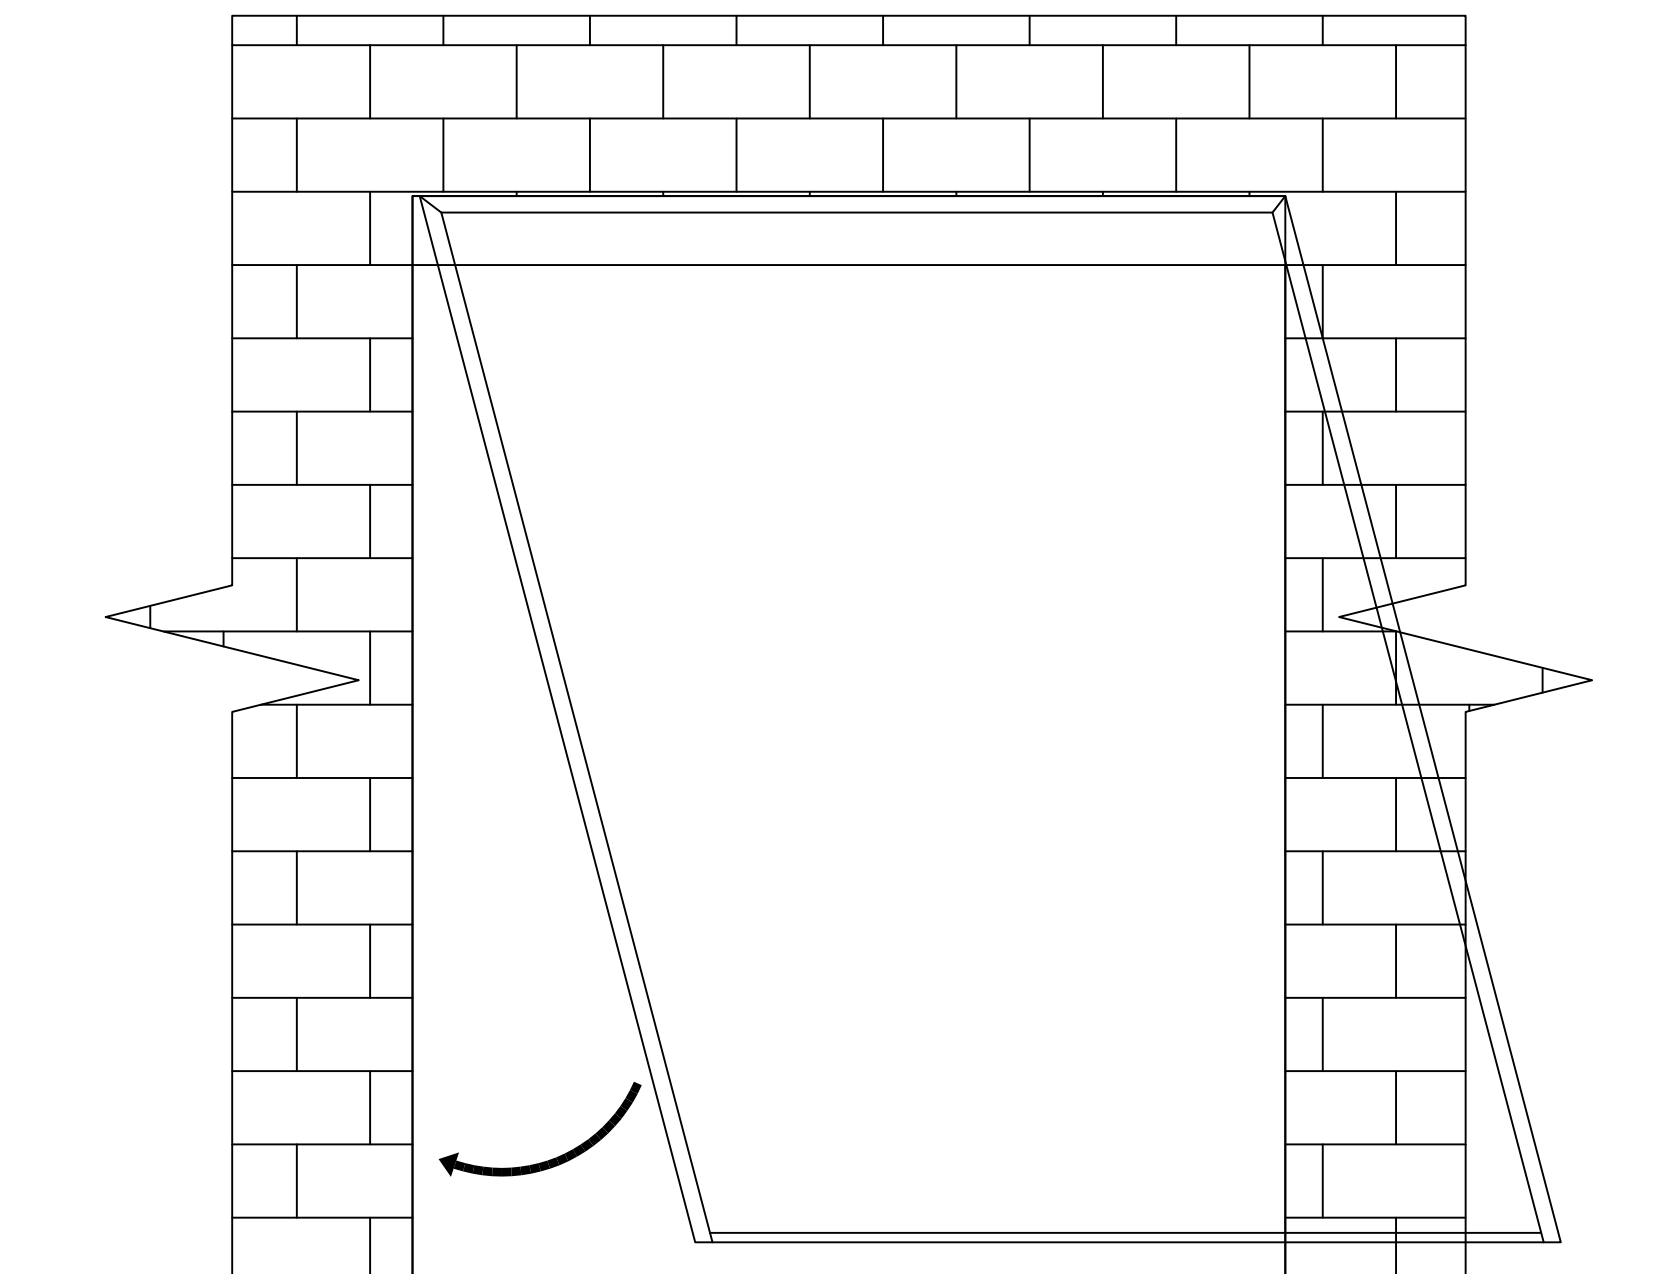



3.Slip the door frame into the opening.

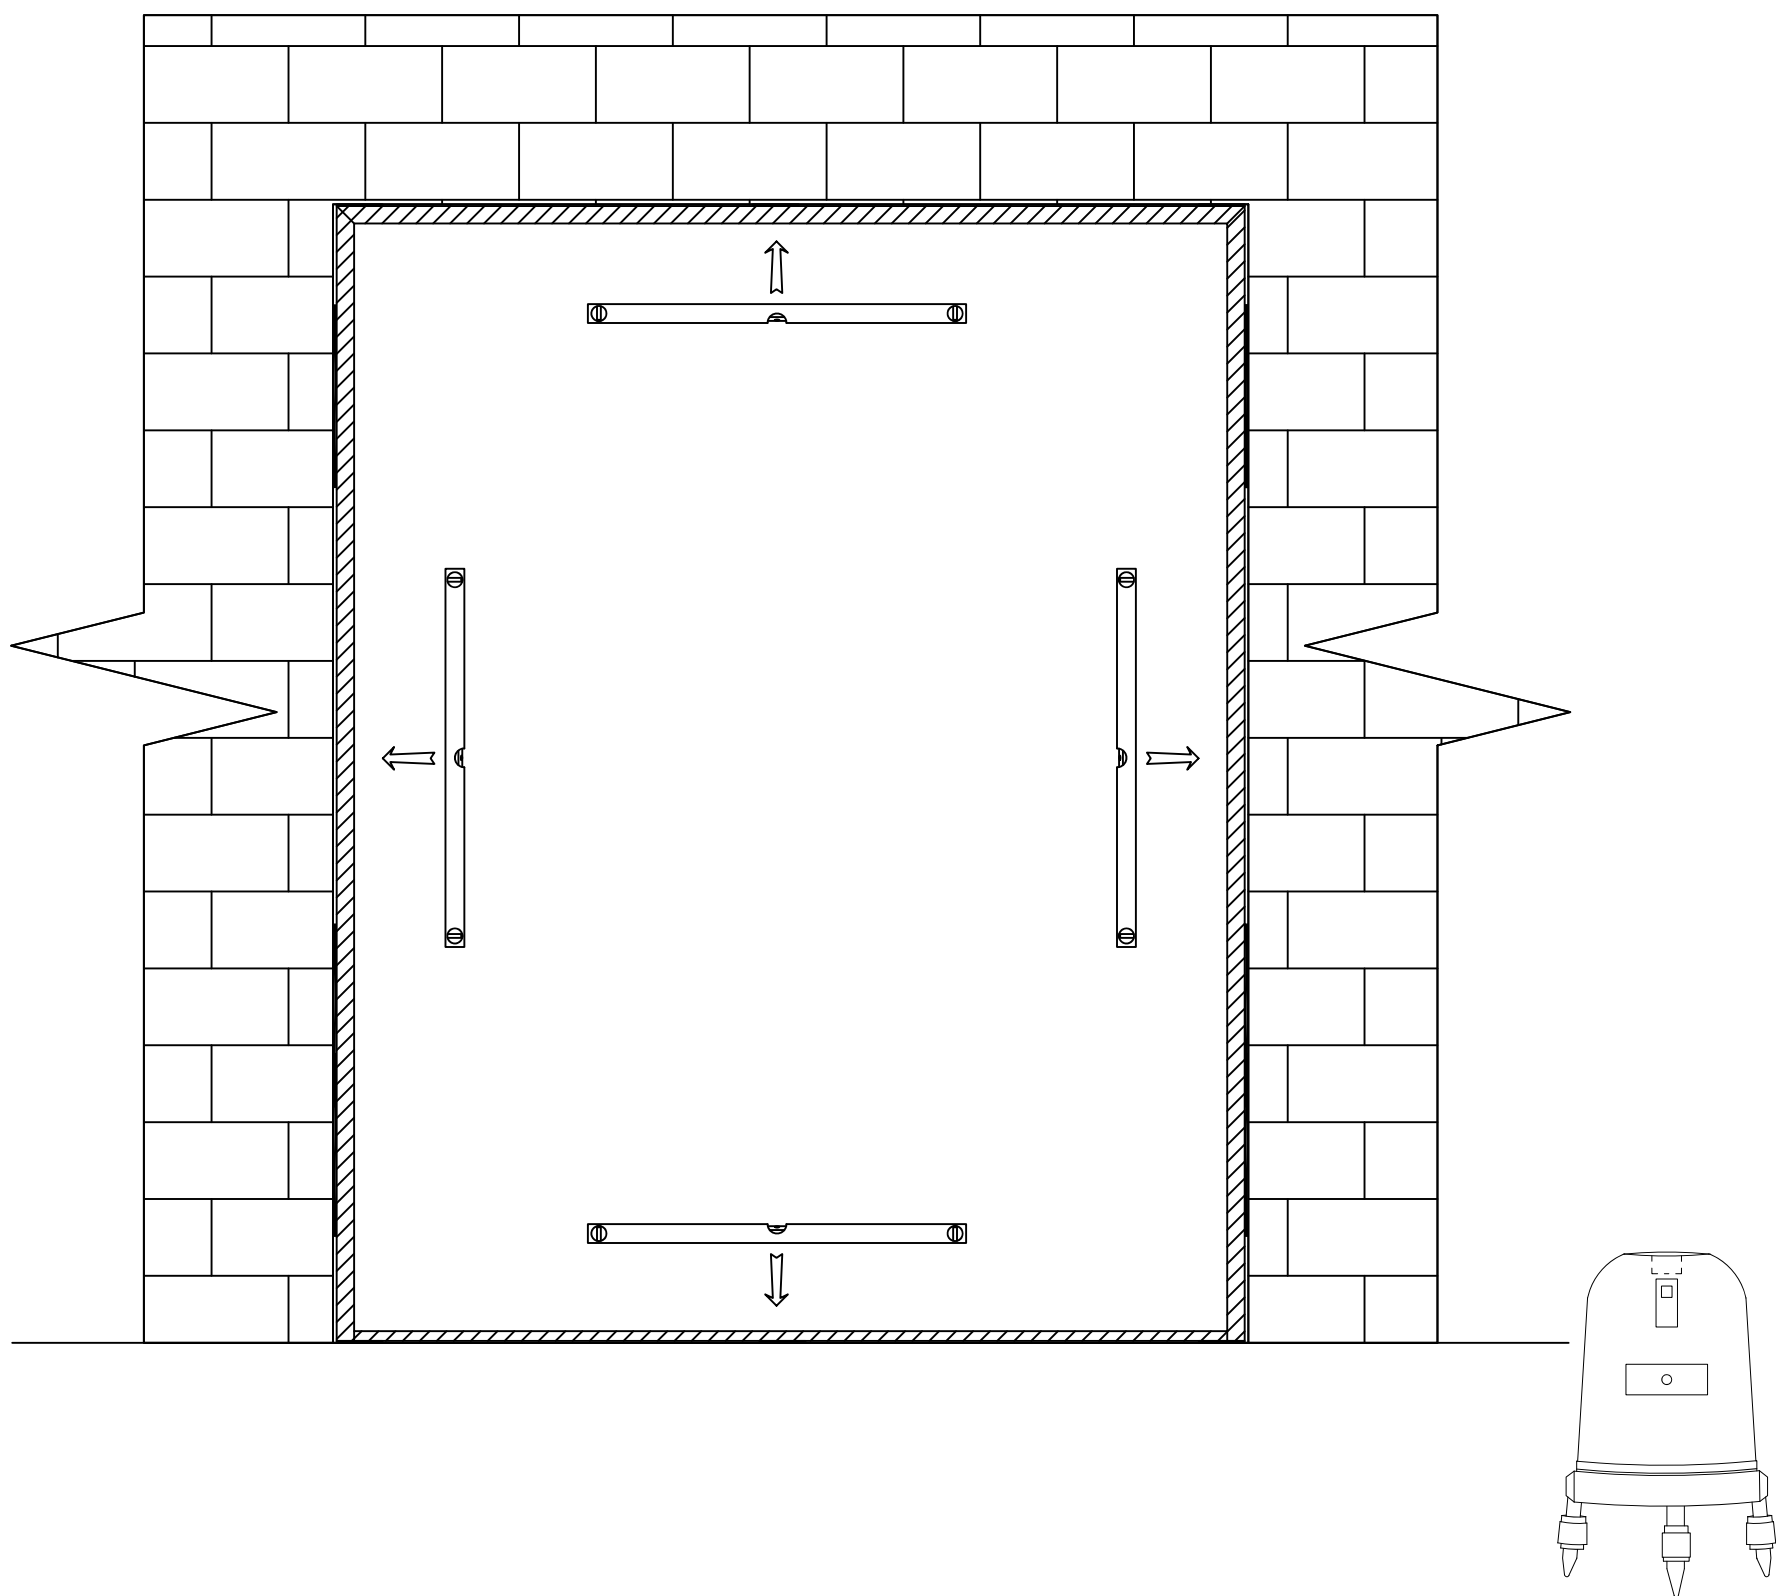

4.Check level.

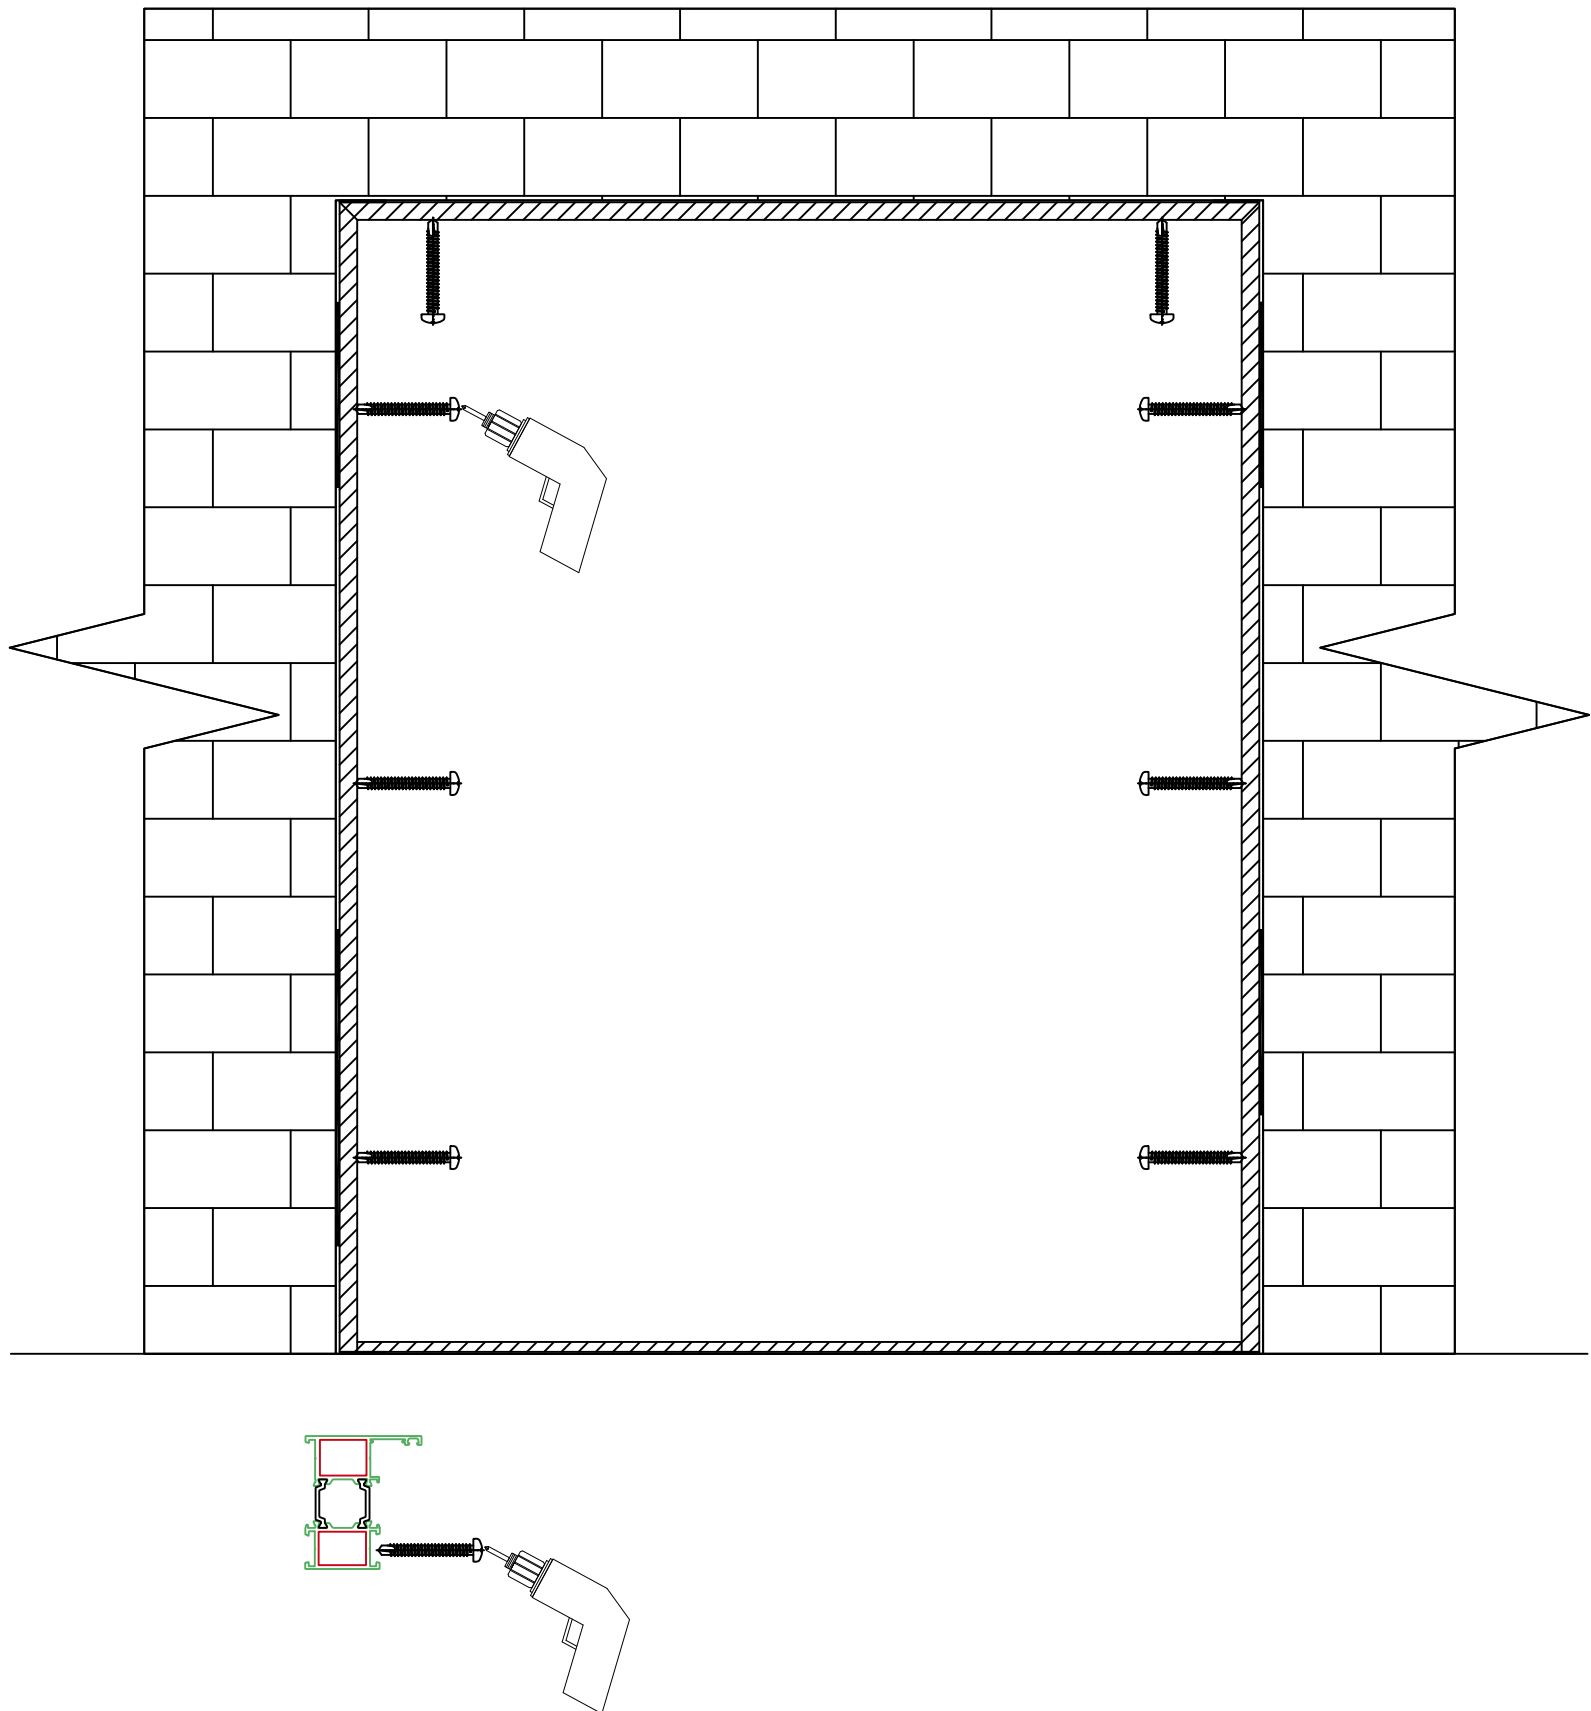


5. Fix the outer frame with mounting screws, and screw them on the aluminum frame, as shown in the figure.

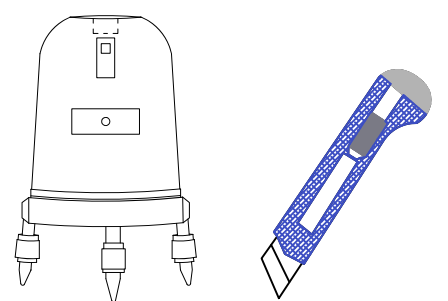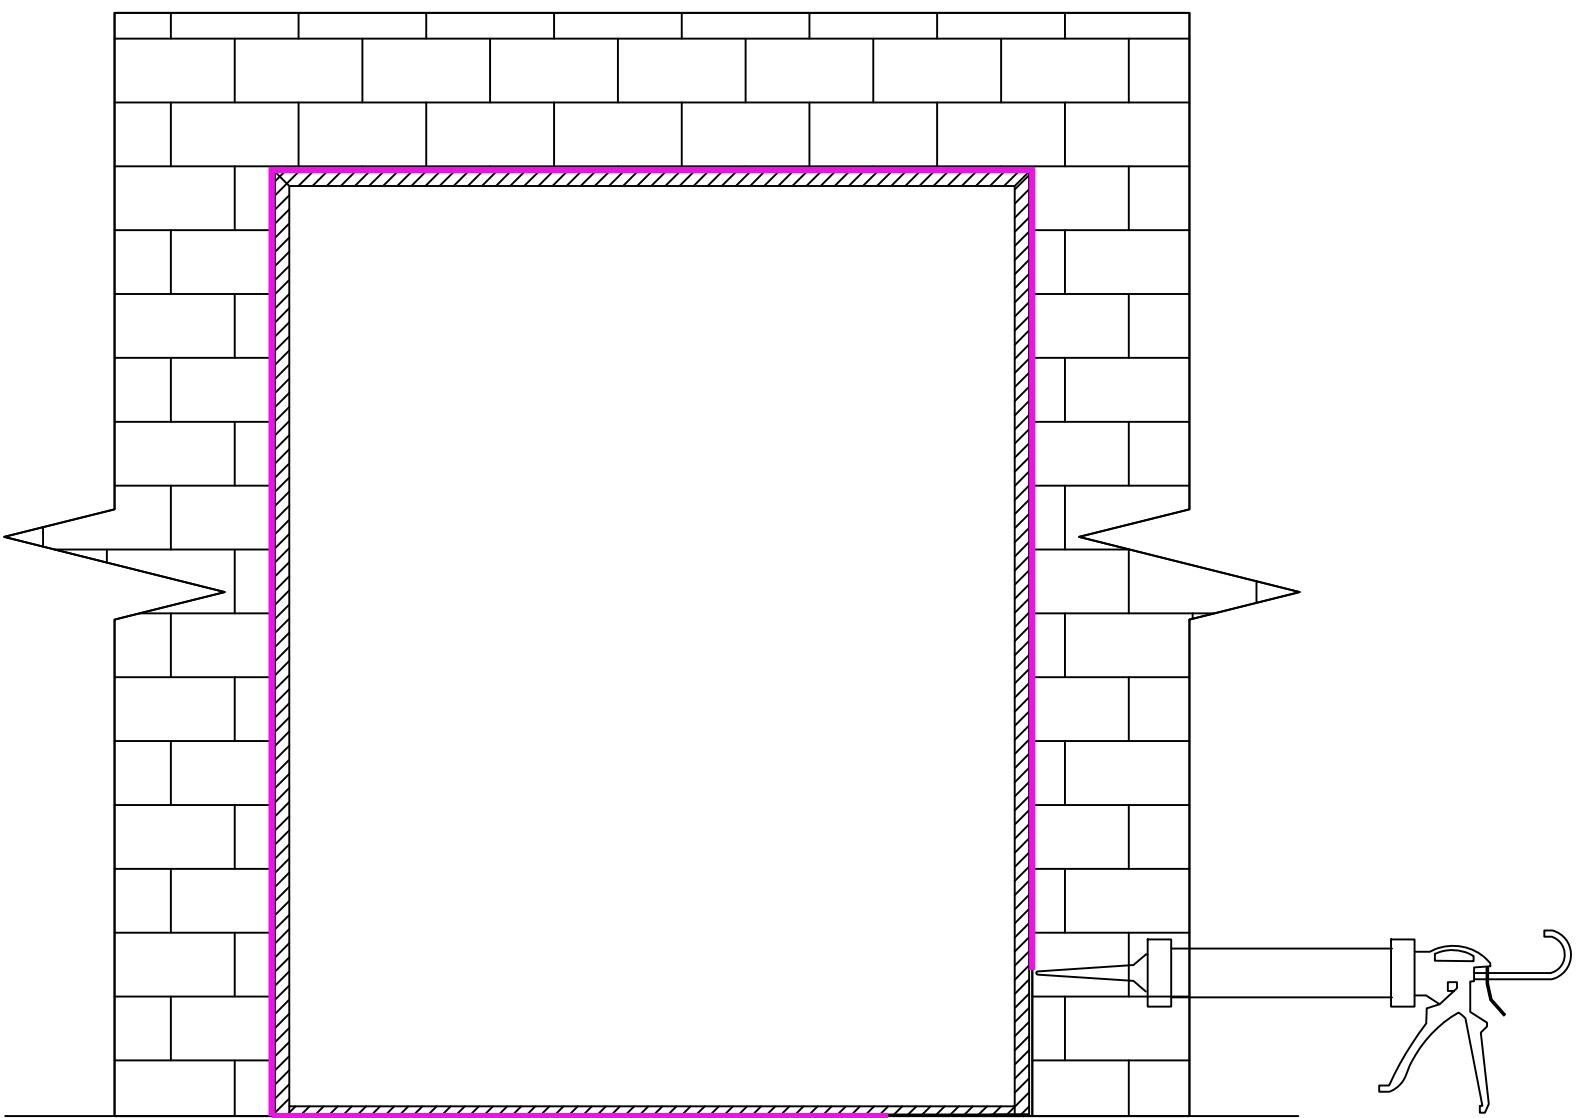


6.Re-core the horizontal position and fill the gaps with styrofoam.



When the styrofoam is solidified, use a utility knife to cut off the extra part of the styrofoam.

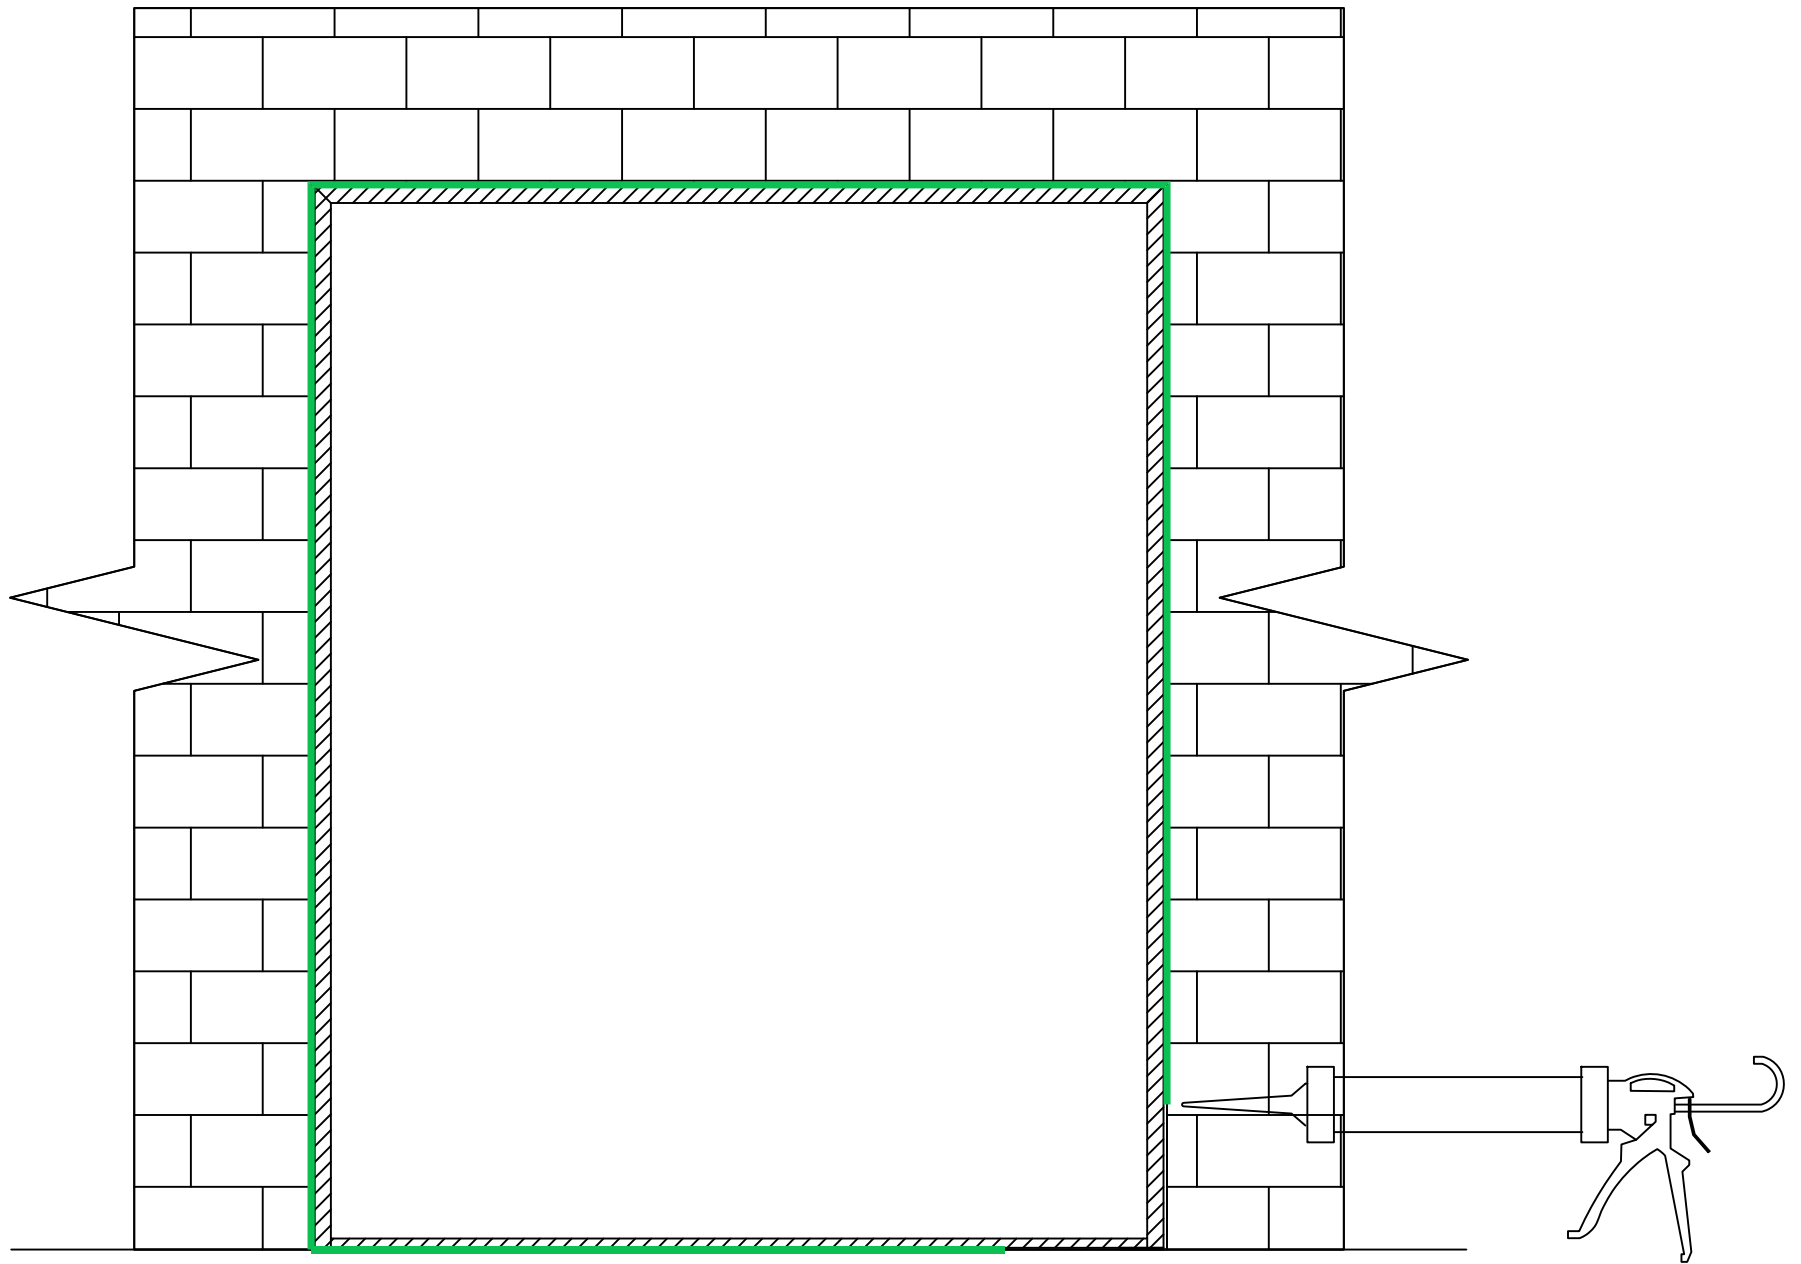


7. After leveling the edge of the door frame, apply sealant around it.
After the sealant has solidified, the framing is completed.

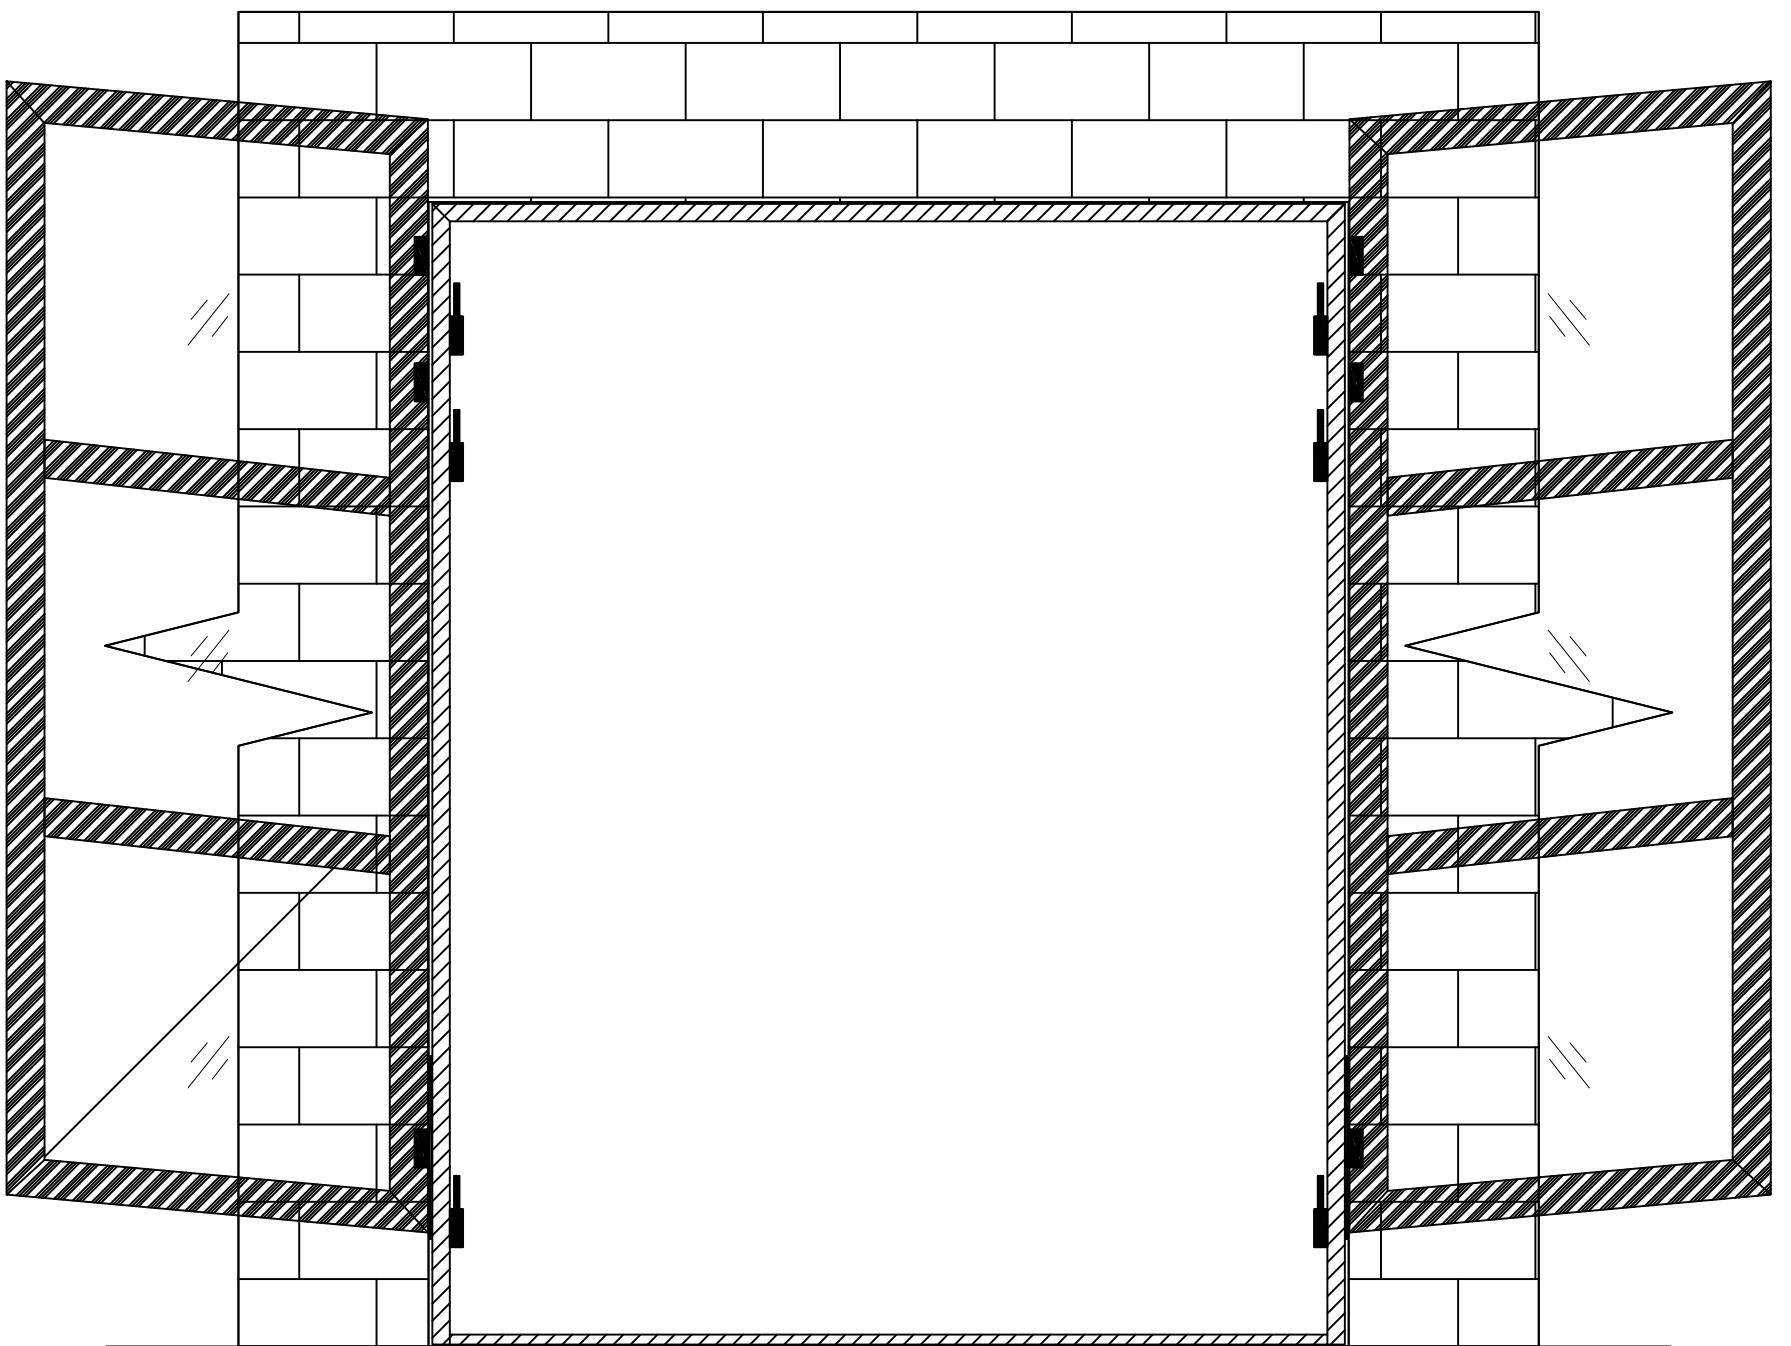


8.Put the glass panel hinge into the frame hinge.

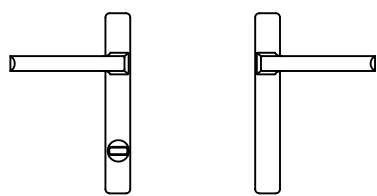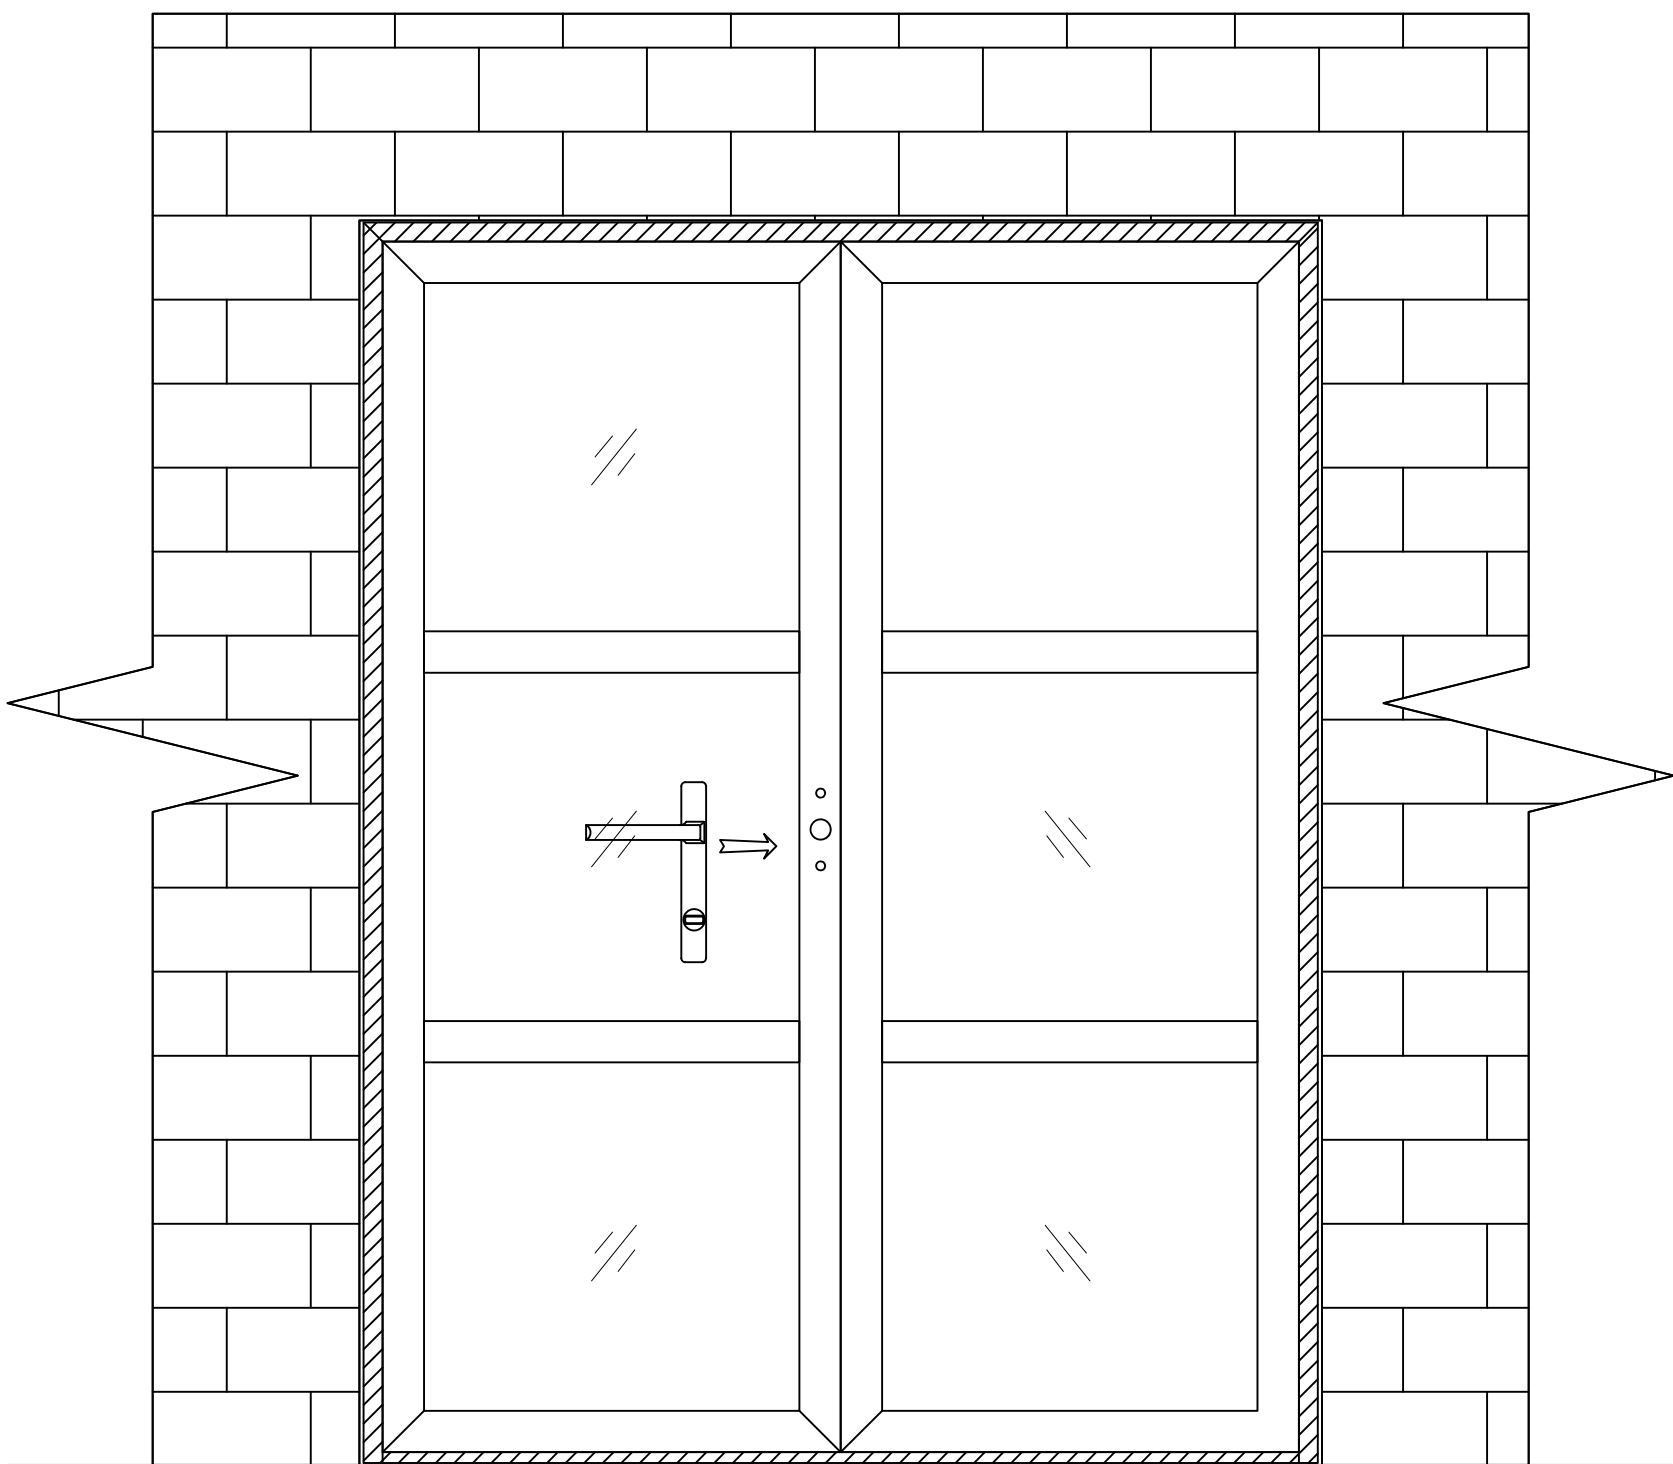

inside
handle ououtside
handle

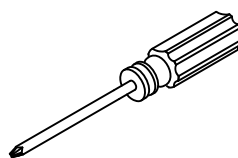

9.assemble handle.

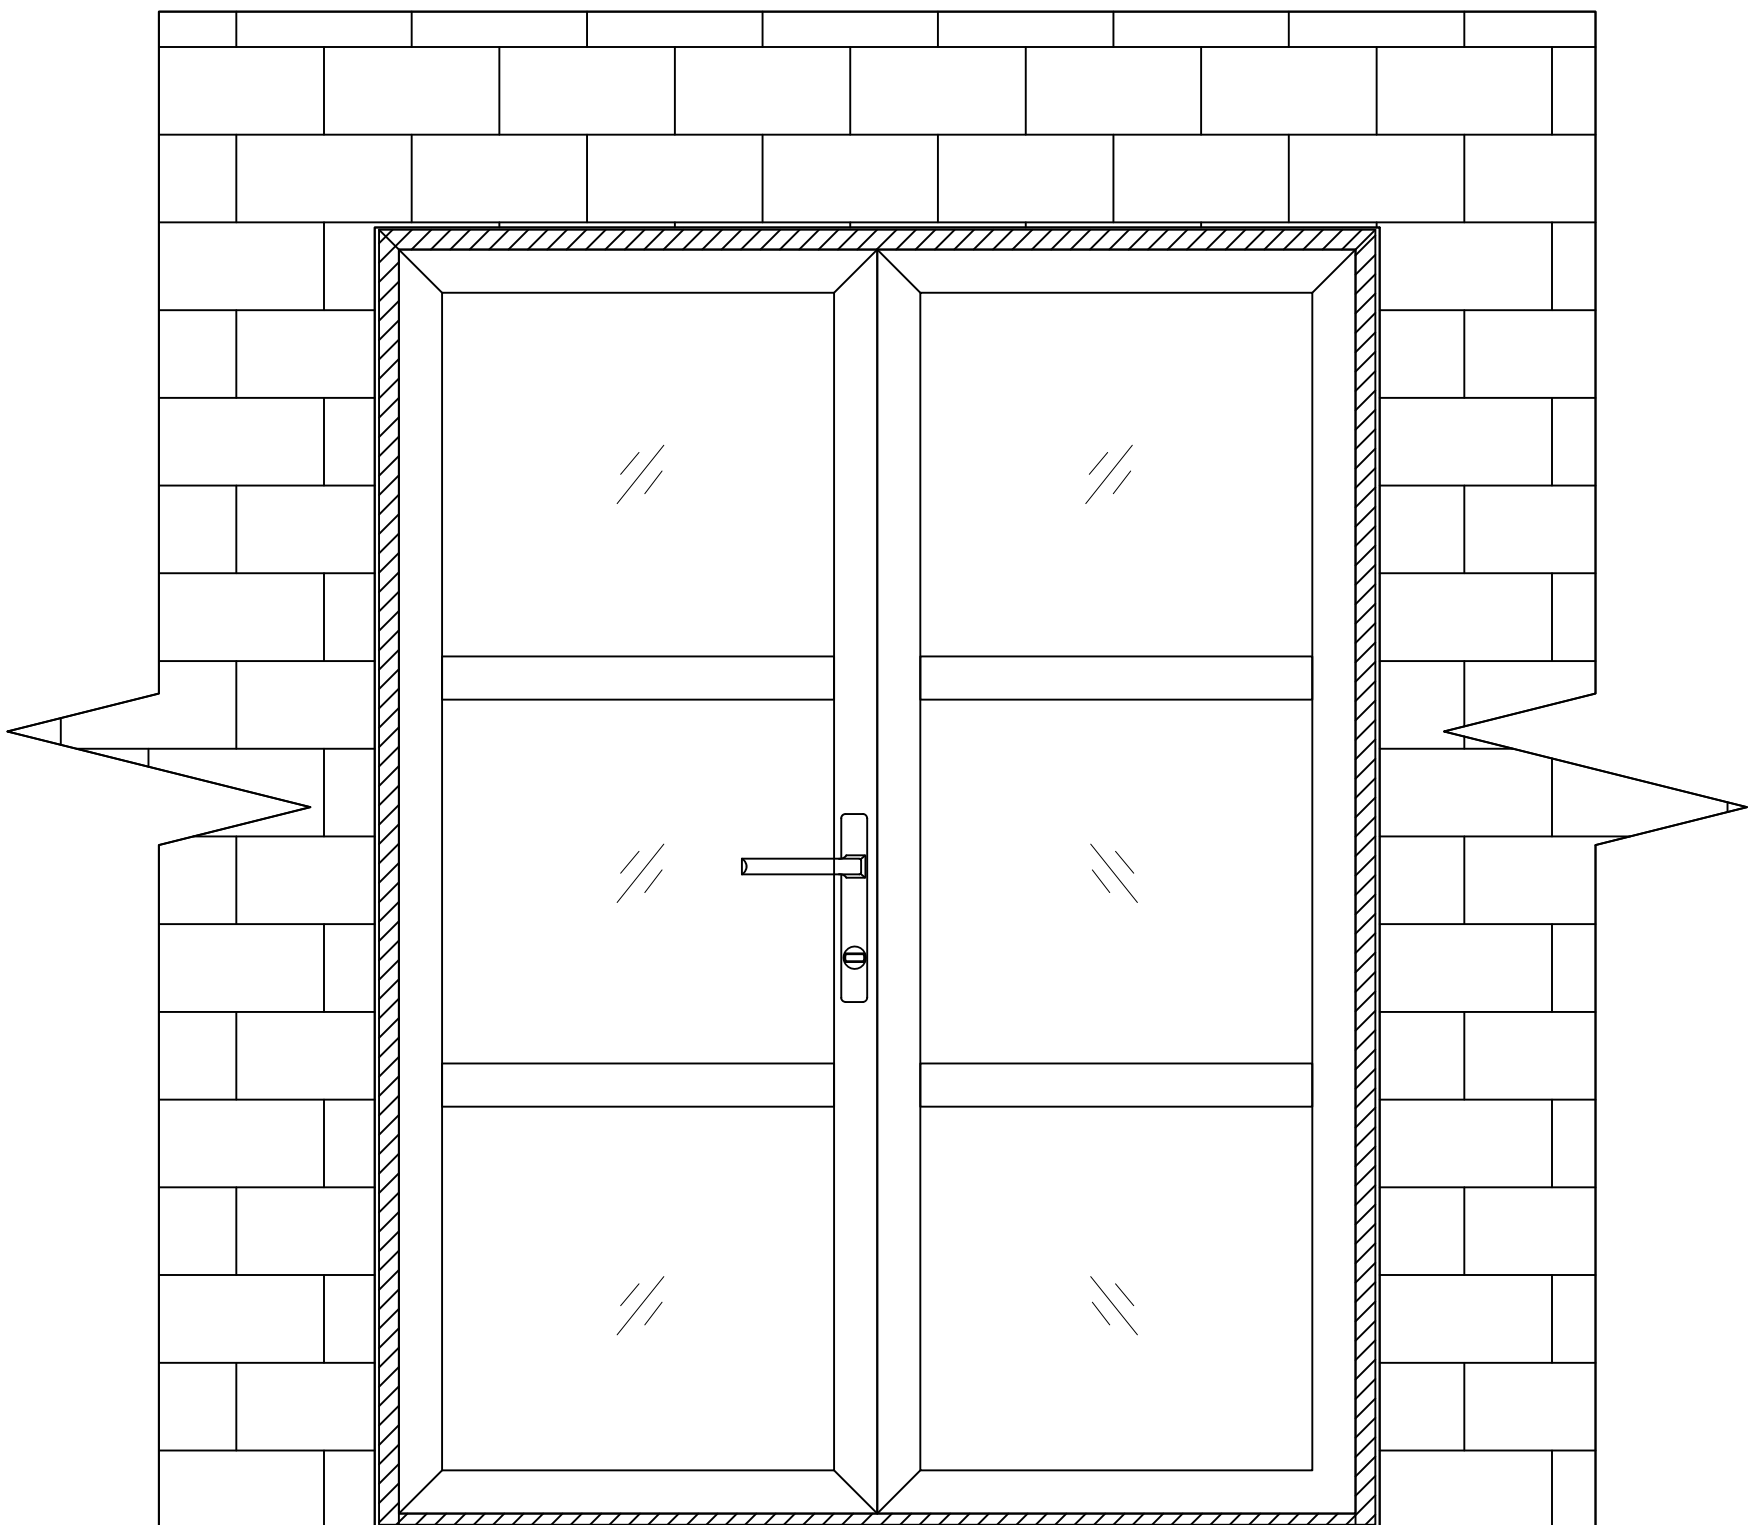

10.completed.