


Installation Manual



QV01-T/QV41

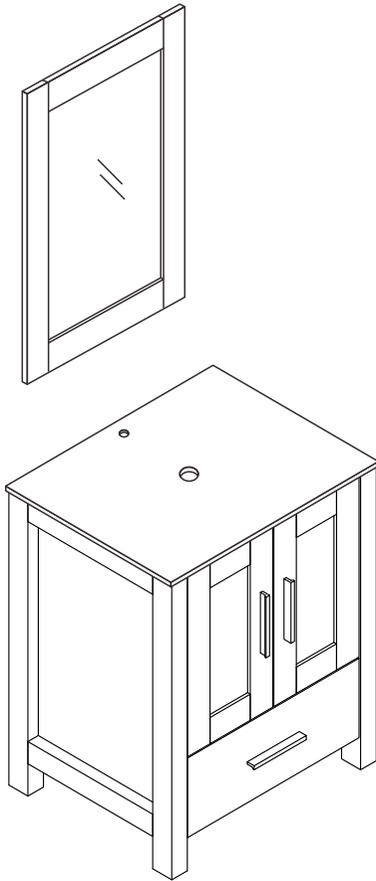

**Please keep the boxes if you need return;
Check before installation;
Return won't be accepted afterwards;**


For any question, please contact: info@royoltd.com

Pre-installation preparation

 Cross Screwdriver	 Hammer	 Tape Measure
 Pencil	 Electric Drill	 Glass Cement
 Leveling Rod	 Electric Drill	



Spare Parts List

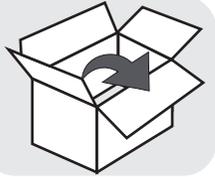

H1



H2




H3



H4



H5-S

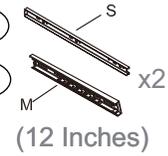

H5-M


H6



H7



H8

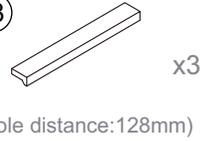

H9



H10



H11




H12




H13



H14





Structural Diagram

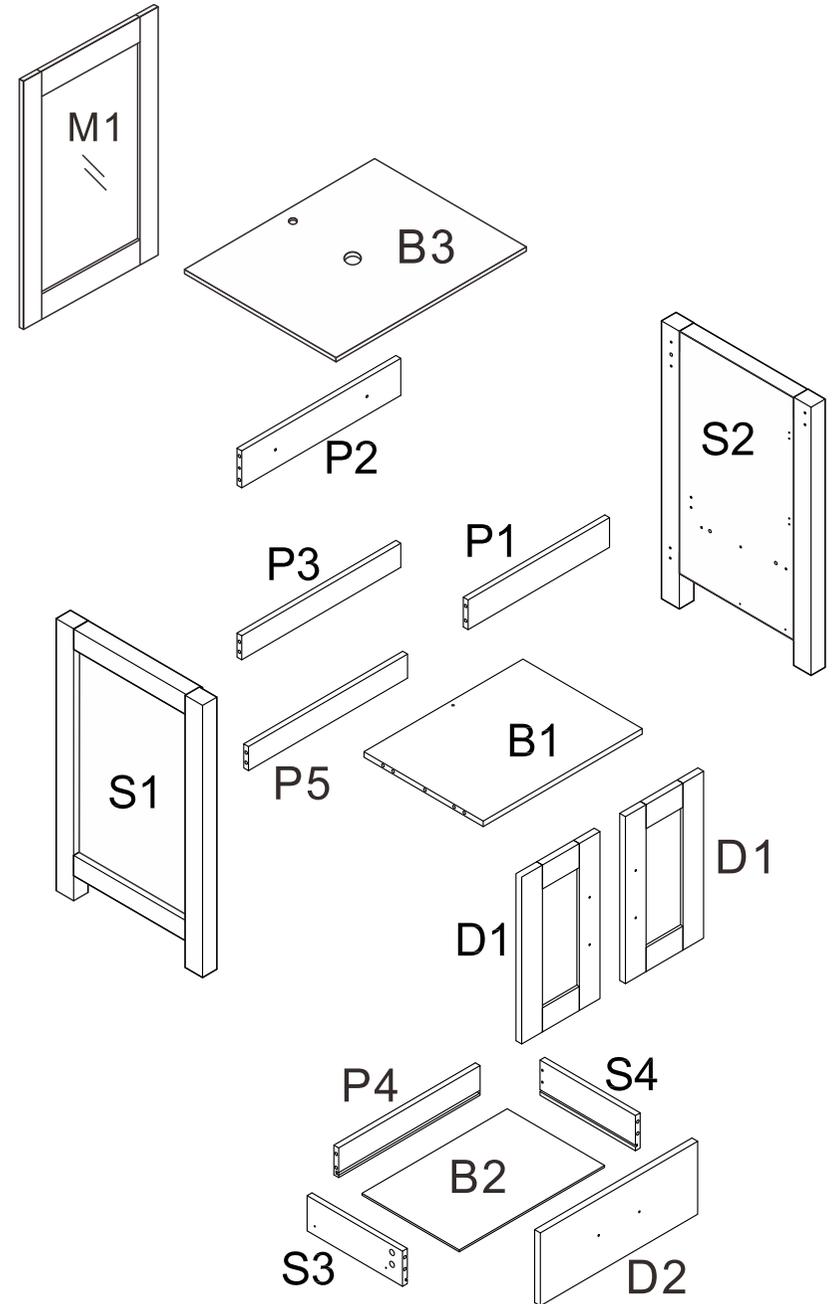

1






Side Board Installation

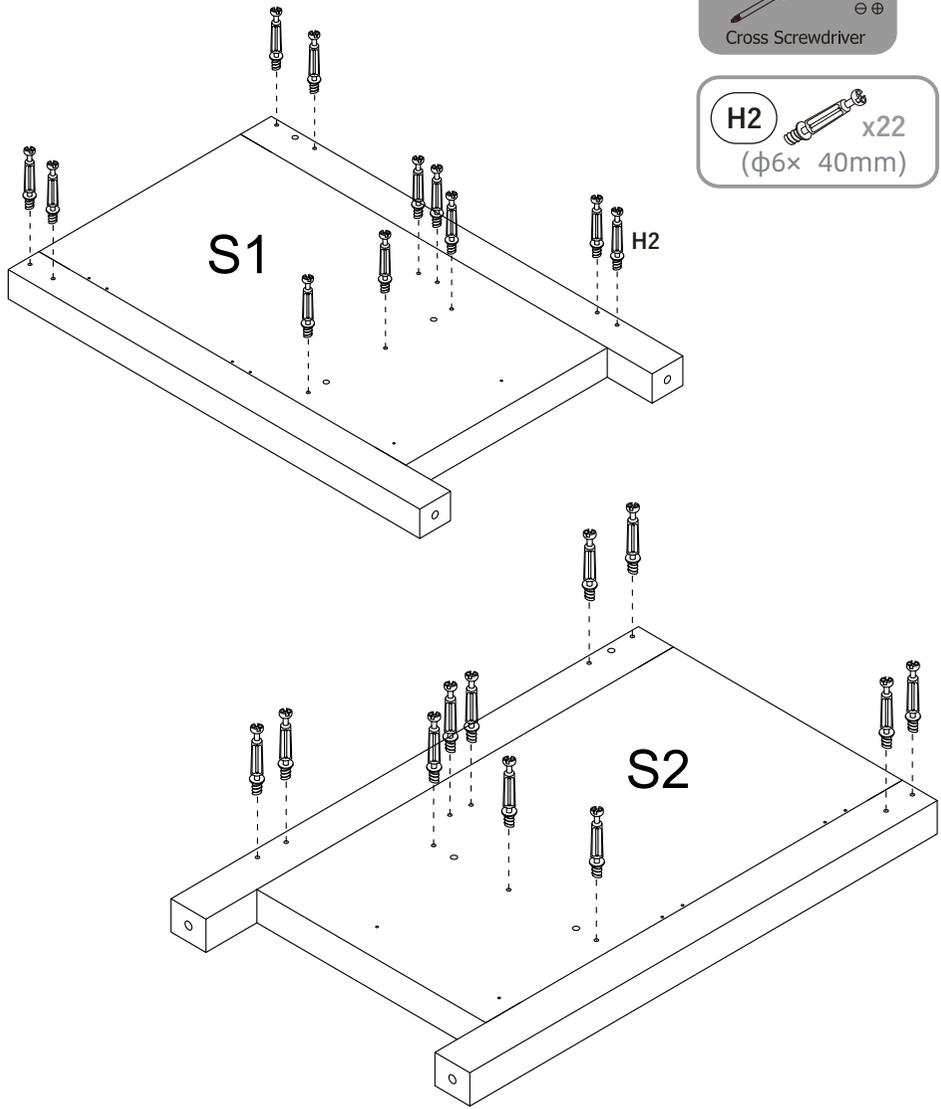

Make sure all "H2" screws are straight and right in place, not loose

2


Slider Installation

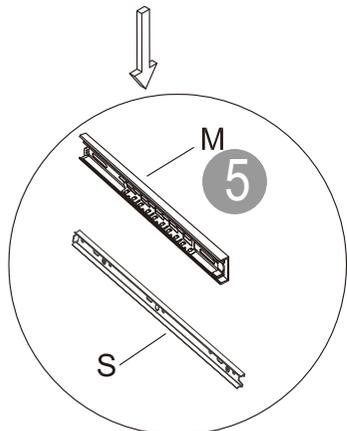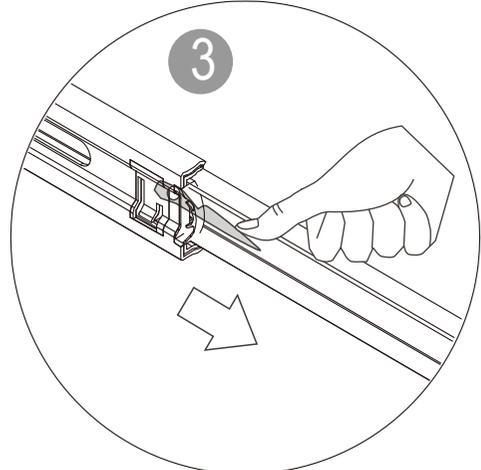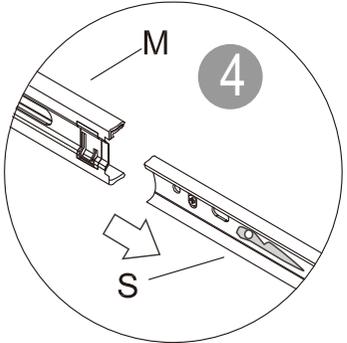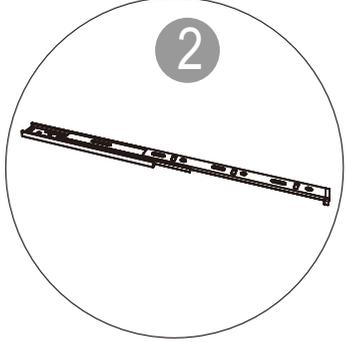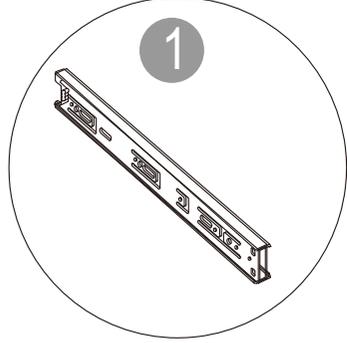


Slider Disassemble

3

Slider Installation



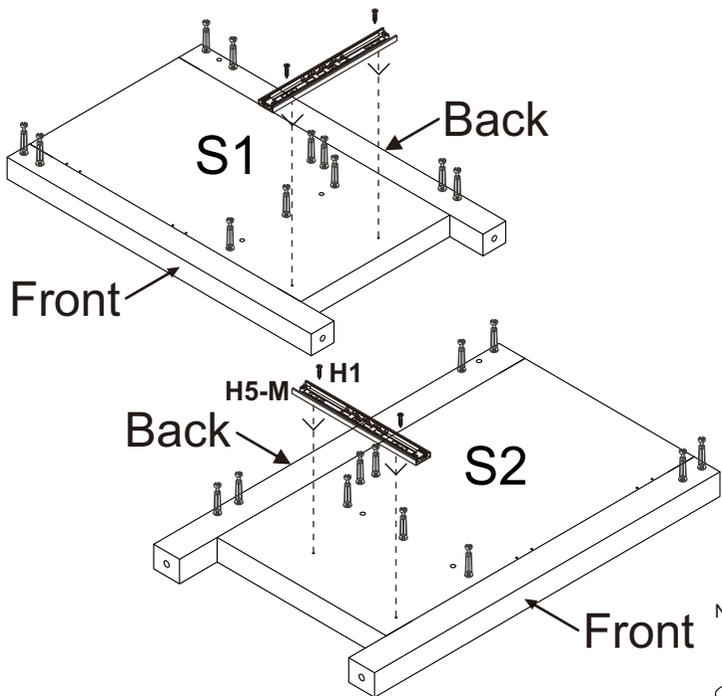


NO ELECTRIC SCREW DRIVER

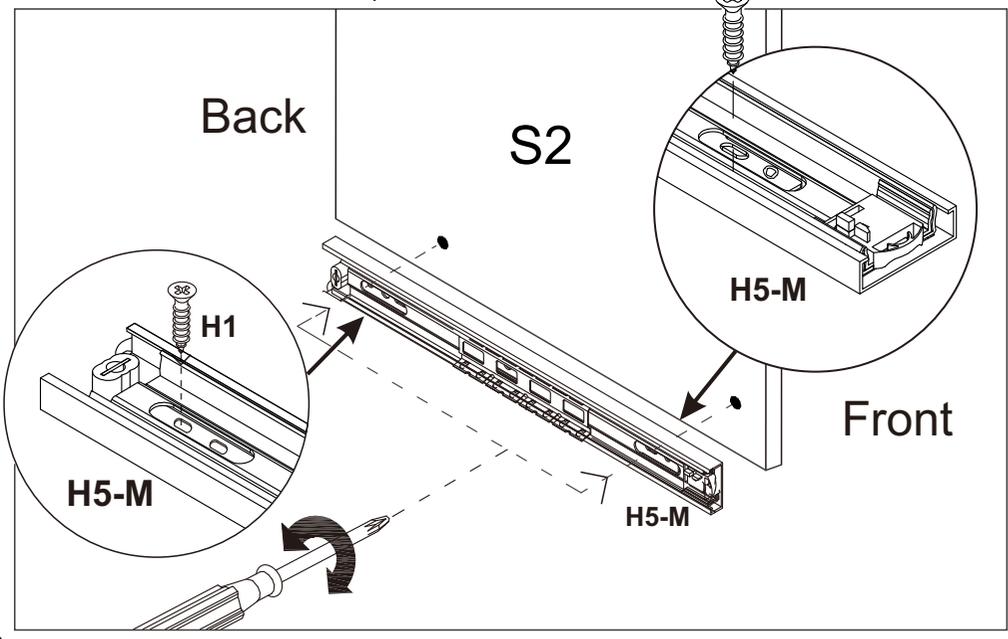

4

Leg Installation

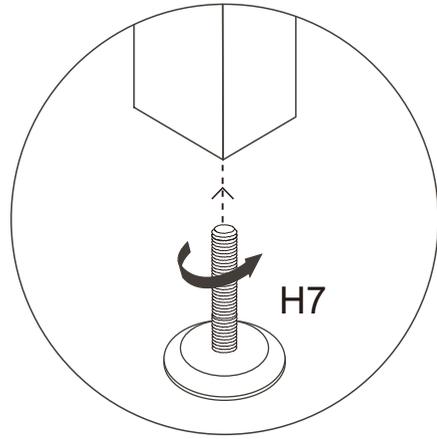
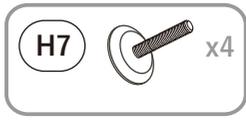
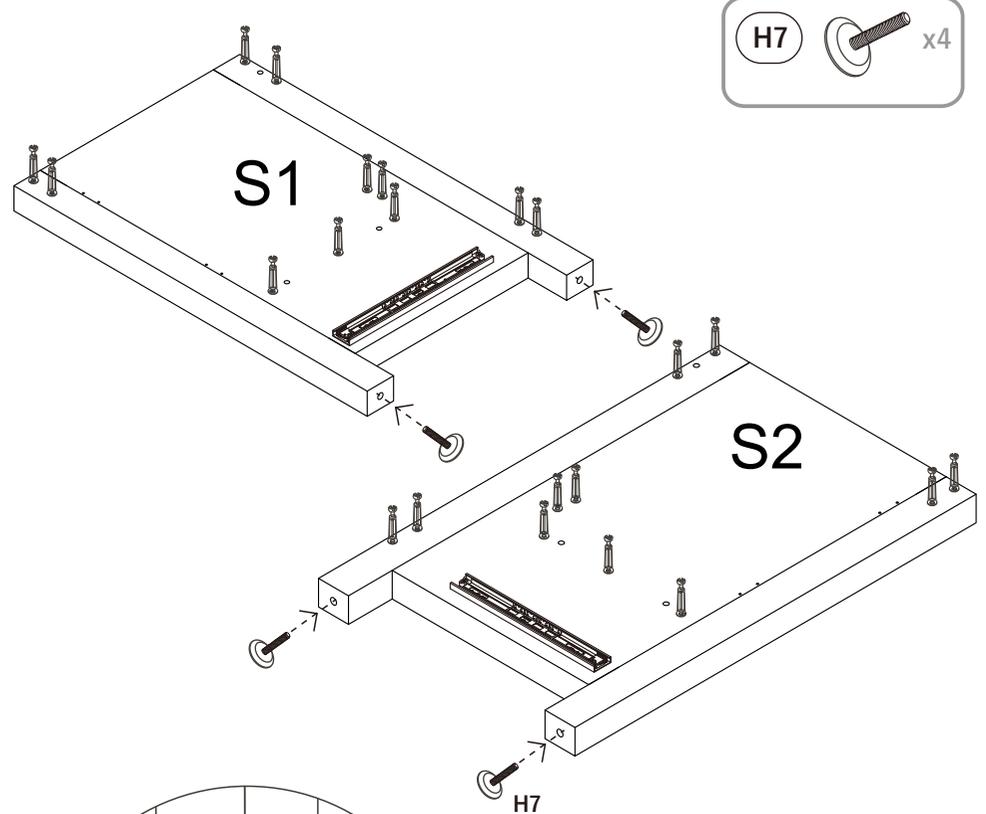


For height adjustment if the floor is not flat


5

Middle Panel Installation




1

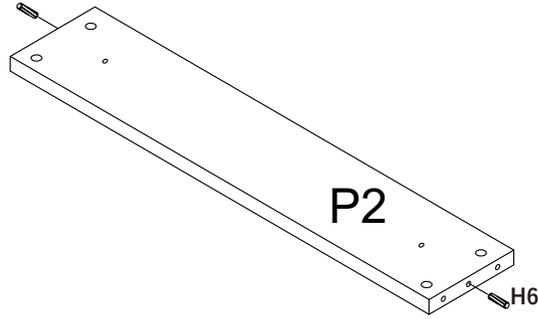

2

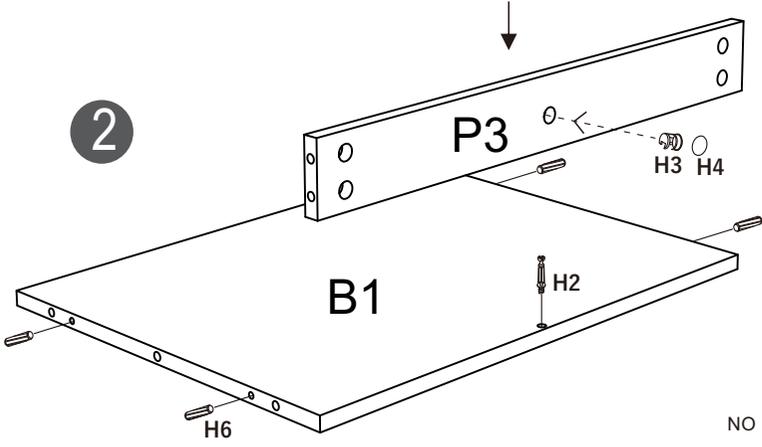


NO ELECTRIC SCREW DRIVER

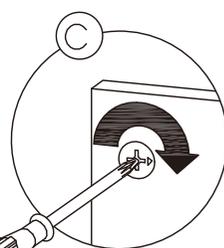
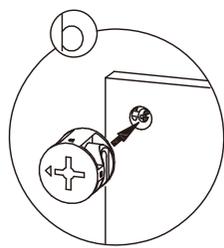
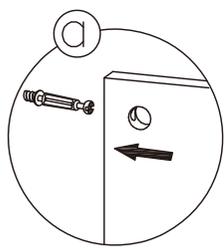


6

Structure Installation

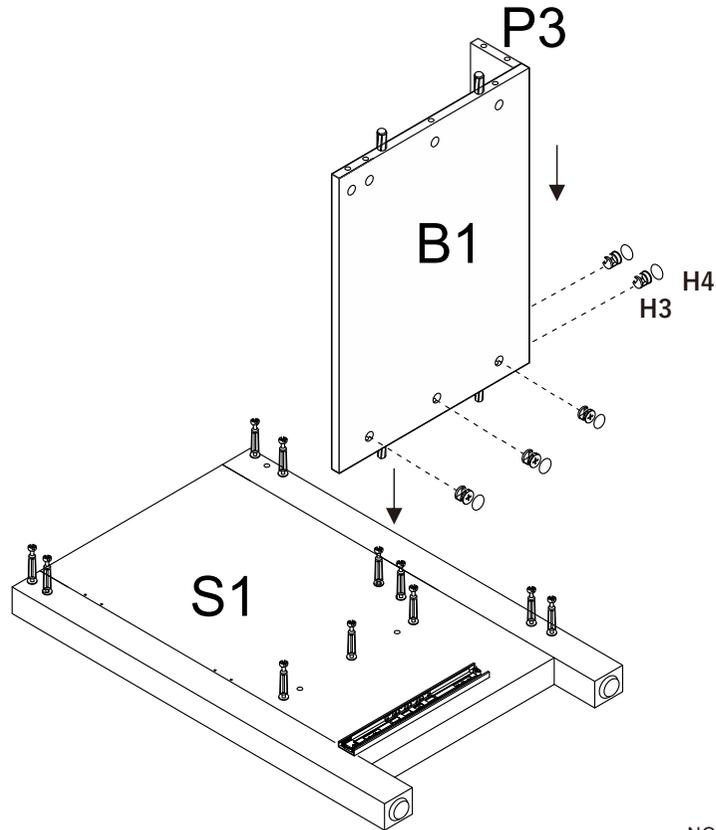



NO ELECTRIC SCREW DRIVER

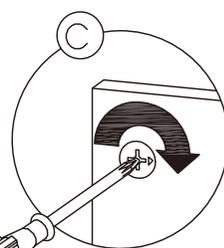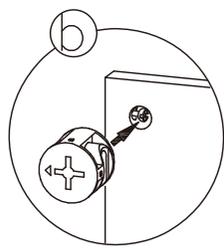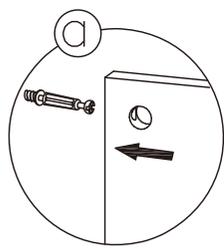

7






Brace Installation

1

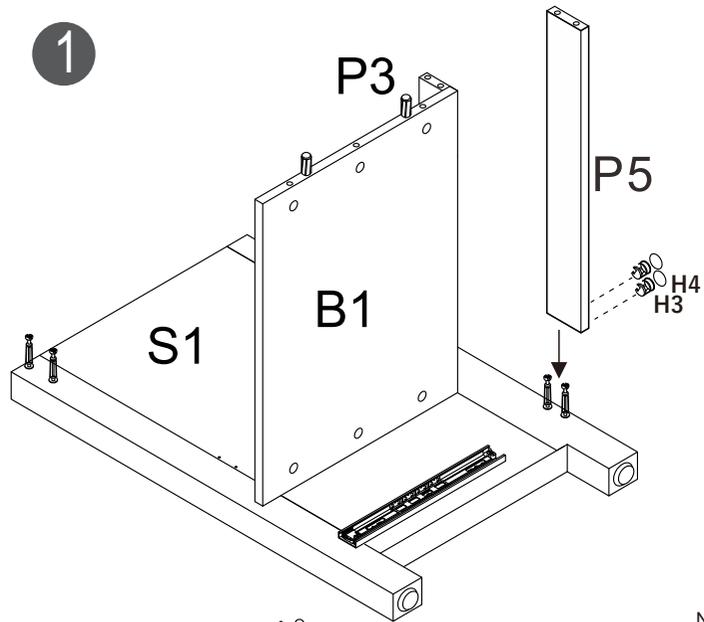


NO ELECTRIC SCREW DRIVER

2

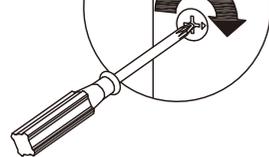
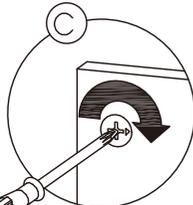
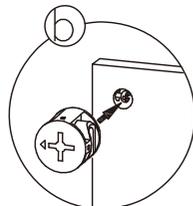
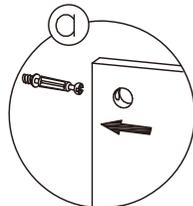
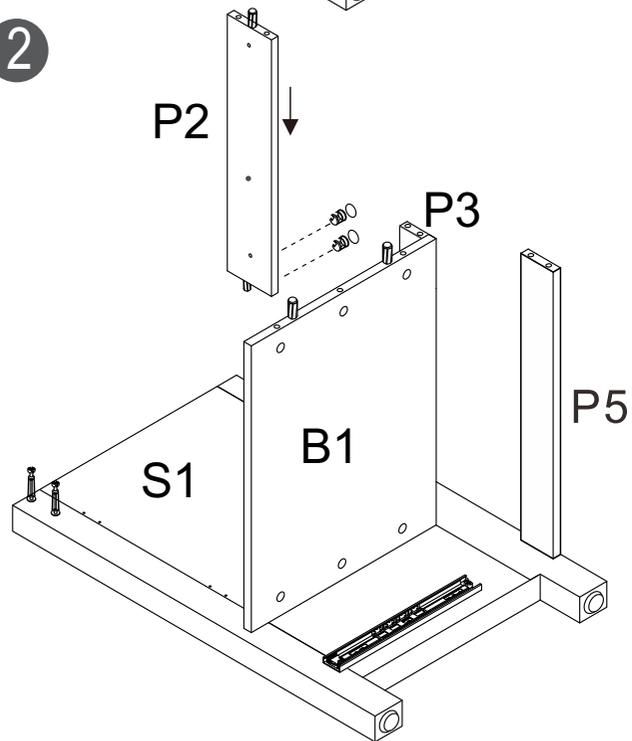


8

Brace Installation




NO ELECTRIC SCREW DRIVER

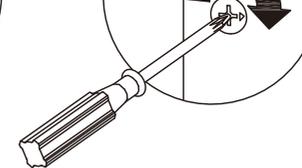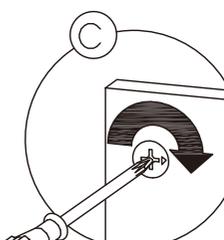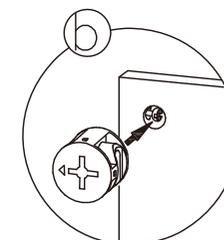
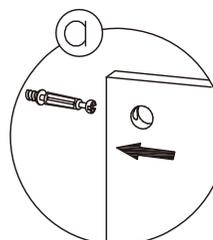
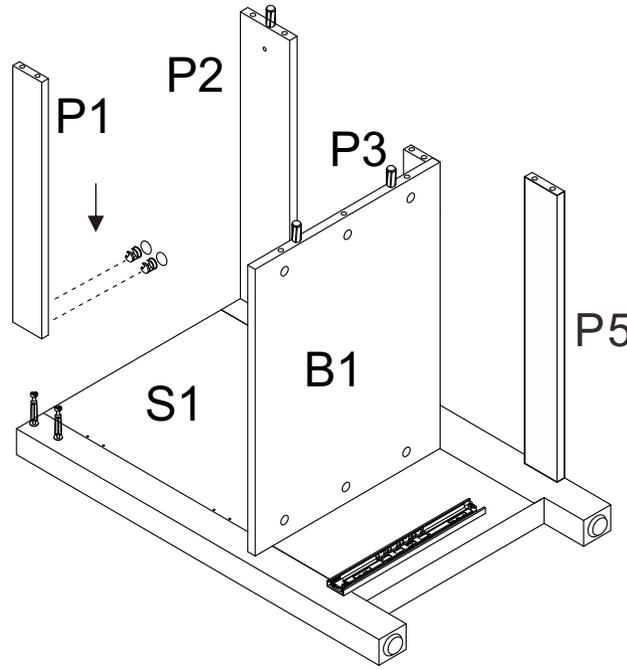


9

Structure Installation

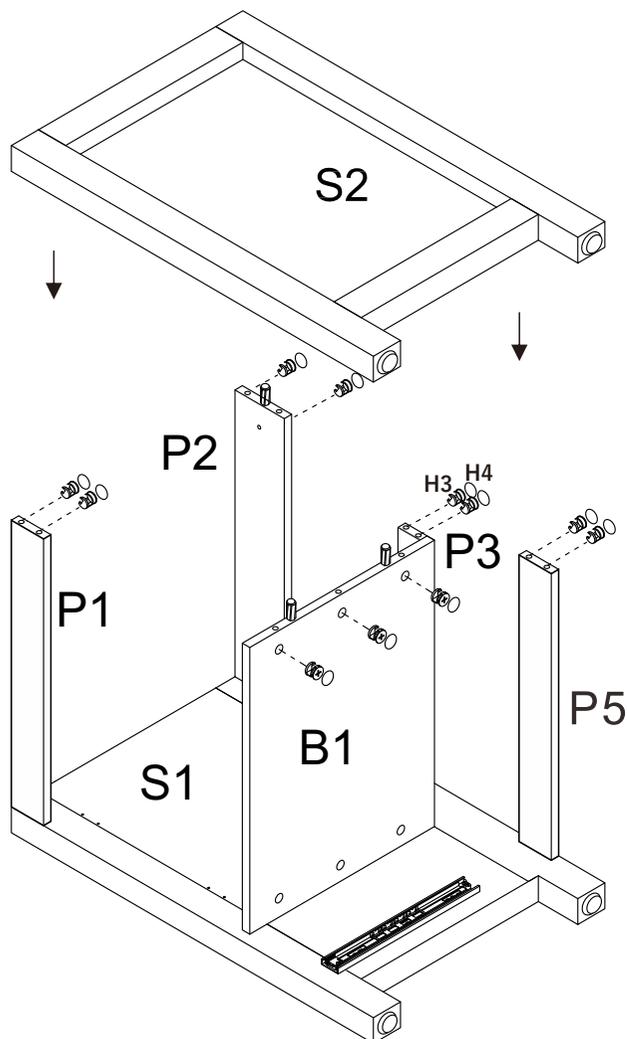


NO ELECTRIC SCREW DRIVER

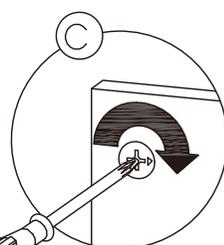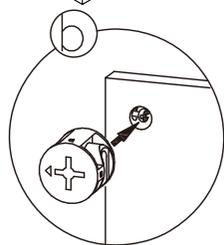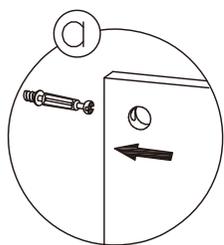

10





Drawer Installation

1

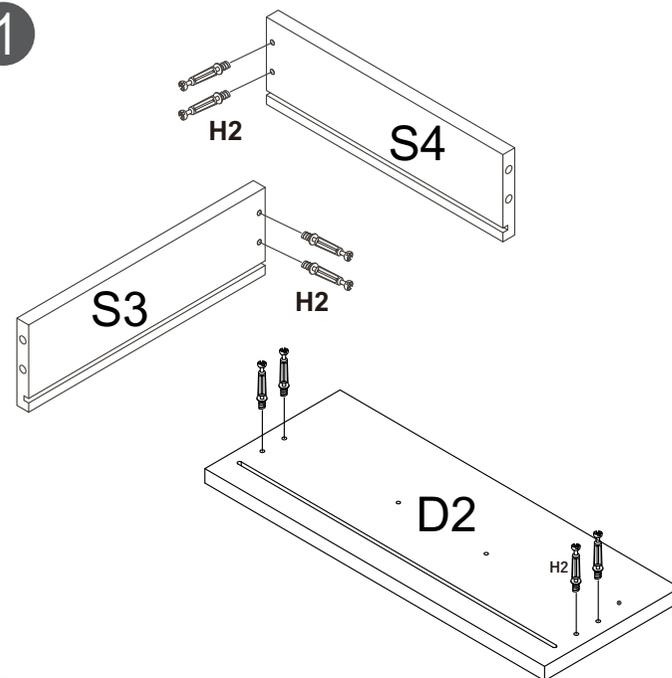


NO ELECTRIC SCREW DRIVER

2

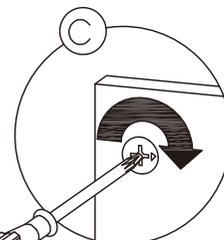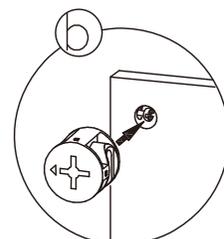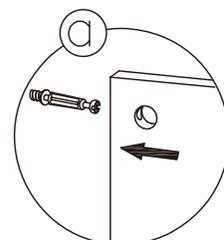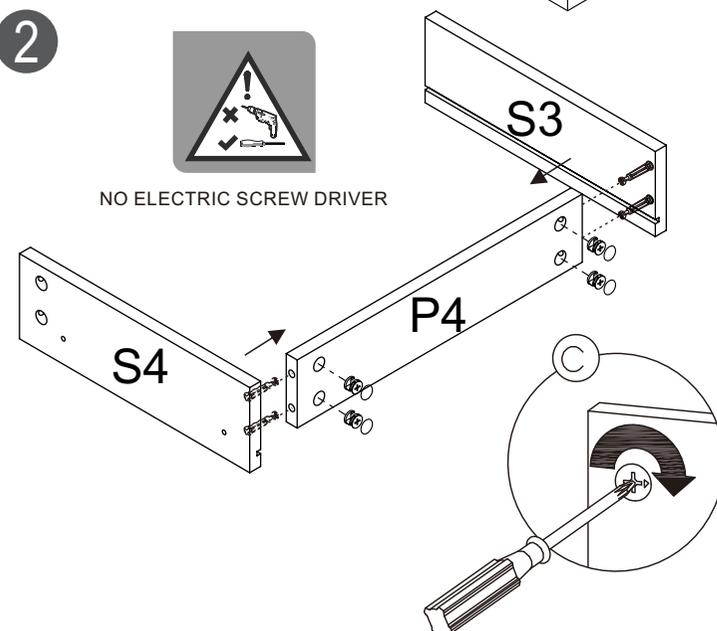


11


Drawer Installation

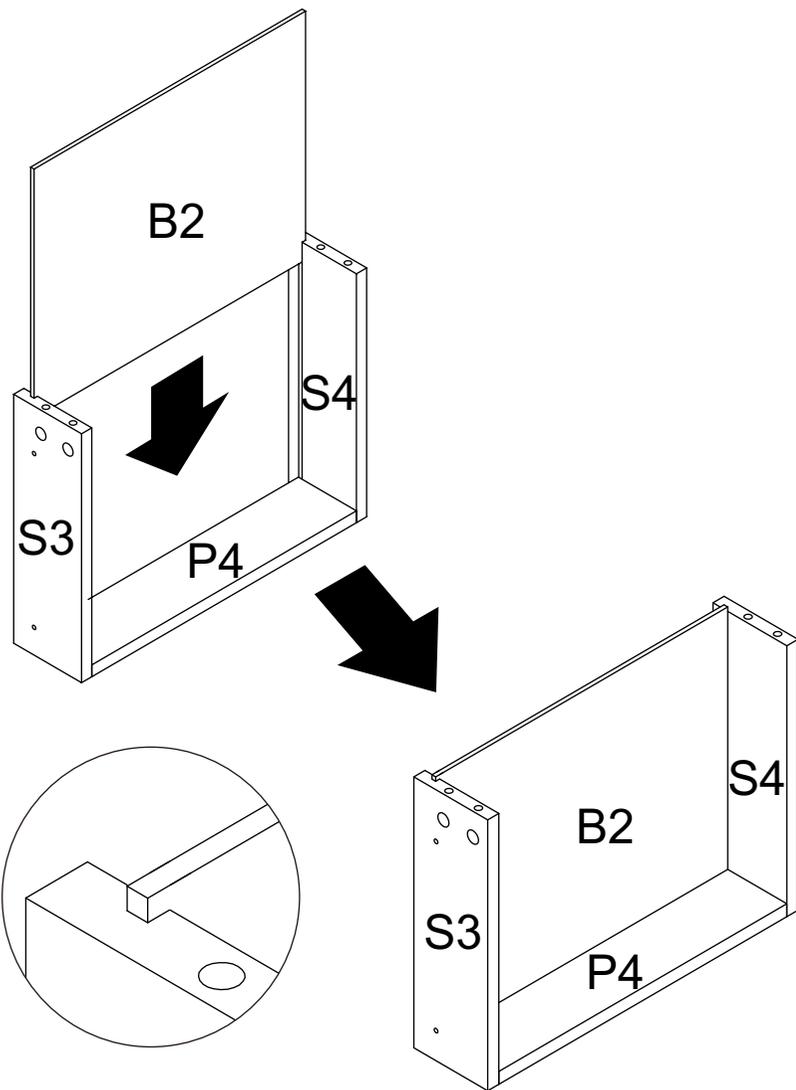

12


Drawer Installation

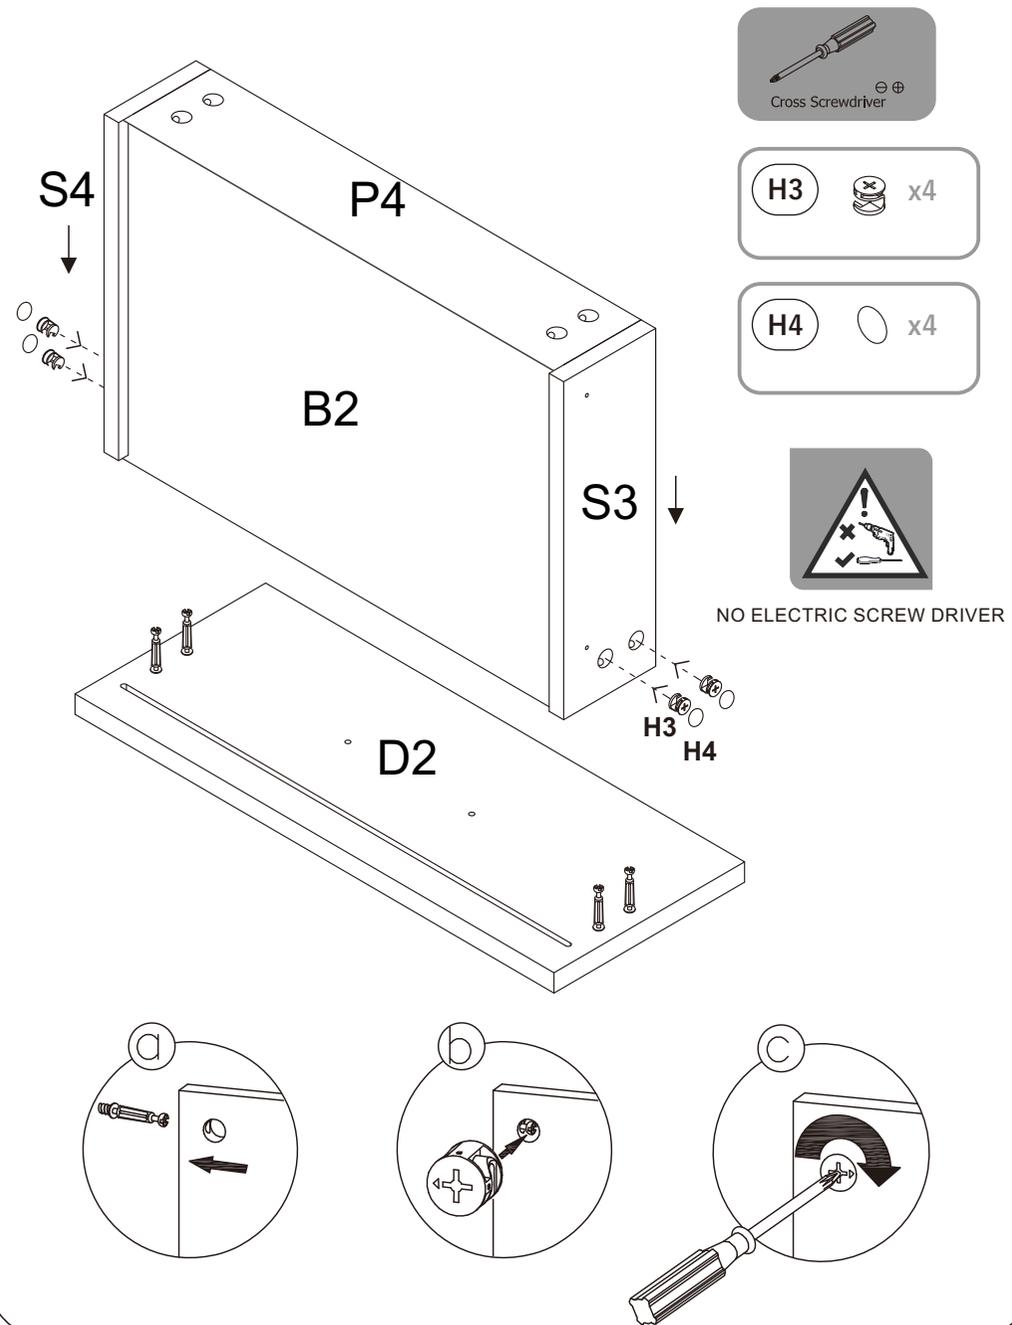

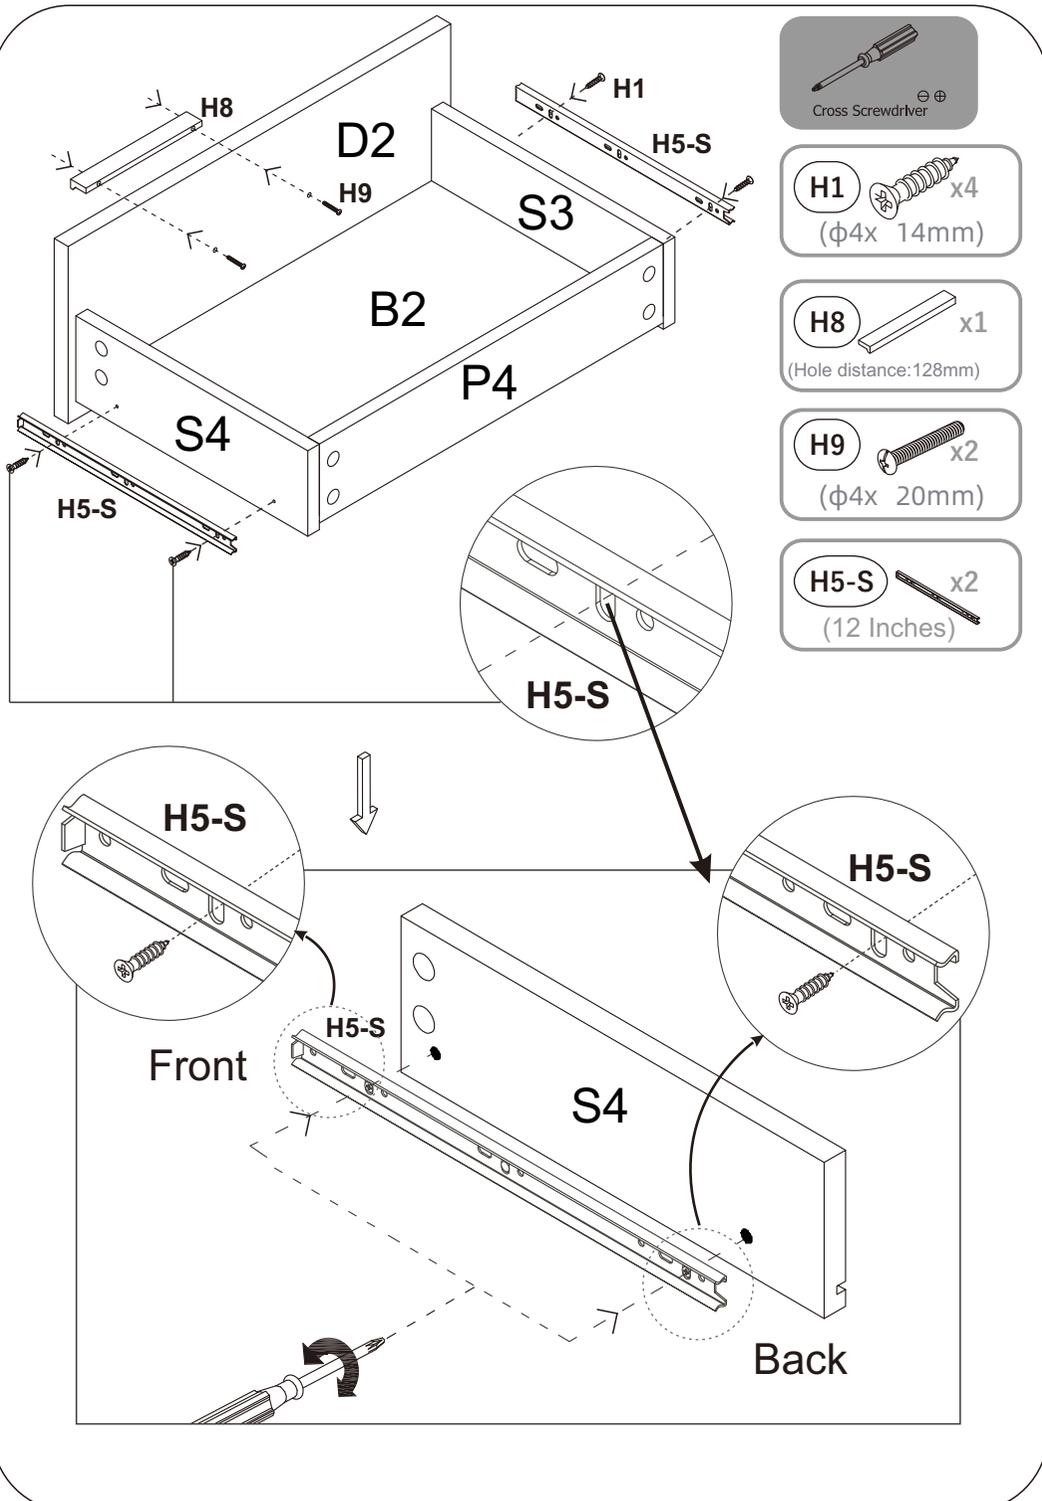

13

Drawer Installation

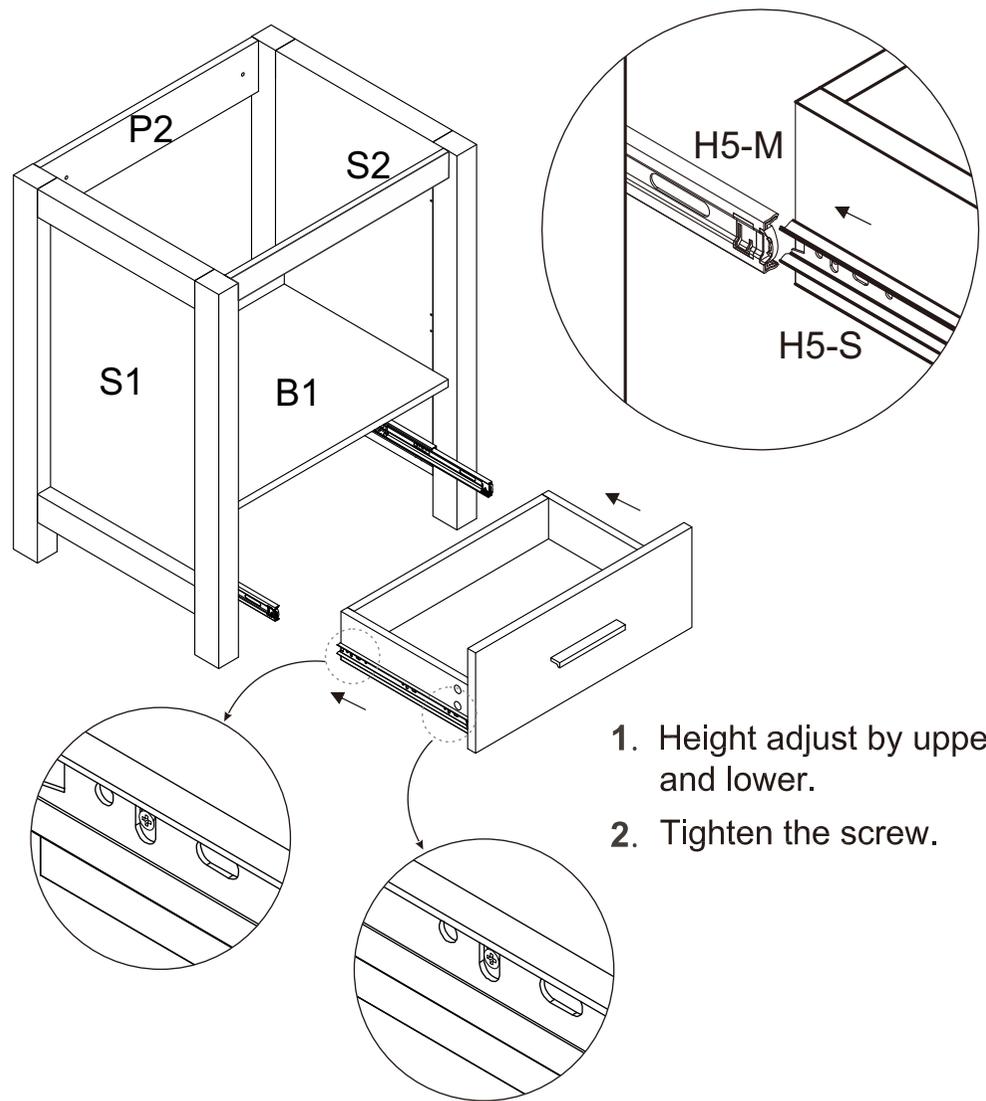









If the drawer is uneven, you may adjust the screws up or down on both sides to parallel

14


Hinge Installation





NO ELECTRIC SCREW DRIVER

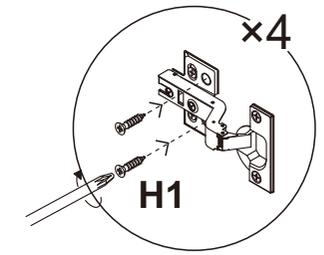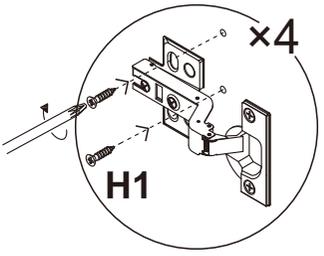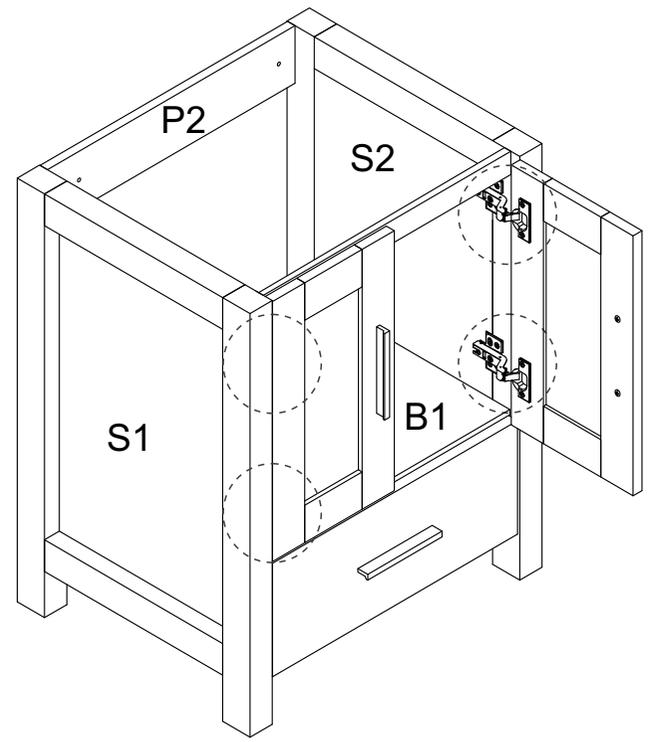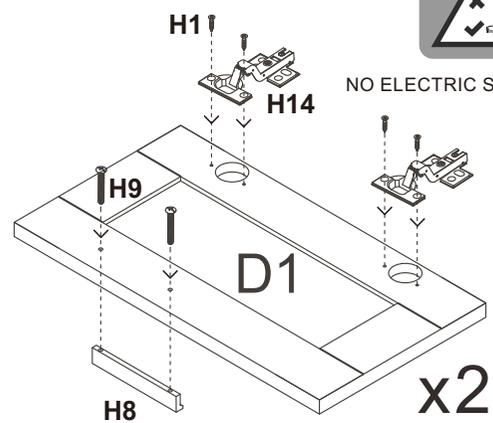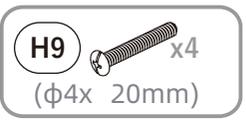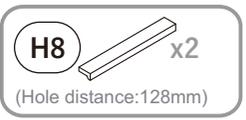



Door Adjustment

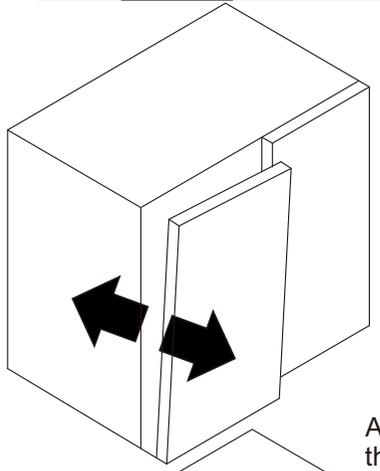


Adjust the screw to make the door lean to forward or back

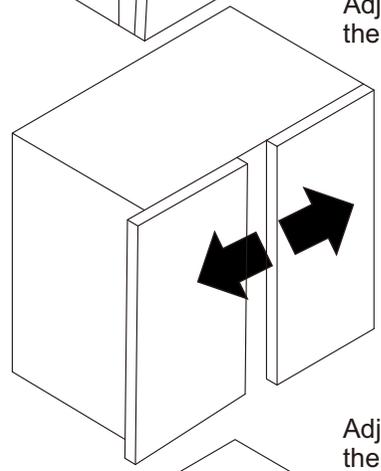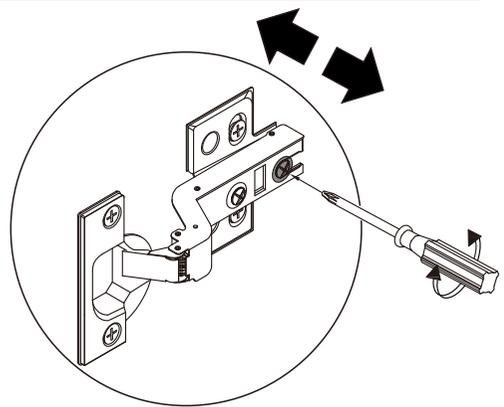

Adjust the screw to make the door lean to left or right

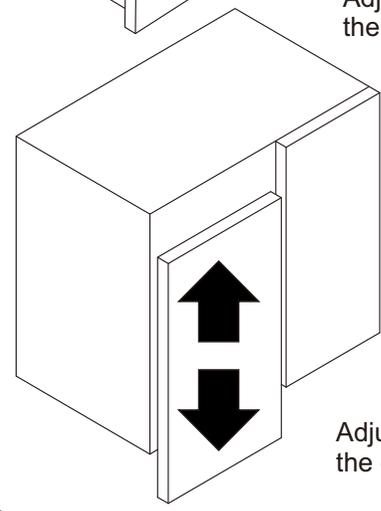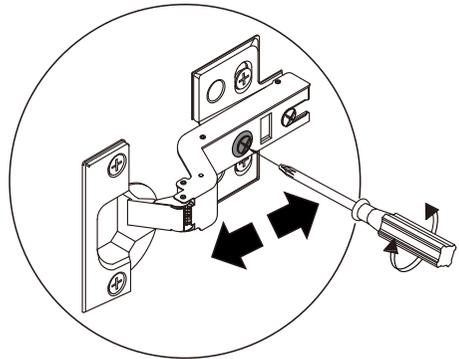


Adjust the screw to make the door lean to up or down



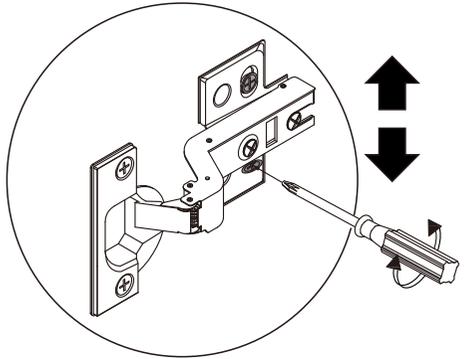


15

Cabinet Installation



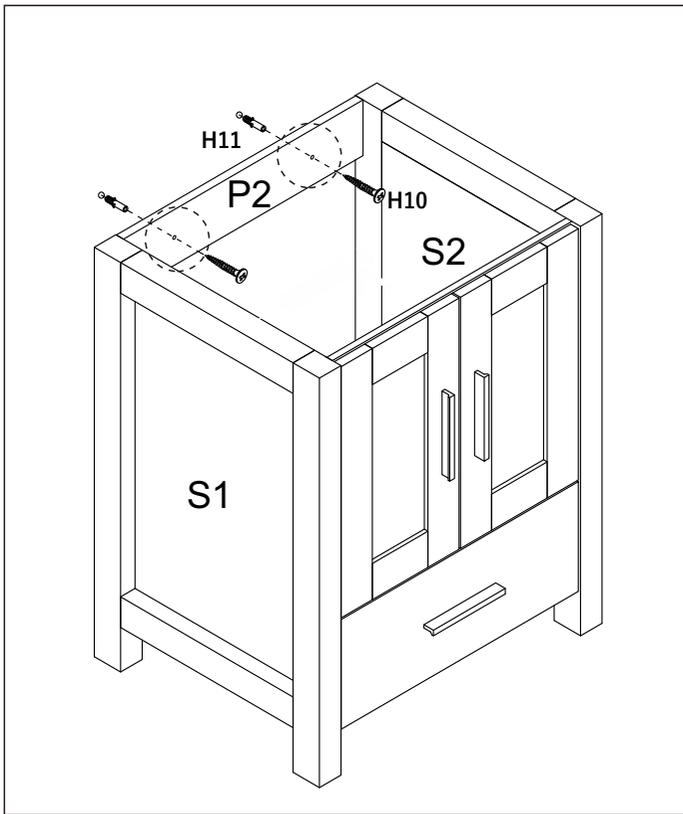


-  Tapeline
-  Pencil
-  Electric Drill
-  Electric Drill
-  Hammer
-  H10 x2
(φ4x 50mm)
-  H11 x2
(φ8x 40mm)

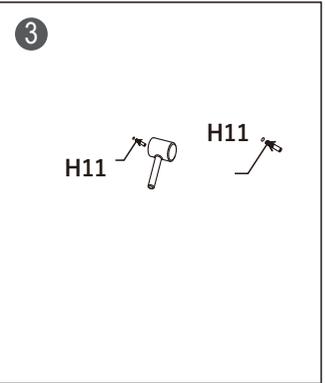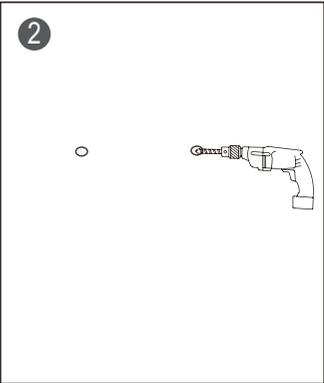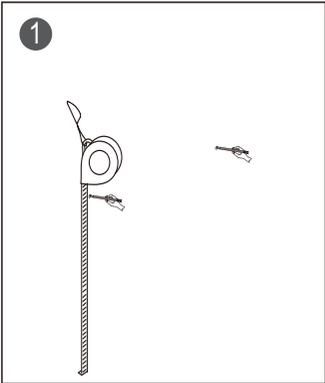

16

Top Installation

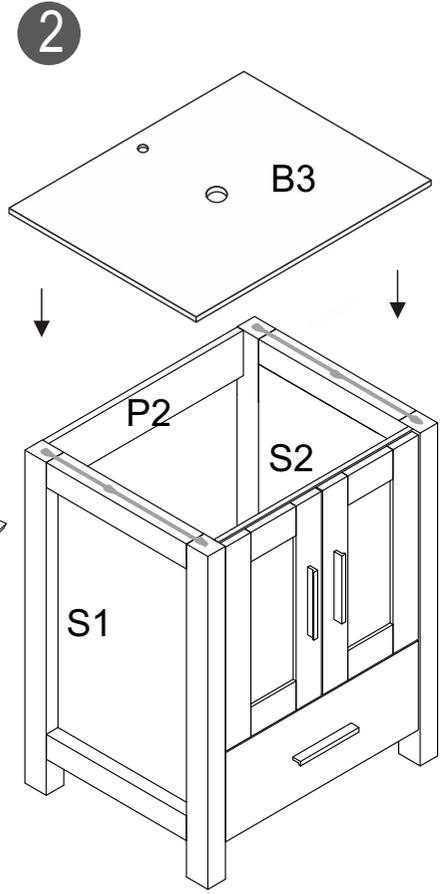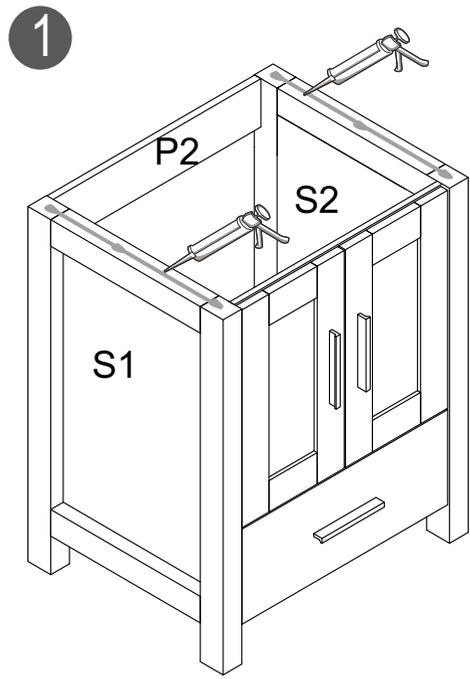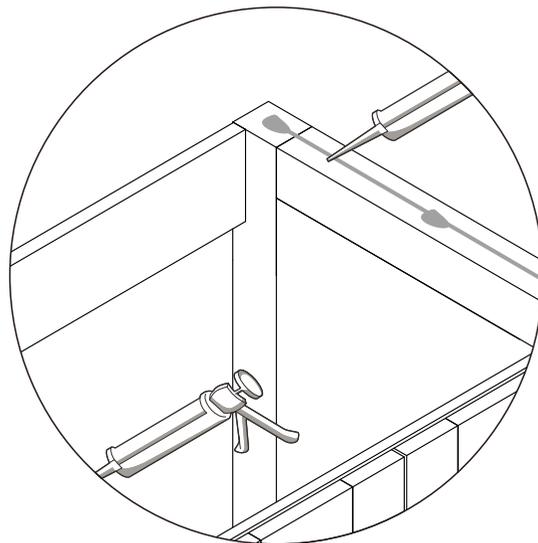

17



Mirror Installation

