


Hall Tree

Assembly Instructions - Please keep for future reference

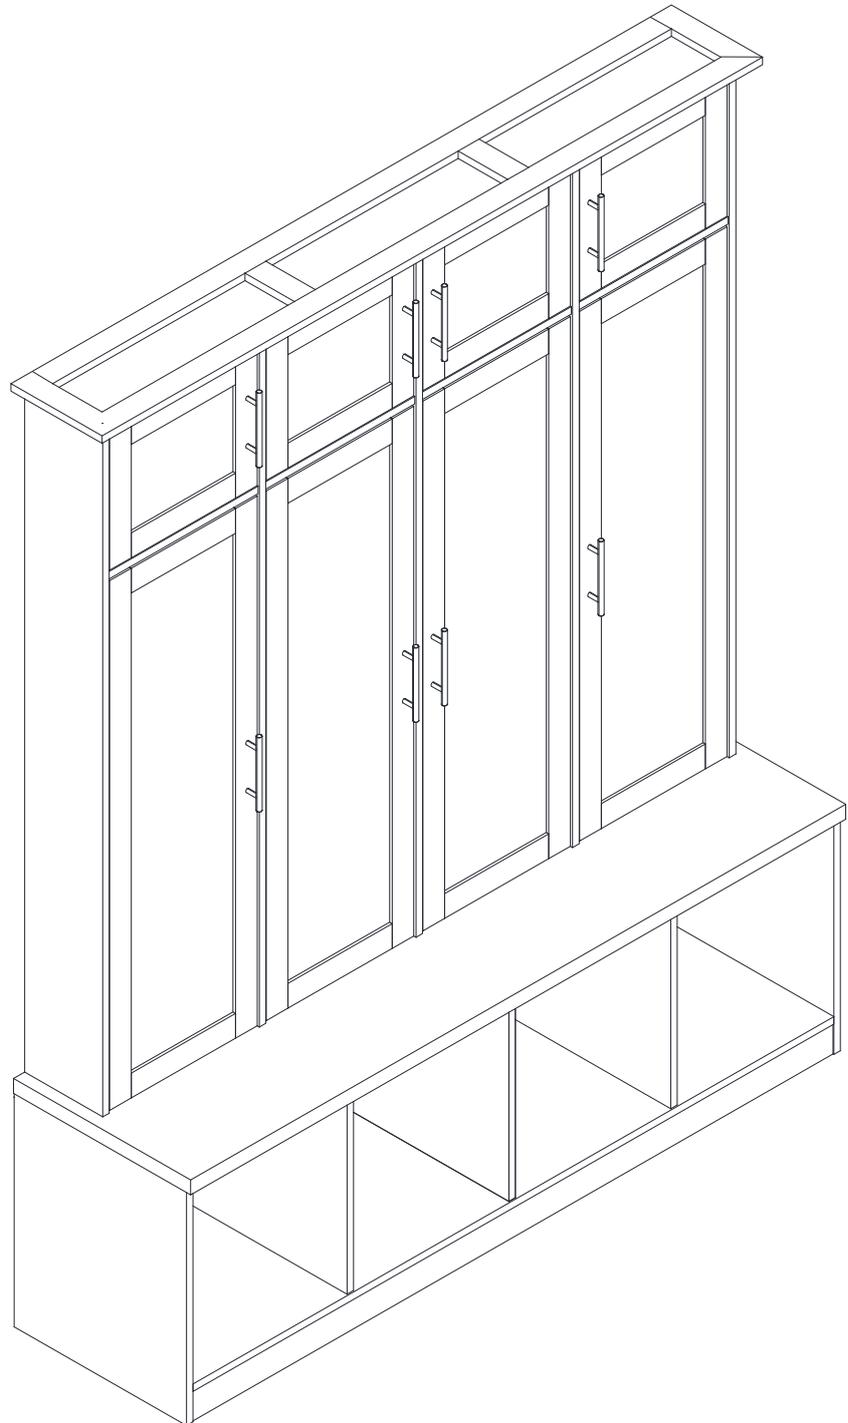

Dimensions

Width- 59.05inch

Depth-15.75inch

Height-74.80inch

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING
In order to help prevent overturning –
please follow these instructions




To help prevent product toppling over please follow the below steps:-

- Use the anti tip stap or wall fixing method provided (if applicable)
- Do not allow children to climb or hang on the furniture
- Do not open more than one drawer at a time
- Do not place heavy items in the top drawers
- Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Components - Fittings

Please check you have all the panels listed below



Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required

<p>(A)  3*12mm Screw x 108+2</p>	<p>(B)  Hook x 4</p>	<p>(C)  Cam Bolt x 66+2</p>	<p>(D)  6*30mm Dowel x 58+2</p>
<p>(E)  Cam lock x 66+2</p>	<p>(F)  6*50mm Dowel x 15+1</p>	<p>(G)  x 8</p>	<p>(H)  Triple fold hinge x 20</p>
<p>(I)  Handle x 8</p>	<p>(J)  4*20mm Screw x 16+1</p>	<p>(K)  4*35mm Screw x 8+1</p>	<p>(L)  x 2</p>
<p>(M)  4*12mm Screw x 2</p>	<p>(P)  Back Panel Buckle x 22</p>	<p>(Q)  3*16mm Screw x 46+2</p>	<p>(R)  Plastic expansion x 2</p>
<p>(S)  Allen key x 1</p>	<p>(N)  Perfect fit x 66</p>	<p>(O)  x 8</p>	

Tools required Not Included



Phillips screwdriver
(medium & large)

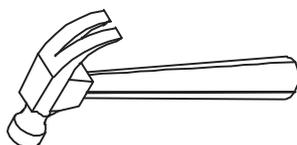


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

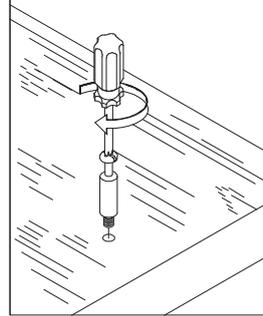

Step 2

Push the male camlock into the entry hole.

2

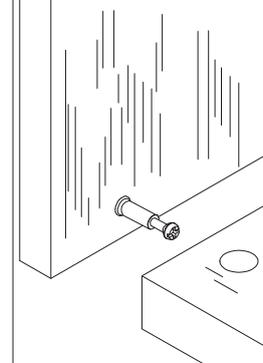


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

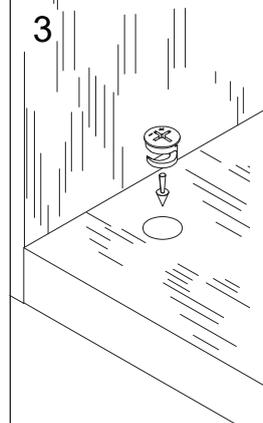


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4

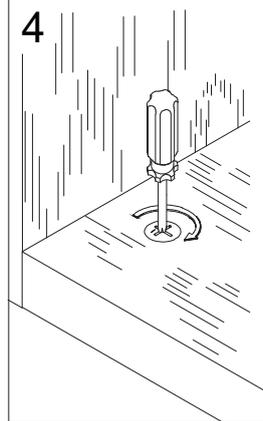








Assembly Instructions

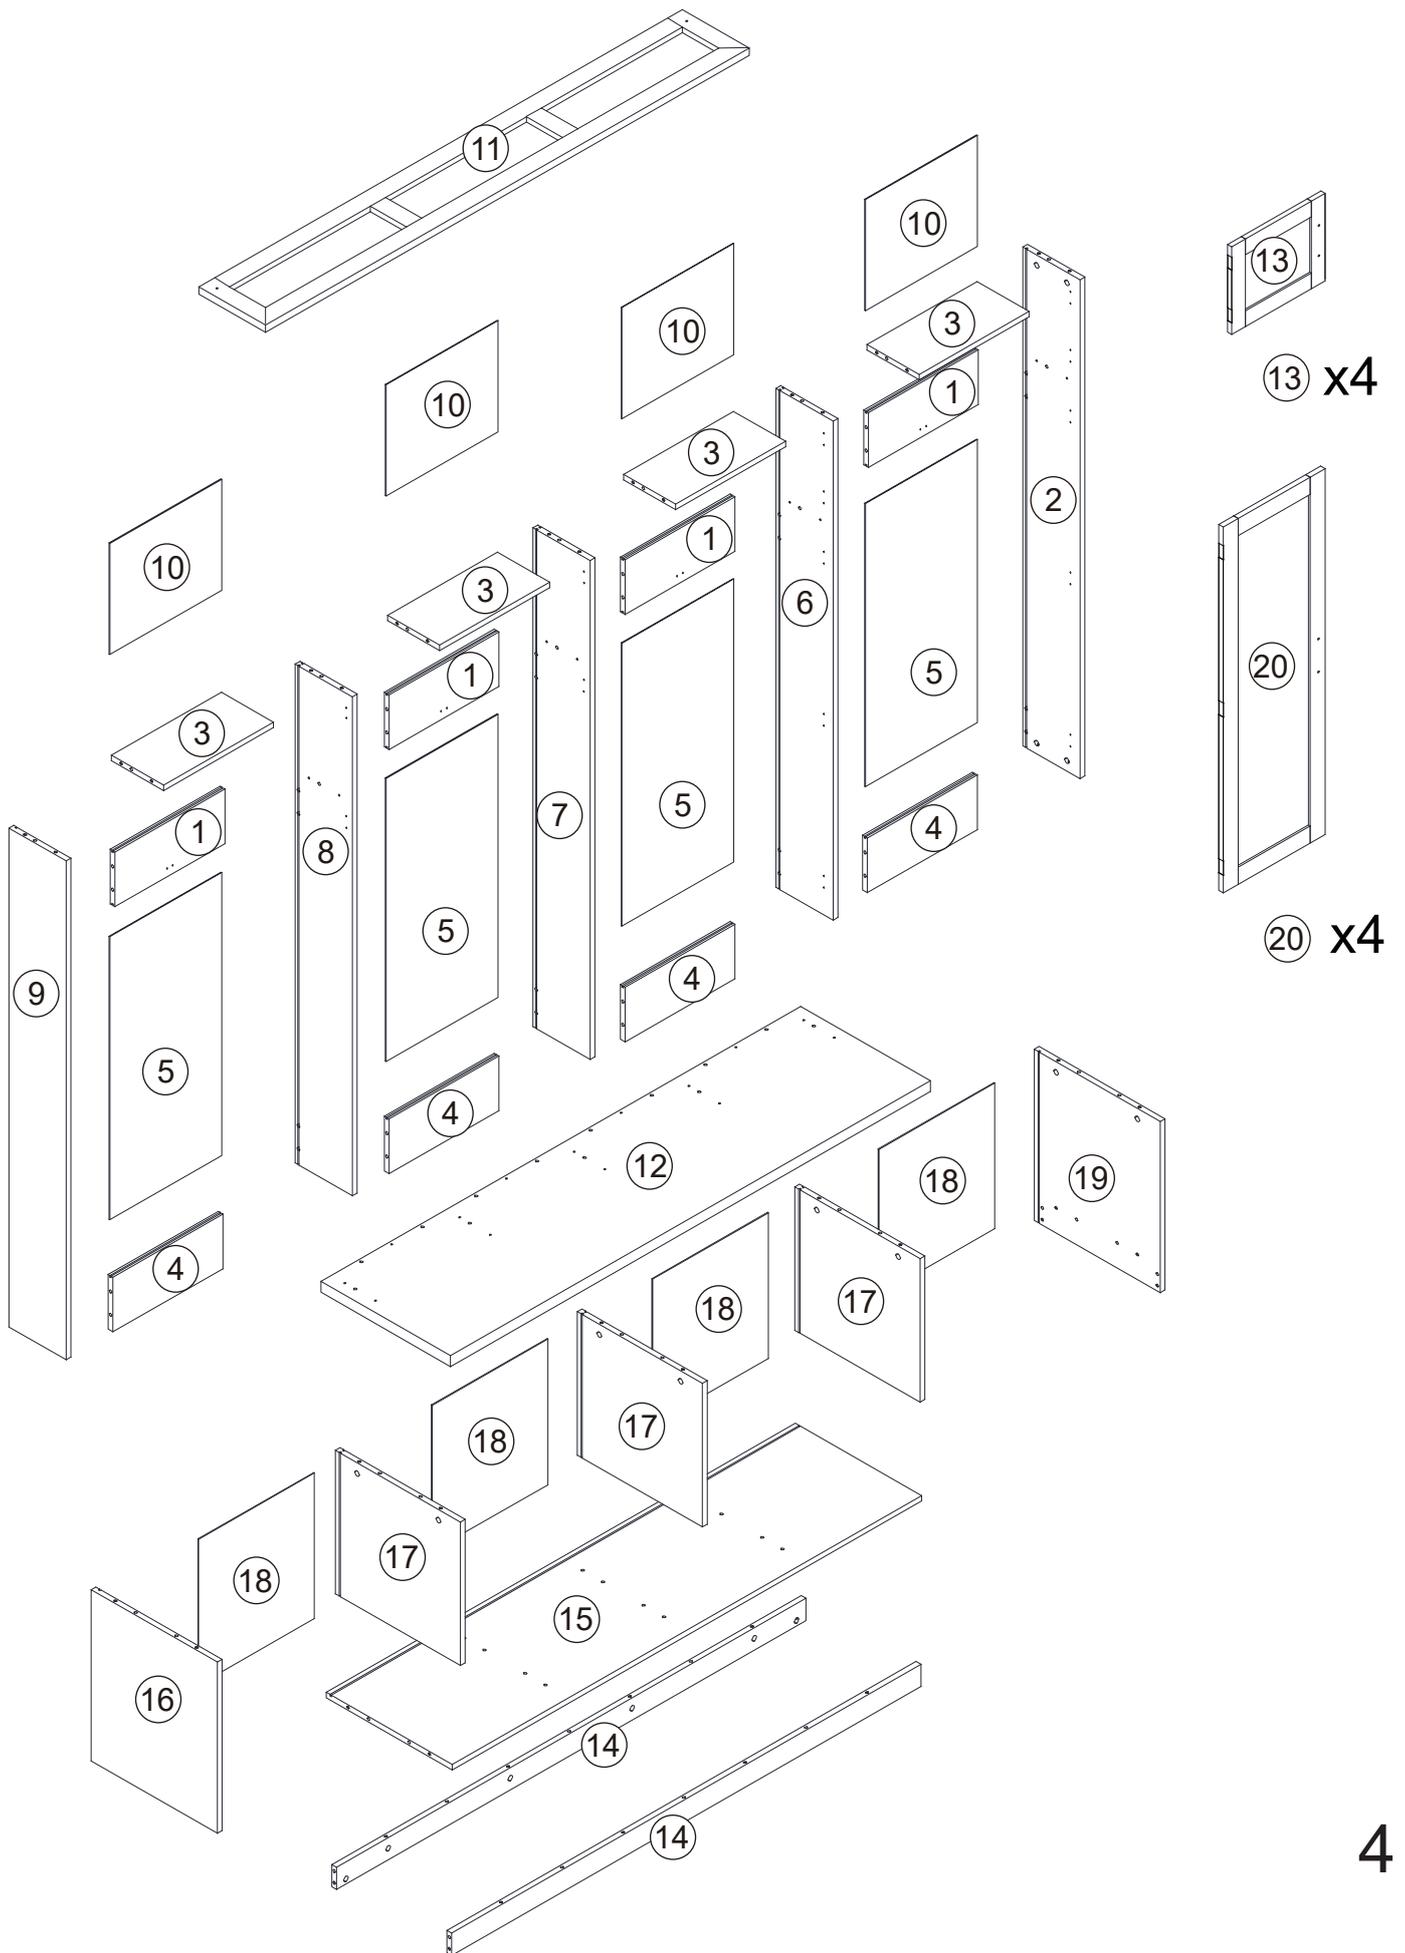


PART LIST

There are 1 boxes of this product.

N721P286082

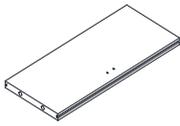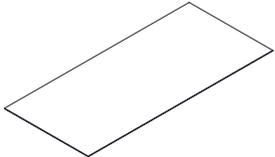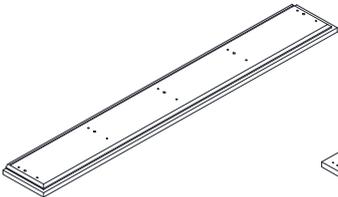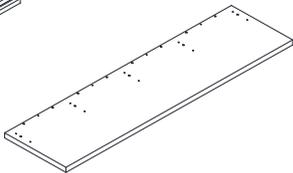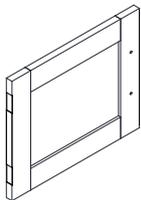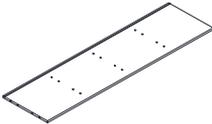
 <p>① x4</p>	 <p>② x1</p>	 <p>③ x4</p>	 <p>④ x4</p>	 <p>⑤ x4</p>
upper brace 346x150x12mm	upper right side panel 1370x180x15mm	upper shelf 346x164x15mm	lower brace 346x150x12mm	middle back panel 785x353x3mm
 <p>⑥ x1</p>	 <p>⑦ x1</p>	 <p>⑧ x1</p>	 <p>⑨ x1</p>	 <p>⑩ x4</p>
middle back panel 1370x180x15mm	middle partition 1370x180x15mm	middle partition 1370x180x15mm	upper left side panel 1370x180x15mm	upper back panel 297x353x3mm
 <p>⑪ x1</p>	 <p>⑫ x1</p>	 <p>⑬ x4</p>	 <p>⑭ x2</p>	 <p>⑮ x1</p>
top panel 1492x195x15mm	seat panel 1510x408x15mm	small door panel 268x339x15mm	toe tick 1468x60x12mm	bottom 1468x396x12mm

PART LIST

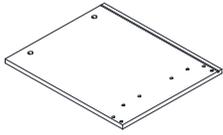


①⑥

x1

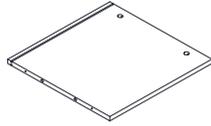


①⑦

x3




①⑧

x4



①⑨

x1



②⑩

x4

lower left side panel
470x397x15mm

lower partition
394x394x15mm

lower back panel
401x362x3mm


lower right side panel
470x397x15mm

long door panel
1073x339x15mm

Assembly Instructions

Step 1

x4

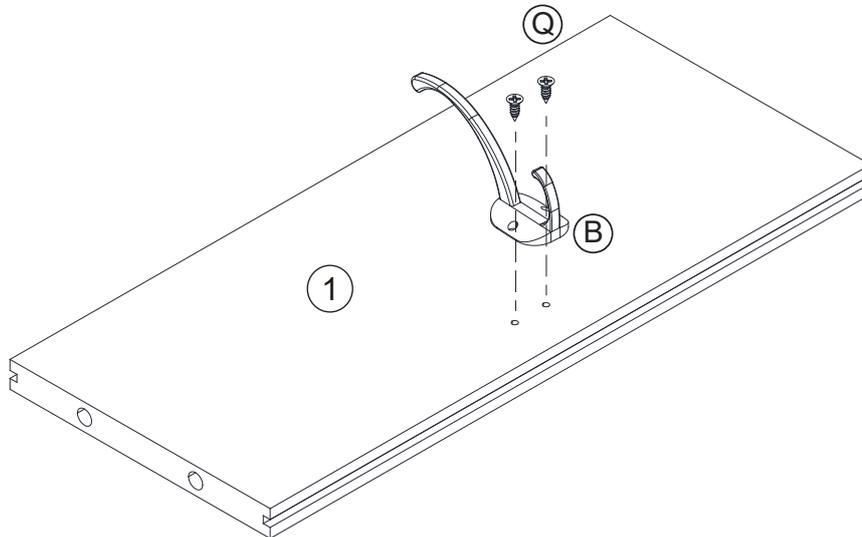

Q




3*16mm Screw x 8

B



Hook x 4

Step 2

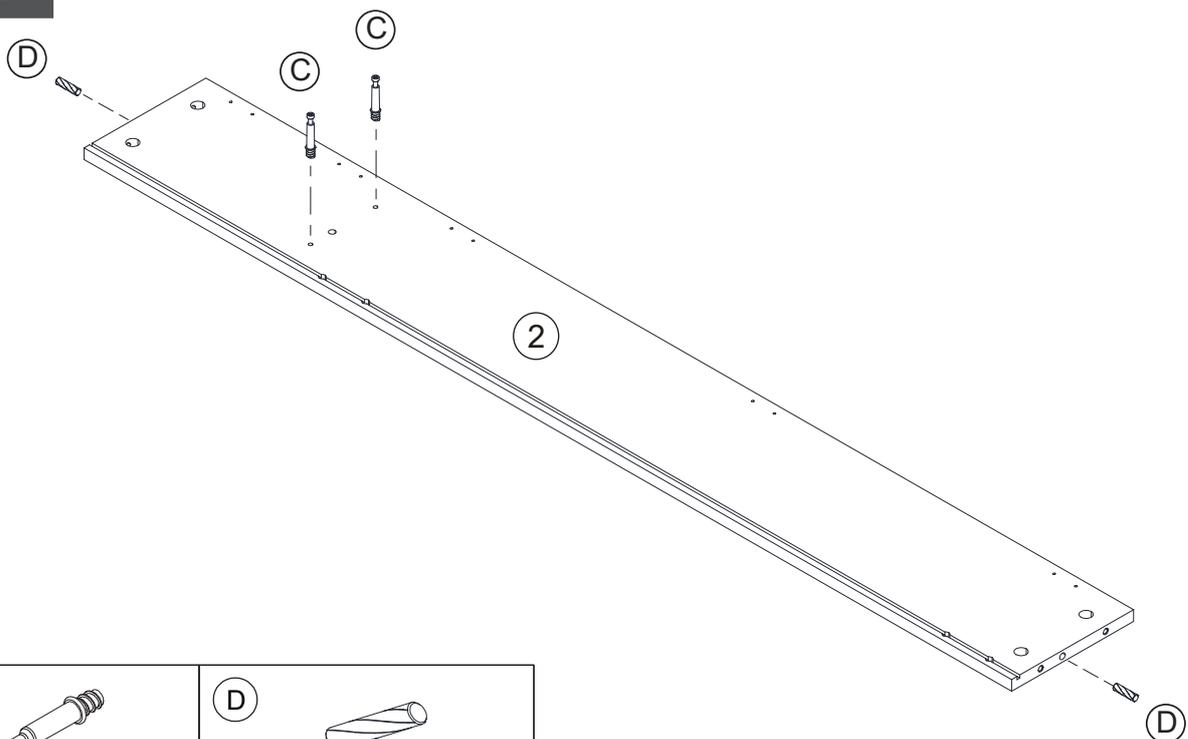

C



Cam Bolt x 2





D



6*30mm Dowel x 2





Assembly Instructions

Step 3

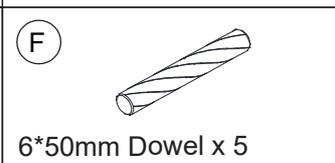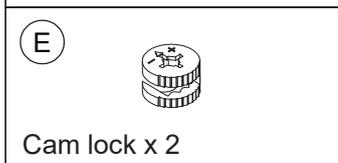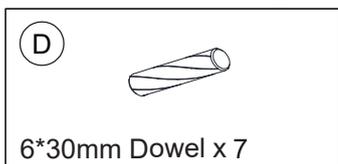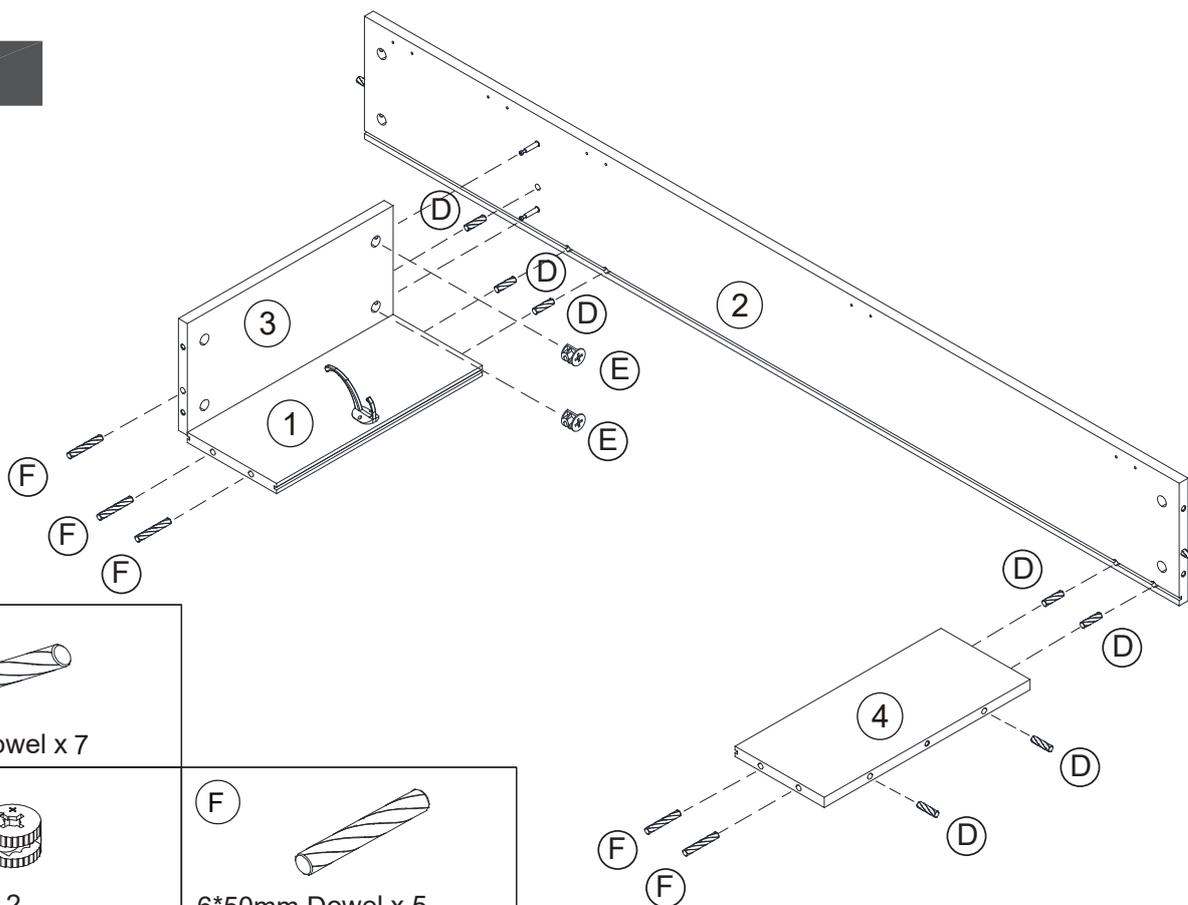


Step 4

Part 6
requires mounting screws
on both sides

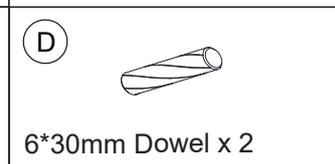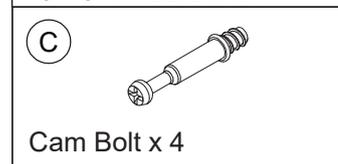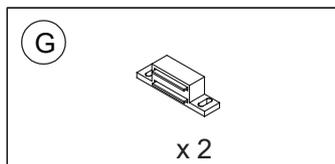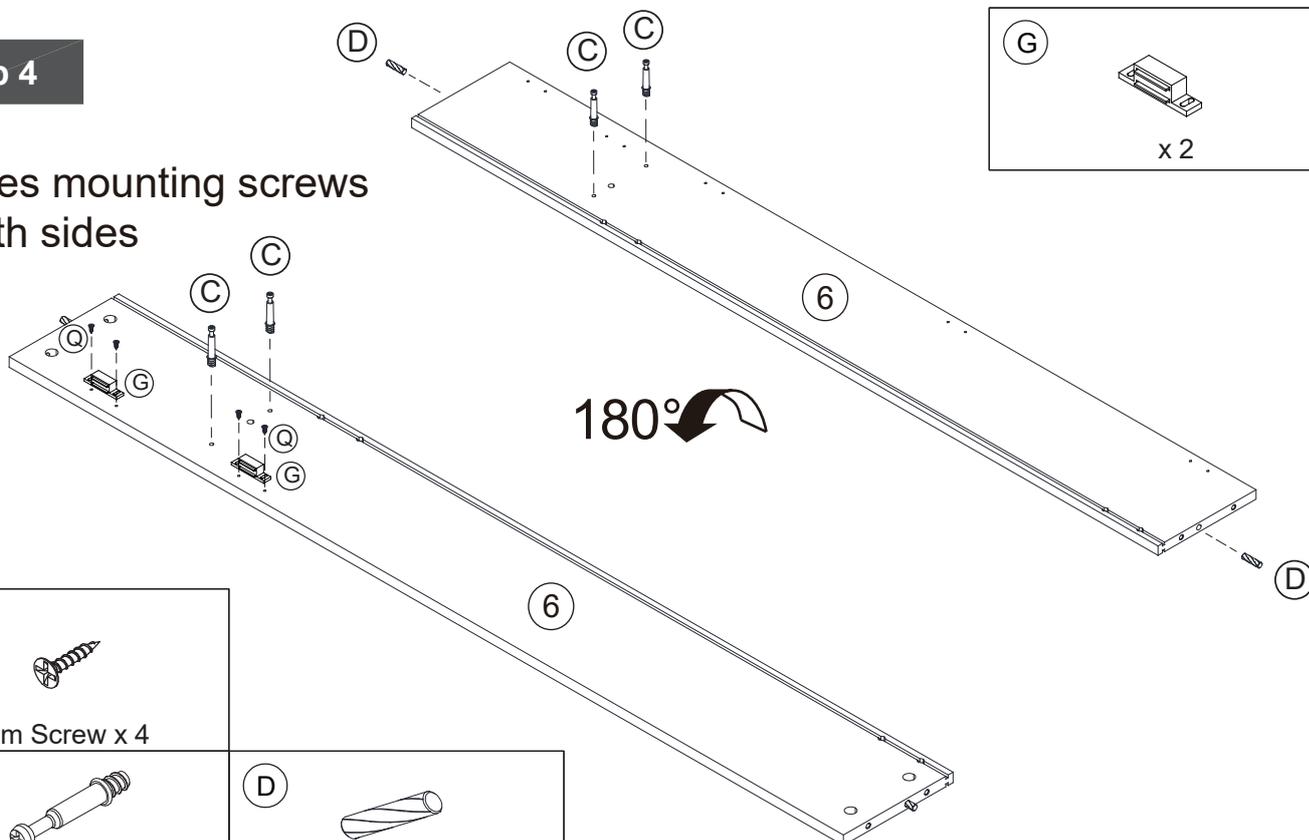

Assembly Instructions

Step 5

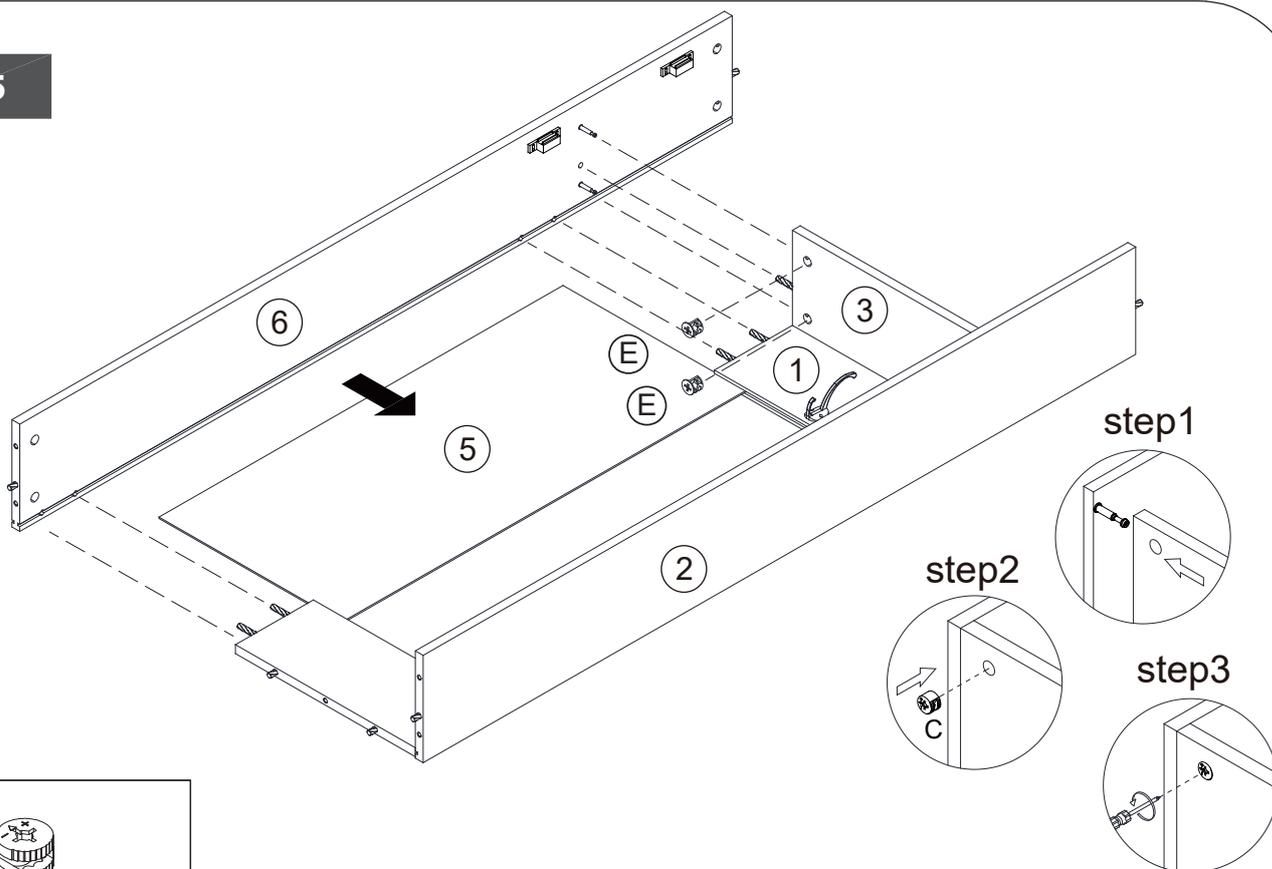


(E)



Cam lock x 2

Step 6

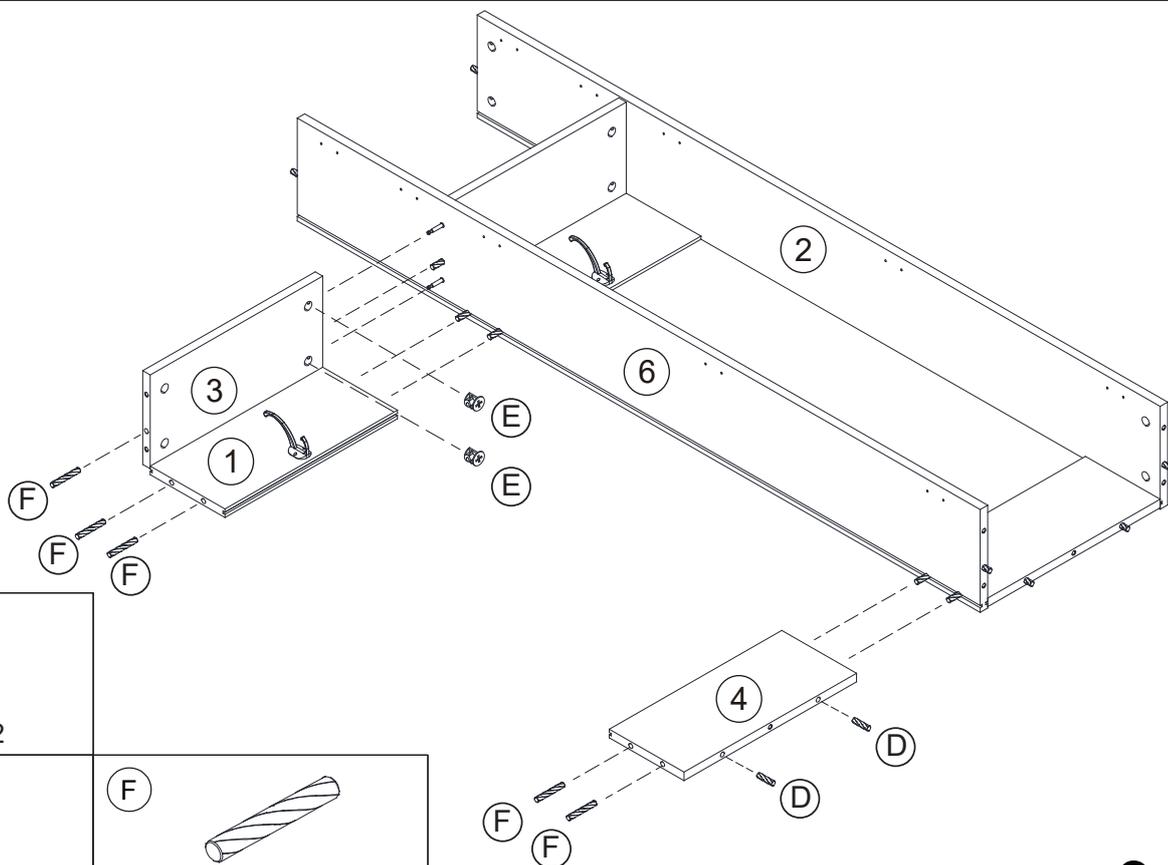

(D)




6*30mm Dowel x 2

(E)



Cam lock x 2


(F)



6*50mm Dowel x 5

Assembly Instructions


Step 7

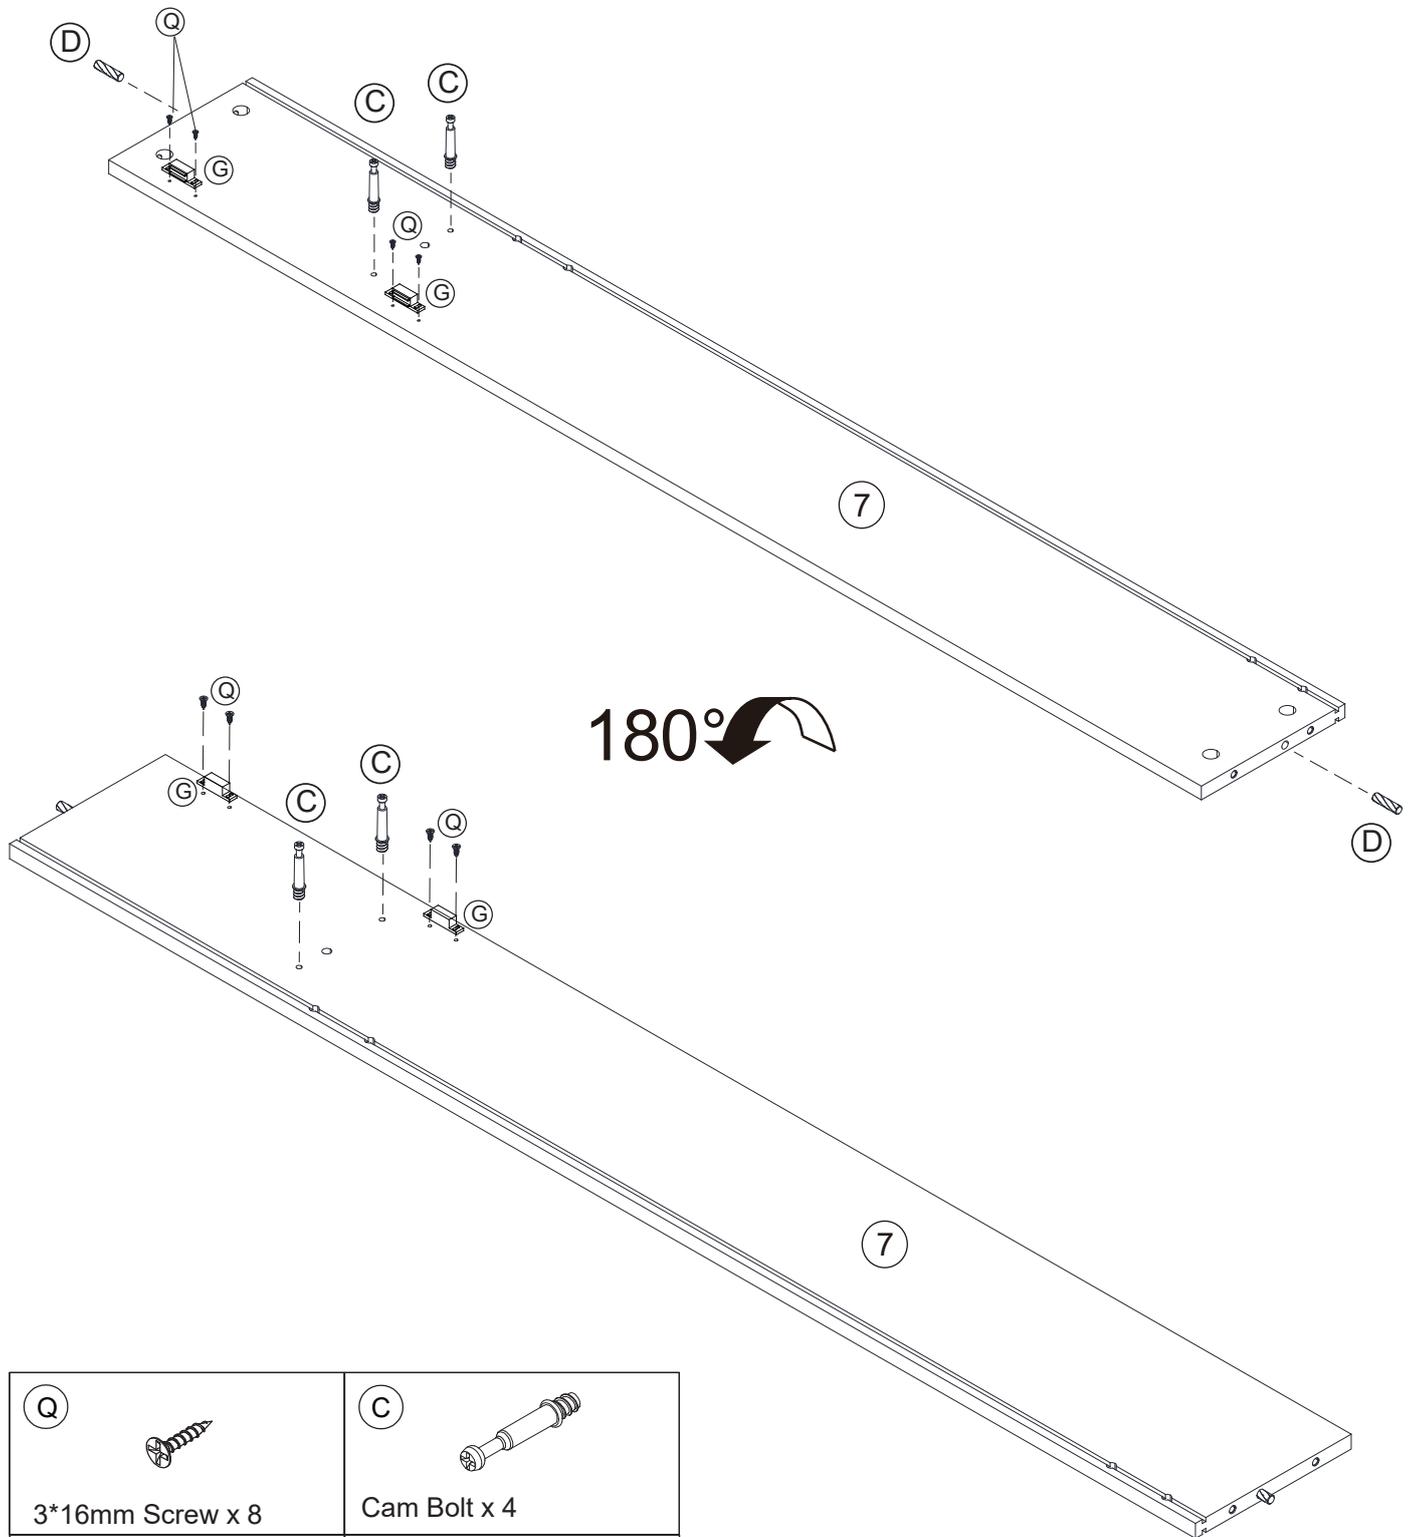

 3*16mm Screw x 8	 Cam Bolt x 4
 6*30mm Dowel x 2	 x 4

Assembly Instructions

Step 8

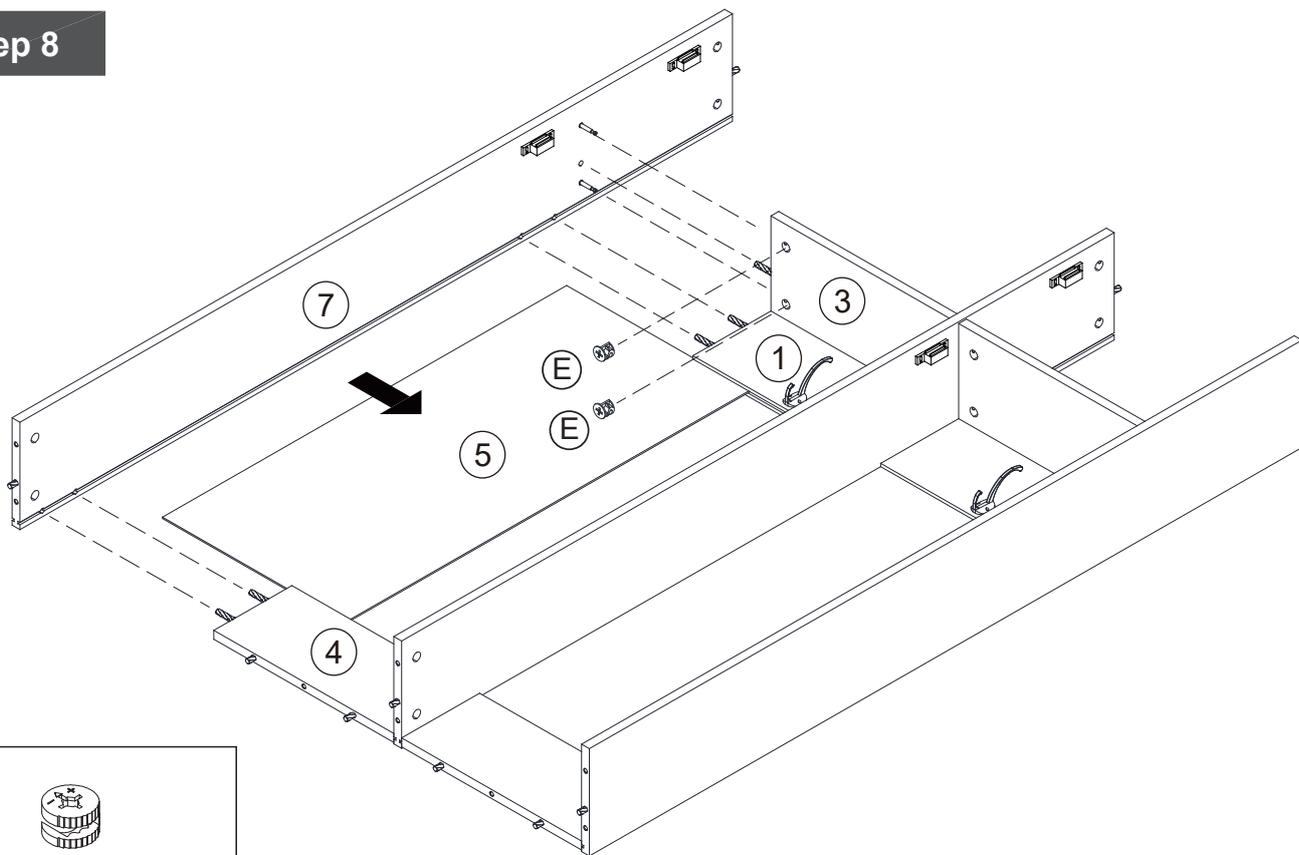


(E)




Cam lock x 2

Step 9



step1

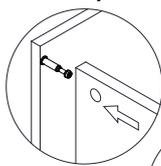

step3

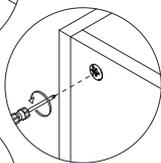

step2

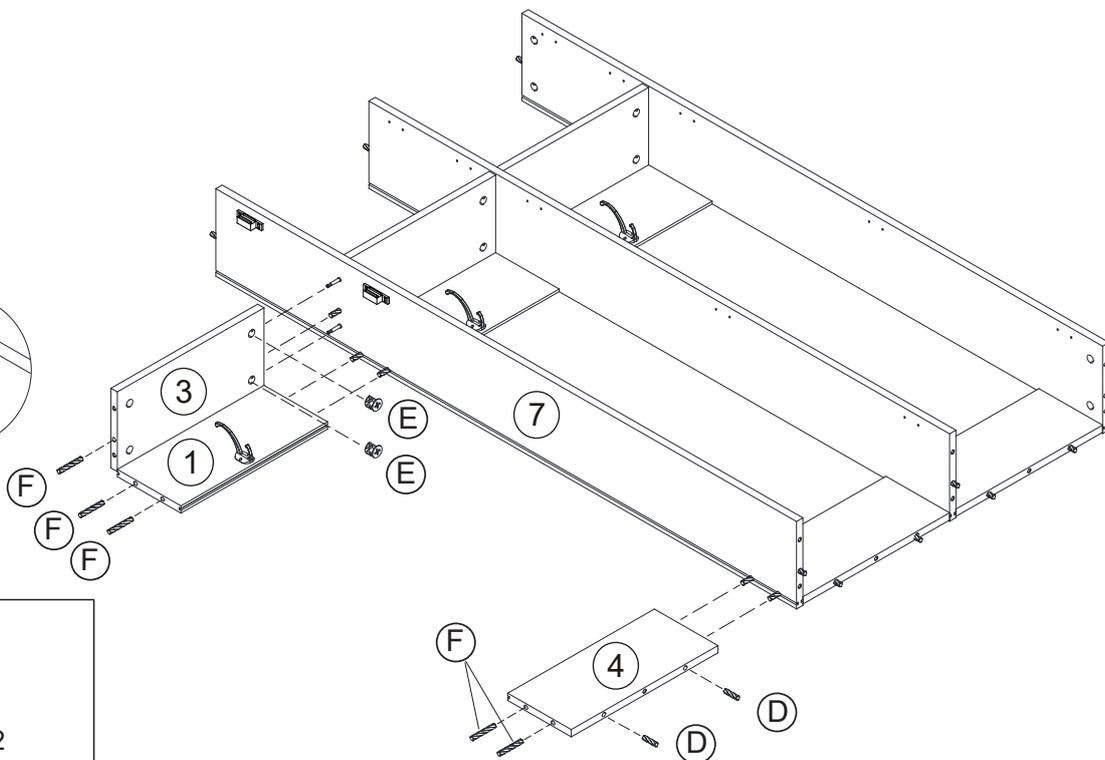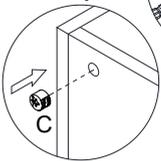

(D)




6*30mm Dowel x 2

(E)



Cam lock x 2


(F)




6*50mm Dowel x 5


Assembly Instructions

Step 10

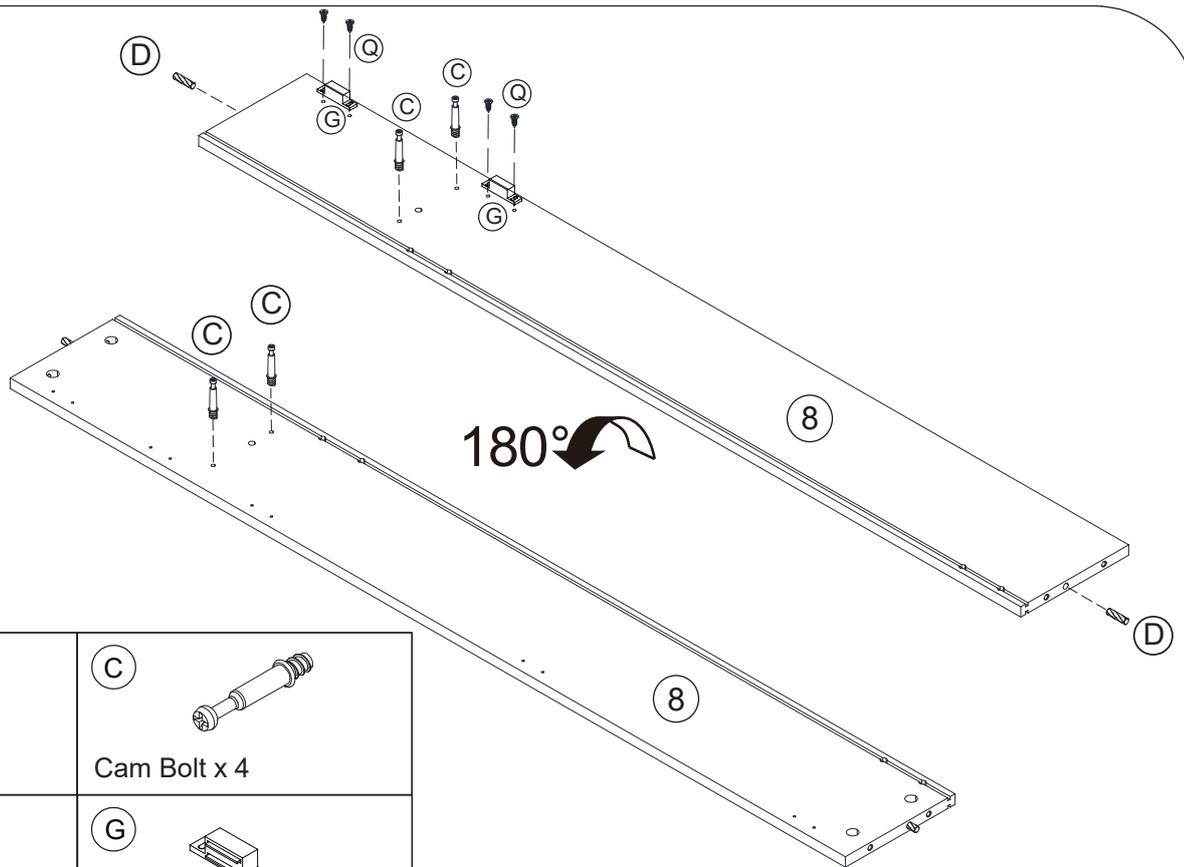

<p>(Q) </p> <p>3*16mm Screw x 4</p>	<p>(C) </p> <p>Cam Bolt x 4</p>
<p>(D) </p> <p>6*30mm Dowel x 2</p>	<p>(G) </p> <p>x 2</p>


Step 11

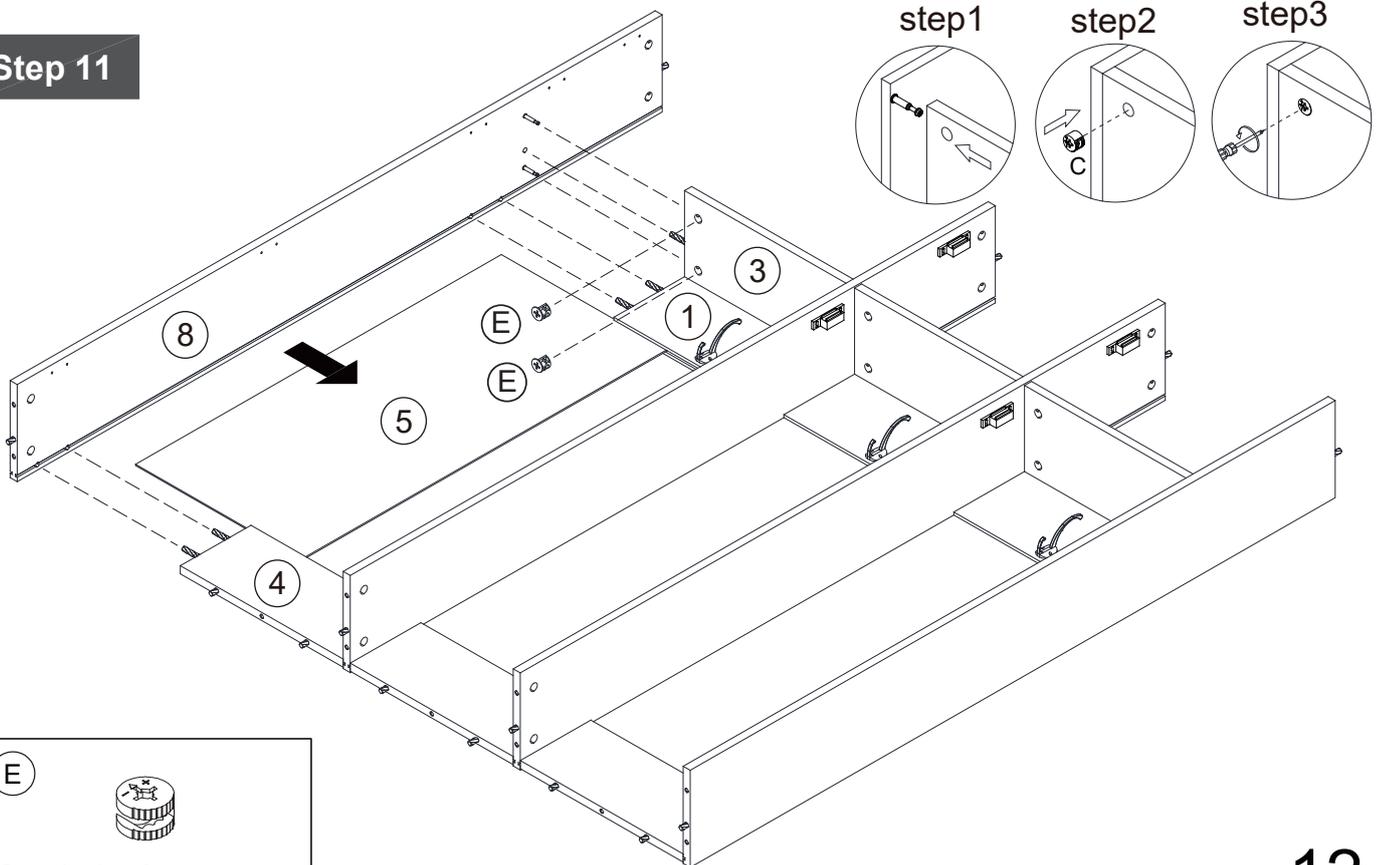

<p>(E) </p> <p>Cam lock x 2</p>
--

Assembly Instructions

Step 12

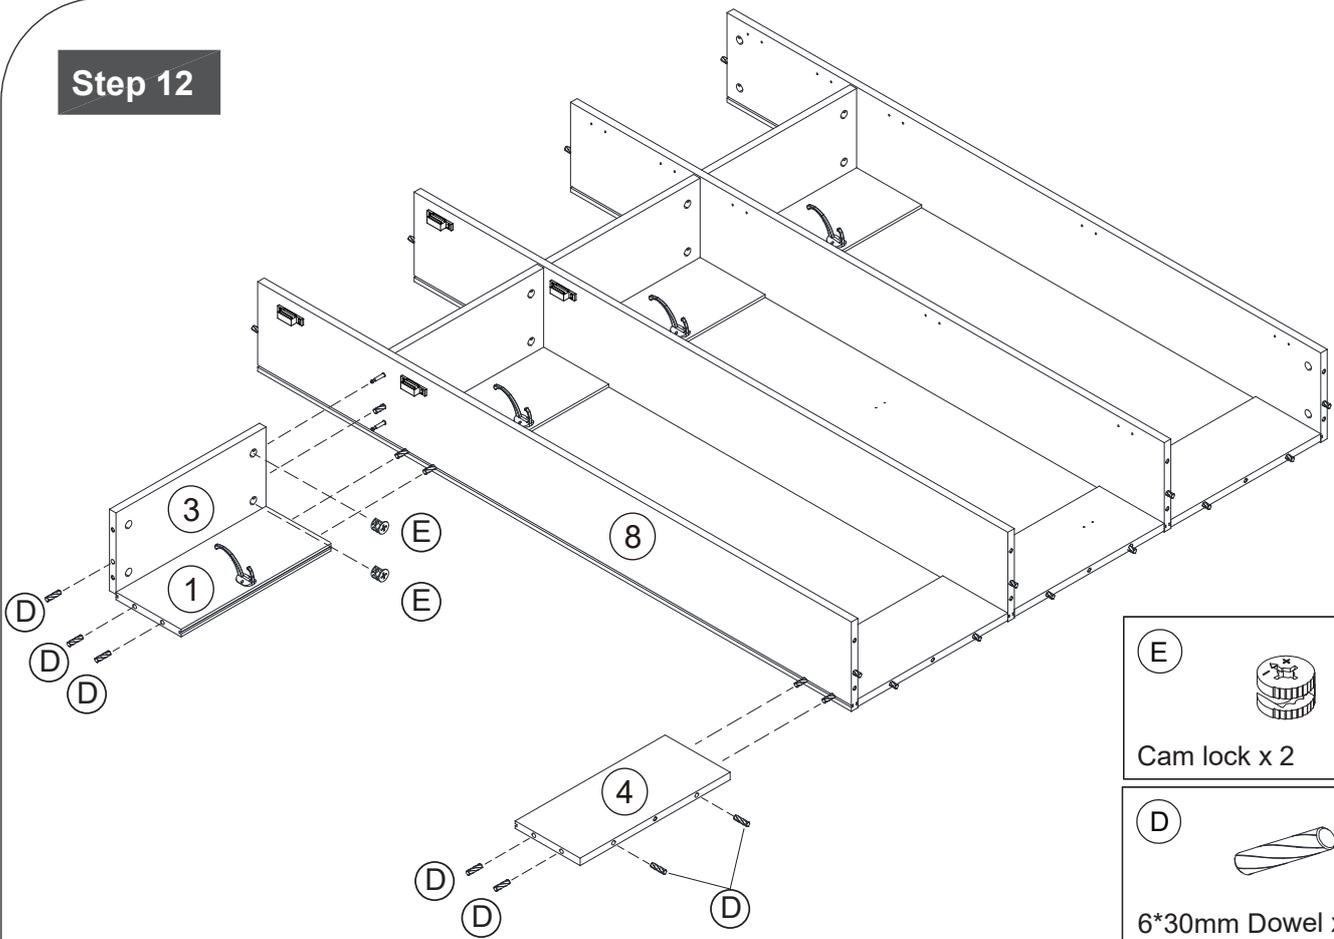


Cam lock x 2



6*30mm Dowel x 7

Step 13

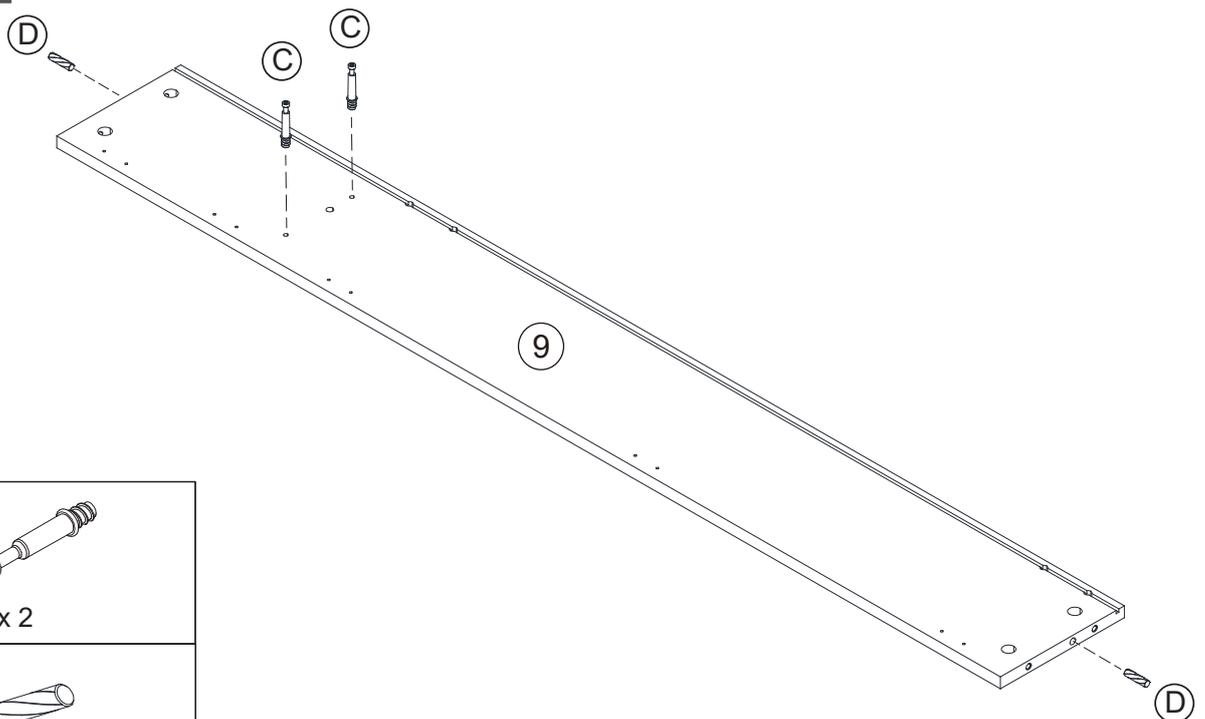

Cam Bolt x 2



6*30mm Dowel x 2



Assembly Instructions

Step 14

step1

step2

step3

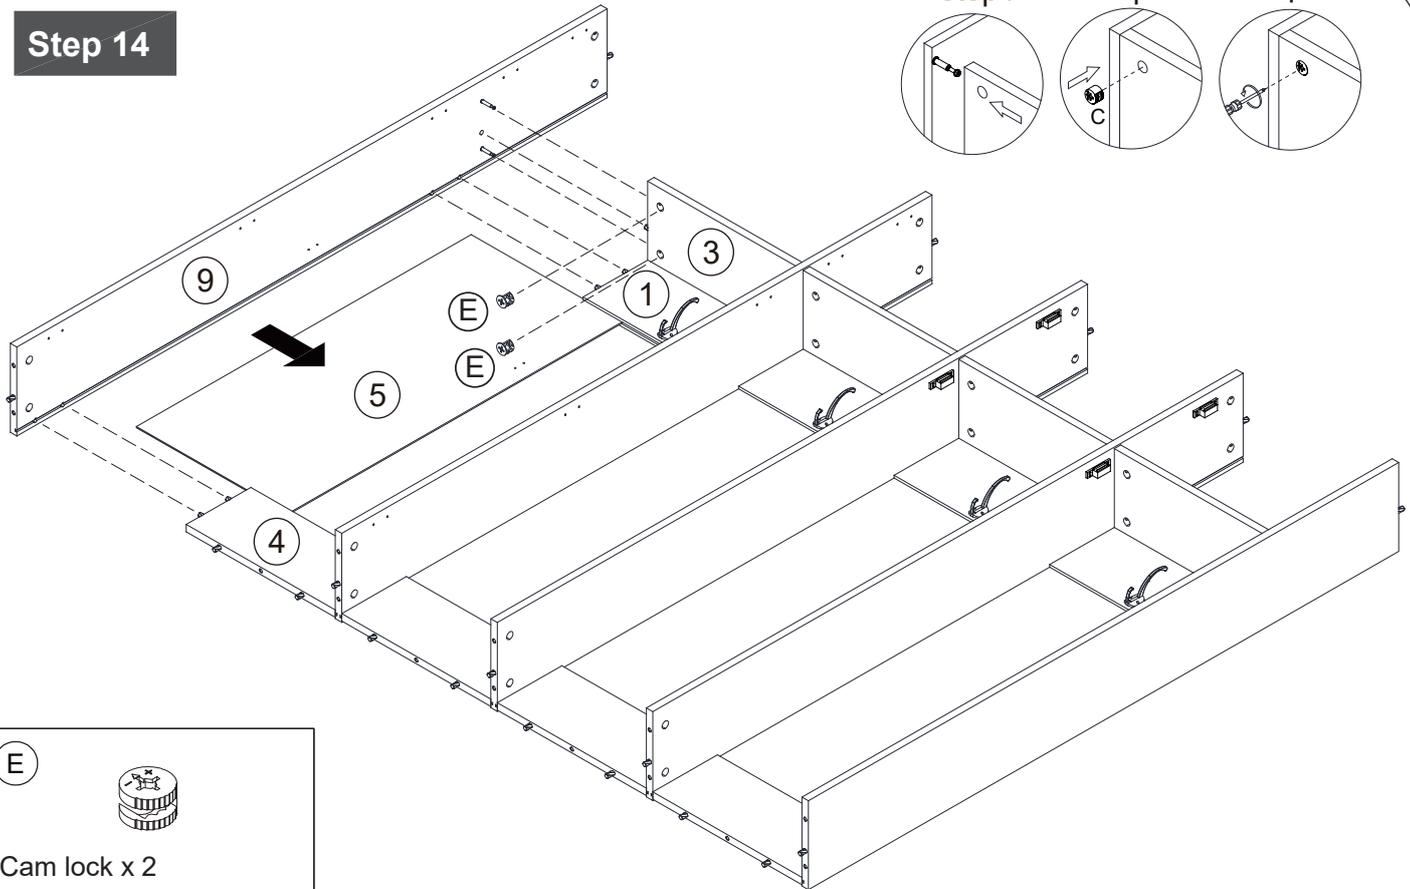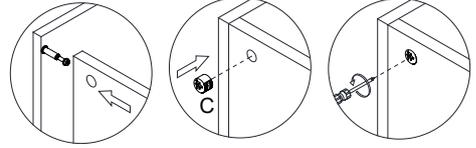


E




Cam lock x 2

Step 15

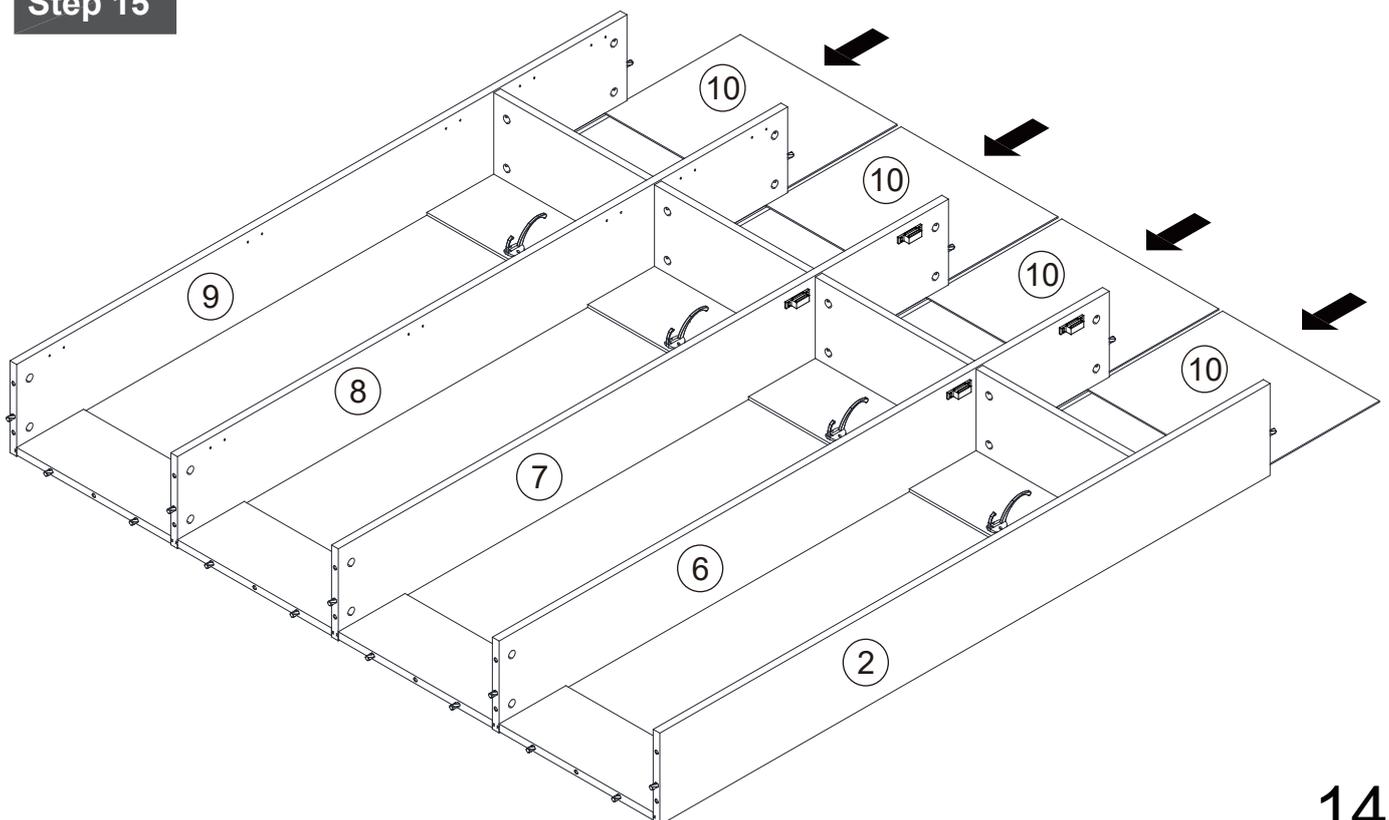

Assembly Instructions

Step 18

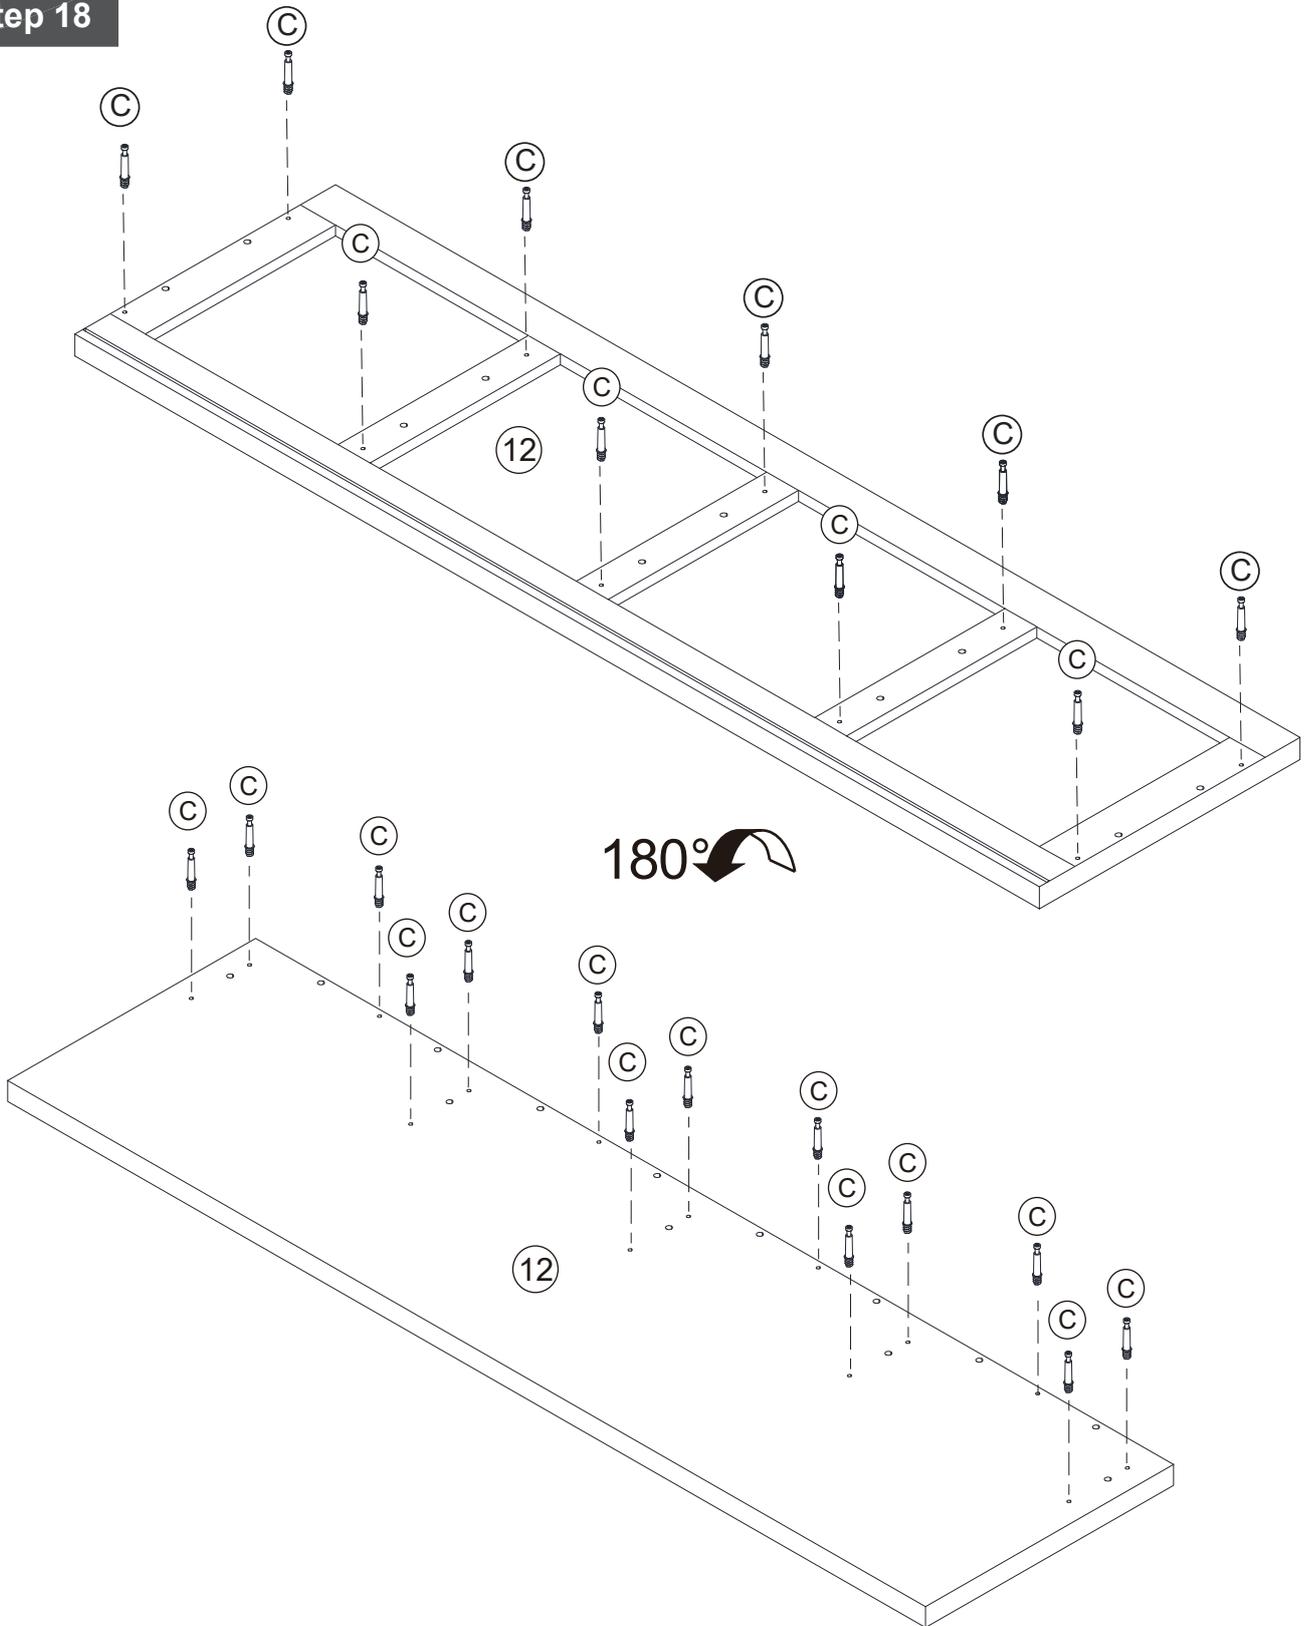



C



Cam Bolt x 24



Assembly Instructions

Step 19

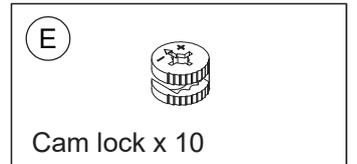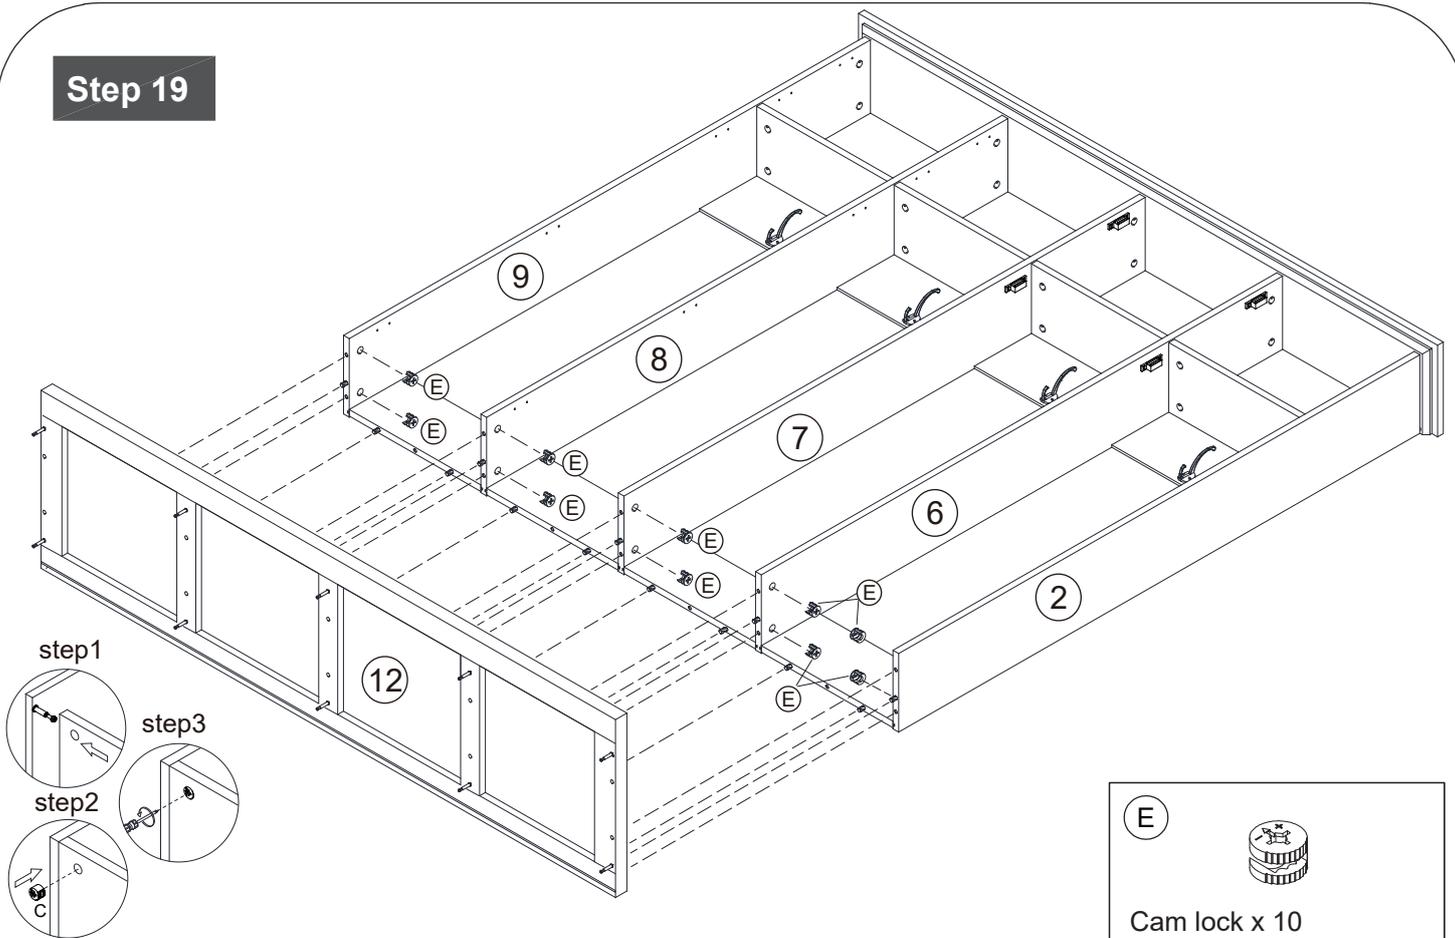


Step 20

x2

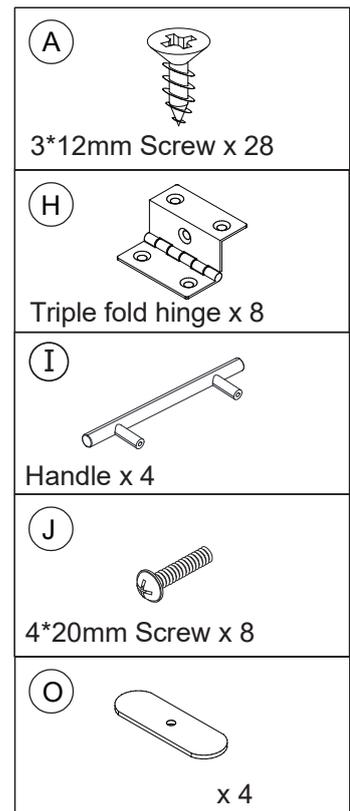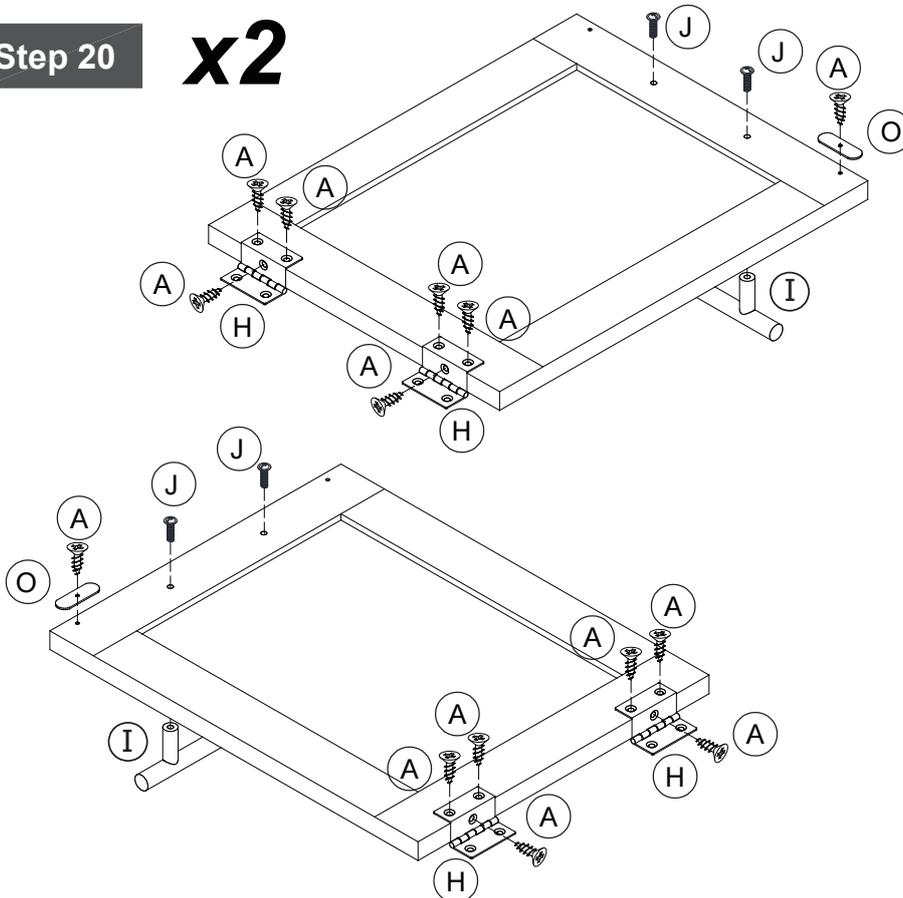


Assembly Instructions

Step 21

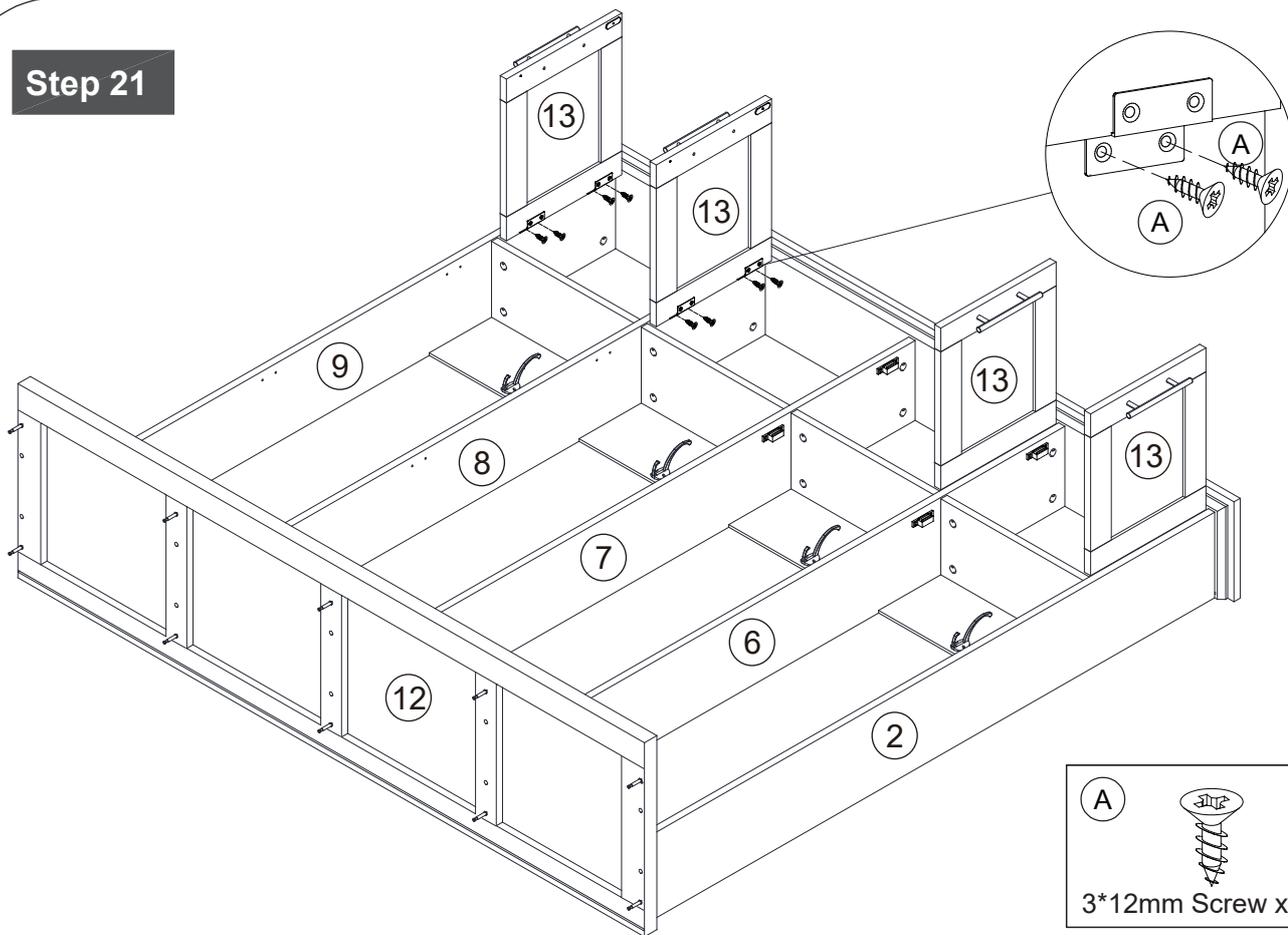



Step 22

x2

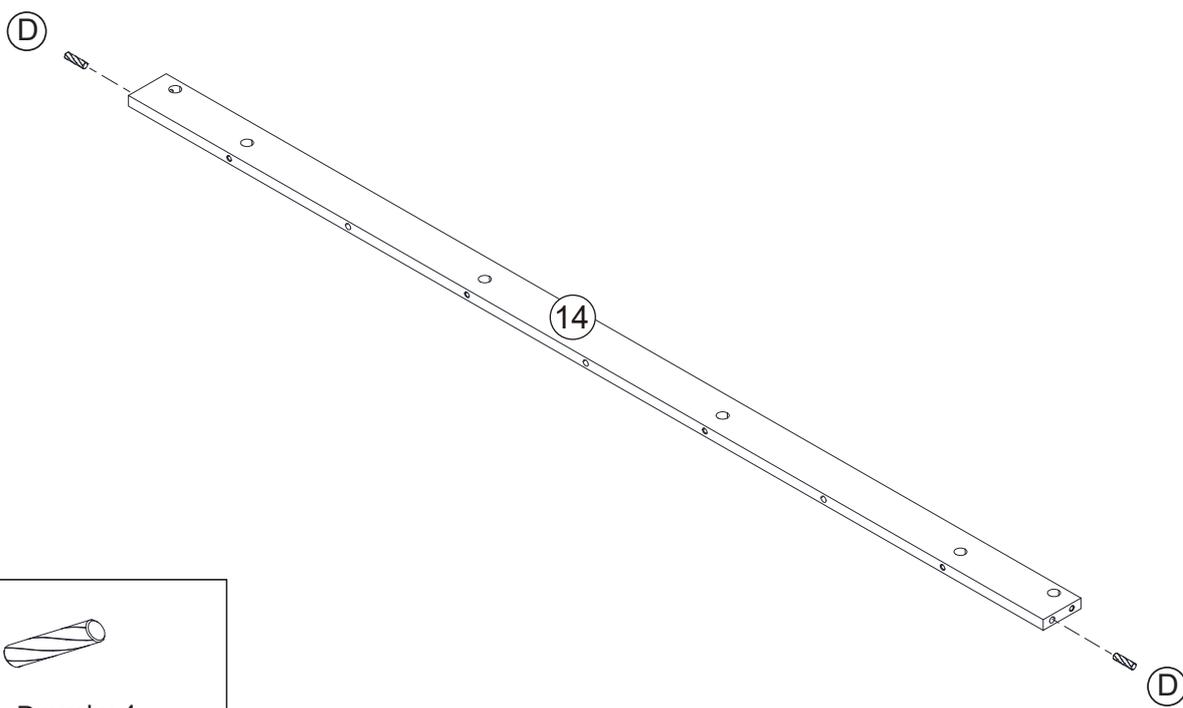

Assembly Instructions

Step 23

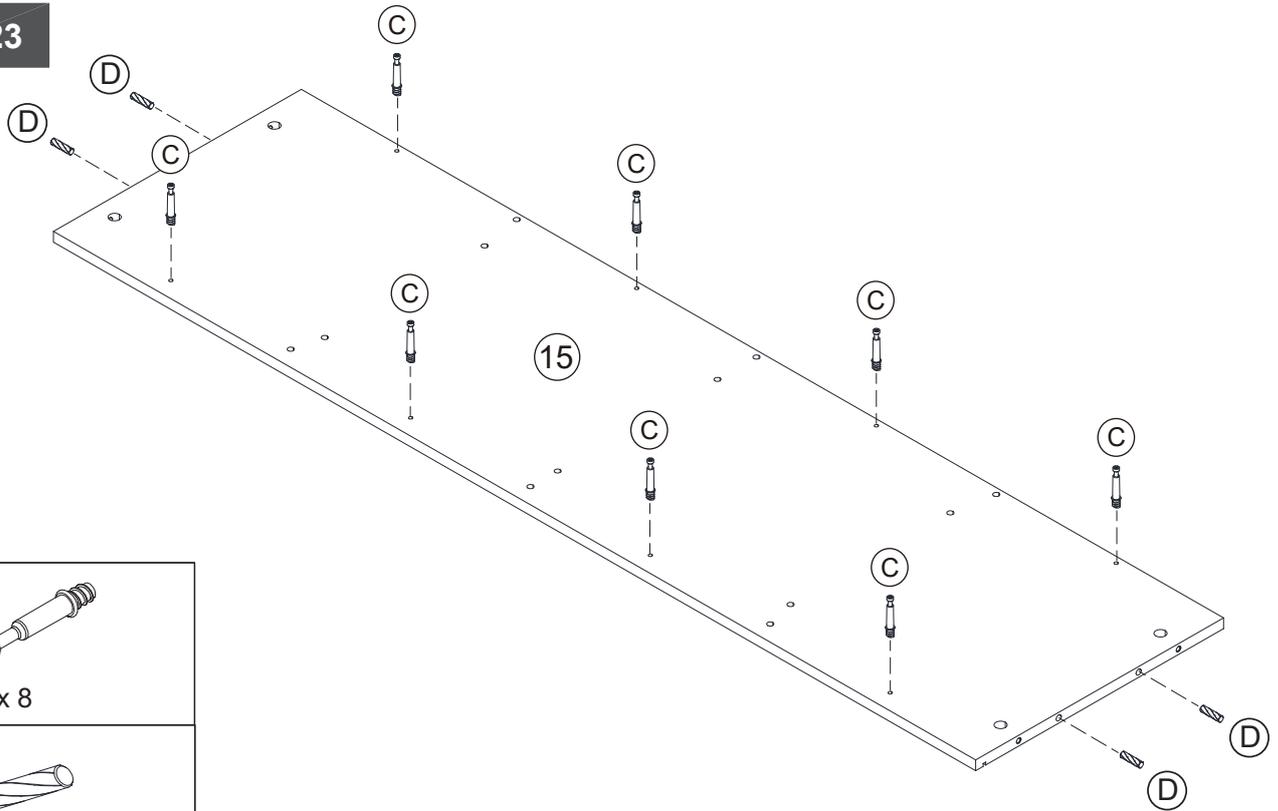


Cam Bolt x 8



6*30mm Dowel x 4

Step 24

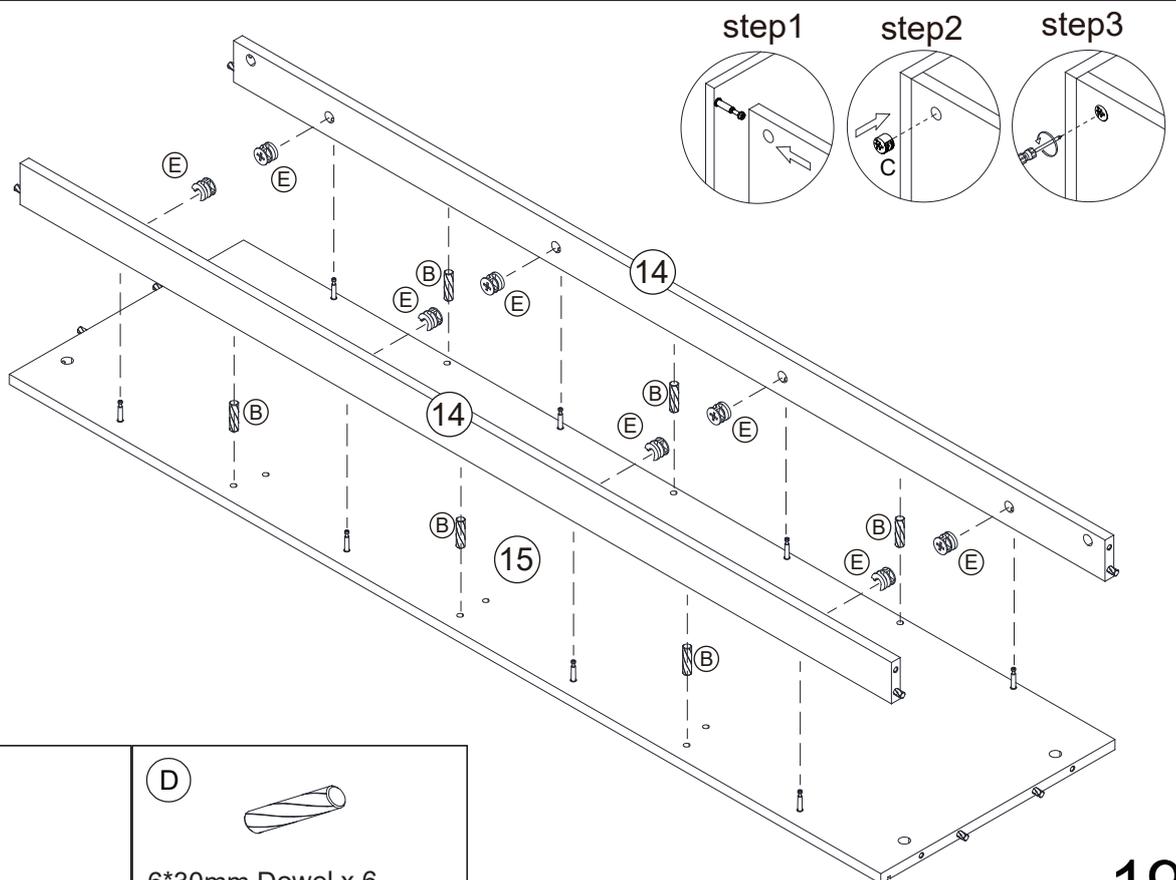

step1

step2

step3





Cam lock x 8





6*30mm Dowel x 6

Assembly Instructions

Step 25

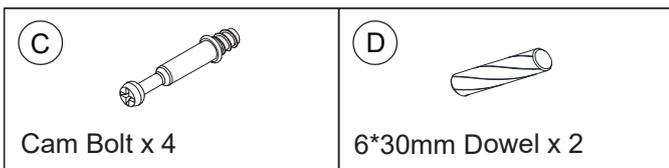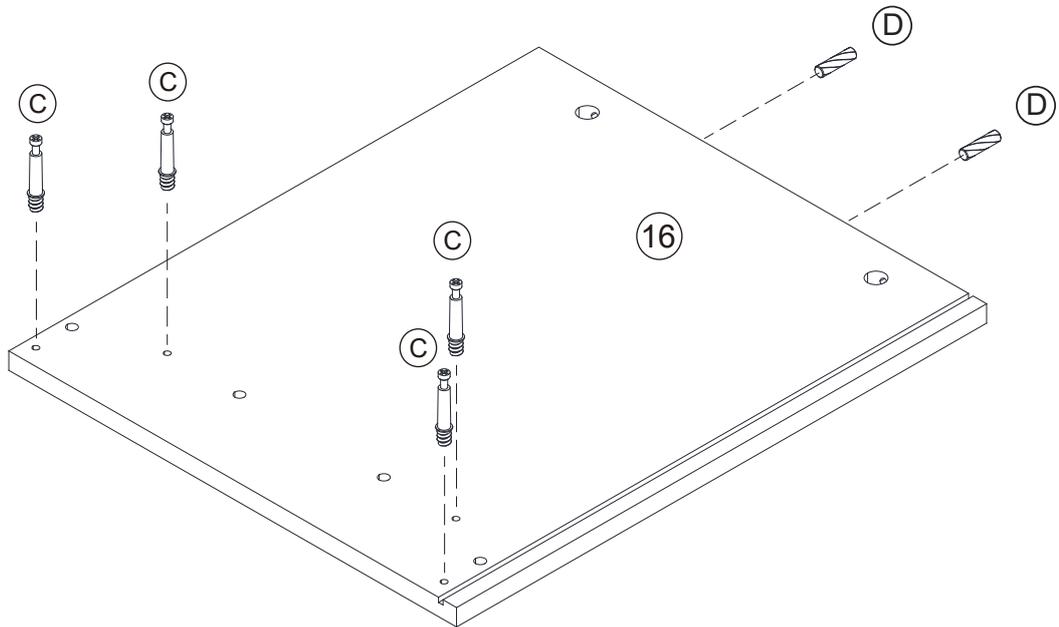


Step 26

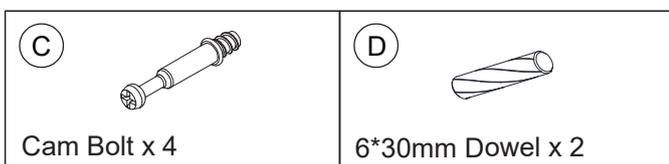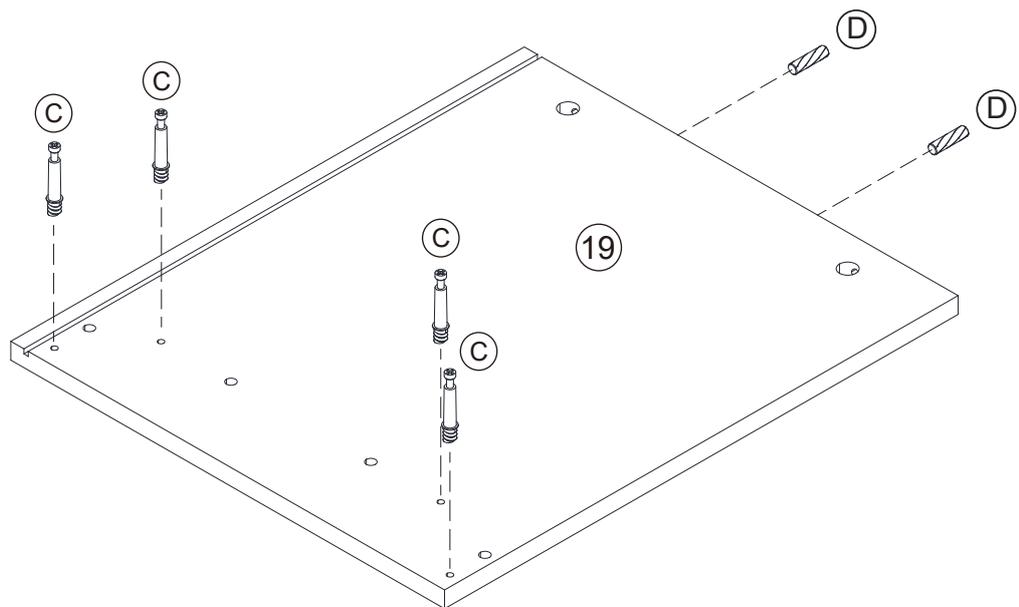



Assembly Instructions

Step 27

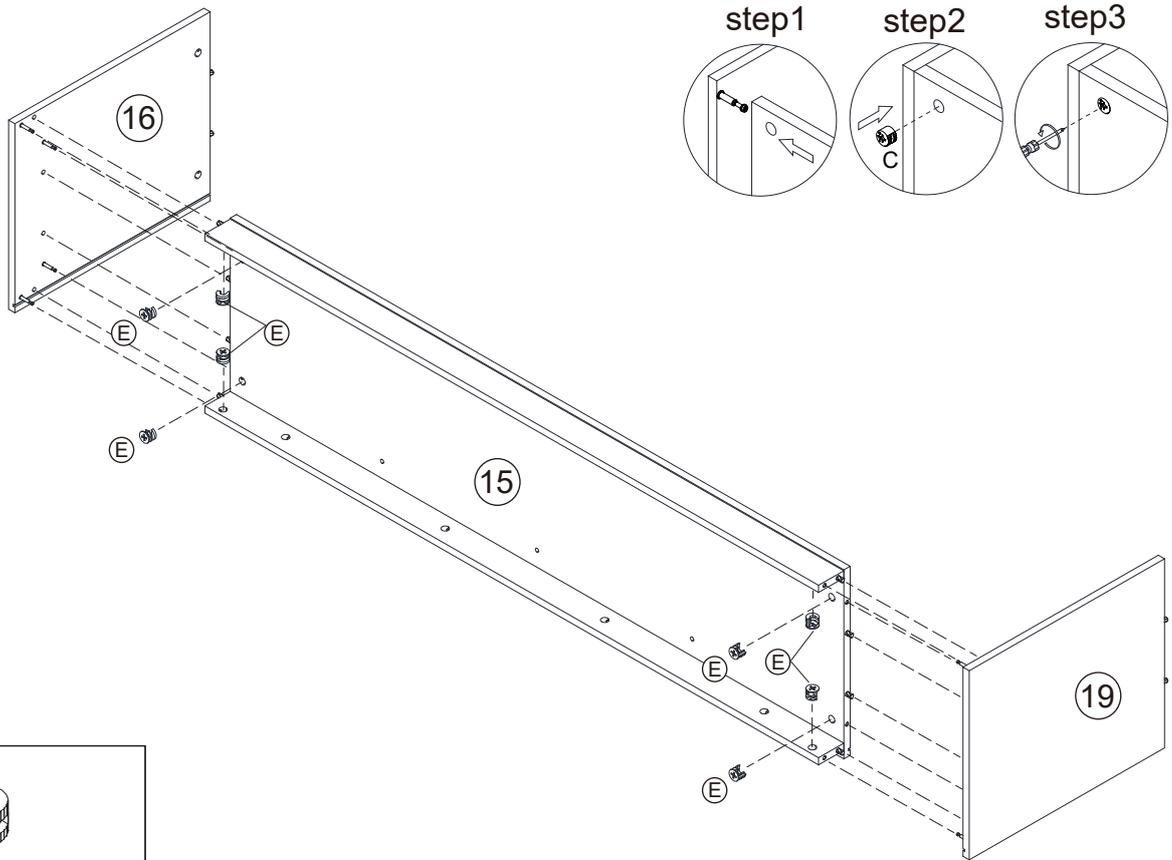


Step 28

x3

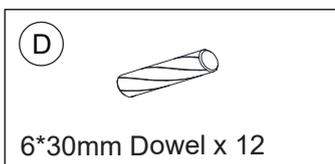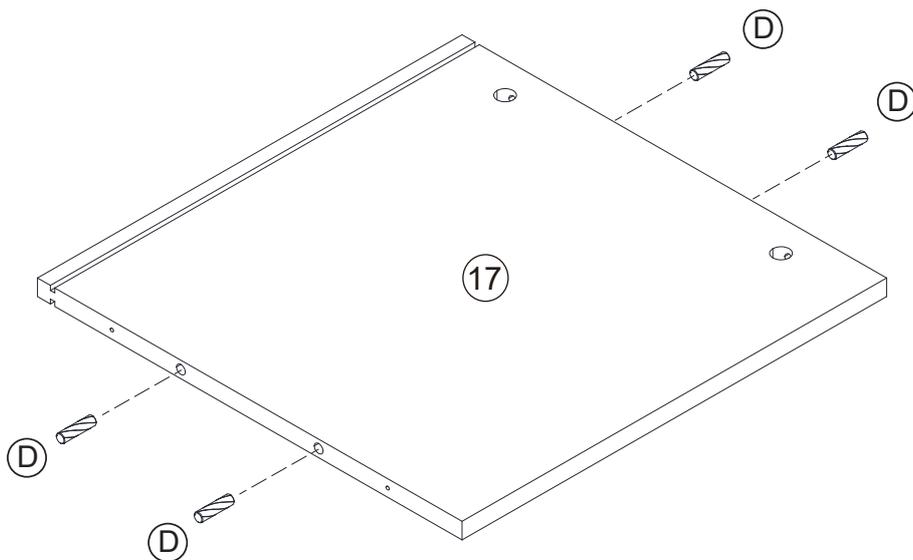

Assembly Instructions

Step 29

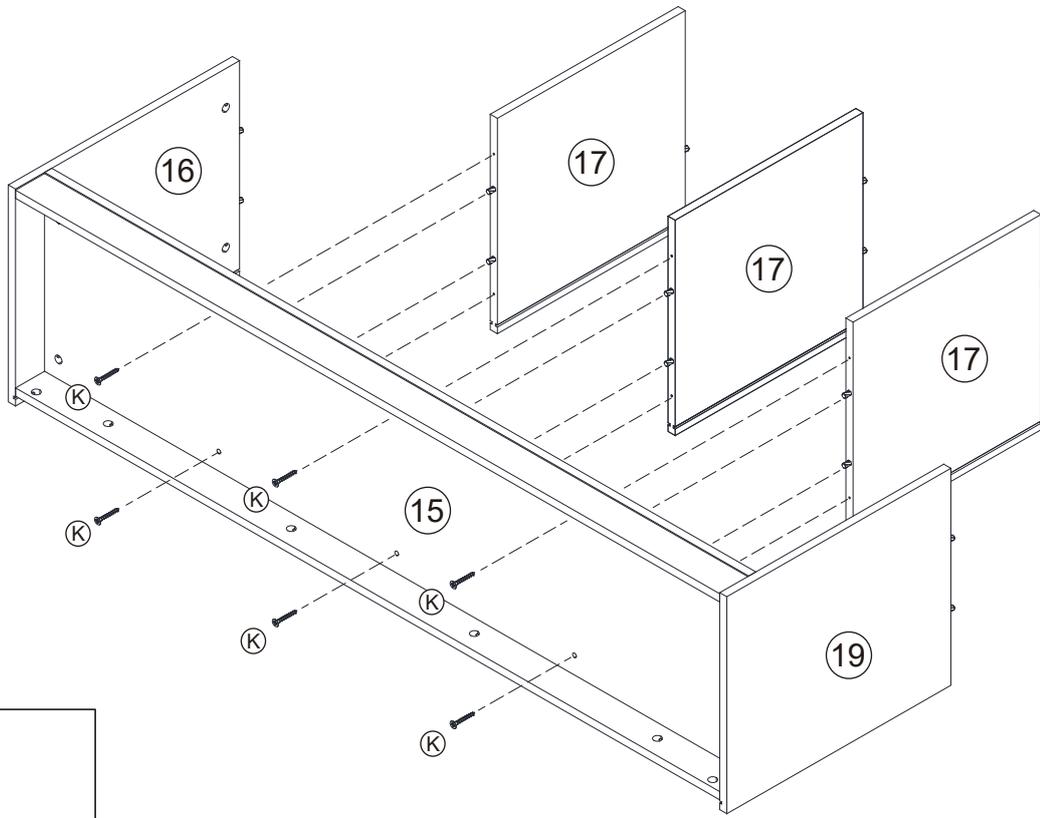


(K)




4*35mm Screw x 6

Step 30

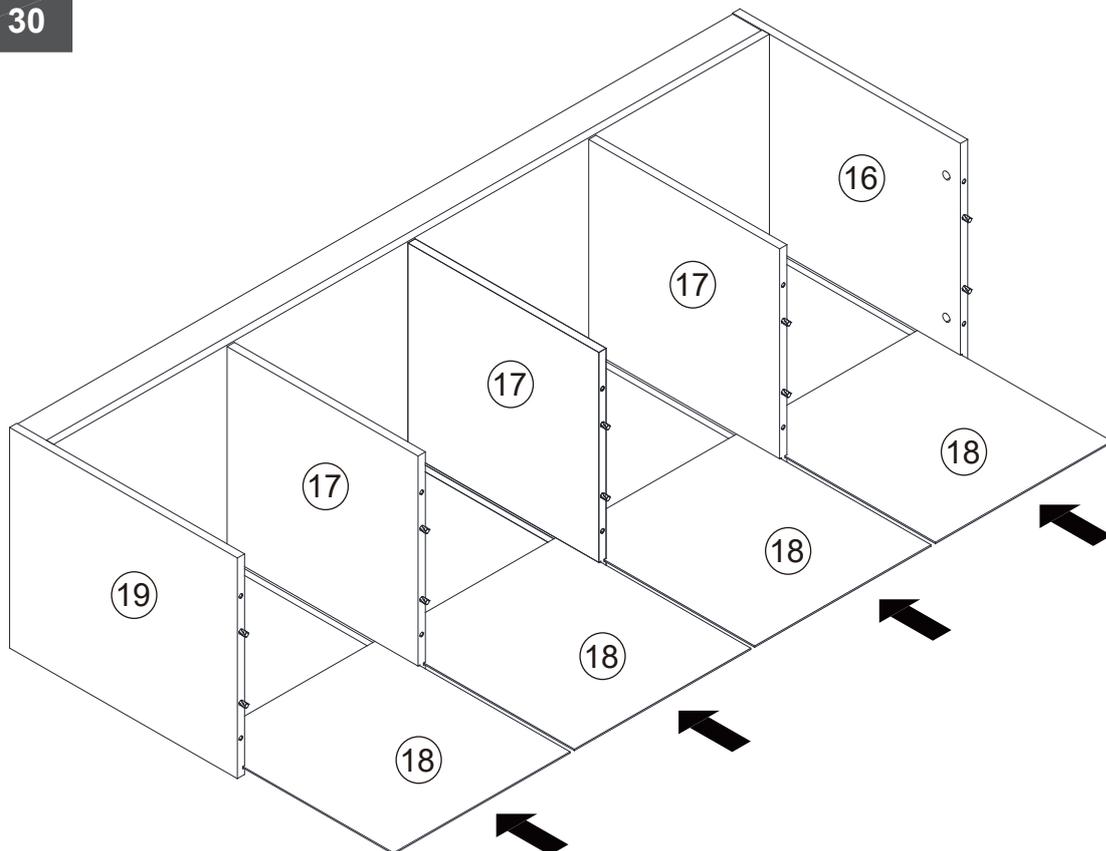


Assembly Instructions

Step 31

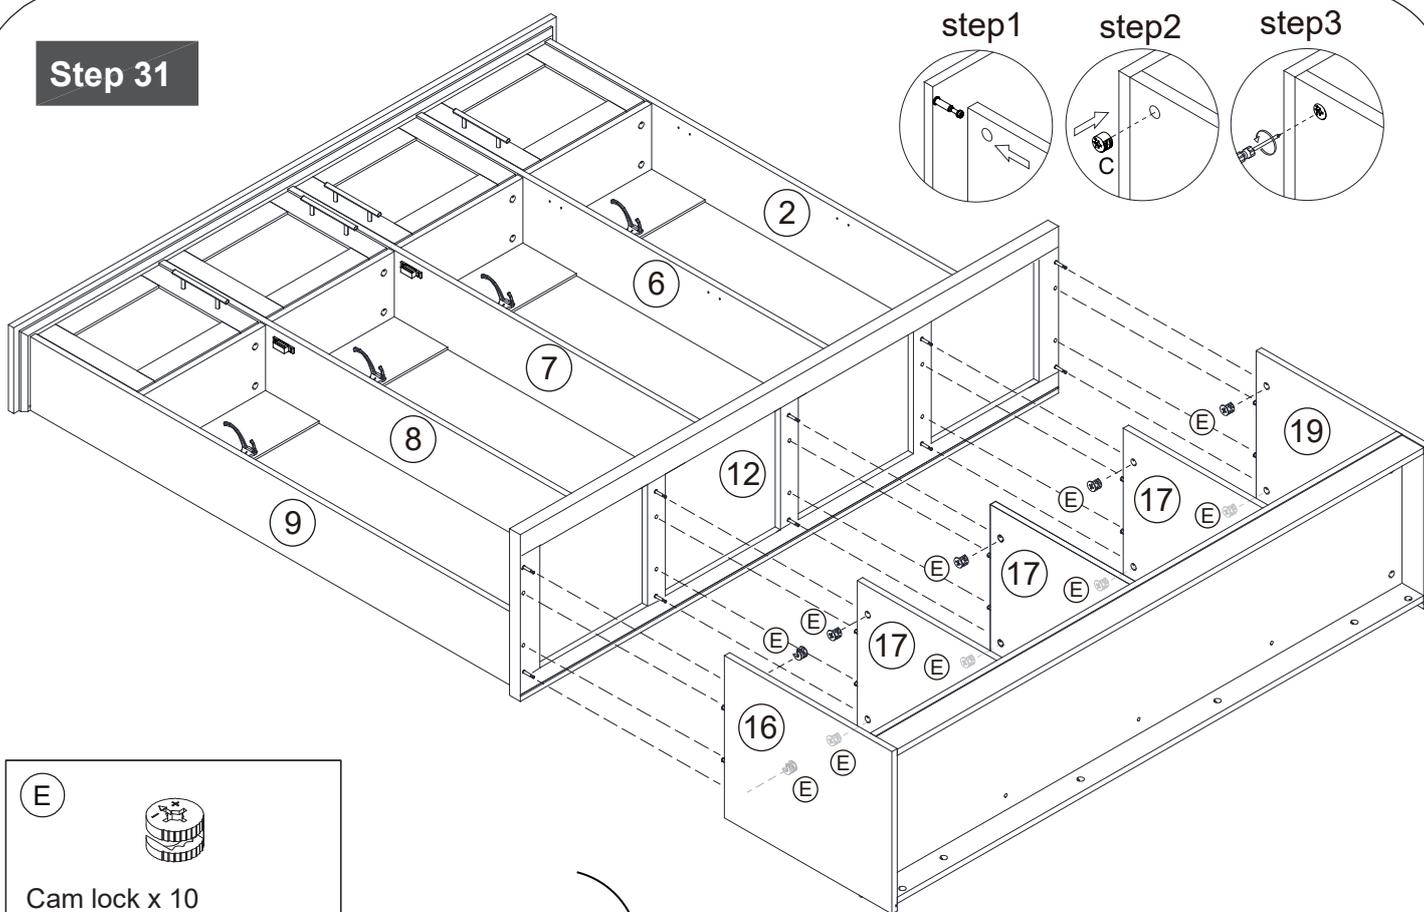

Step 32

Please stand this product carefully, it's better if two people work together

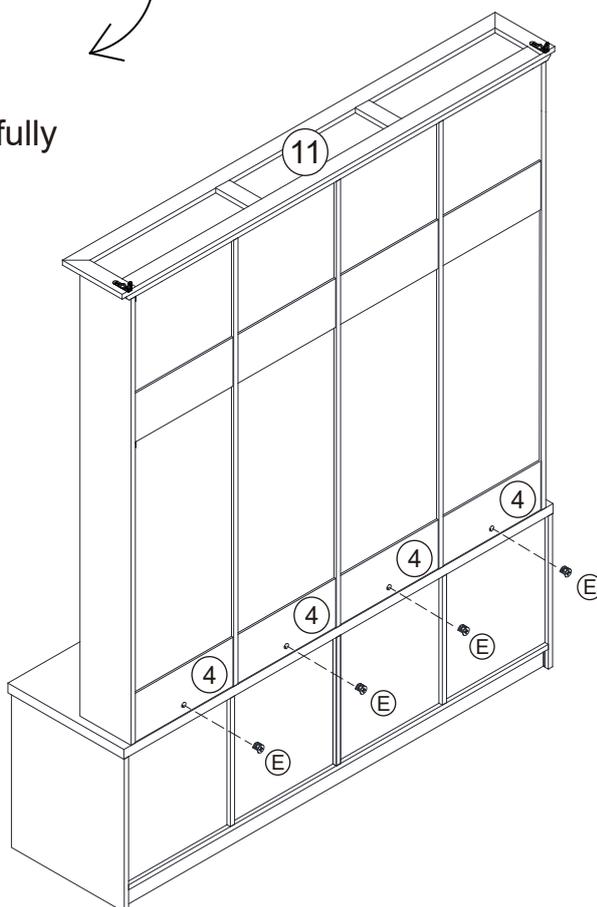


E



Cam lock x 4

Assembly Instructions

Step 33





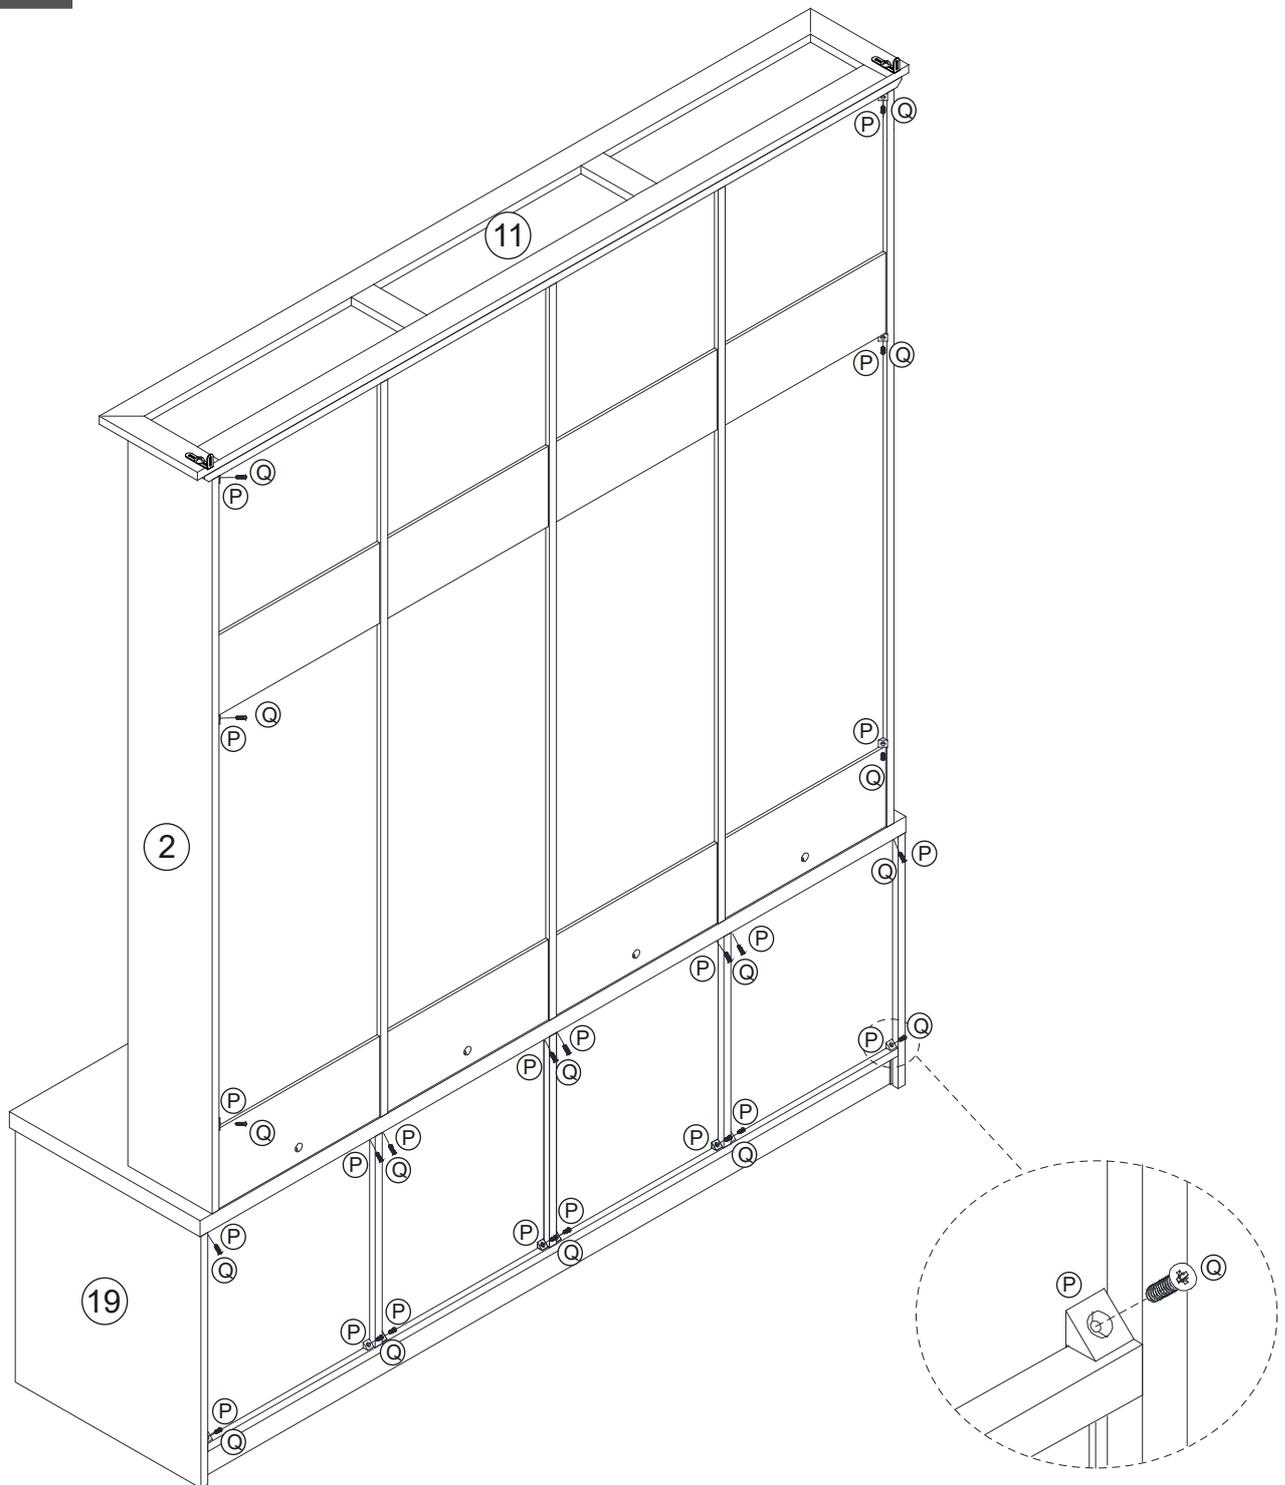


<p>(P)  Back Panel Buckle x 22</p>	<p>(Q)  3*16mm Screw x 22</p>
---	--



Assembly Instructions

Step 34

x2

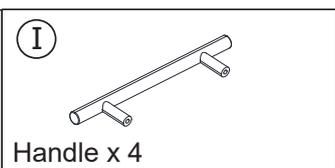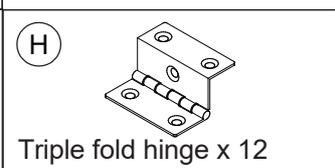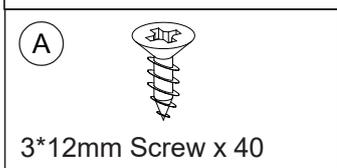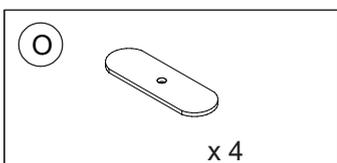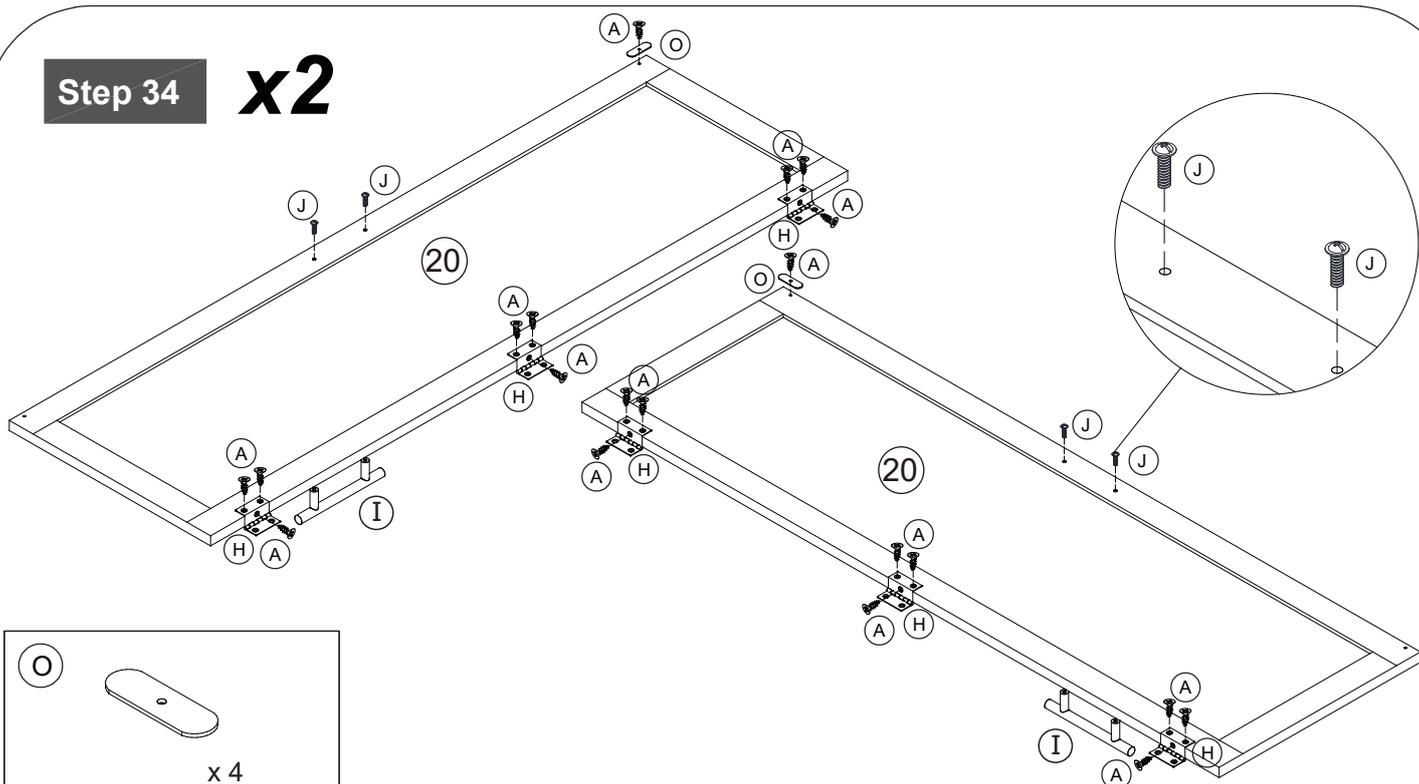





Step 35

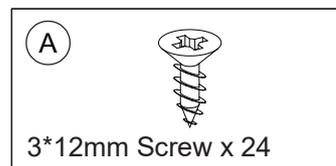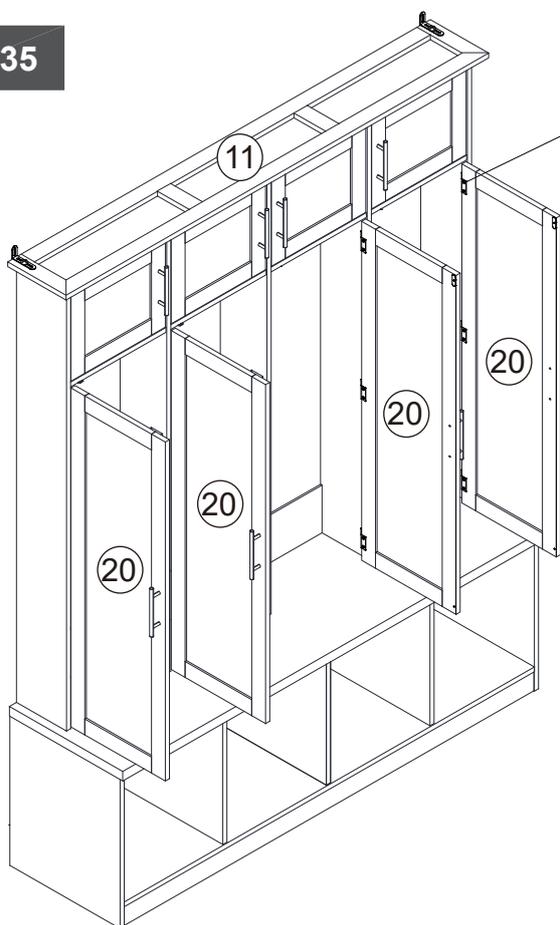


Assembly Instructions

Step 36

WALL

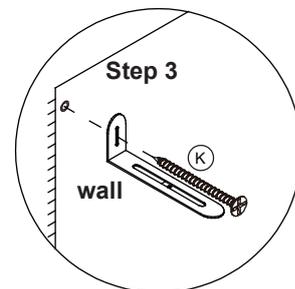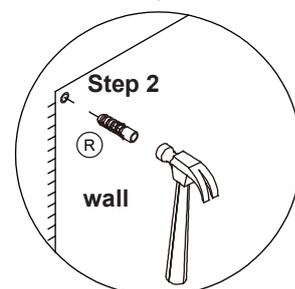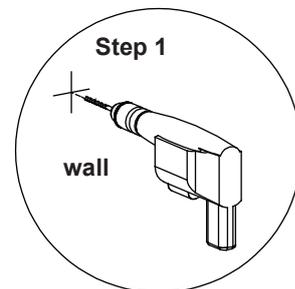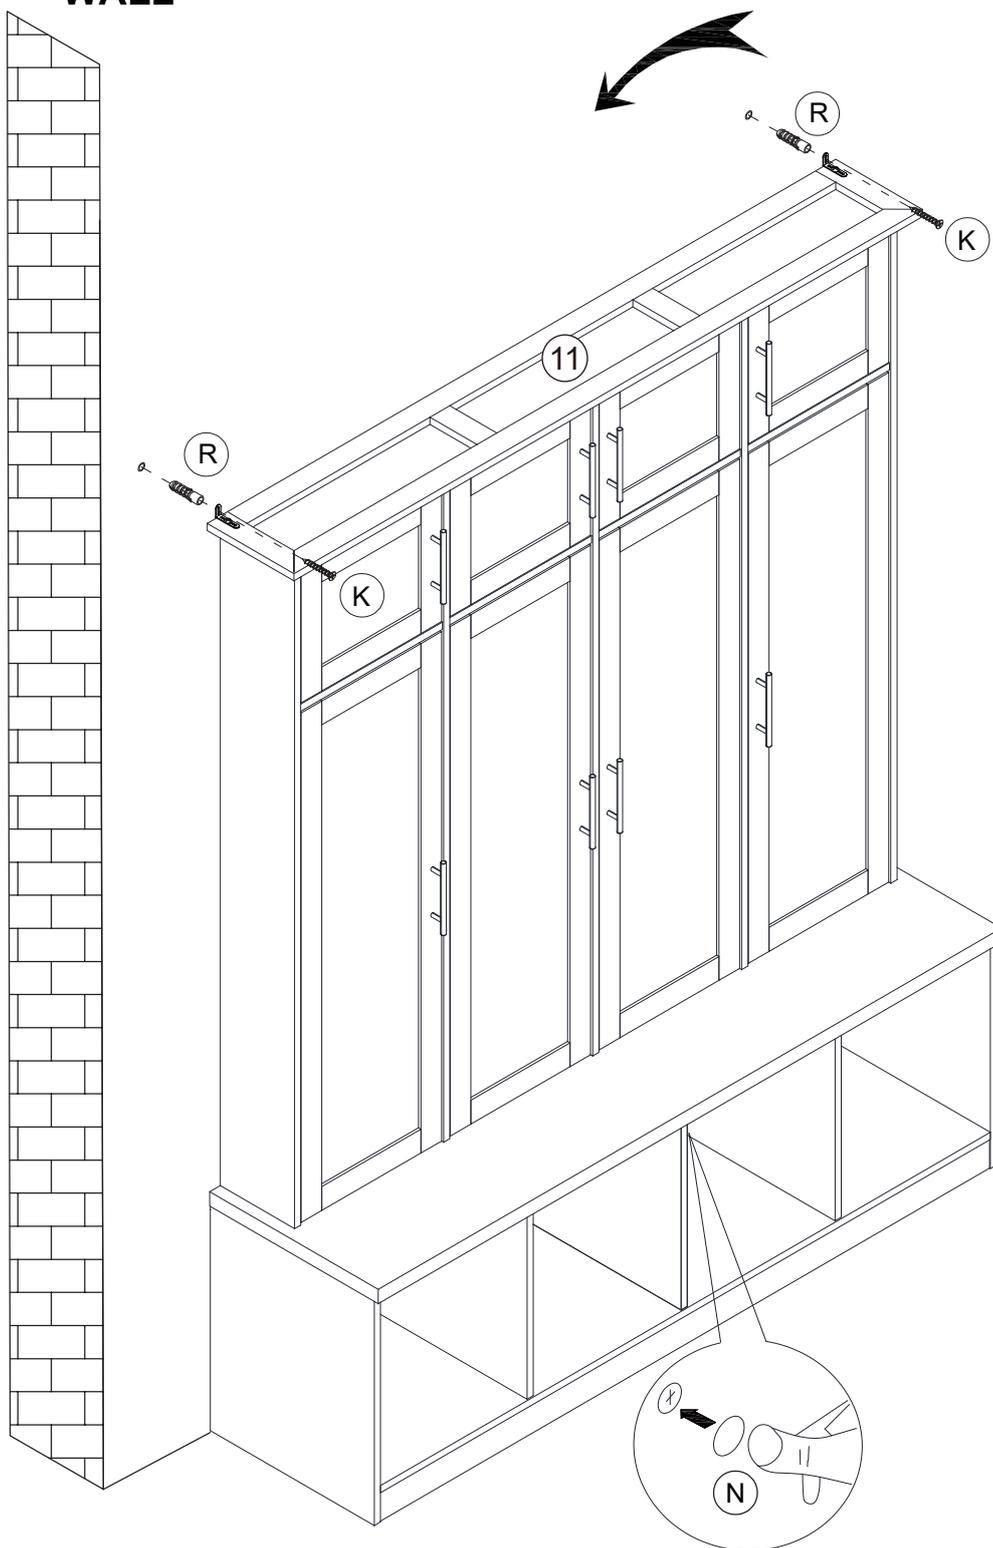

(N)	
	Perfect fit x 66
(K)	
	4*35mm Screw x 2
(R)	
	Plastic expansion x 2

Assembly Instructions

Finish

