



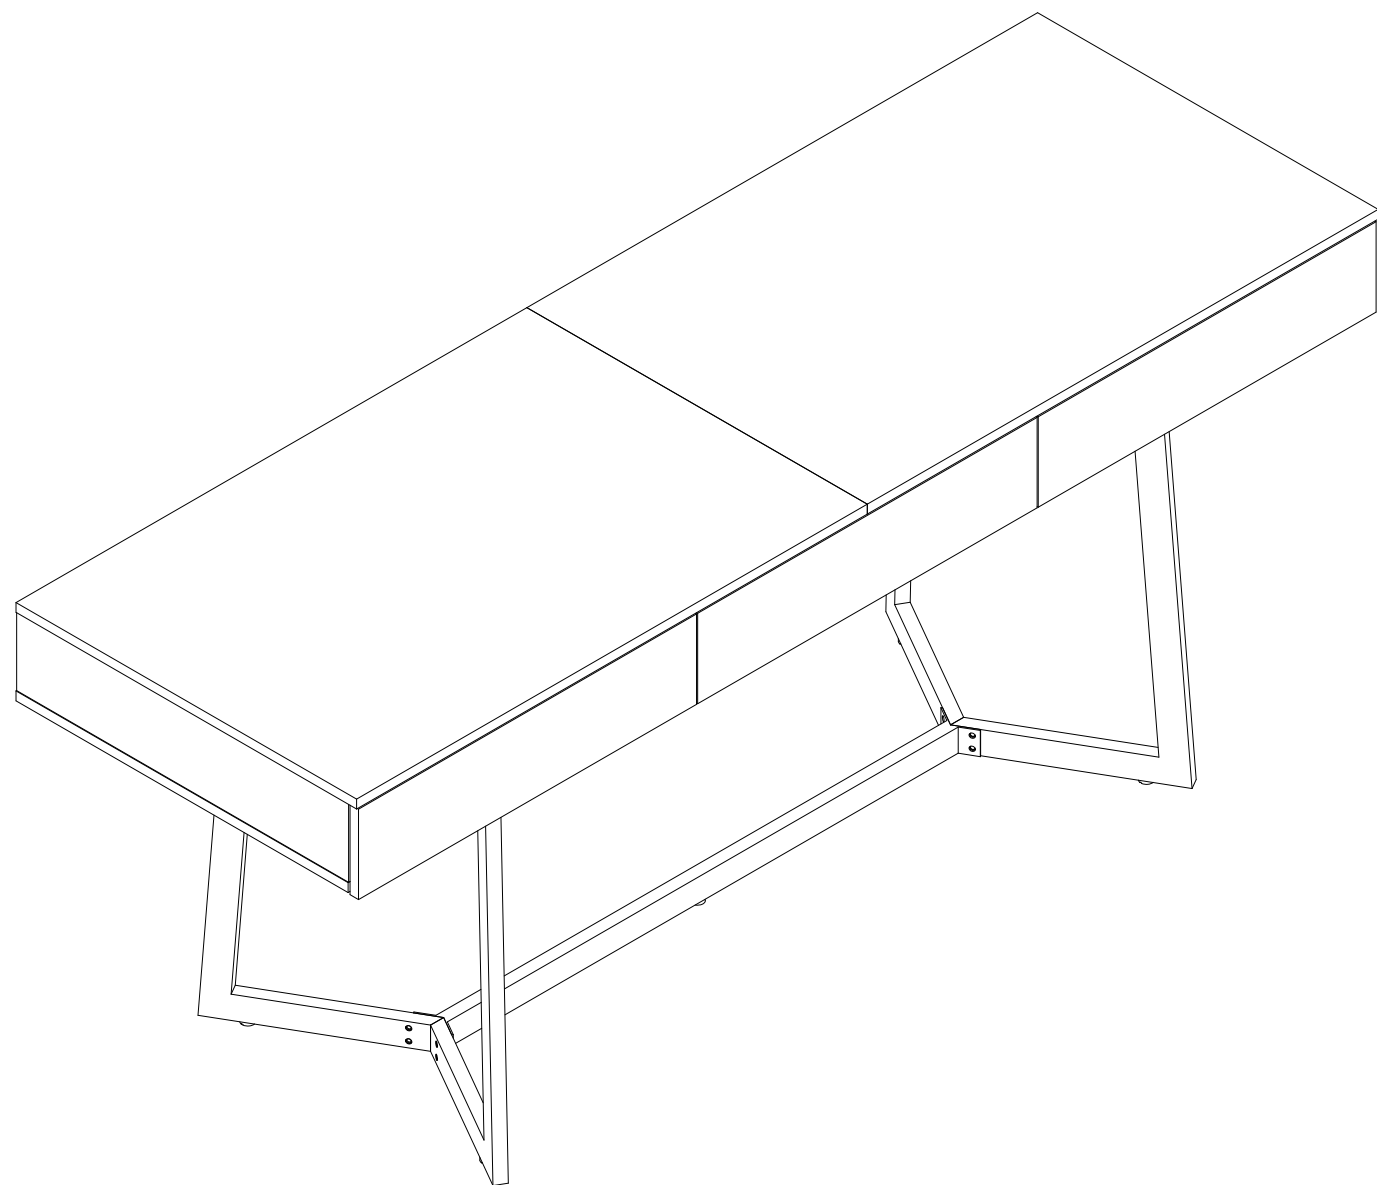


"A" Hardware installation example

I

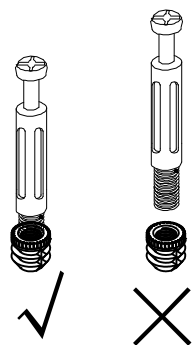


This part cannot be separated,
please install in strict
accordance with the assembly
requirements


II




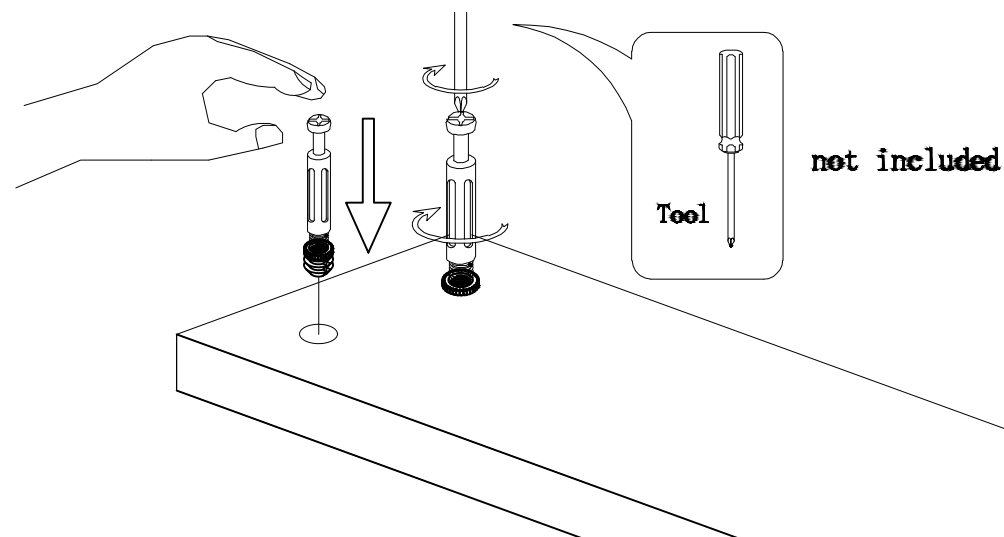


III






















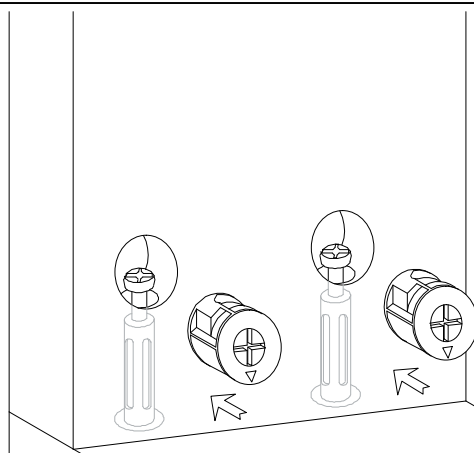


IV

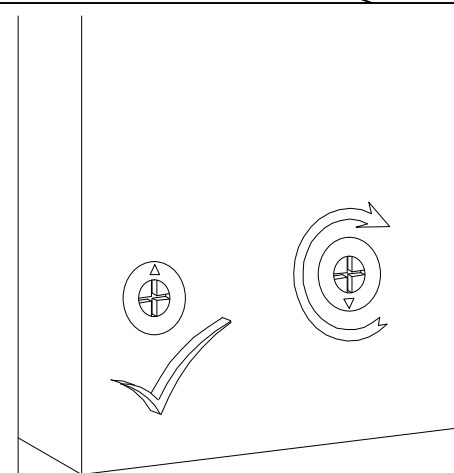


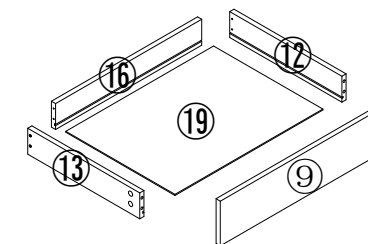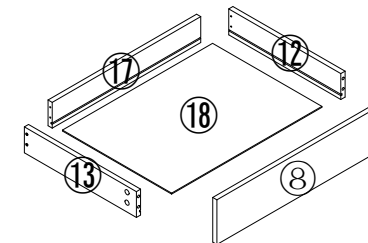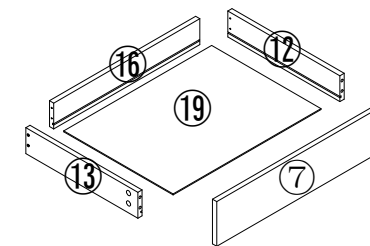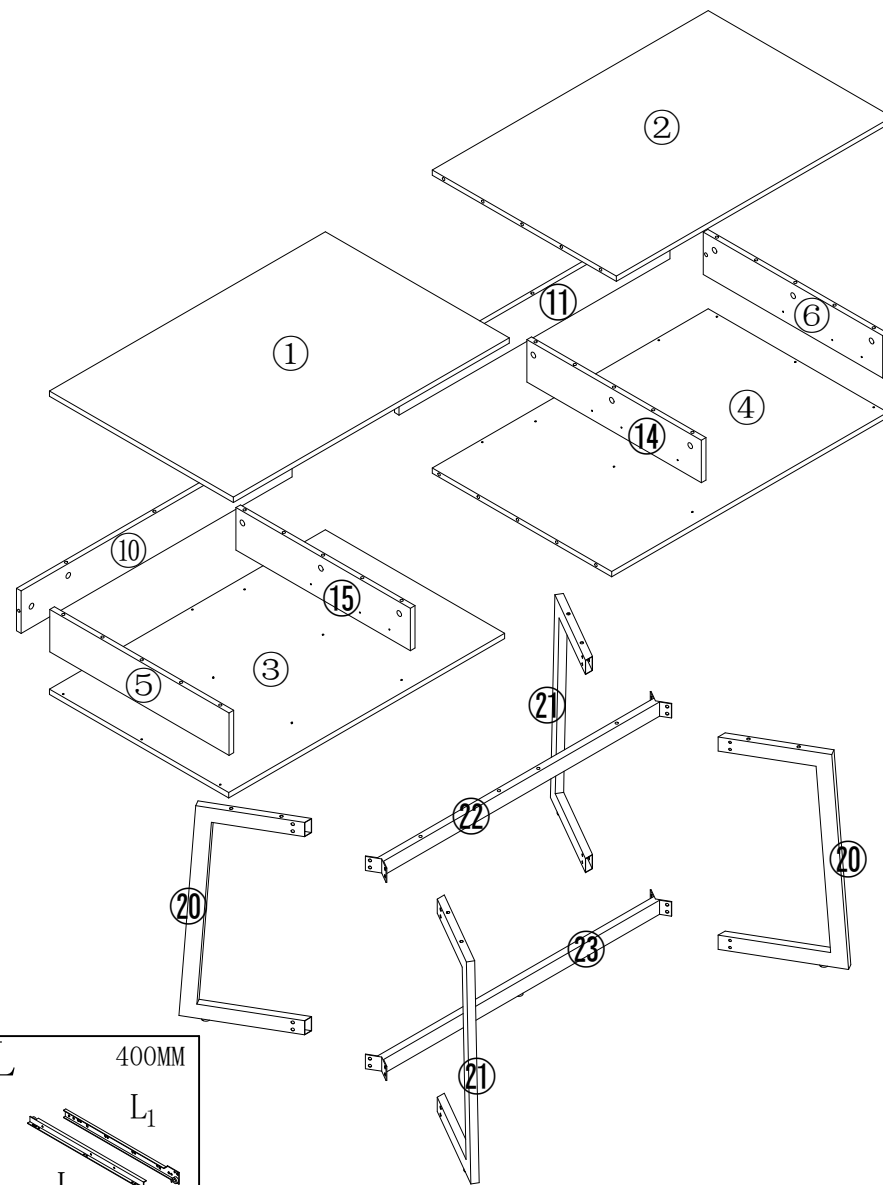


K 400MM K₁ K₂ 3PCS	L 400MM L₁ L₂ 3PCS								M 4PCS
A 30PCS	B 15*12 37PCS	C 8*40 14PCS	D 3.5*14 36PCS	E 6*10 32PCS	F 3.5*35 12PCS	G 7*50 18PCS	H 6*50 12PCS	I 10*10 7PCS	J 6*60 7PCS

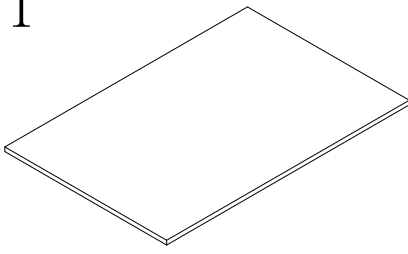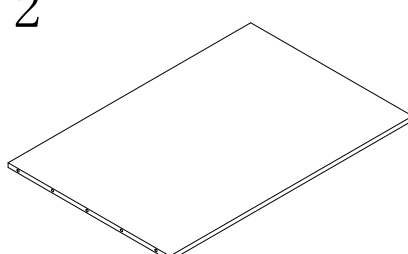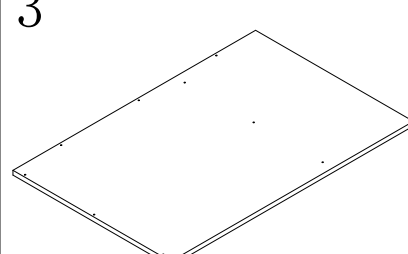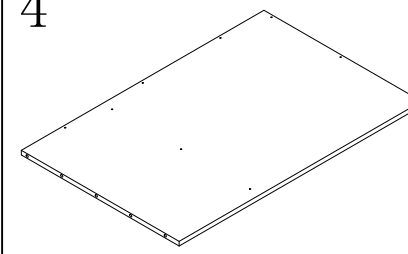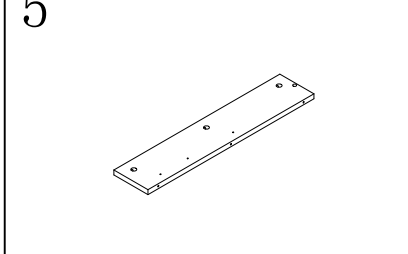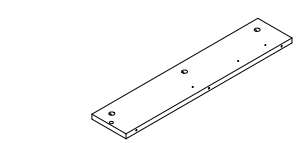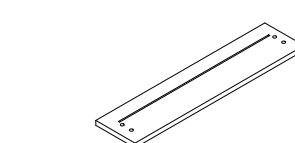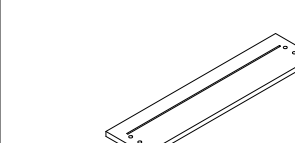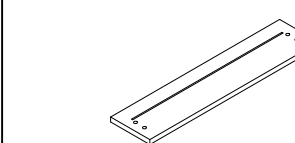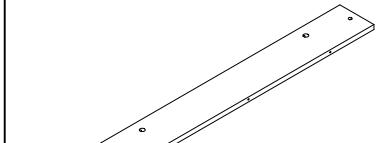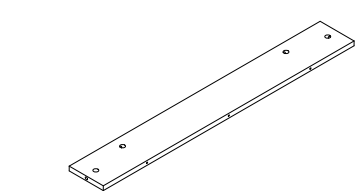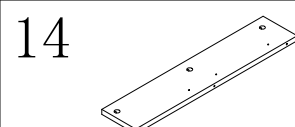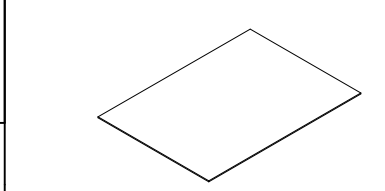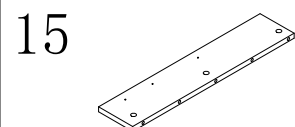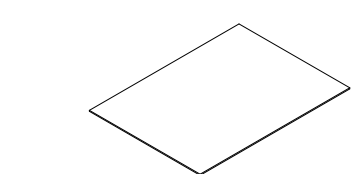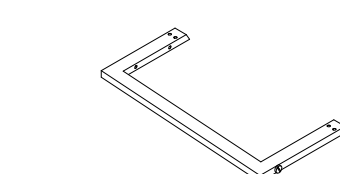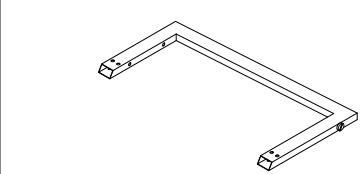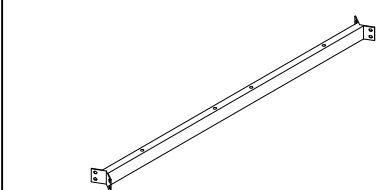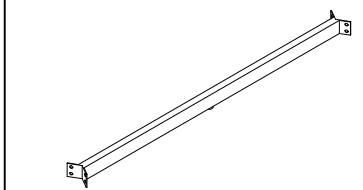1  900*600 1PS	2  900*600 1PS	3  900*585 1PS	4  900*585 1PS	5  120*585 1PS
6  120*585 1PS	7  595.5*138 1PS	8  598*138 1PS	9  595.5*138 1PS	10  884*120 1PS
11  884*120 1PS	12  400*80 3PS	14  120*569 1PS	16  521.5*80 2PS	18  540*394 1PS
	13  400*80 3PS	15  120*569 1PS	17  530*80 1PS	
19  531.5*394 2PS	20  600*311 2PS	21  600*311 2PS	22  932*69.2 1PS	23  932*69.2 1PS


1

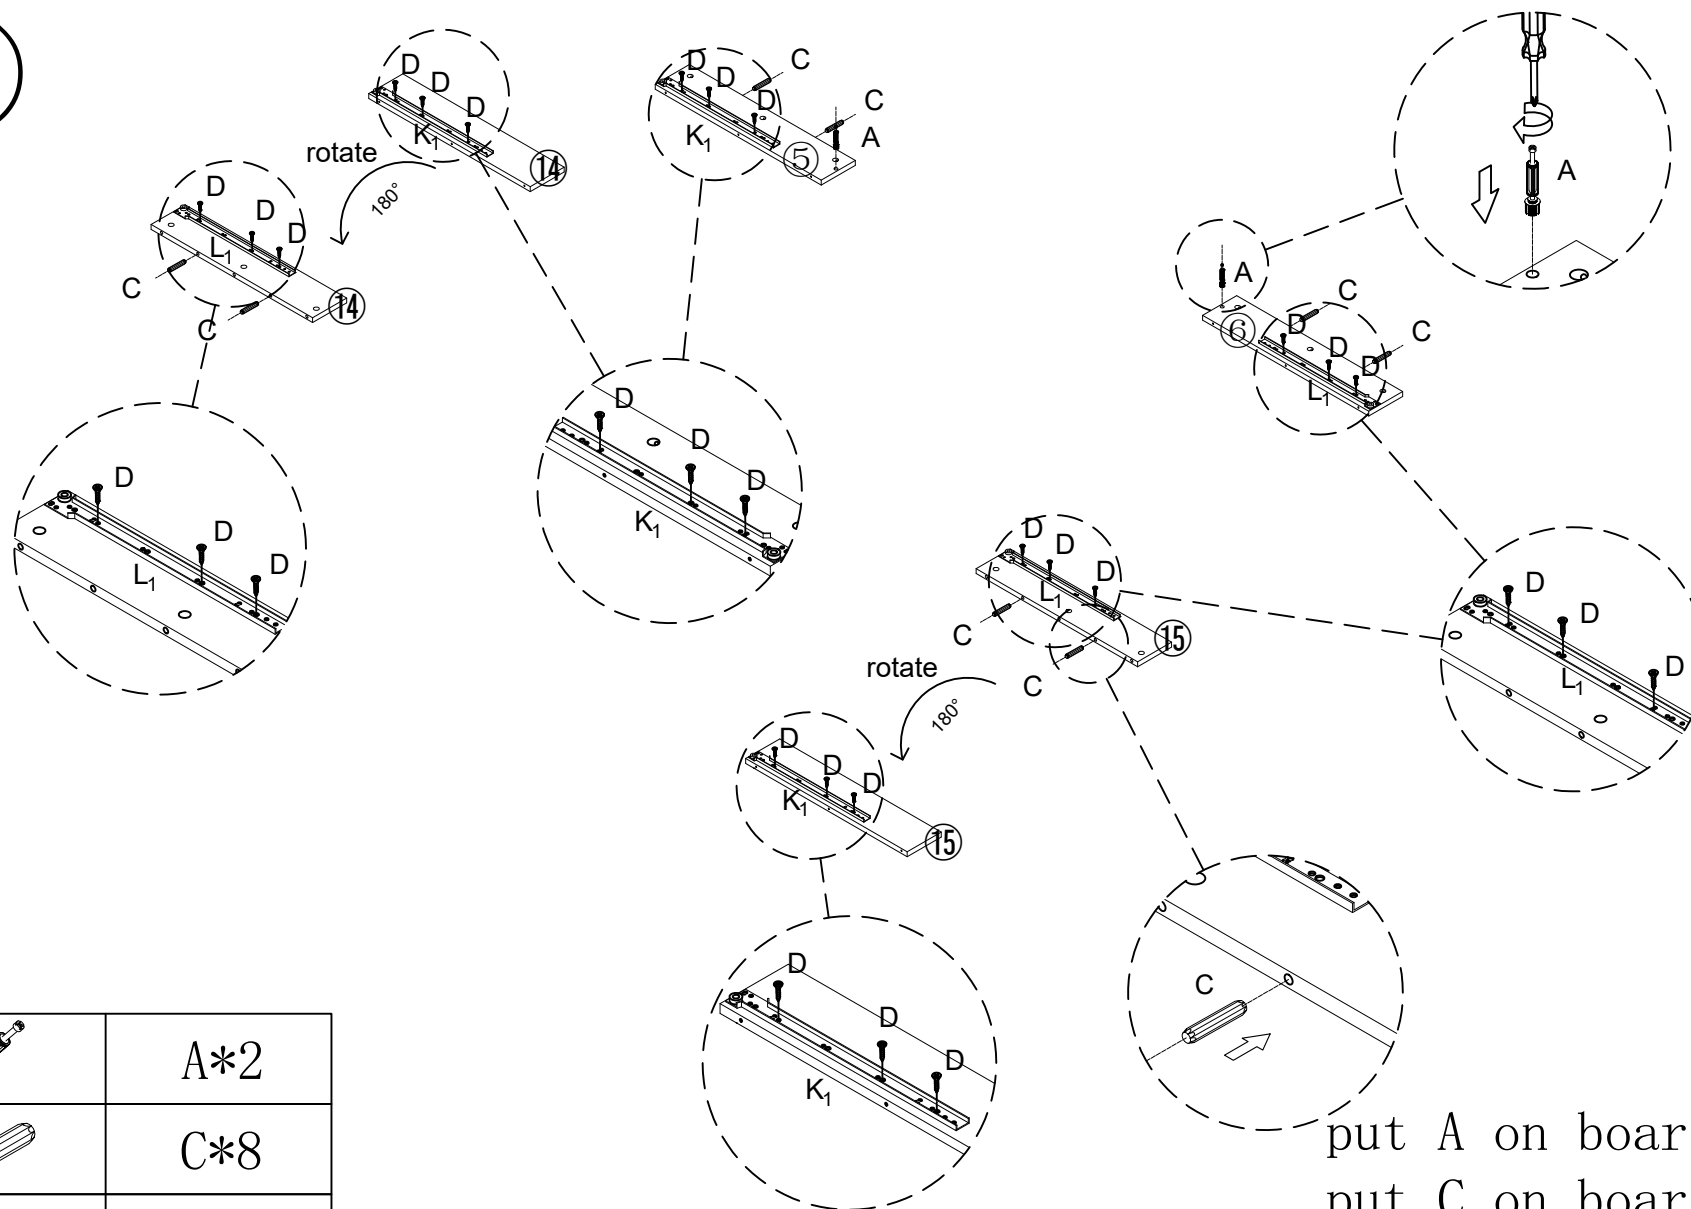

2

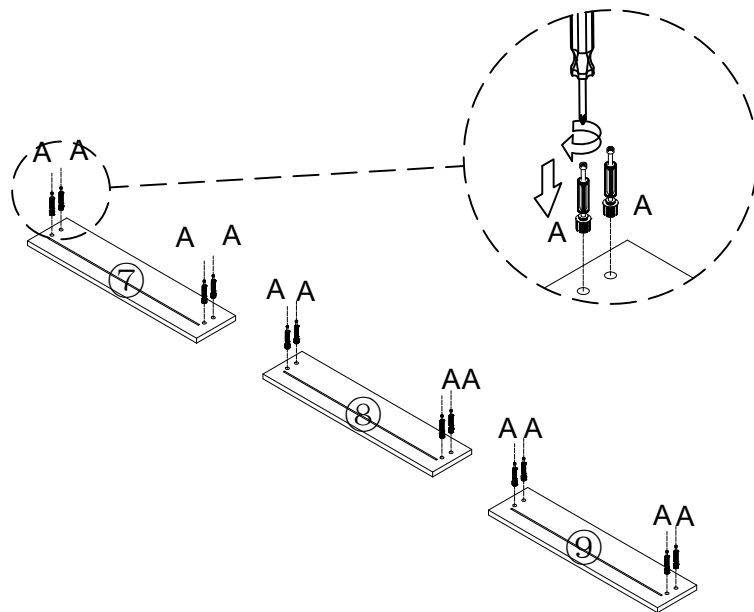

Make sure the arrow on the screw align to the hole on the side.

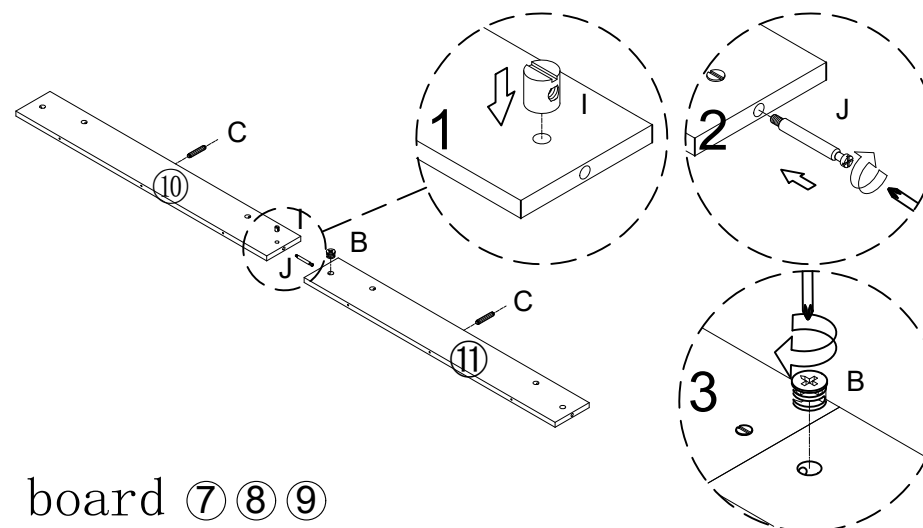

	A*12
	B*1
	C*2
	I*1
	J*1


put A on board ⑦ ⑧ ⑨

put B on board ⑪


put I on board ⑩

put C J on board ⑩ ⑪

3

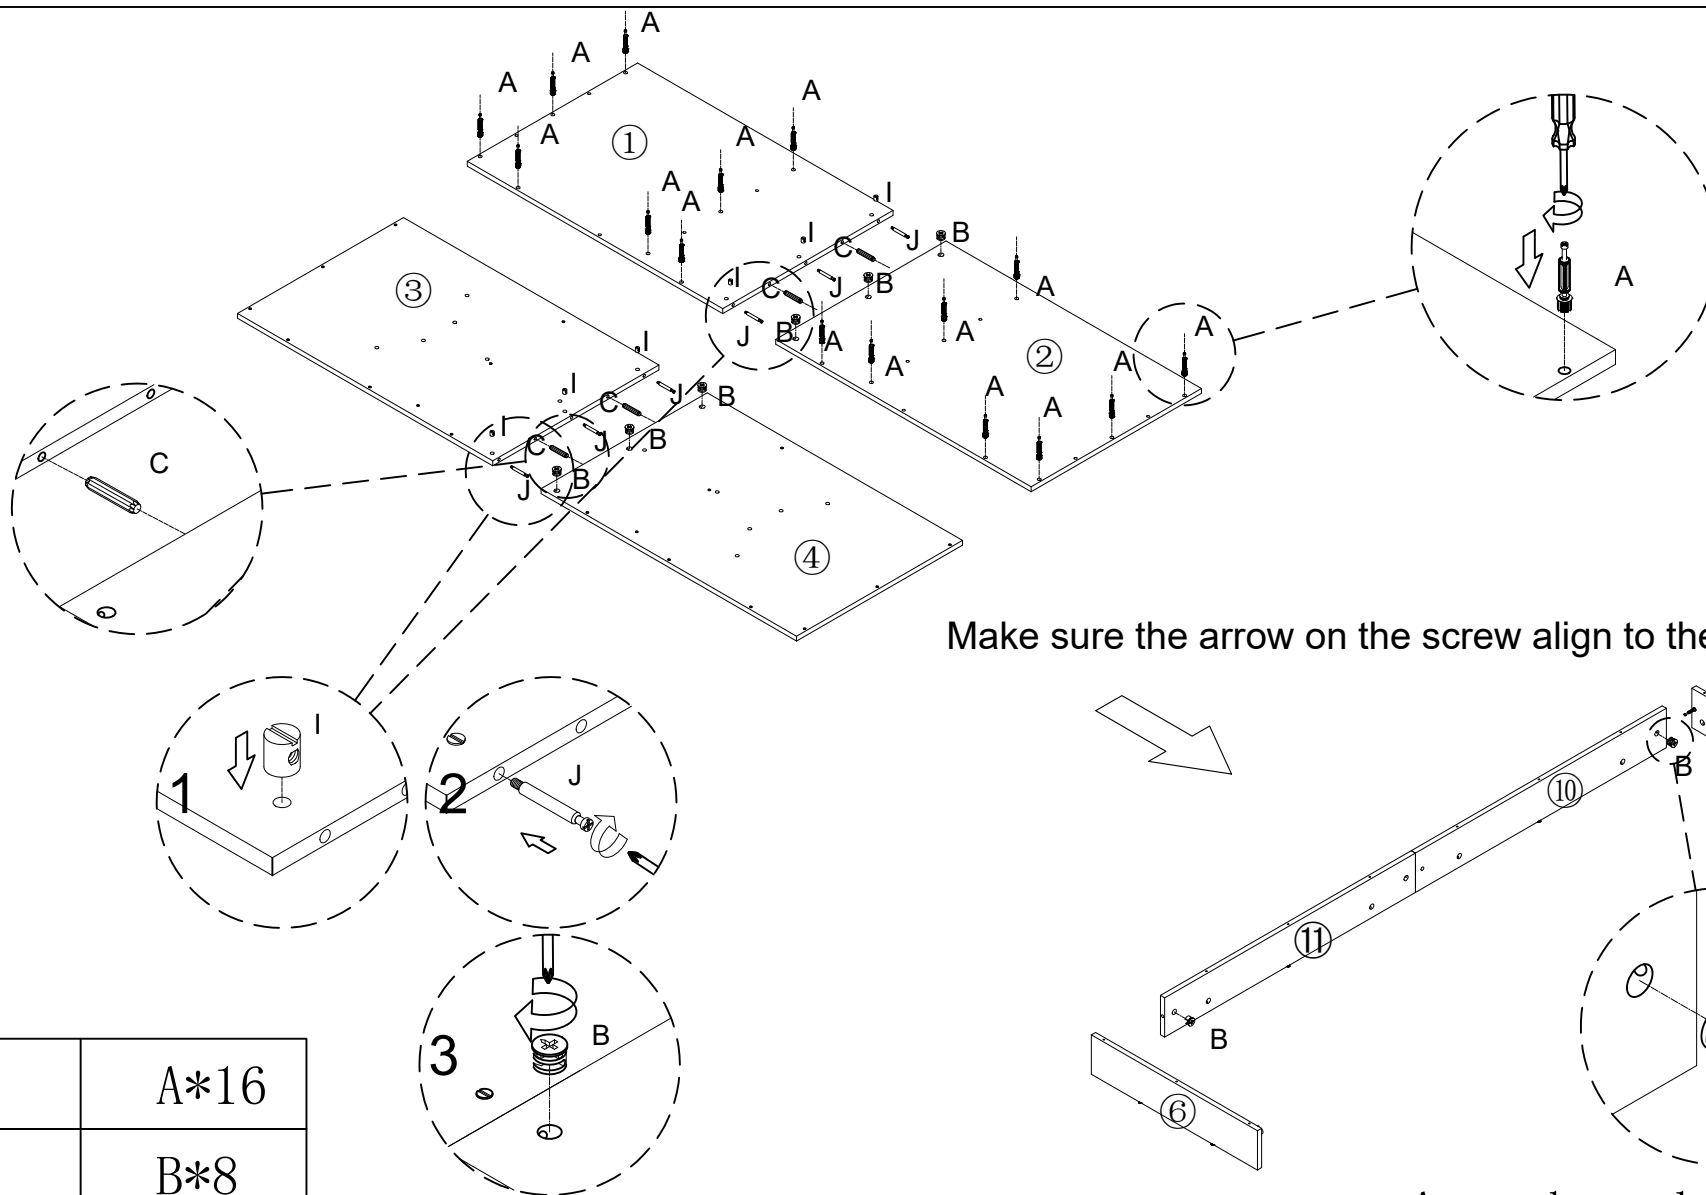



Make sure the arrow on the screw align to the hole on the side.

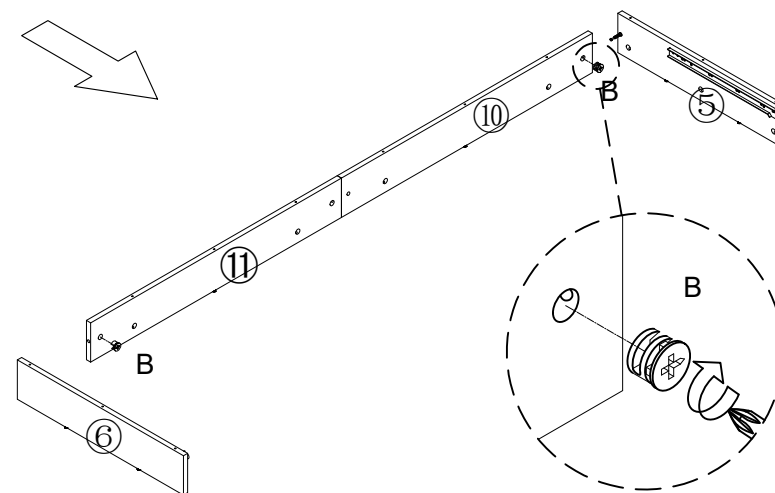




put A on board ① ②
 put B on board ② ④ ⑩ ⑪
 put I on board ① ③
 put C J on board ① ② ③ ④

	A*16
	B*8
	C*4
	I*6
	J*6

4

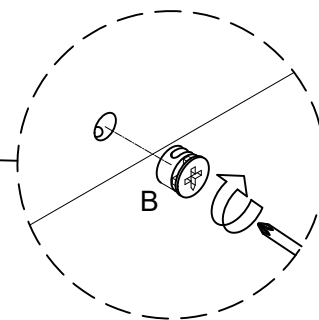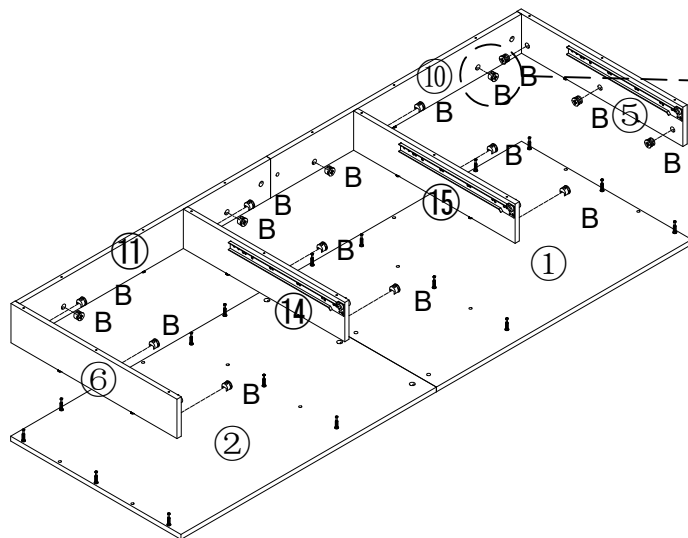

Make sure the arrow on the screw align to the hole on the side.

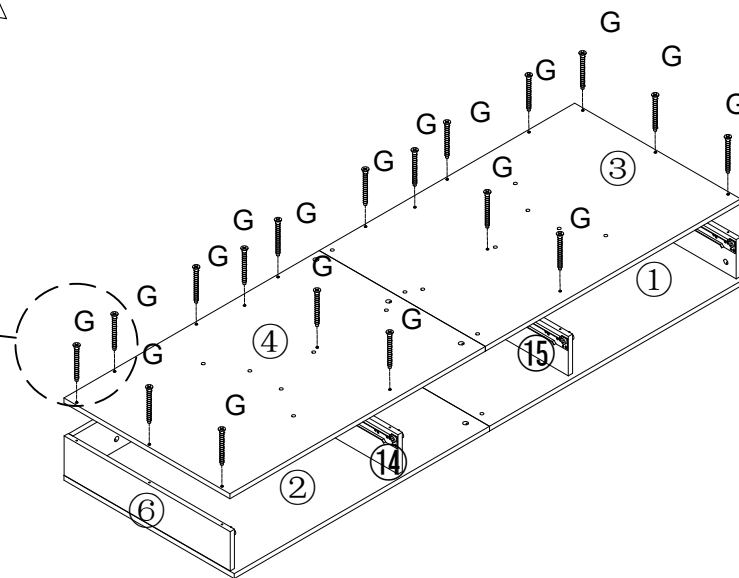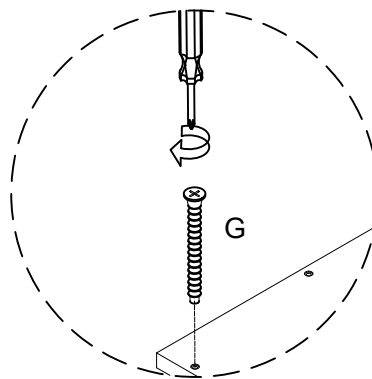

put B on board ⑤ ⑥ ⑩ ⑪ ⑭ ⑮
put G on board ③ ④




B*16





G*18



5

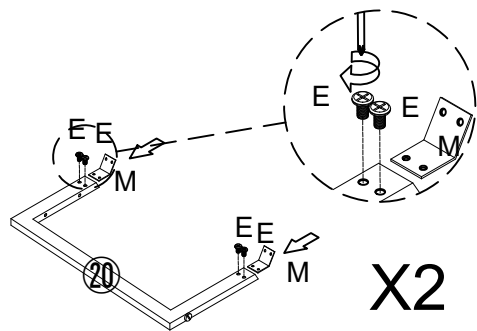

X2

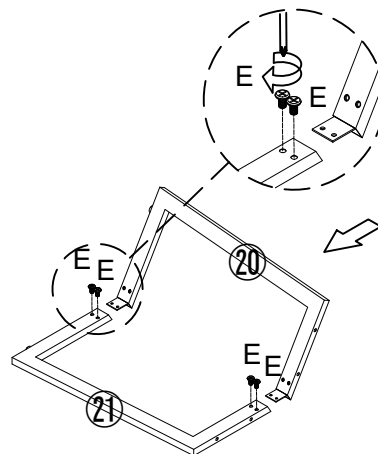

X2

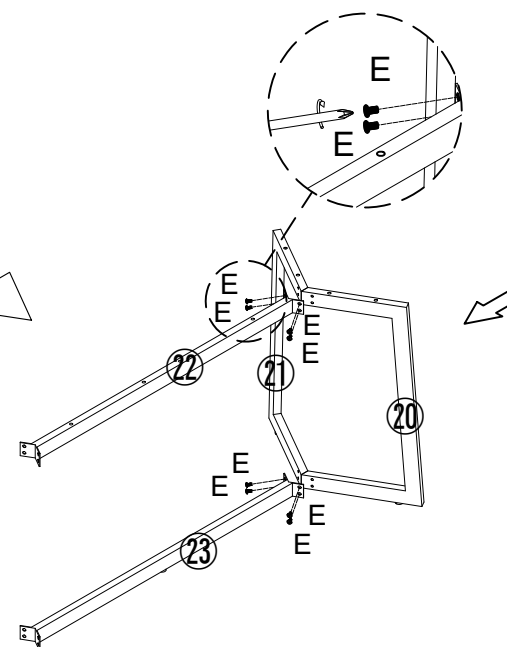

put E on board 20 21 22 23
put M on board 20 21




E*24



M*4

6

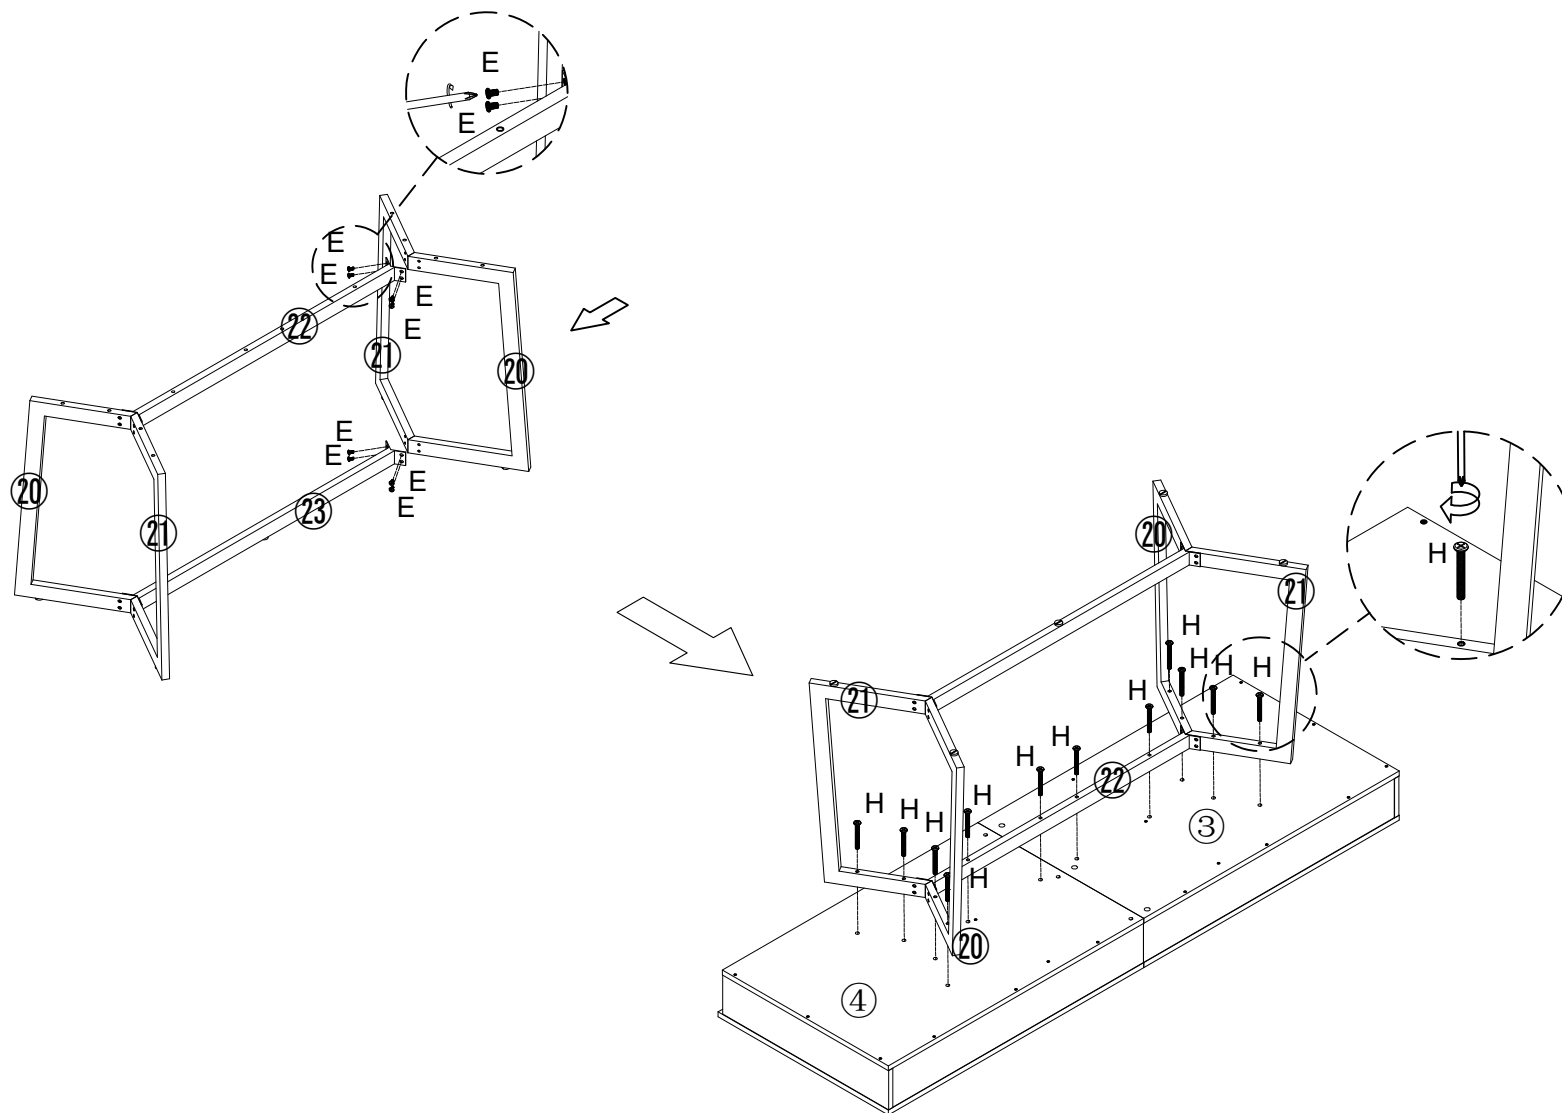

put E on board 22 23

put H on board 20 21 22




E*8







H*12

7

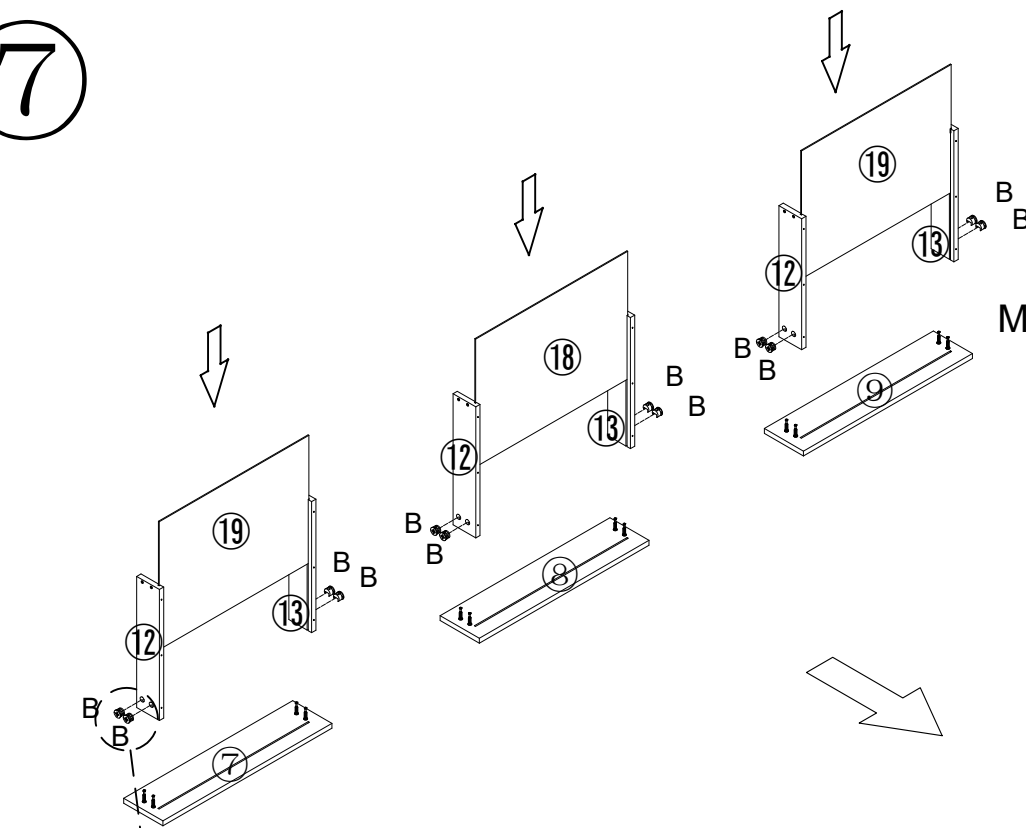








Make sure the arrow on the screw align to the hole on the side.

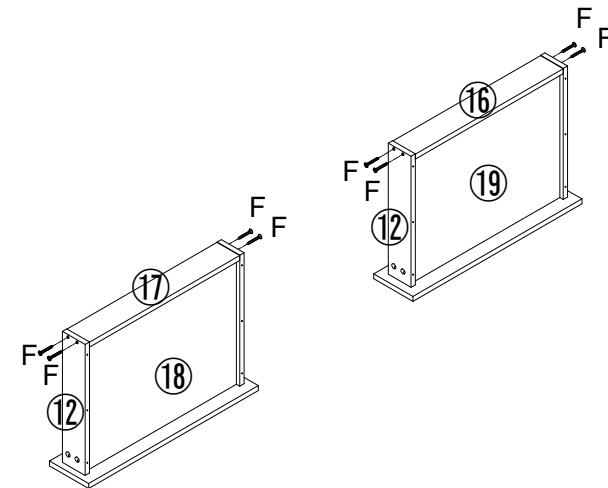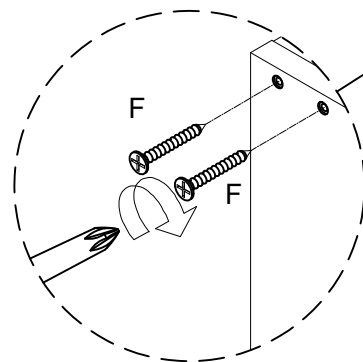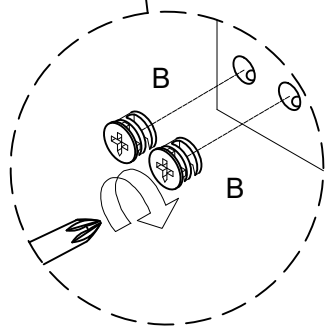


	B*12
	F*12

put B on board 12 13
put F on board 12 13

8

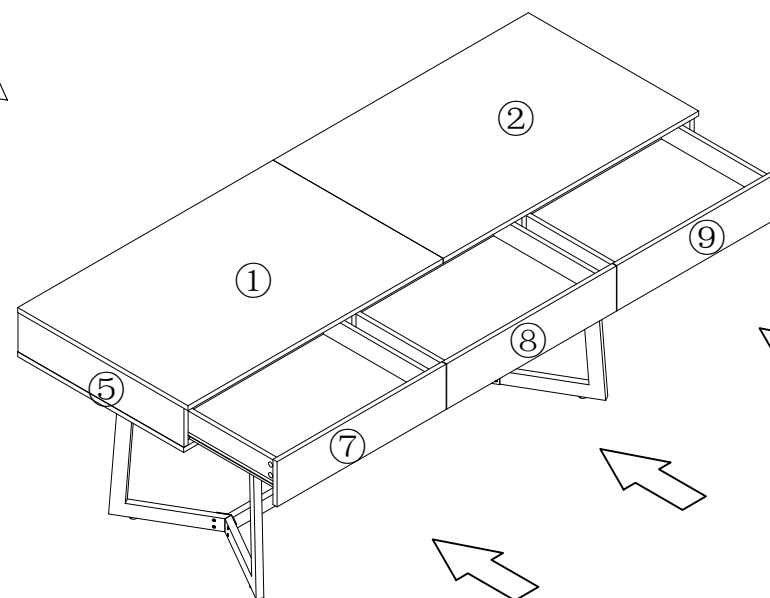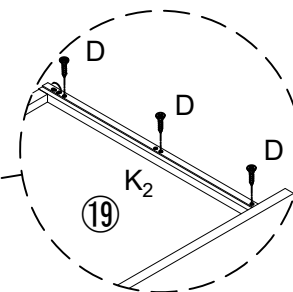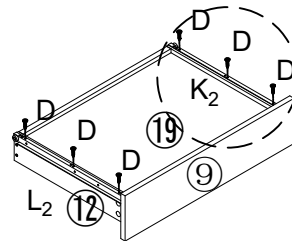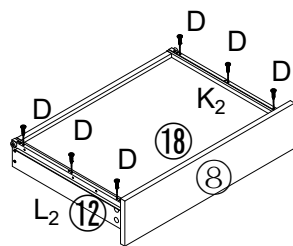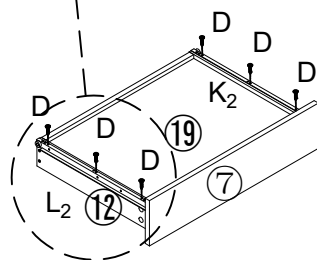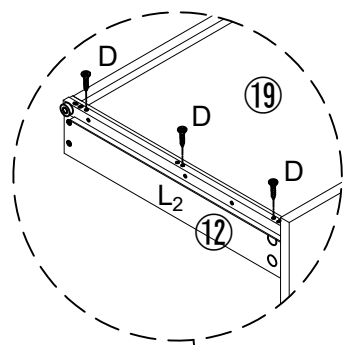

	D*18
	K ₂ *3
	L ₂ *3

put D K₂ L₂ on board 12 13