




RELIABILT and logo design are trademarks or registered trademarks of LF, LLC. All rights reserved.

ITEM #68903
MODEL #U 9483-L

LATCH STRIKE

Español p. 5

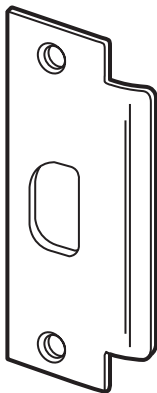

Serial Number _____

Purchase Date _____

Thank you for purchasing this RELIABILT product.

Questions, problems or missing parts?

Before returning, contact us on:

866-386-7941, 8 a.m. - 8 p.m., EST, Monday - Sunday or ascs@lowes.com.

SG24603

TABLE OF CONTENTS

Preparation	2
Package Contents	3
Hardware Contents.....	3
Installation Instructions	4

PREPARATION


Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 30 minutes


Tools Required for Assembly (not included):
Phillips Screwdriver, Drill, Drillbit, Wood Chisel

PACKAGE CONTENTS

PART	DESCRIPTION	QUANTITY
A	Latch strike	1

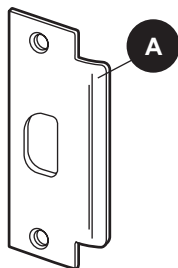

HARDWARE CONTENTS (shown actual size)




#10 x 1 in.
Screw


Qty. 2

ASSEMBLY INSTRUCTIONS

1. Remove old strike plate. Determine door thickness (1-3/8 in. or 1-3/4 in.) and modify enclosed template if necessary for 1-3/8 in. thickness.


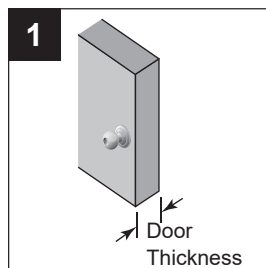


2. Position template against door stop at the proper height to accommodate latch bolt on door. Tape in place and drill 1 in. diameter hole into jamb. Drill two 1/8 in. holes at designated locations 2 in. deep.

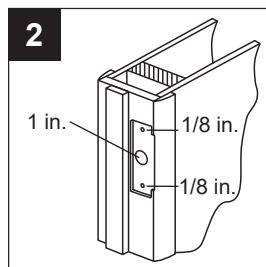

3. Mortise the area of the strike approximately 5/32 in. deep to allow door to clear strike. Attach strike (A) with screws (AA) and adjust until door latches snugly.

Hardware Used

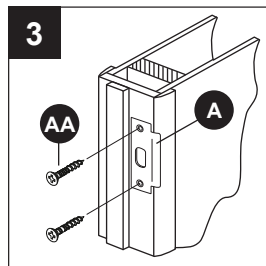


Printed in China



RELIABILT y el diseño del logotipo son marcas comerciales o marcas registradas de LF, LLC. Todos los derechos reservados.

ARTÍCULO #68903
MODELO #U 9483-L

CERROJO PARA PESTILLO

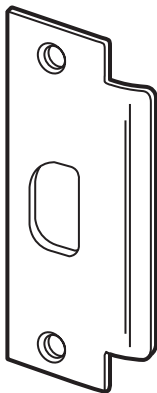

Número de serie _____

Fecha de compra _____

Gracias por comprar este producto RELIABILT.

¿Tiene preguntas, problemas o piezas faltantes?

Antes de volver a la tienda, póngase en contacto al:

866-386-7941, de lunes a domingo de 8 a.m. a 8 p.m., hora estándar del Este,
o escriba a **ascs@lowes.com**.

ÍNDICE

Preparación	2
Contenido del paquete	3
Aditamentos.....	3
Instrucciones de instalación	4

PREPARACIÓN


Antes de comenzar a ensamblar el producto, asegúrese de tener todas las piezas. Compare las piezas con la lista del contenido del paquete y la lista de aditamentos. No intente ensamblar el producto si falta alguna pieza o si estas están dañadas.

Tiempo estimado de ensamblaje: 30 minutos

Herramientas necesarias para el ensamblaje (no se incluyen): destornillador Phillips, taladro, broca para taladro, cincel para madera

CONTENIDO DEL PAQUETE

PIEZA	DESCRIPCIÓN	CANTIDAD
A	Cerrojo para pestillo	1

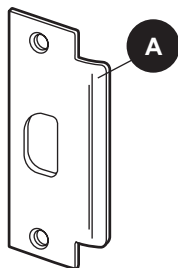

ADITAMENTOS (se muestran en tamaño real)




Tornillo
#10 x 1 pulg.


Cant. 2

INSTRUCCIONES DE ENSAMBLAJE


1. Retire la placa del cerrojo antiguo. Determine el grosor de la puerta (1 3/8 pulg. o 1 3/4 pulg.) y modifique la plantilla adjunta, de ser necesario, para un grosor de 1 3/8 pulg.

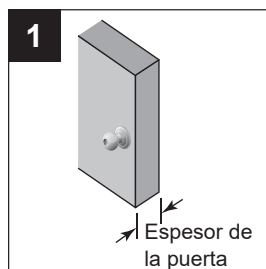

2. Coloque la plantilla contra el tope de la puerta a la altura adecuada para ajustar el perno del pestillo en la puerta. Fije con cinta adhesiva en su lugar y taladre un orificio de 2.54 cm (1 pulg.) en la jamba. Taladre dos orificios de 0.31 cm (1/8 pulg.) en las ubicaciones designadas, a 5.08 cm (2 pulg.) de profundidad.

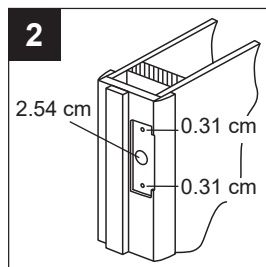

3. Embuta el área del cerrojo a aproximadamente 0,4 cm de profundidad, para que la puerta no roce el cerrojo. Coloque el cerrojo (A) con tornillos (AA) y ajuste hasta que el pestillo se enganche en la puerta firmemente.

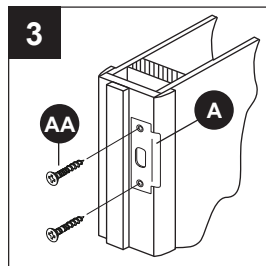

Aditamentos utilizados

