


ASSEMBLY INSTRUCTIONS


FULL SIZE BED

If you have any questions, please feel free to contact us.
Email: lowes.team@qualfurn.net

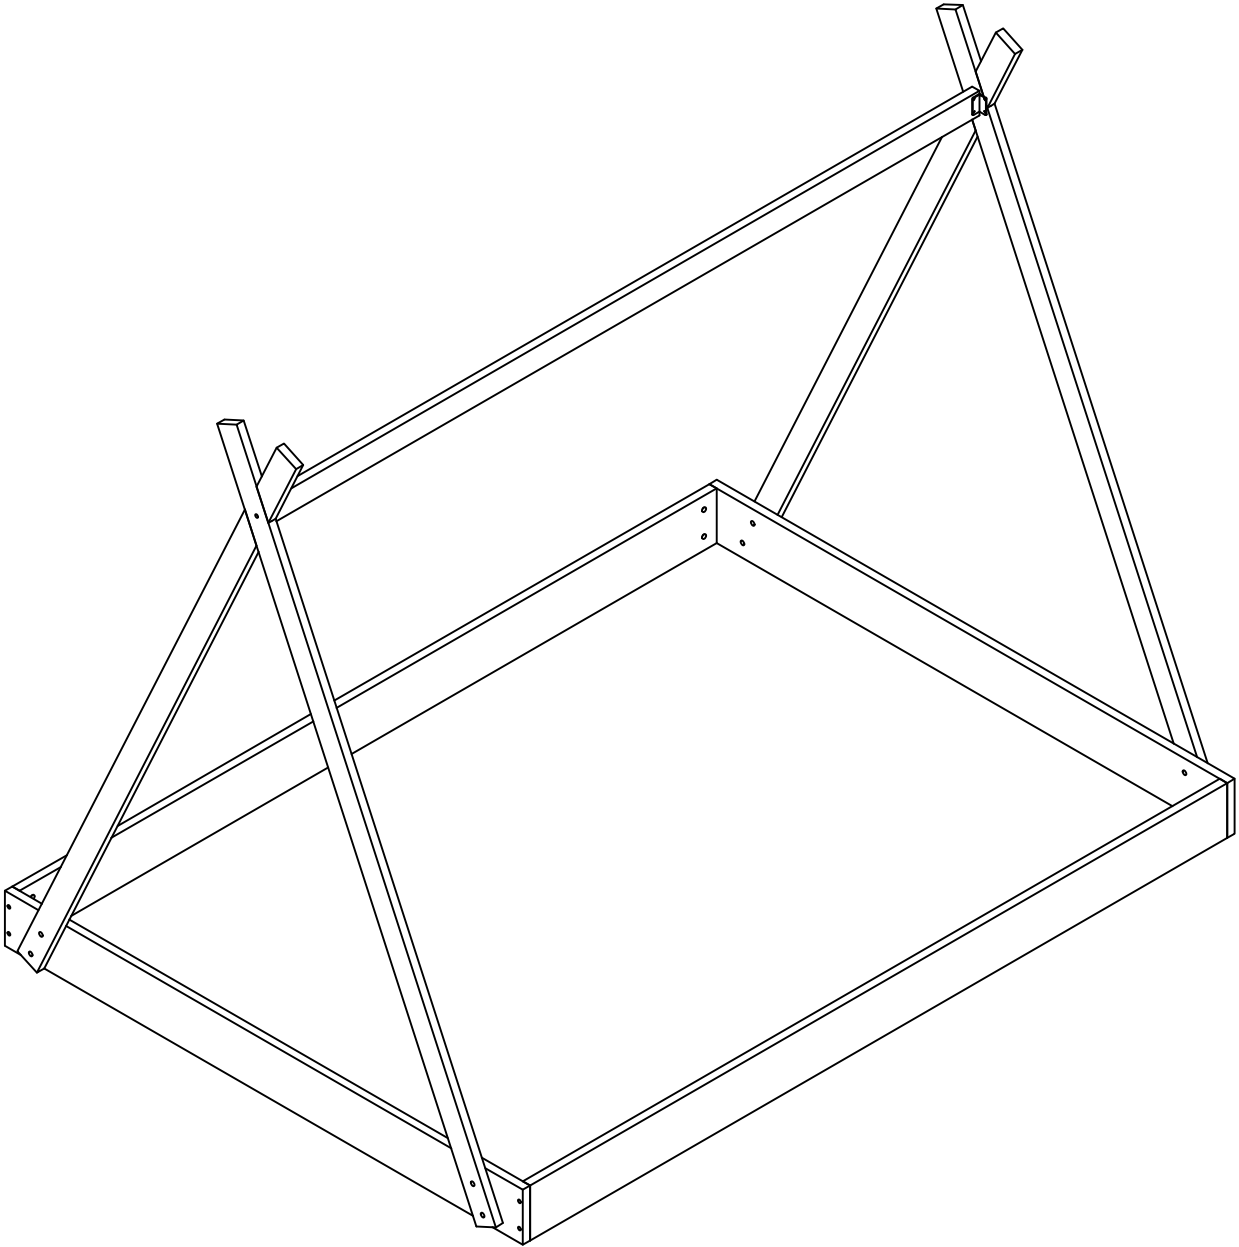

WF307379





ASSEMBLY INSTRUCTIONS

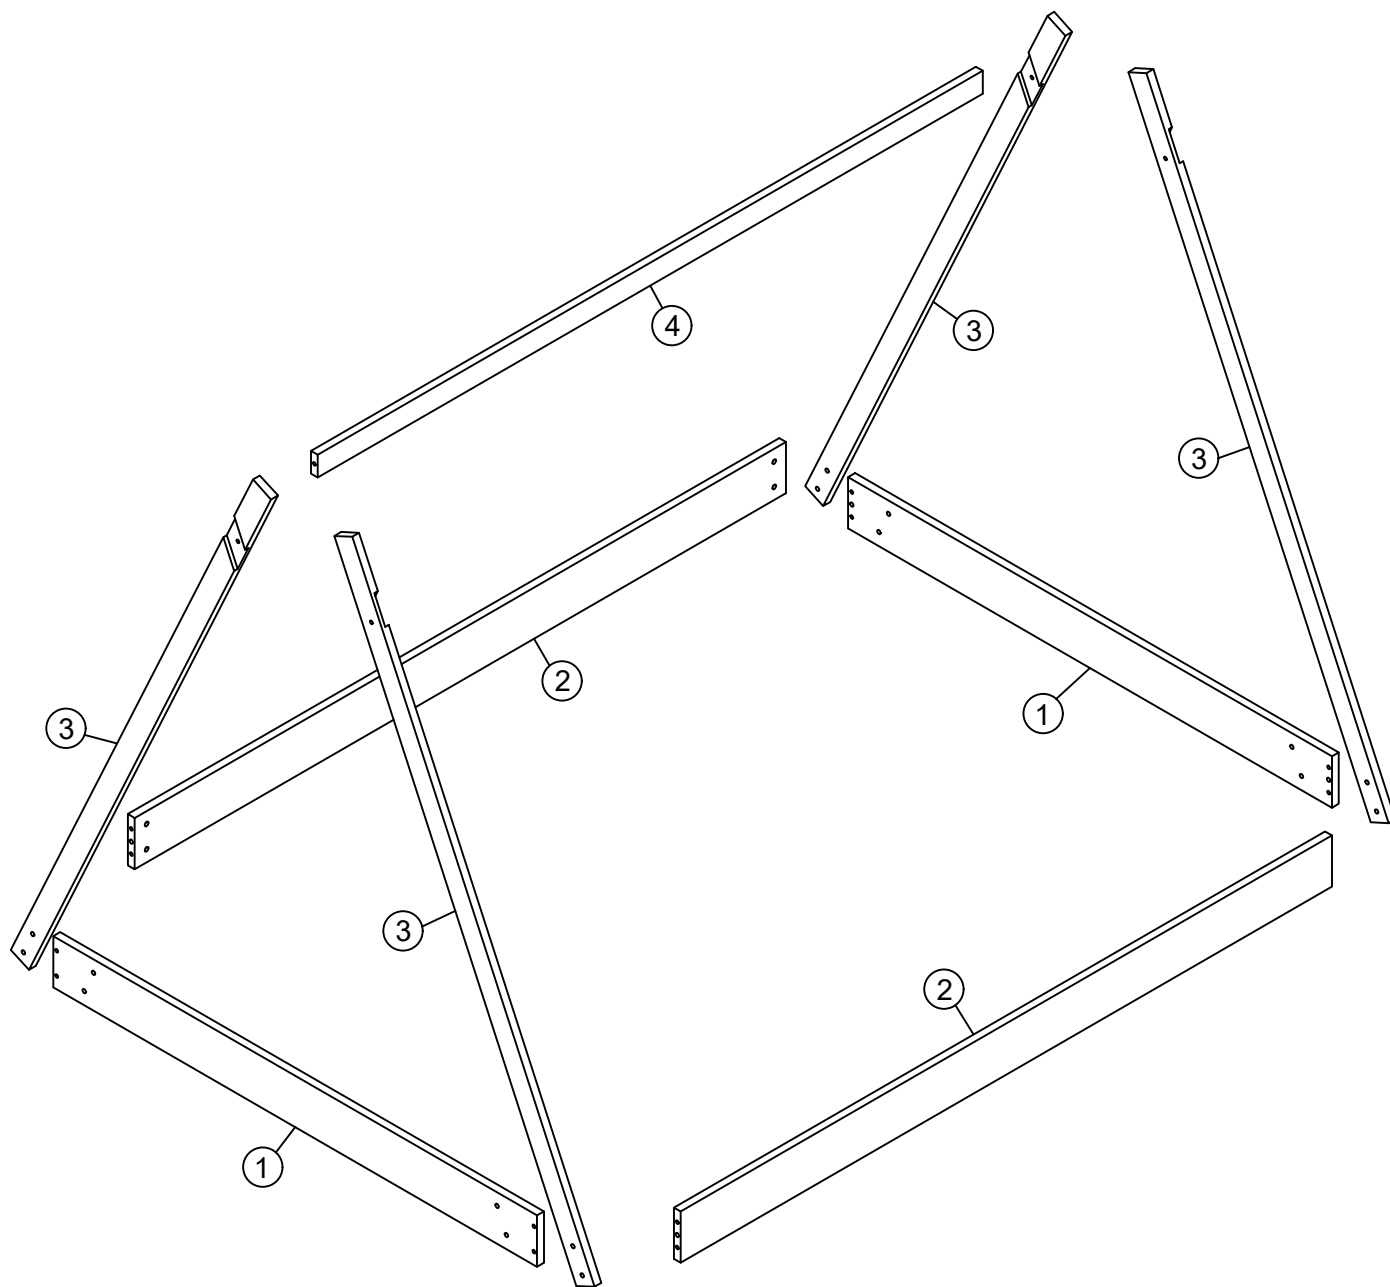

ASSEMBLY INSTRUCTIONS

PARTS LIST

WF307379


1	 Bed's head	2pcs	3	 Cross wooden bar	4pcs
2	 Bed shoulder	2pcs	4	 Crossbar	1pc

HARDWARE LIST

A	Ø4x15 	8PCS	D	40x20x20 	2PCS
B	1/4x65  	10PCS	E	10x40 	4PCS
C	1/4x35  	8PCS	L	4x58 	1PC


ASSEMBLY INSTRUCTIONS

Step 1

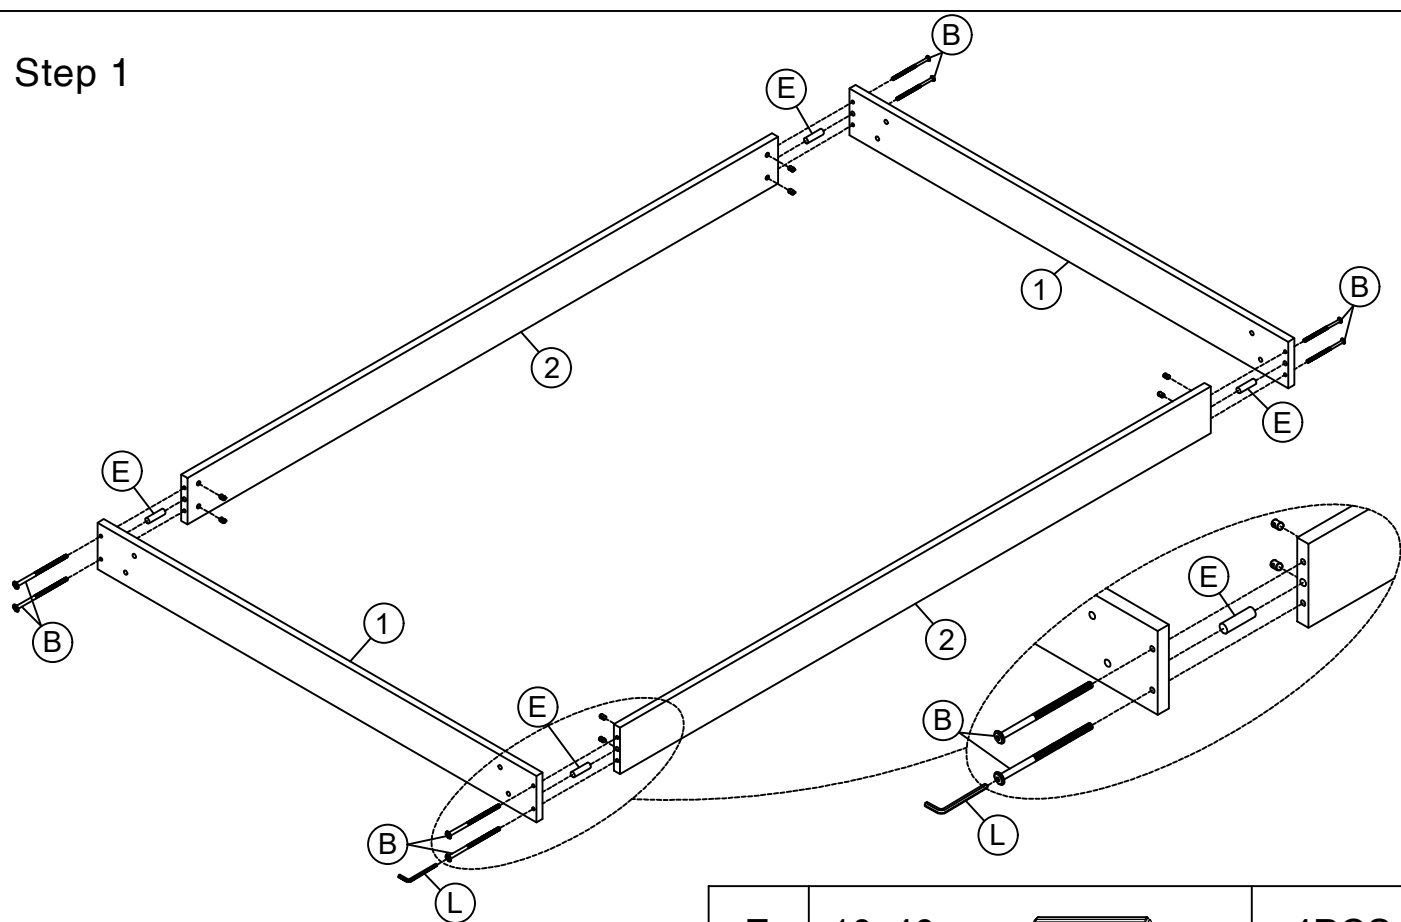


				E	10x40		4PCS	
B	1/4x65			8PCS	L	4x58		1PC

Step 2

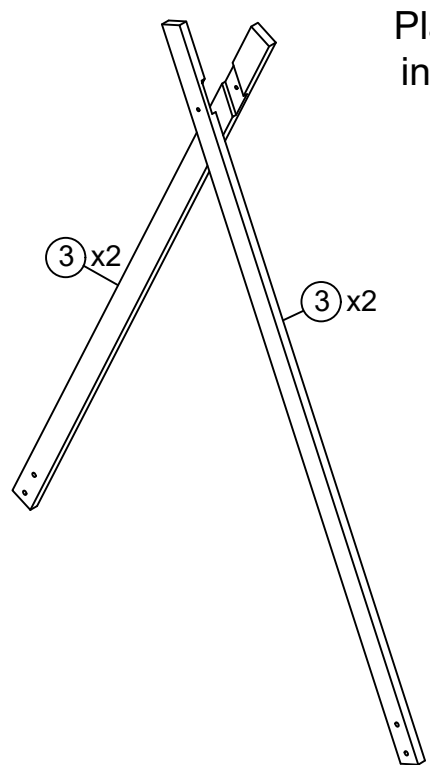



Place bar number "2" in position as above.

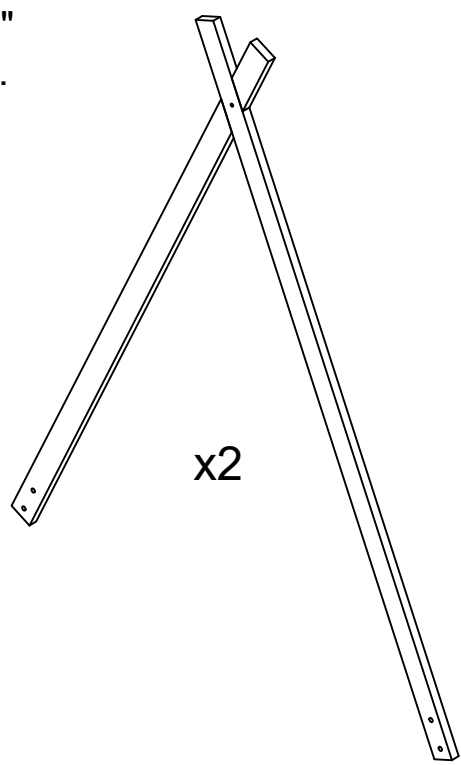


ASSEMBLY INSTRUCTIONS

Step 3

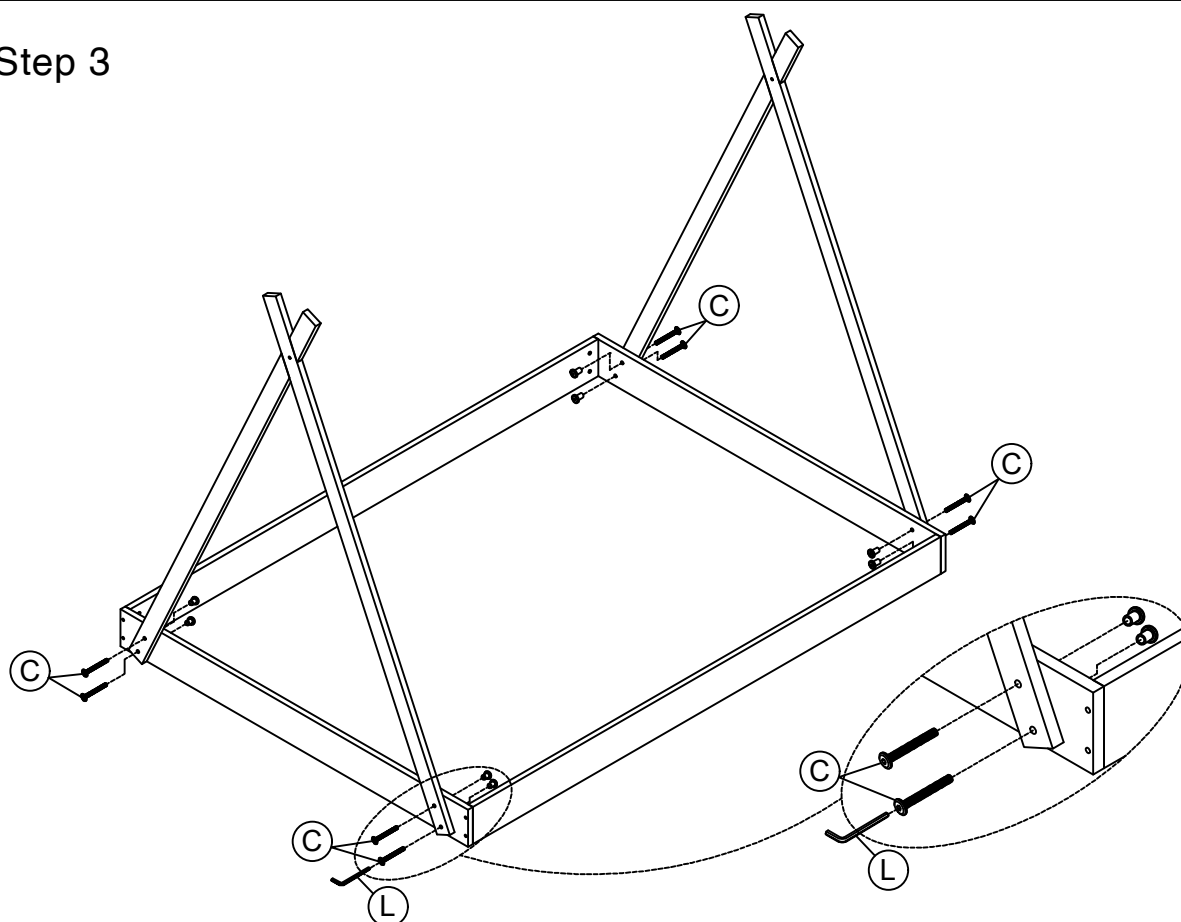

C	1/4x35		8PCS	L	4x58		1PC
---	--------	---	------	---	------	---	-----



Step 4

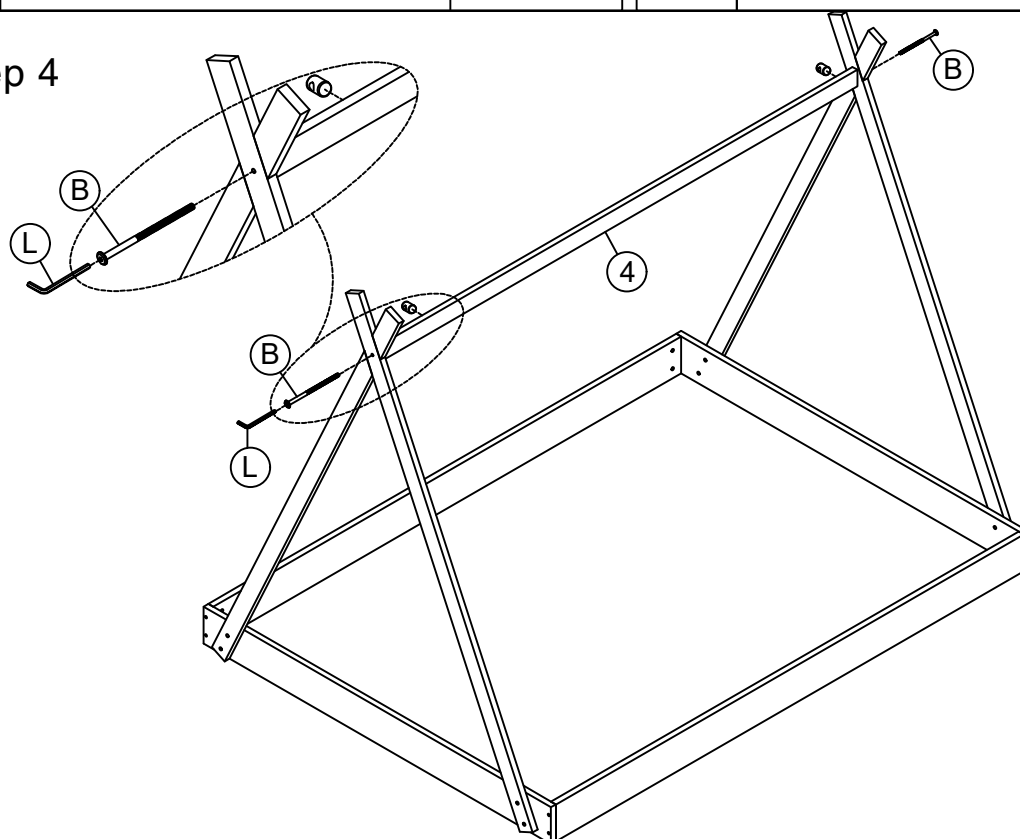

B	1/4x65		2PCS	L	4x58		1PC
---	--------	---	------	---	------	---	-----

ASSEMBLY INSTRUCTIONS

Step 5

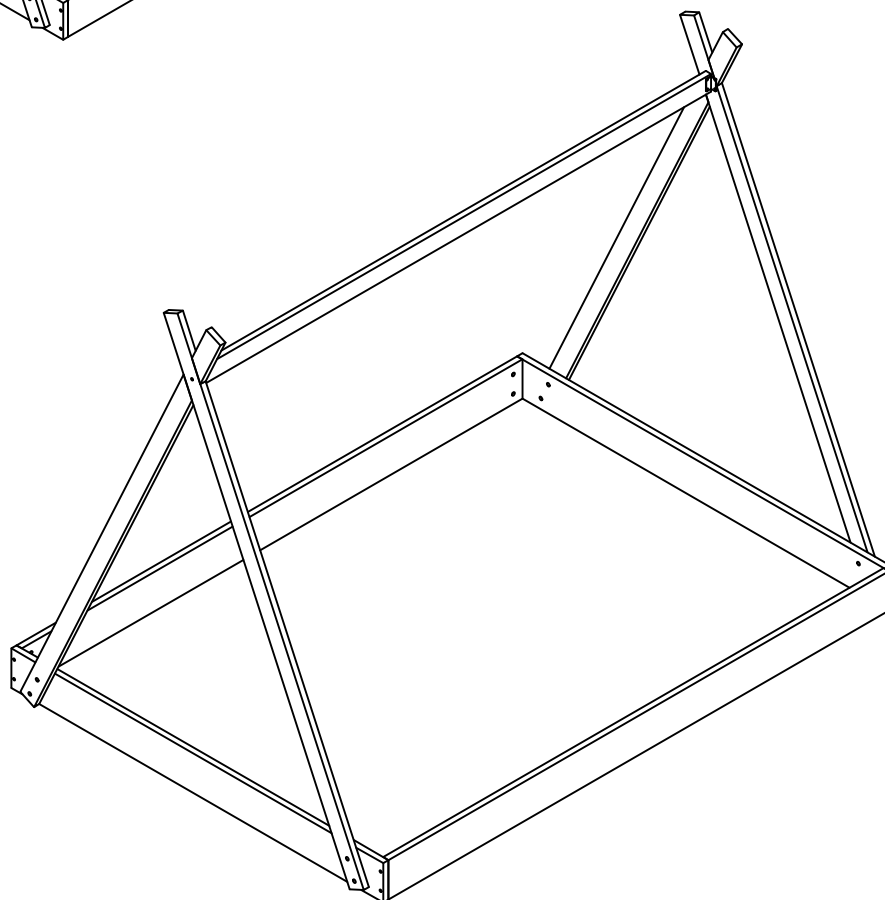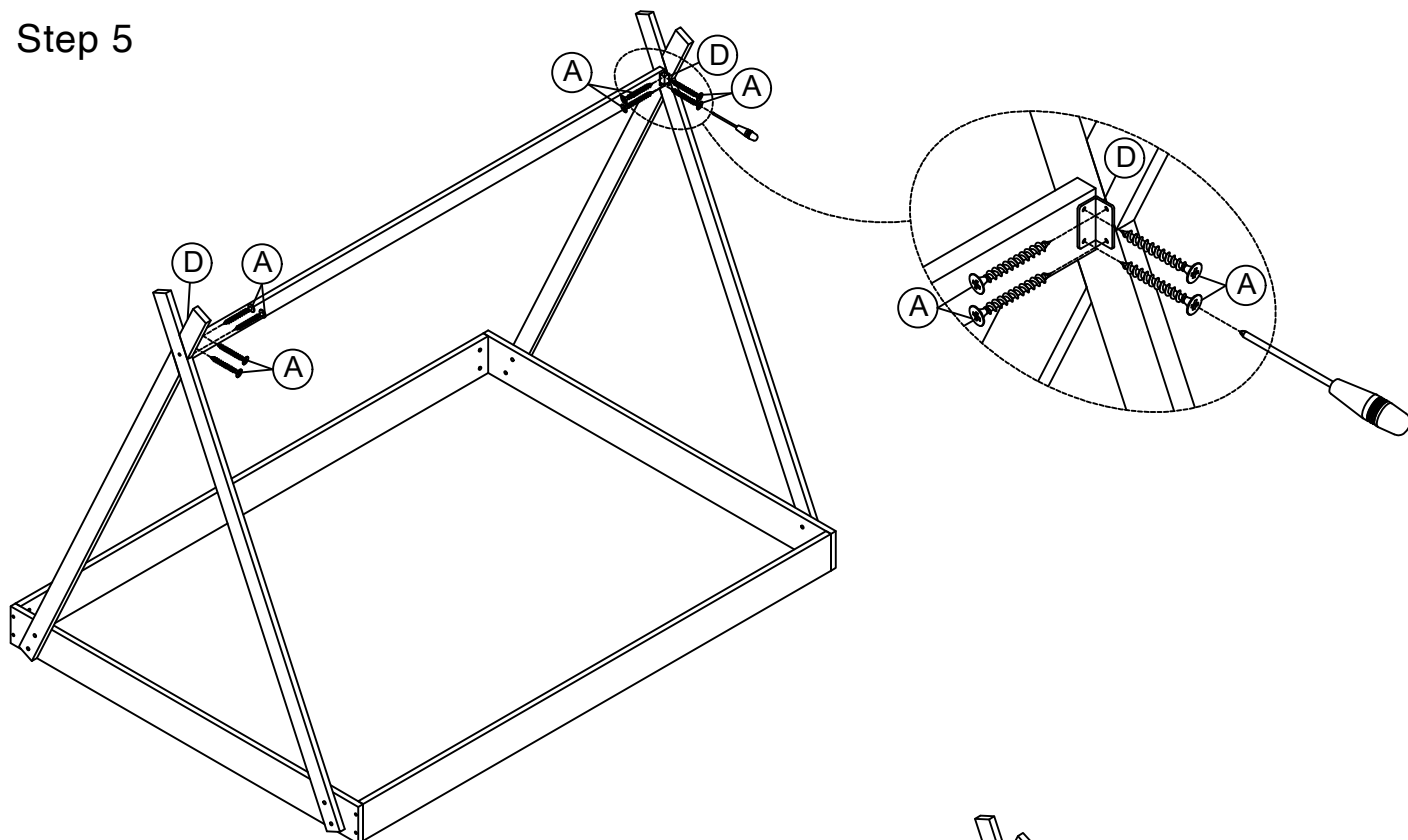

A

Ø4x15



8PCS

D

40x20x20



2PCS