


RESIN OUTDOOR STORAGE SHED 4.5x2.2 FT

If you have any questions about the product, please feel free to contact us.

E-Mail: Patiofurniture Serviceteam@outlook.com

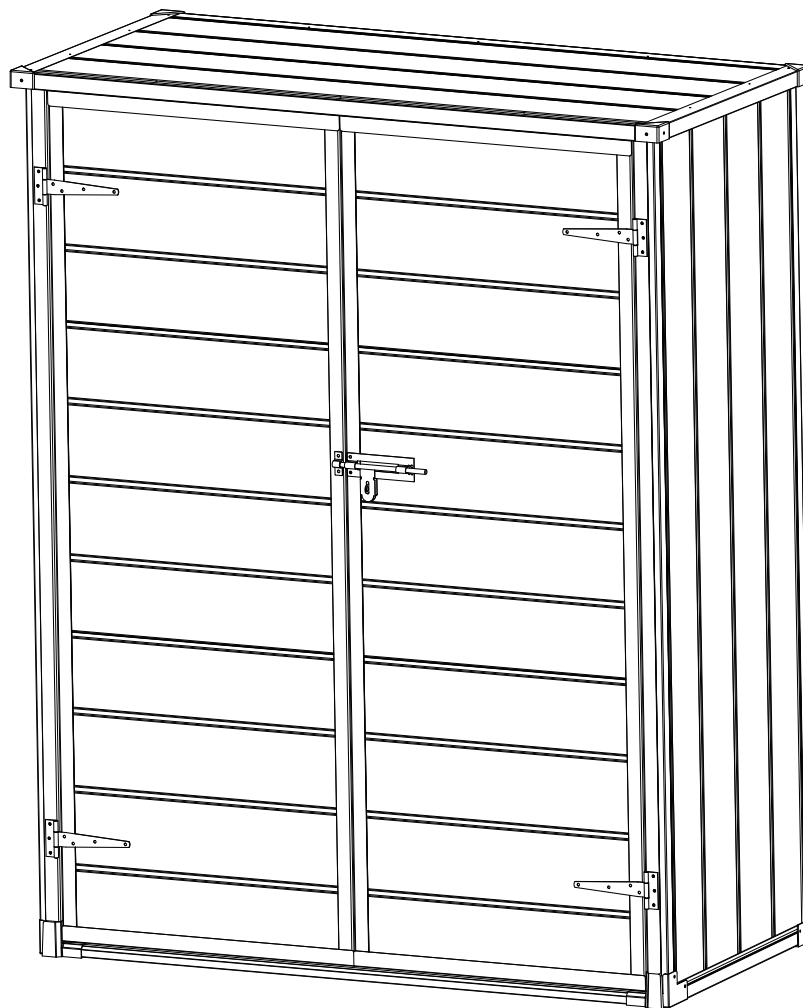

After-sales mailbox:
Patiofurniture Serviceteam@outlook.com

NOTICE

Please keep these instructions for future reference.

Dear Customer

● Thank you for your purchase. When you receive the product, please make sure that all the parts are intact. Then follow the entire installation instructions to install!

● **When installing, please be careful not to tighten the screws immediately! You need to make sure that all the screws are secured to 80%, then tighten them!**

● In order to protect the rattan from harm, and the screw hole from grind, do not use the electric drill, please use the manual screwdriver in the hardware package!

A . The outer box is damaged

B . The product is damaged / bent / cracked while you open the box

C . The parts / accessories / assembly tools are missing

D . The instructions are not clear and can not be referred

E . The product has functional problems




F . Other aspects that you are not satisfied with

Please feel free to contact us for help. Our after-sales team service (PatiofurnitureserVICETEAM@outlook.com) will reply within 24 hours and will do our best to resolve the problem for you.





















Please feel free to contact us for help, and provide the following information:

Platform/Shop name/Order ID/buyer's name/ Receiver's address/Problem description.
















HARDWARE LIST

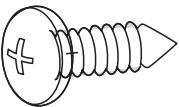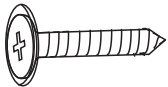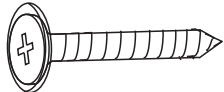Z410 	Z420 	ZW420 	ZW413 	Z425 
72 pc	53 pc	2 pc	30 pc	4 pc

PART LIST

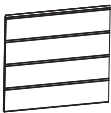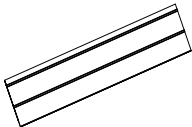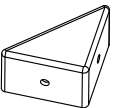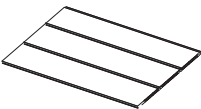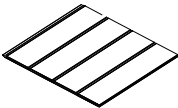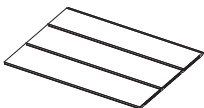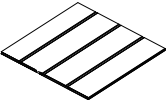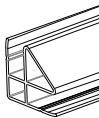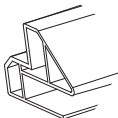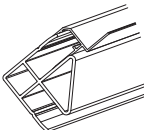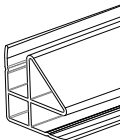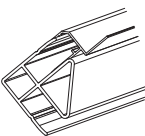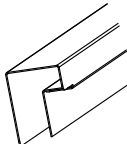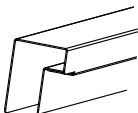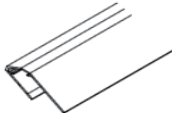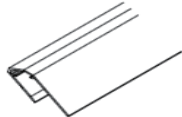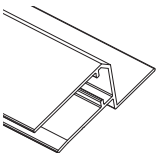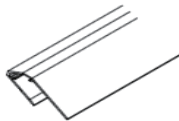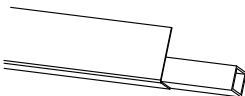
WF1 	WBL 	WB1-3 	WB1-2 	WBR 
1 pc	1 pc	2 pc	1 pc	1 pc
WR1-2 	WR1-1 	SG26 	WD1-1 	WD1-2 
1 pc	1 pc	4 pc	1 pc	1 pc
WD1-3 	WD1-4 	WD1-5 	WP1 	WP3 
1 pc	1 pc	1 pc	1 pc	1 pc
WP2 	WPAL 	WP4 	WAP 	WPAR 
2 pc	1 pc	2 pc	2 pc	1 pc
WS4 	WS5 	WS6 	WA2L 	WA2R 
2 pc	1 pc	1 pc	1 pc	1 pc
WA1 	WA2 	WAS 	WA4 	WS1 
1 pc	1 pc	1 pc	2 pc	2 pc

PART LIST

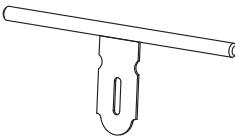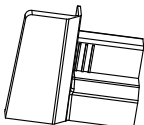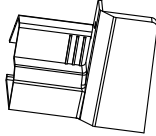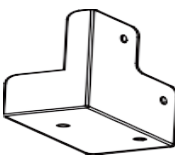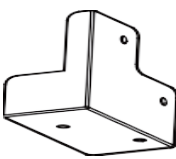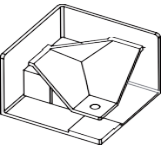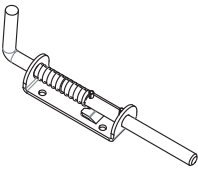
M01 	M03-6L 	M03-7 	M04 	SG8 
4 pc	1 pc	1 pc	1 pc	2 pc
SG9 	SG7-3 	SG7-4 	SG11 	SG11-2 
5 pc	1 pc	1 pc	1 pc	1 pc
SG6 	DC 	Drill 	WK1 	WK2 
2 pc	2 pc	1 pc	2 pc	2 pc
WK3 	QC 	W2-1 	WS2 	WS3 
1 pc	2 pc	1 pc	2 pc	2 pc
W1 				
2 pc				

1. Please ensure that all accessories are complete before starting the installation.
 2. Due to the variety of accessories, many accessories may be glued together, please check carefully
 3. If any accessories are missing or damaged, please contact the seller immediately.
- E-Mail: Patiofurniture Serviceteam@outlook.com



PARTS SCHEMATIC

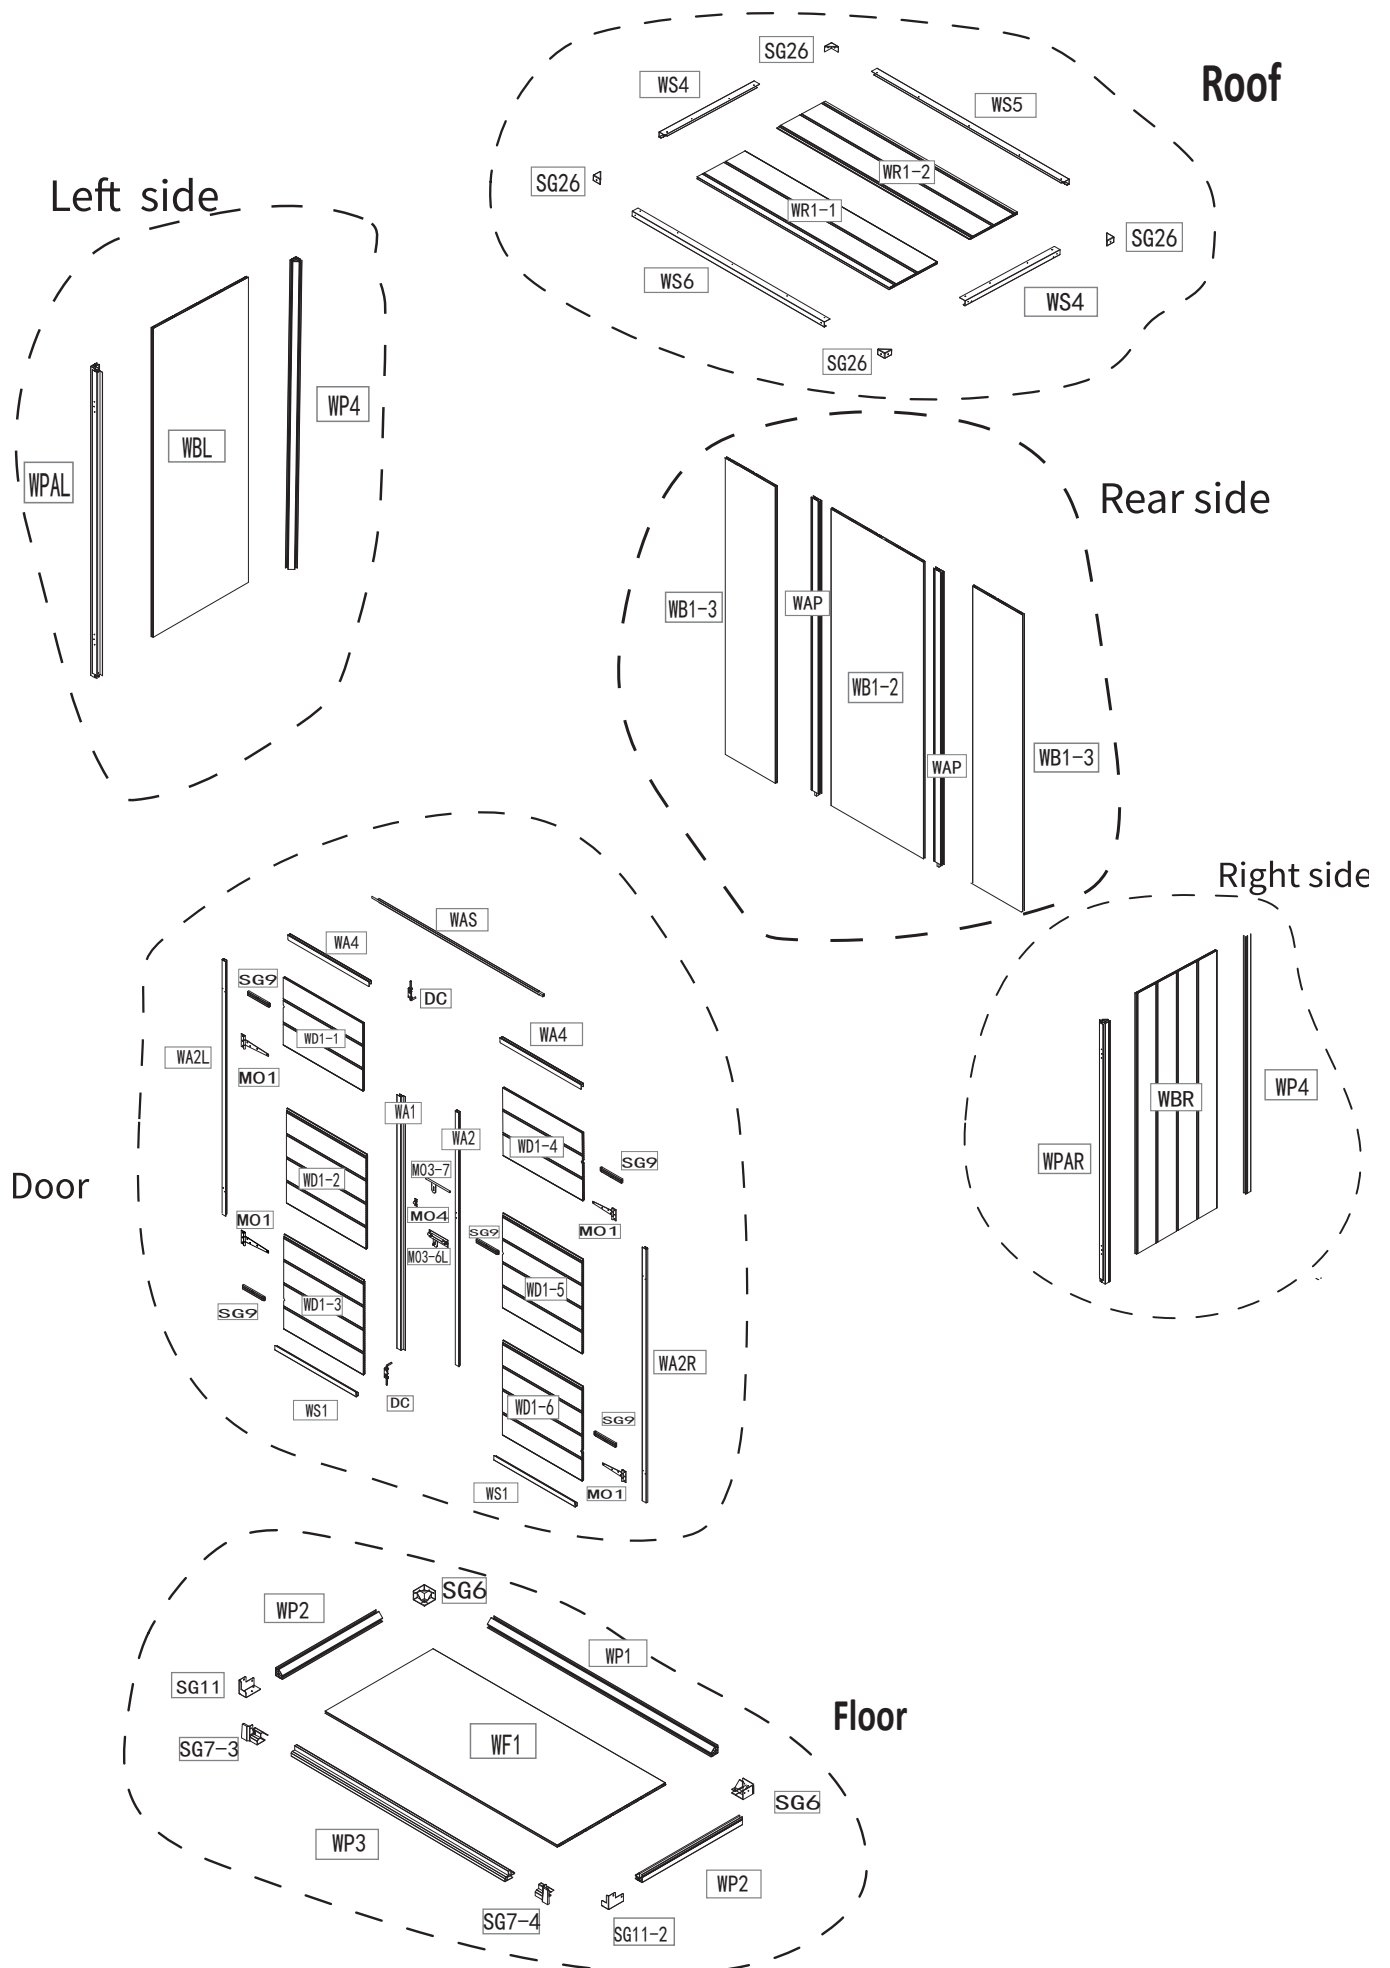

FLOOR ASSEMBLY PREVIEW


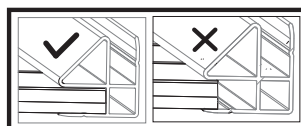


● Fully fit the panel inside the profile

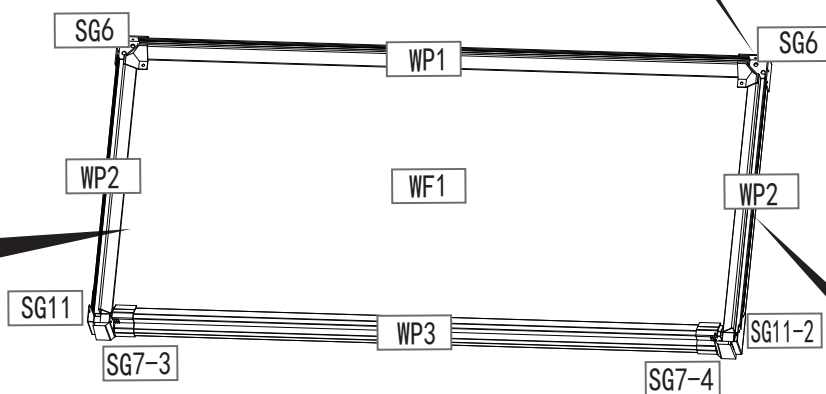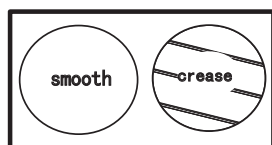


● Use spatula (part "SG8") for easier insertion of panel into profile

STEP 1

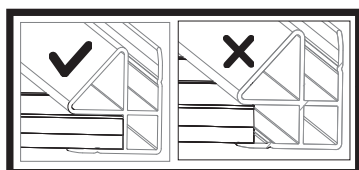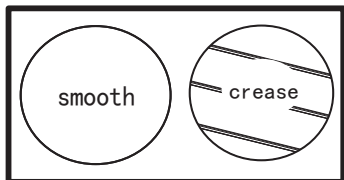


● Fully fit the panel inside the profile

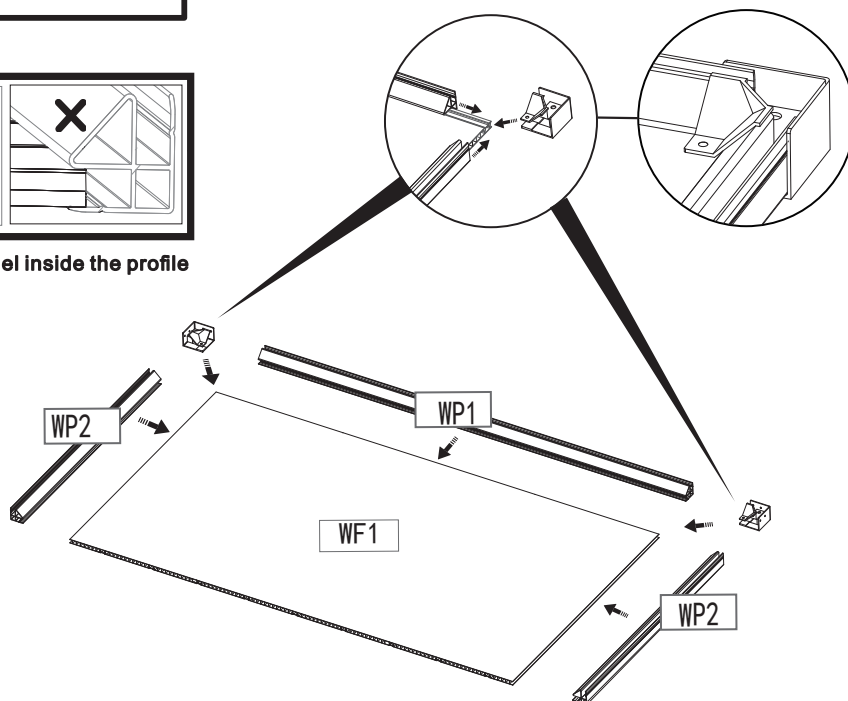

WF1		1 PC
WP1		1 PC
WP2		2 PC
SG6		2 PC

STEP 2

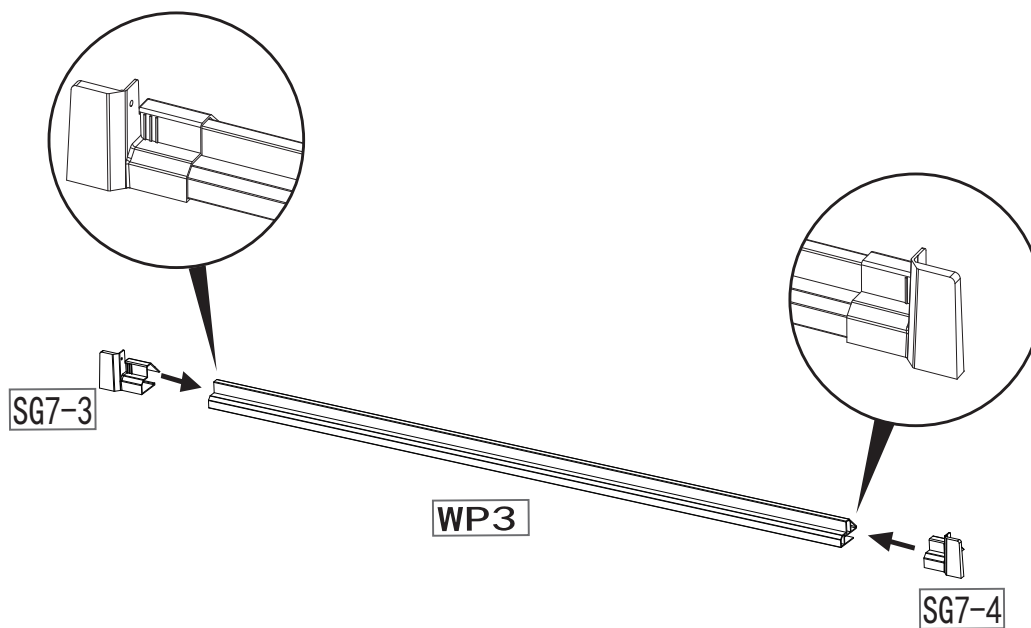

SG7-3



1 PC

SG7-4





1 PC

WP3




1 PC

STEP 3

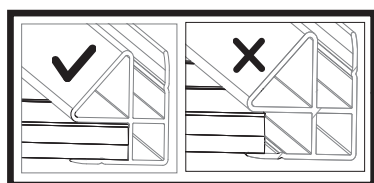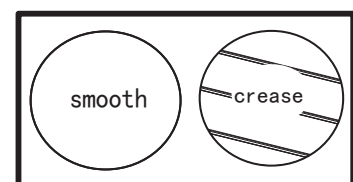

● Fully fit the panel inside the profile


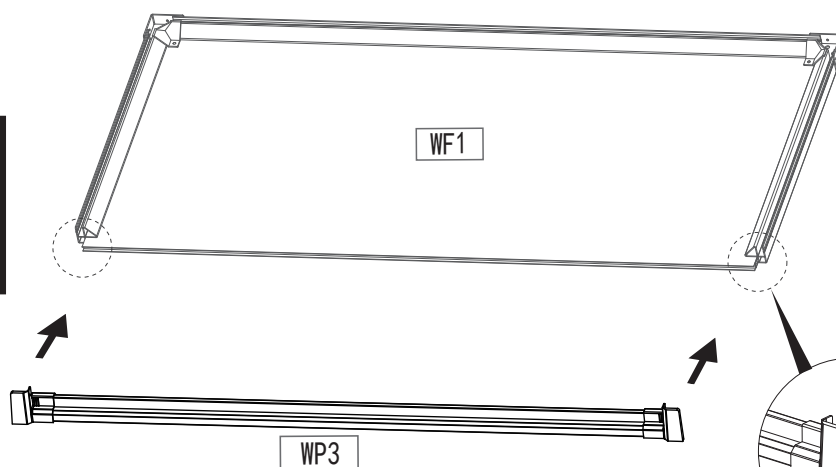


SG8



● Use spatula (part "SG8") for easier insertion of panel into profile


STEP 4

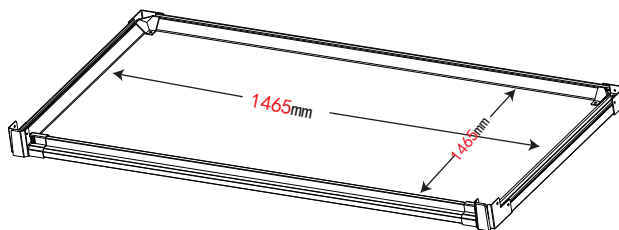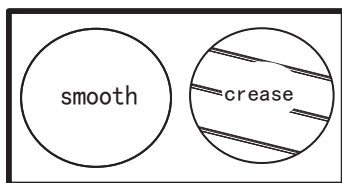


Z410




2 PC

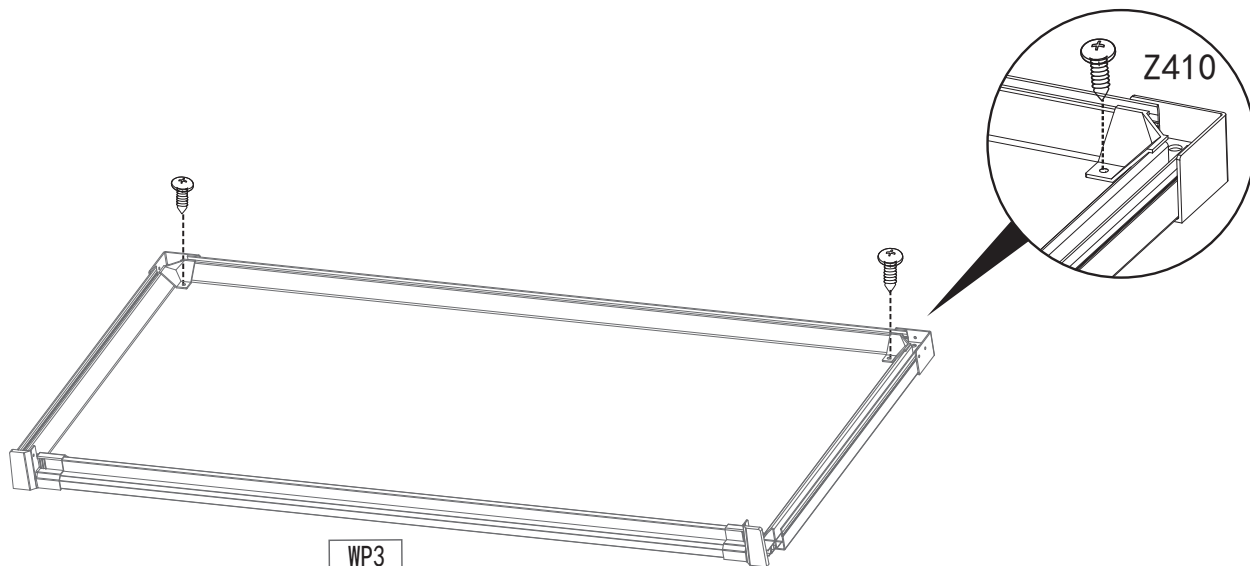


STEP 5

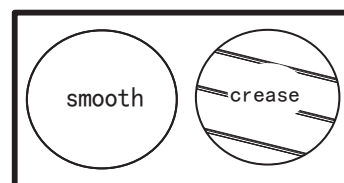


● Turn over the floor panel

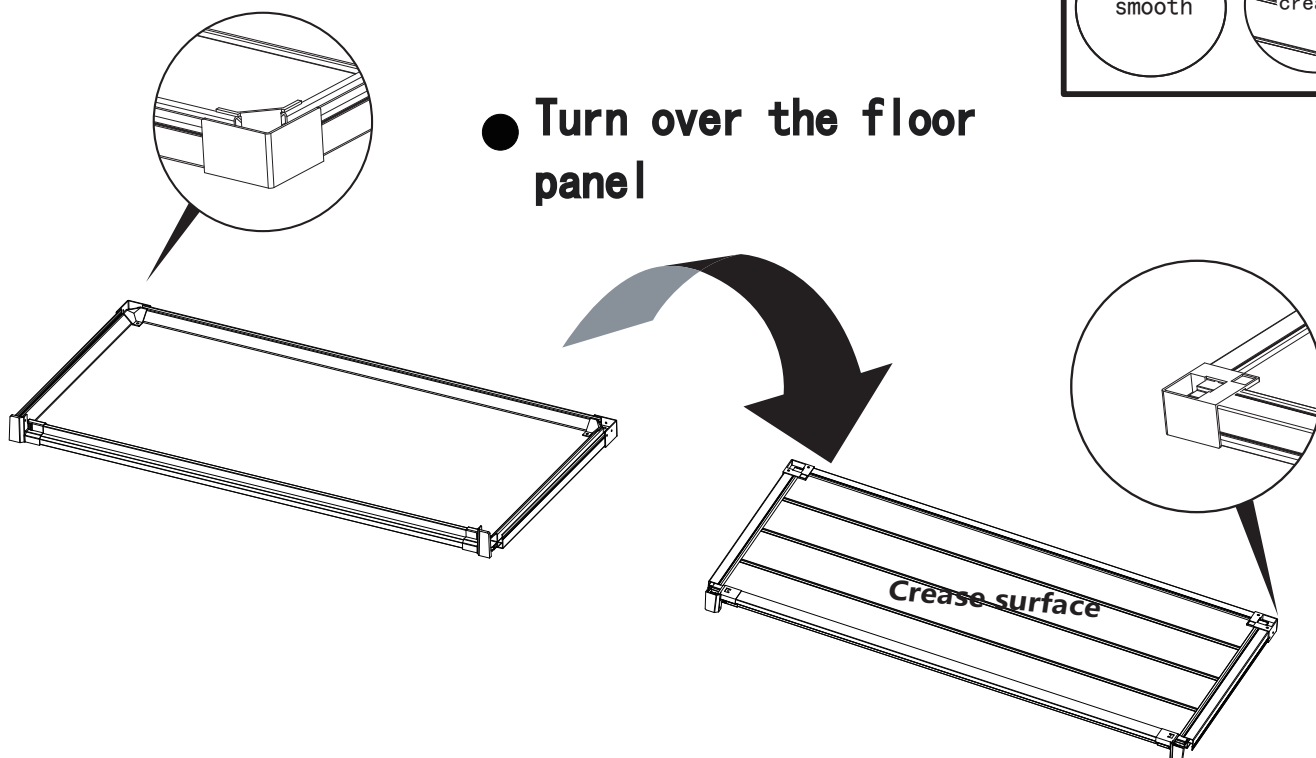

STEP 6

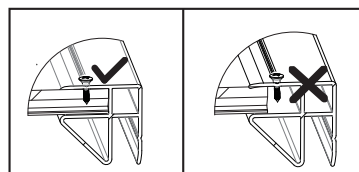

●Nail along the marked line on profile.

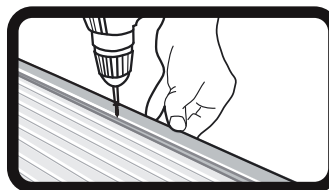

●Nail along the marked line on profile


Z420




10 PC

Caution:


Please use Drill to predrill a hole at depth 1mm before screw.

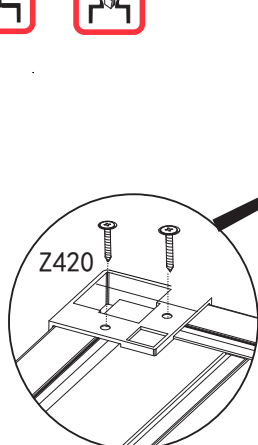

x2

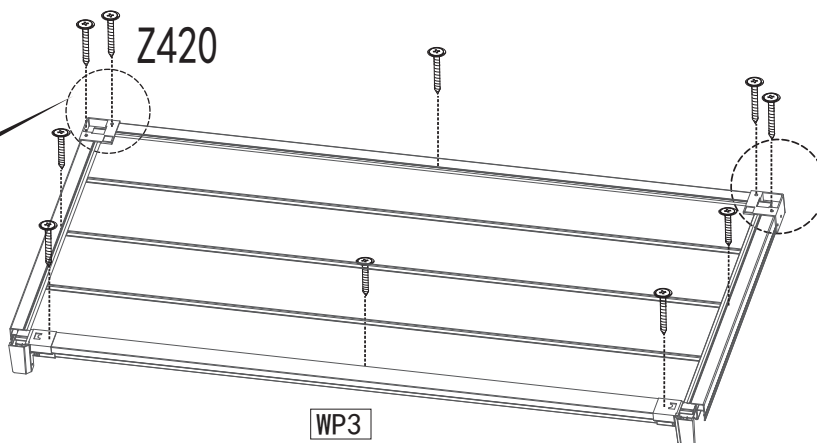

STEP 7

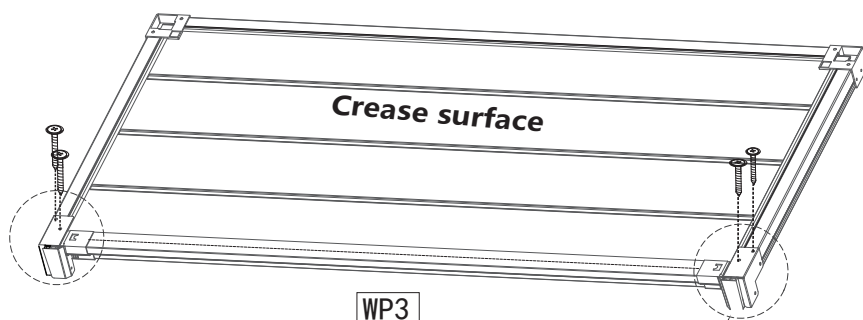

Z420

SG11



1 PC

Z420




4 PC

SG11-2




1 PC


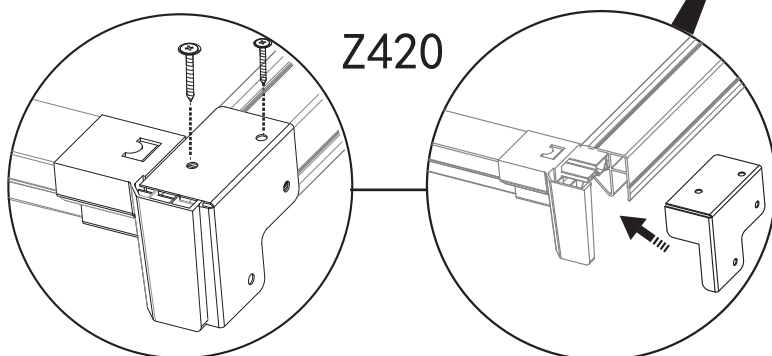


Floor Assembly Done!

WALL ASSEMBLY PREVIEW

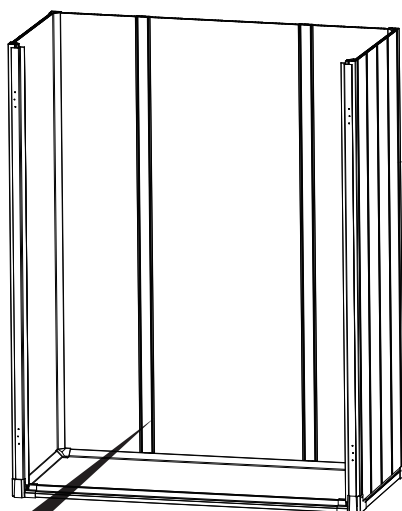

- Please confirm the inside and outside of the board before assembling as shown in the figure.

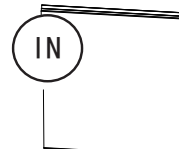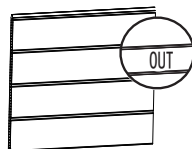



- Use spatula (part "SG8") for easier insertion of panel into profile

WP3


SG8

STEP 8

- Turn over the floor panel

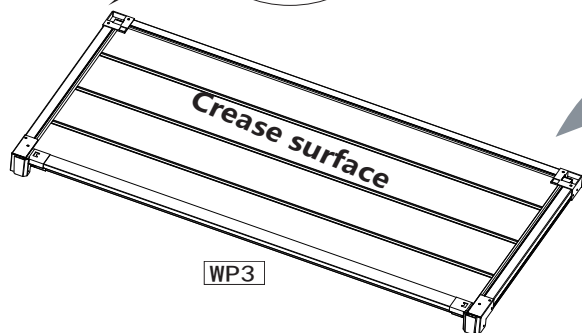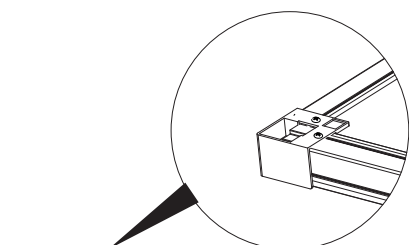


WP3

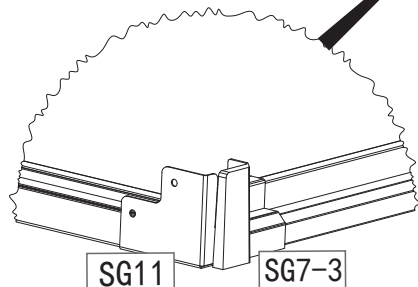




SG11

SG7-3

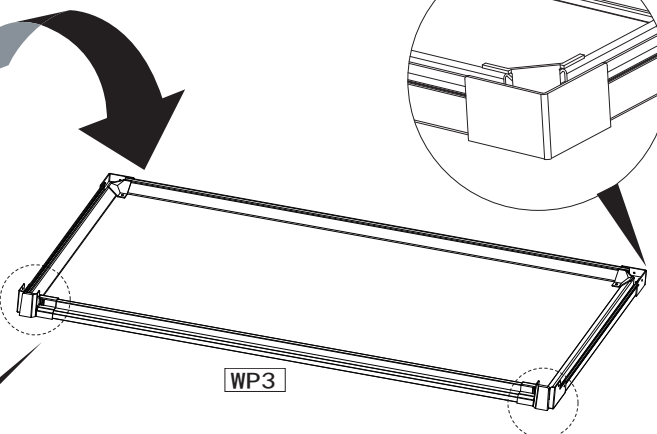

WP3

STEP 9

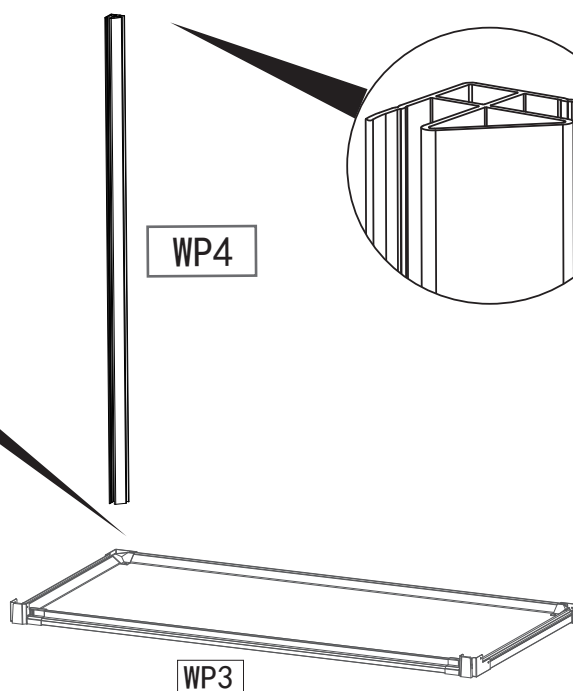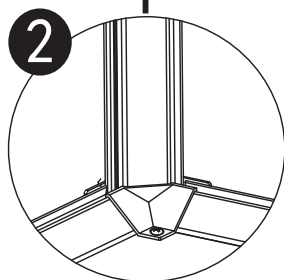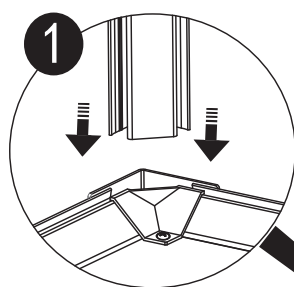


WP4




1 PC

STEP 10

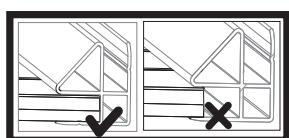

● Fully fit the panel inside the profile

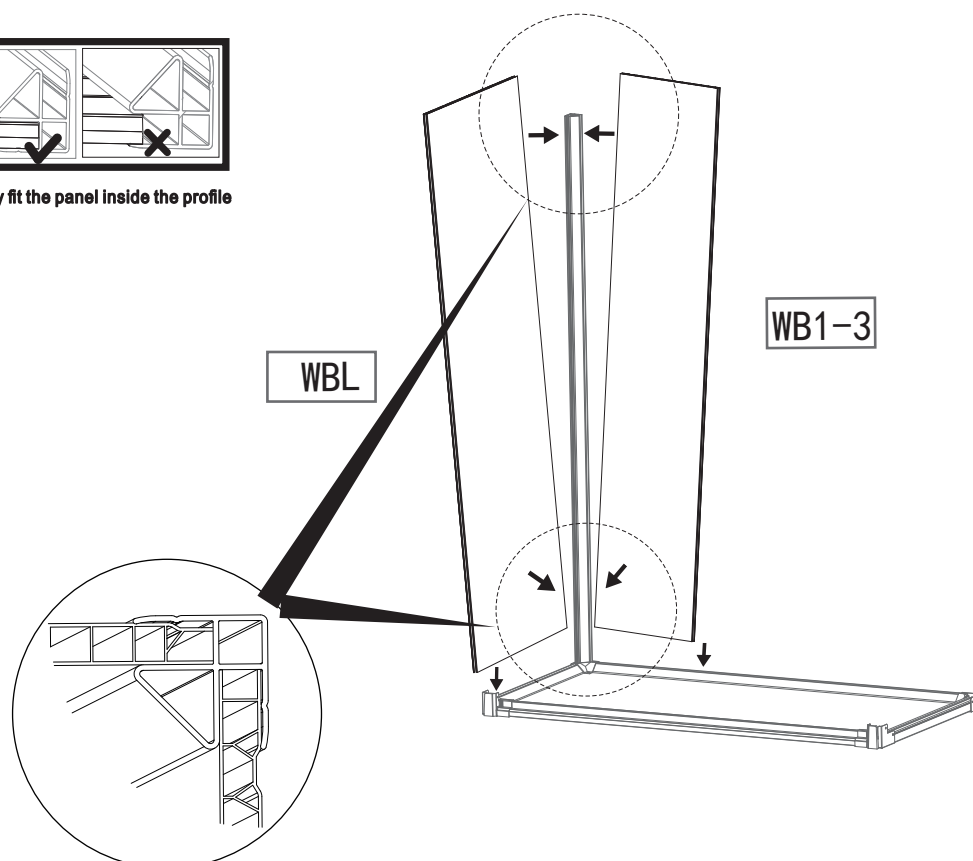

WBL



1 PC

WB1-3




1 PC


SG8




STEP 11

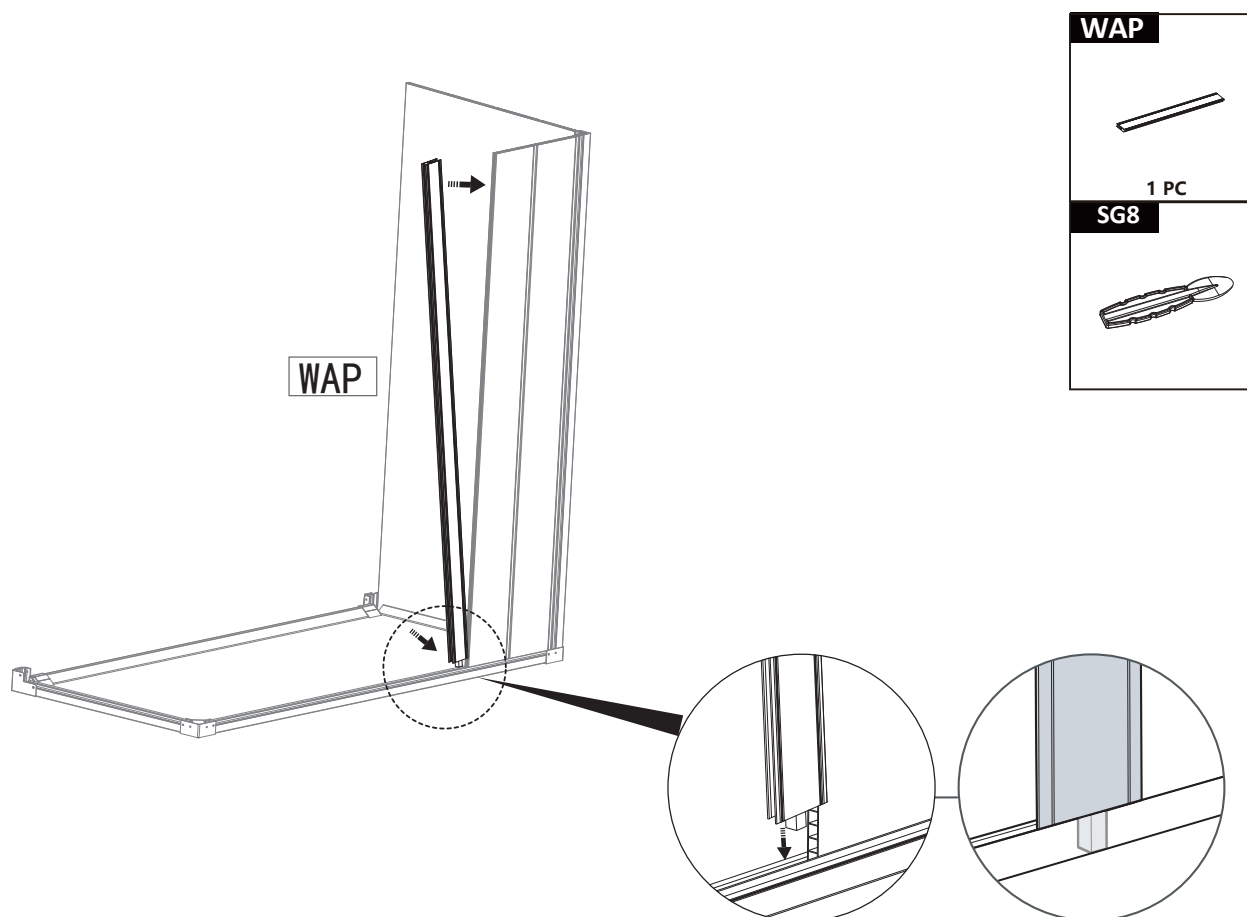

STEP 12

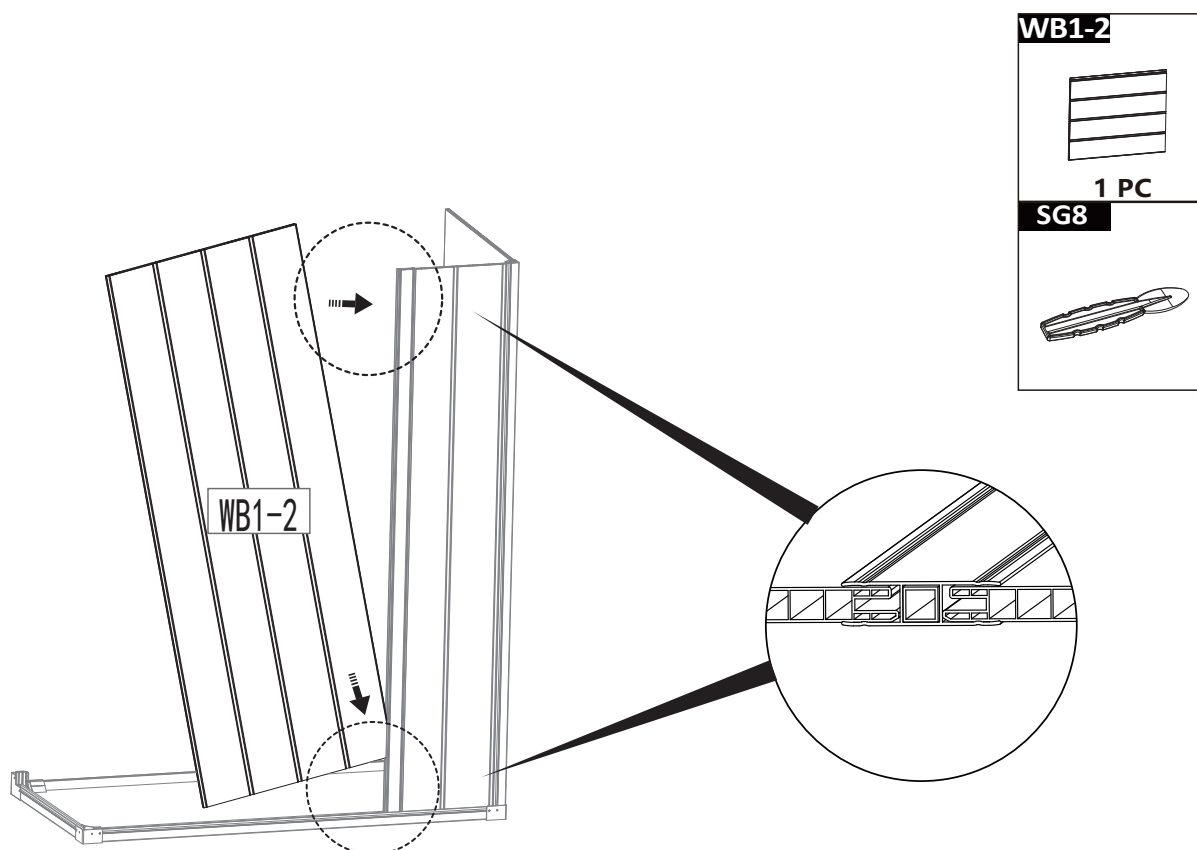

STEP 13


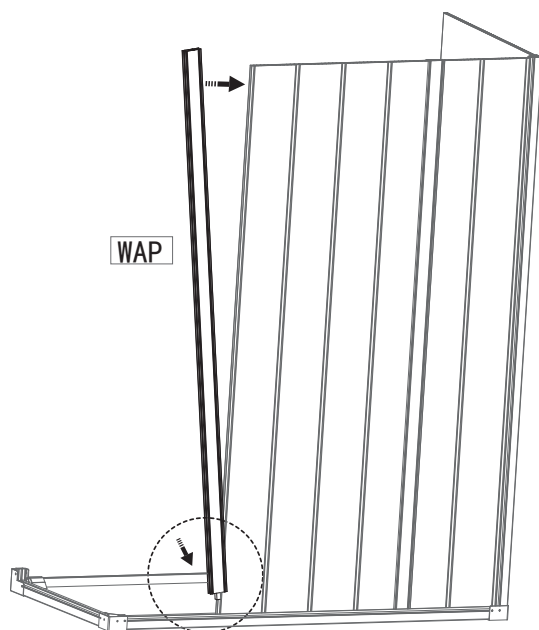


WAP




1 PC

SG8

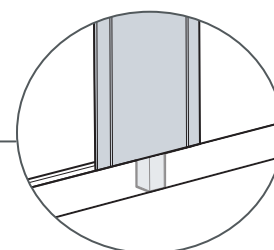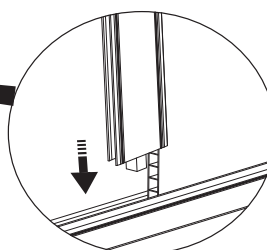


STEP 14

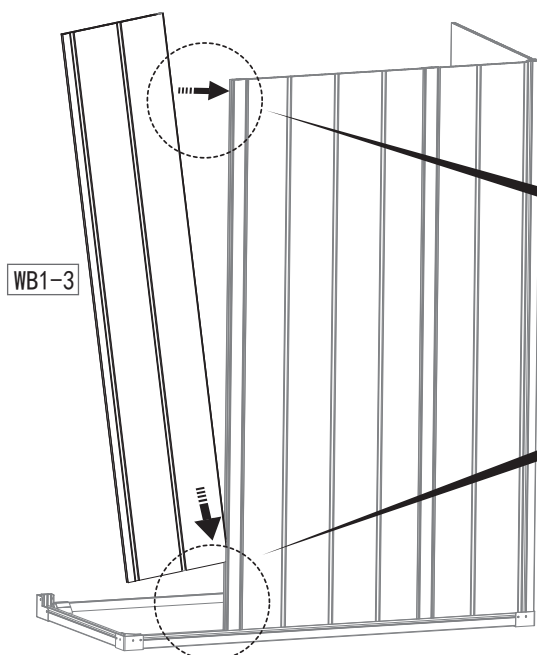


WB1-3




1 PC

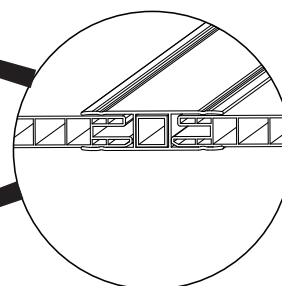


results show

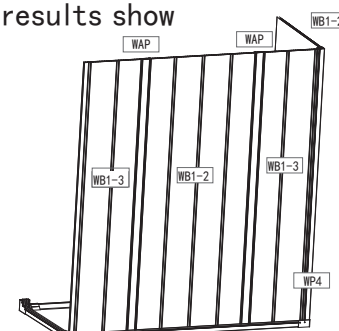

STEP 15

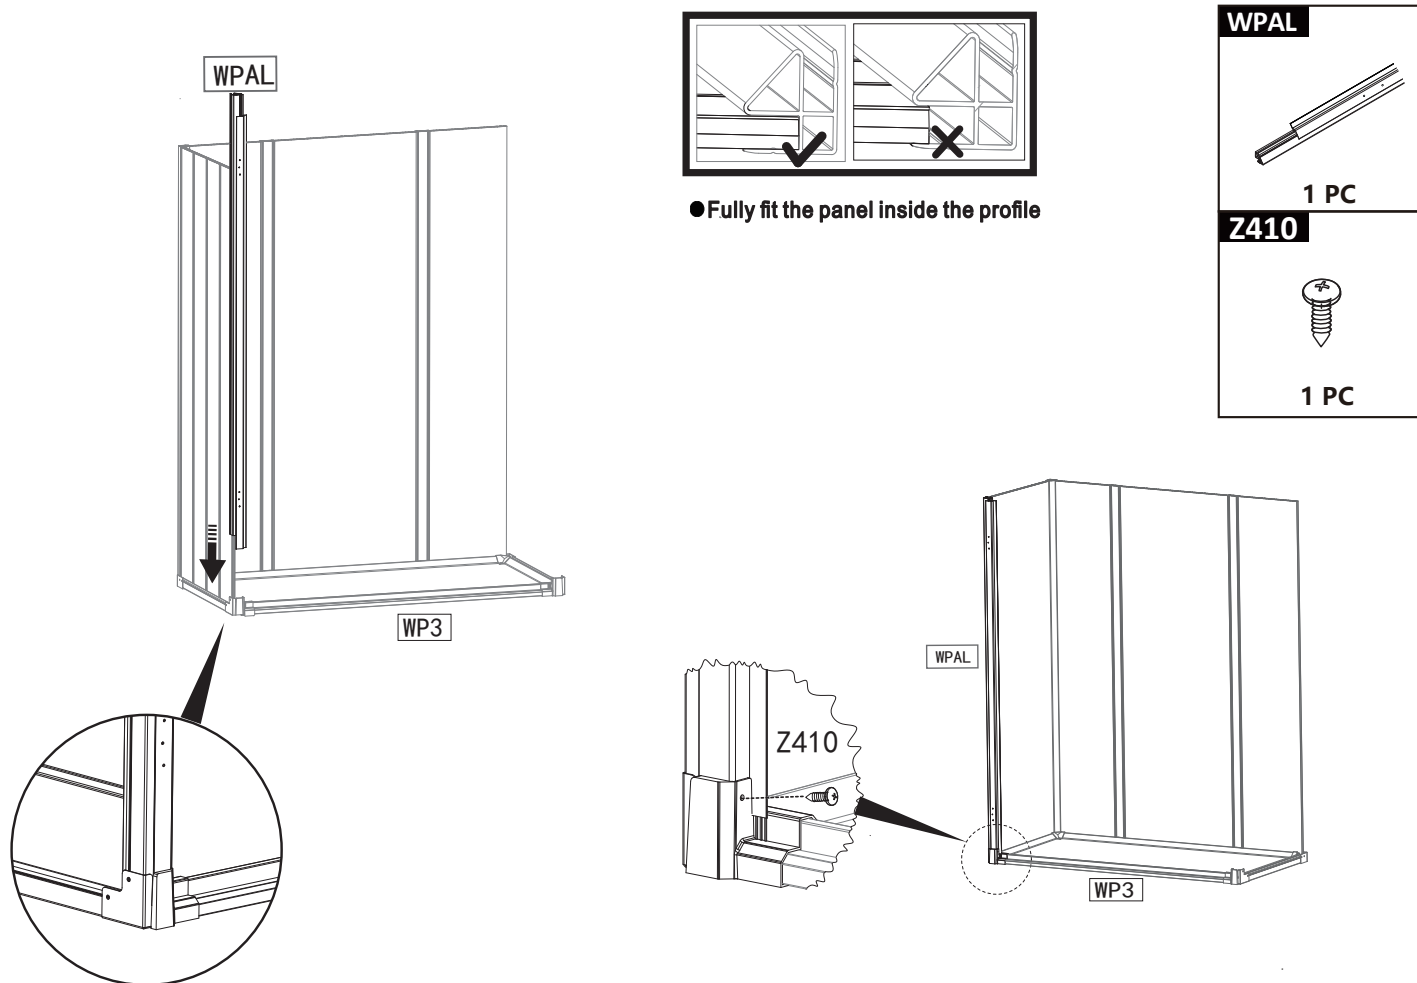


STEP 16

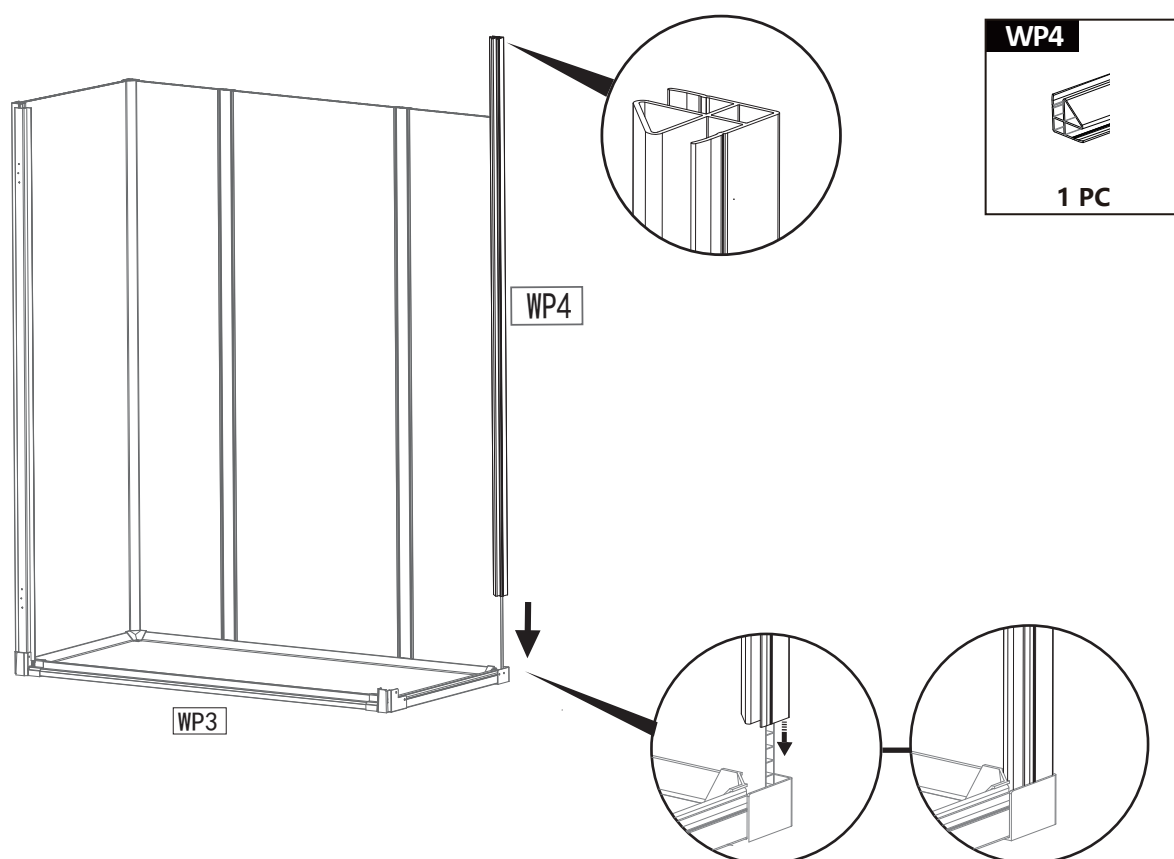

STEP 17

Caution:

Please use Drill to predrill a hole at depth 1mm before screw.

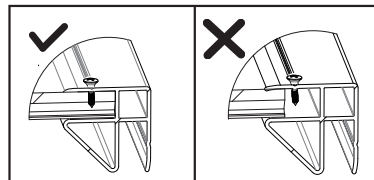


● Fully fit the panel inside the profile;
then screw on mark line


Z420



8 PC

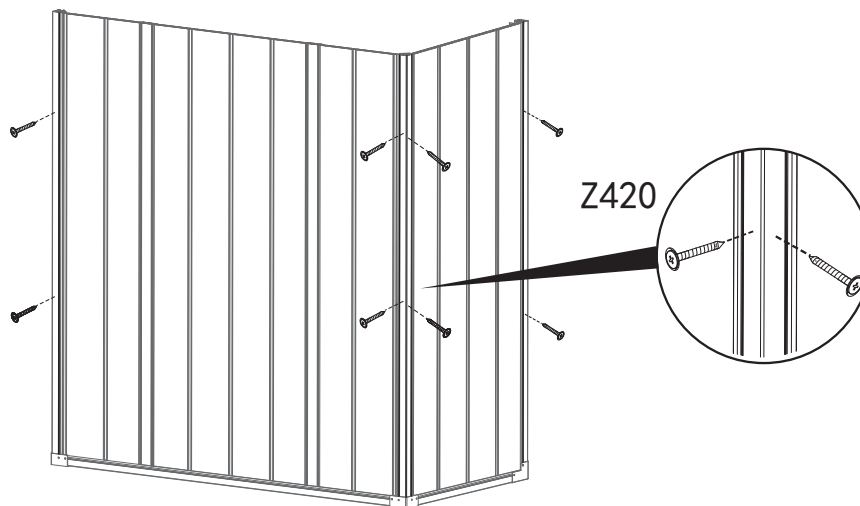

STEP 18

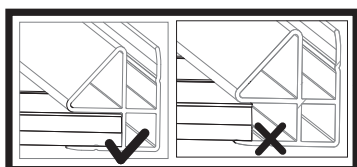

● Fully fit the panel inside the profile




WBR






1 PC

SG8

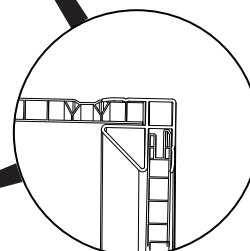


STEP 19

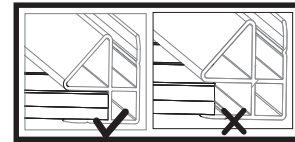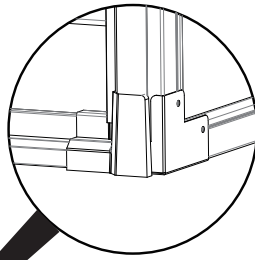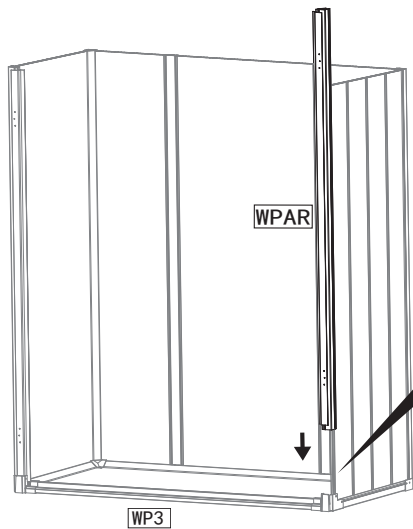

● Fully fit the panel inside the profile

WPAR



1 PC



SG8



Z410




1 PC

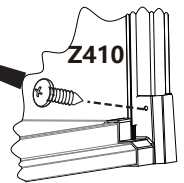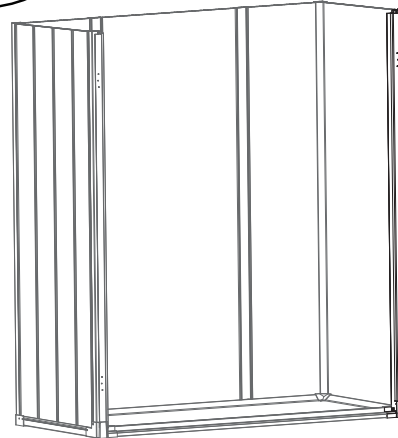

STEP 20

Caution:

Please use Drill to predrill a hole at depth 1mm before screw.

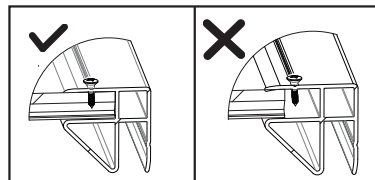




● Fully fit the panel inside the profile; then screw on mark line

Z420




17 PC

SG8

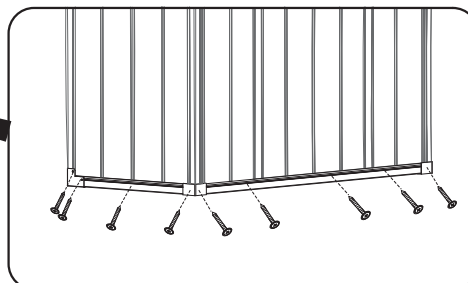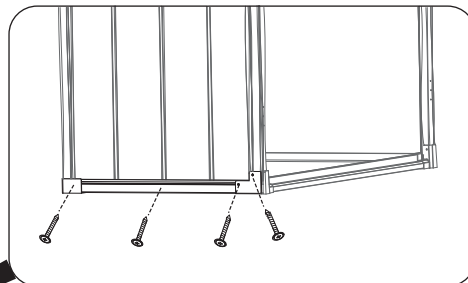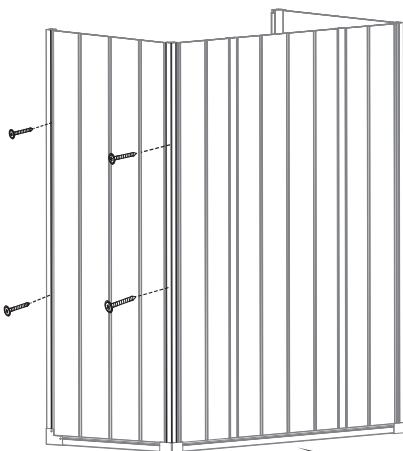


Wall Assembly Done!


ROOF PARTS PREVIEW

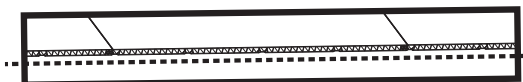



●The floor panels must be straight

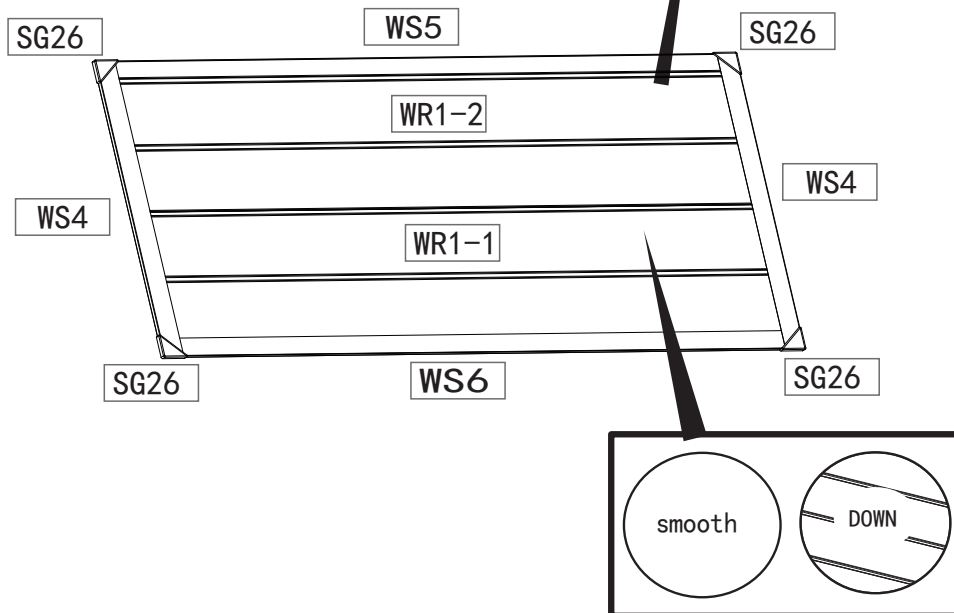

STEP 21

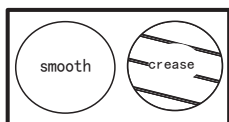

This link is smooth on top.

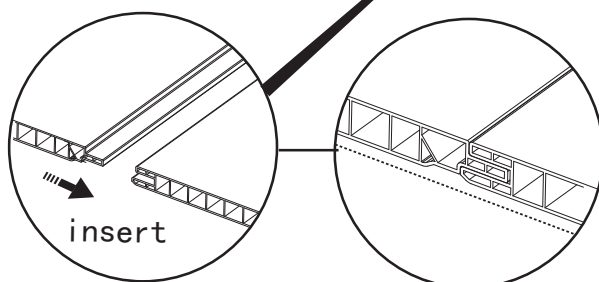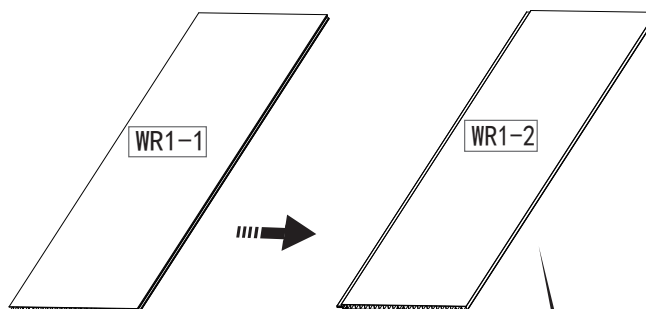


WR1-2
1 PC
SG8
WR1-1
1 PC



●The floor panels must be straight


STEP 22

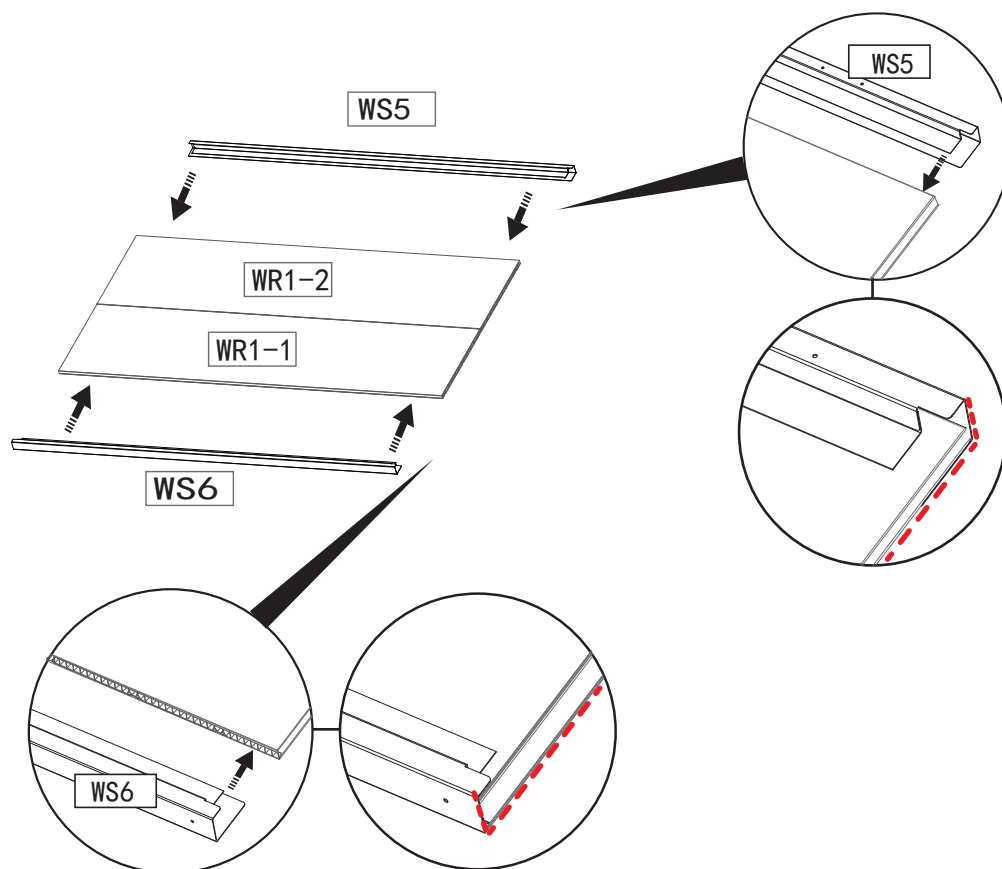

WS6	
	1 PC
WS5	
	1 PC
SG8	

In this link, the edge line of WS6 overlaps with the edge line of the board.

STEP 23

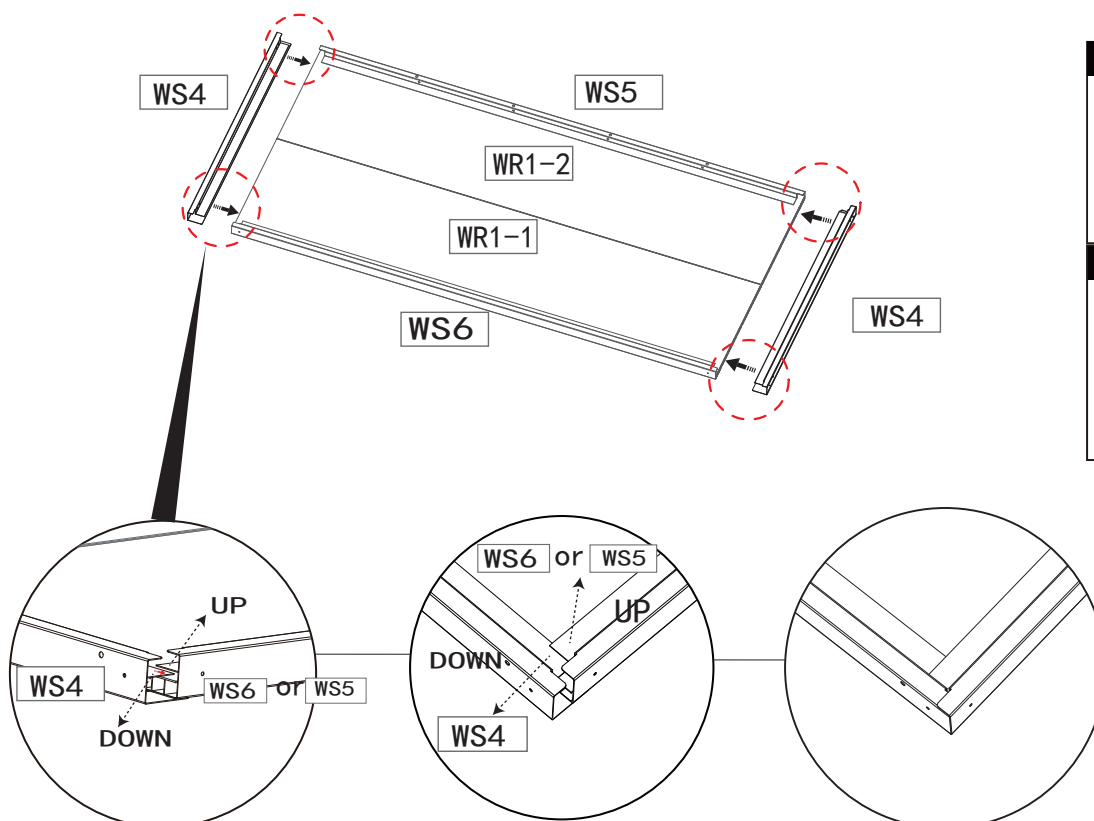

WS4	
	2 PC
SG8	


Please pay attention to the installation sequence.

STEP 24

SG26




4 PC

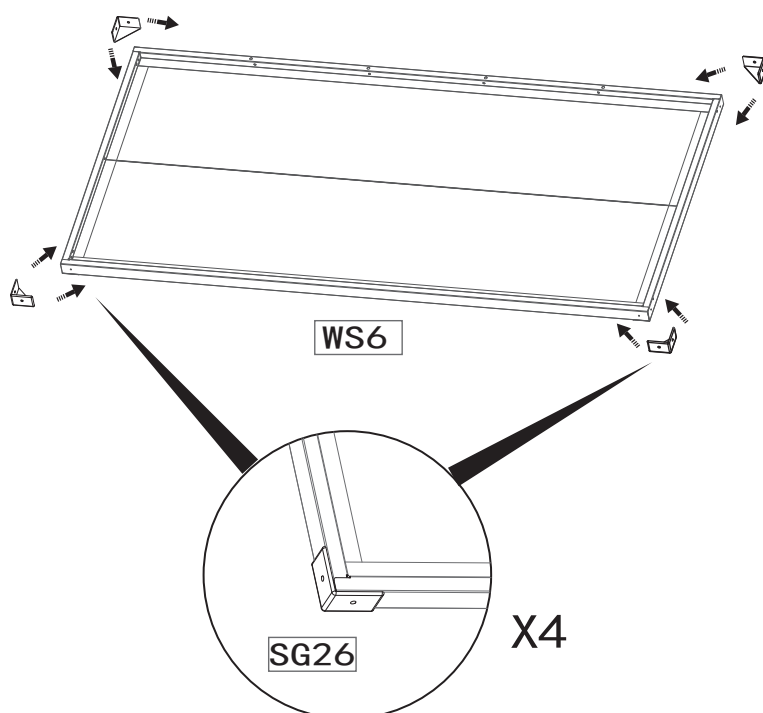


STEP 25


● Ensure AB equal to CD before nailing.

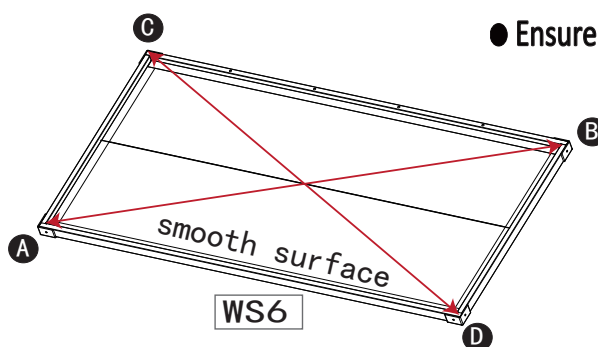


● Turn over the floor panel

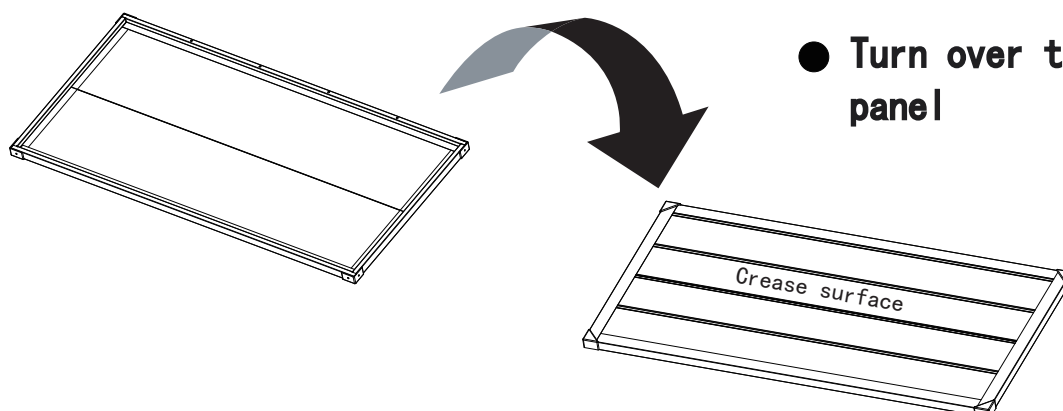

STEP 26

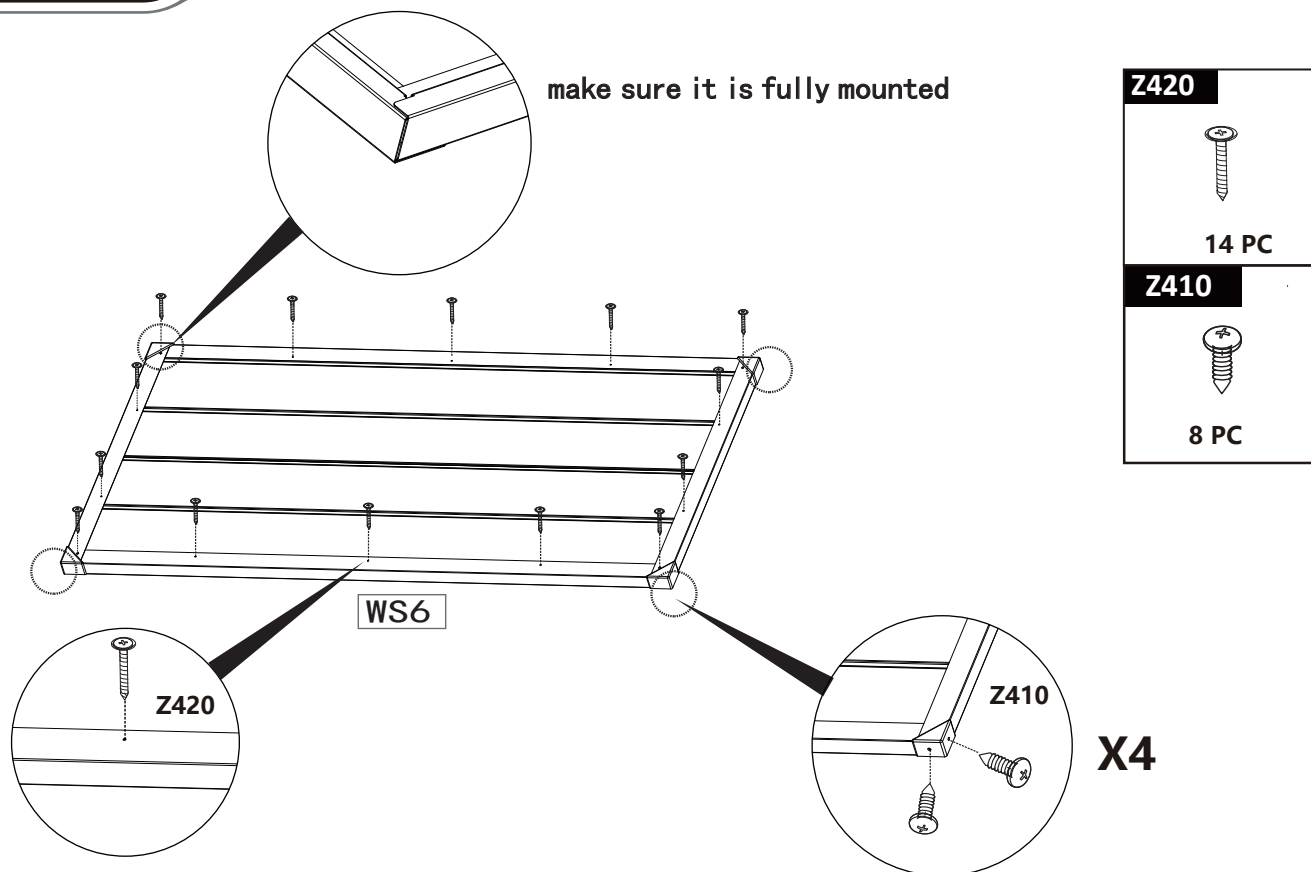


STEP 27

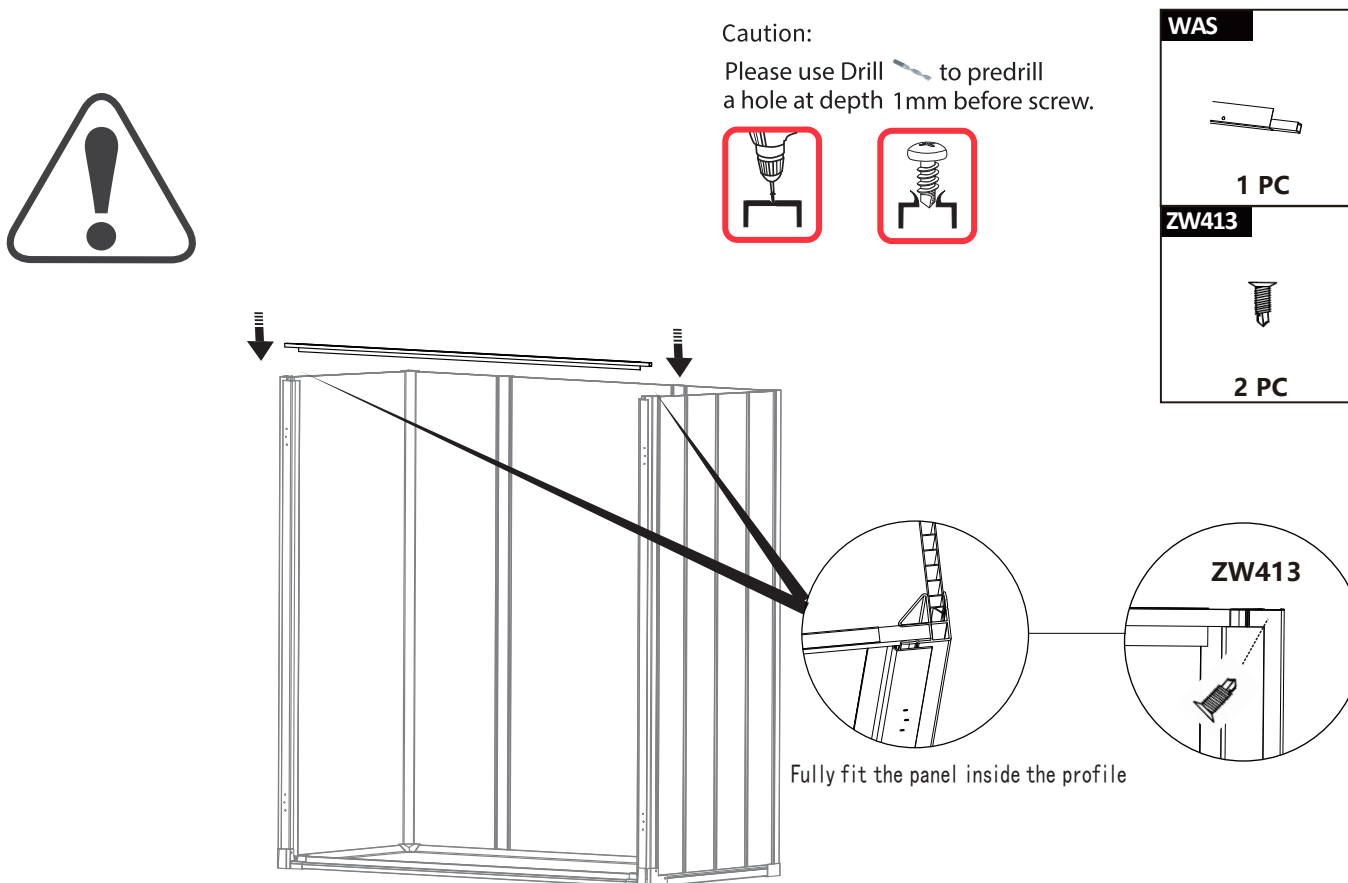

This step is crucial, otherwise it may result in incorrect installation.

STEP 28

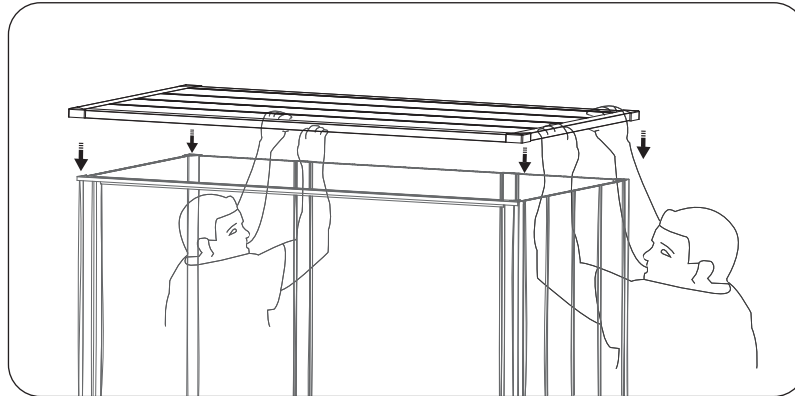

SG8



ZW420



2 PC





Z425



4 PC

Ensuring the correct installation of the shed roof is paramount, as there should be no gaps between the roof and the walls.

If any gaps are present, they must be checked and addressed.

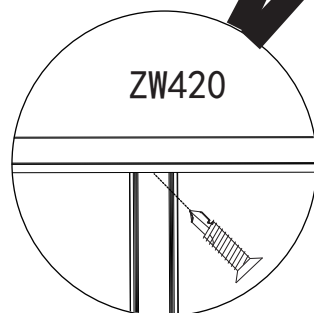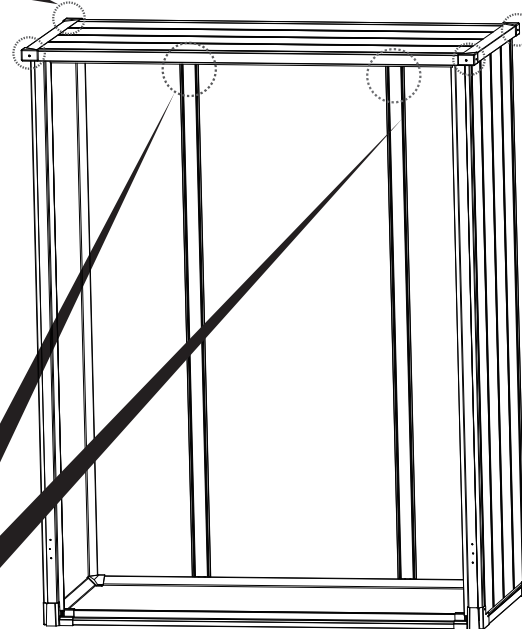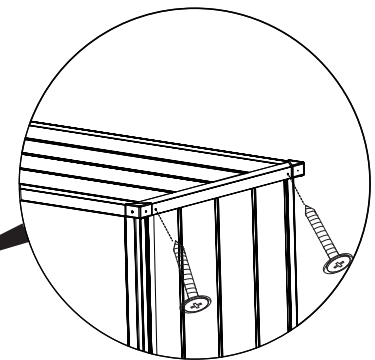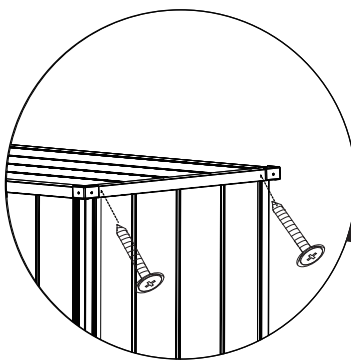



Caution:

Please use Drill to predrill a hole at depth 1mm before screw.




Roof Assembly Done!

SHELF ASSEMBLY PREVIEW

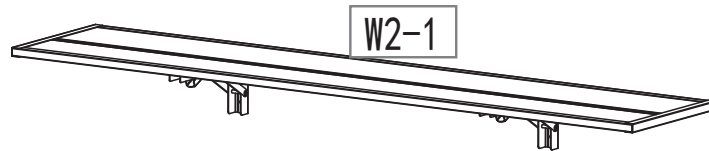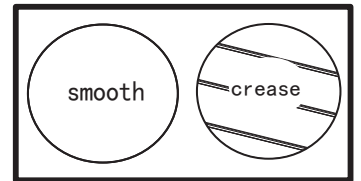


The crease surface is on top when the finished laminate is installed; There is a DIY part in the installation process.


STEP 29

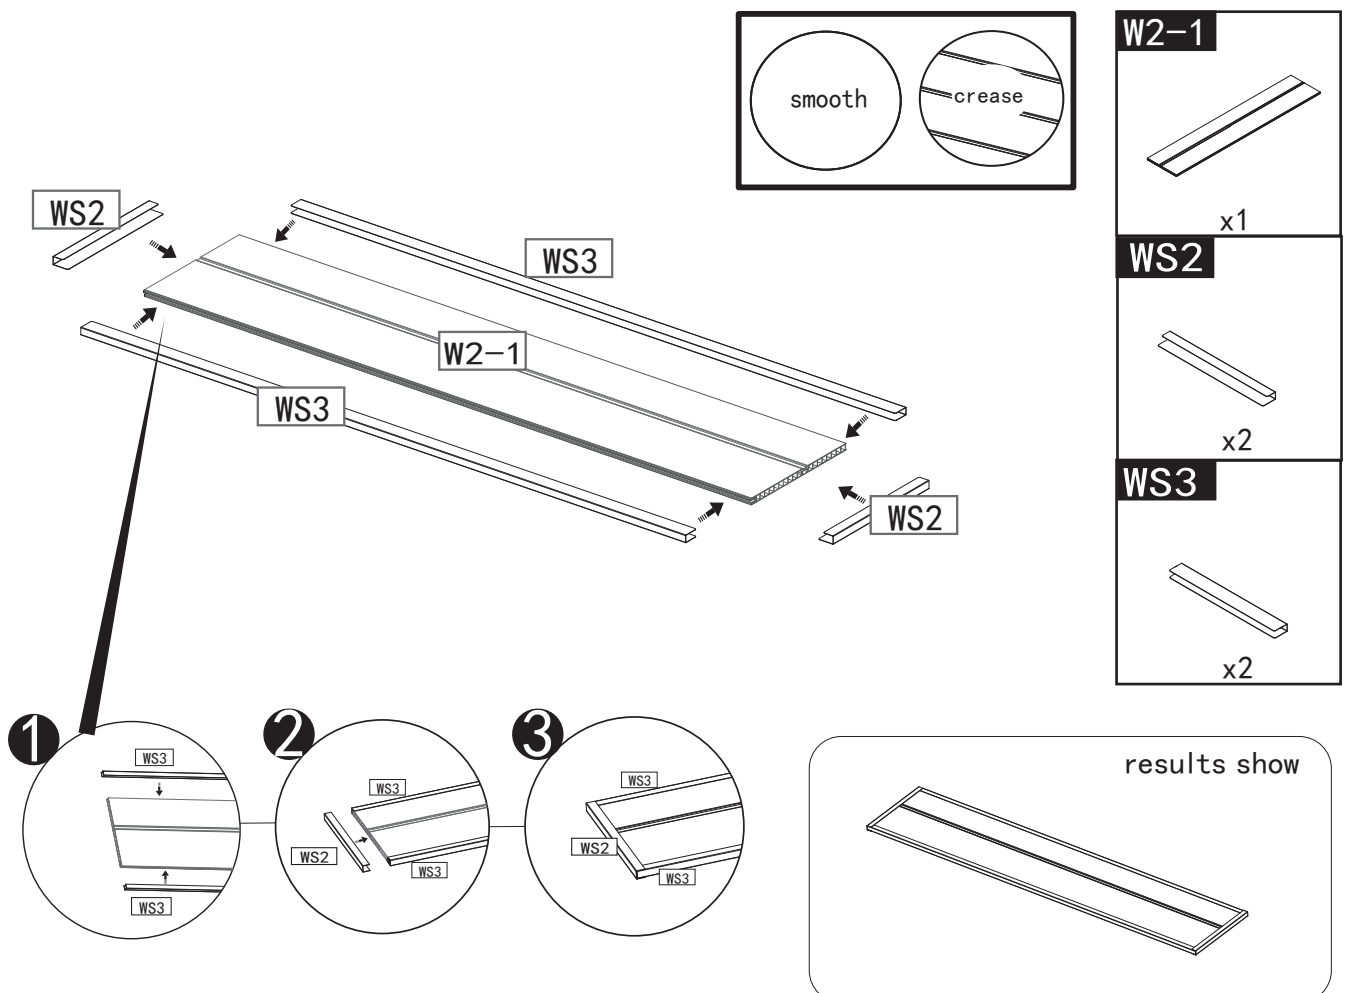



STEP 30

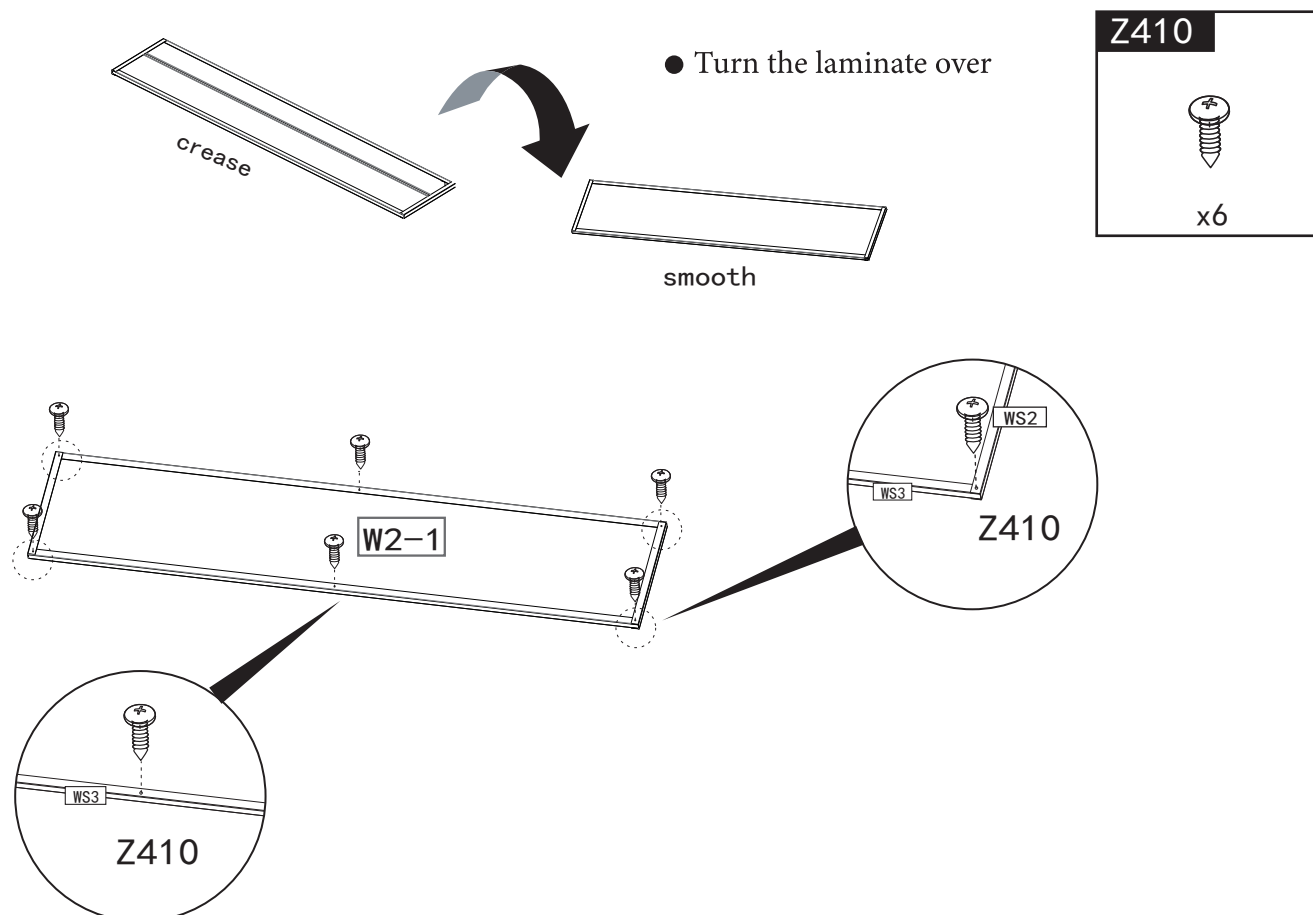


STEP 31

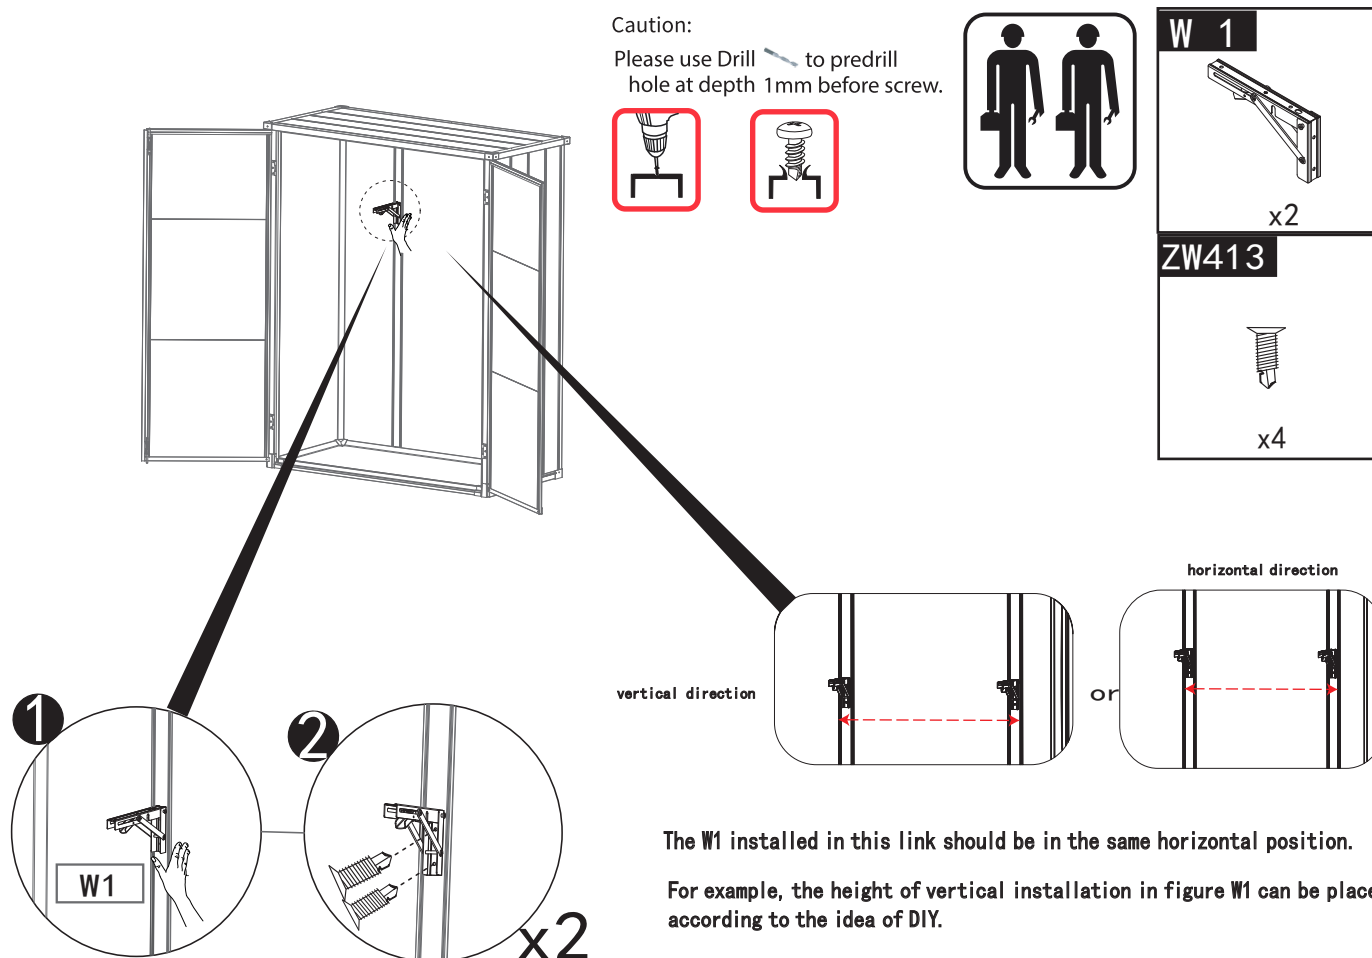

STEP 32

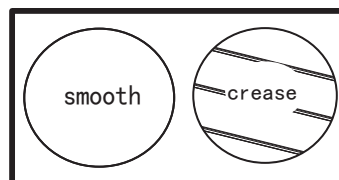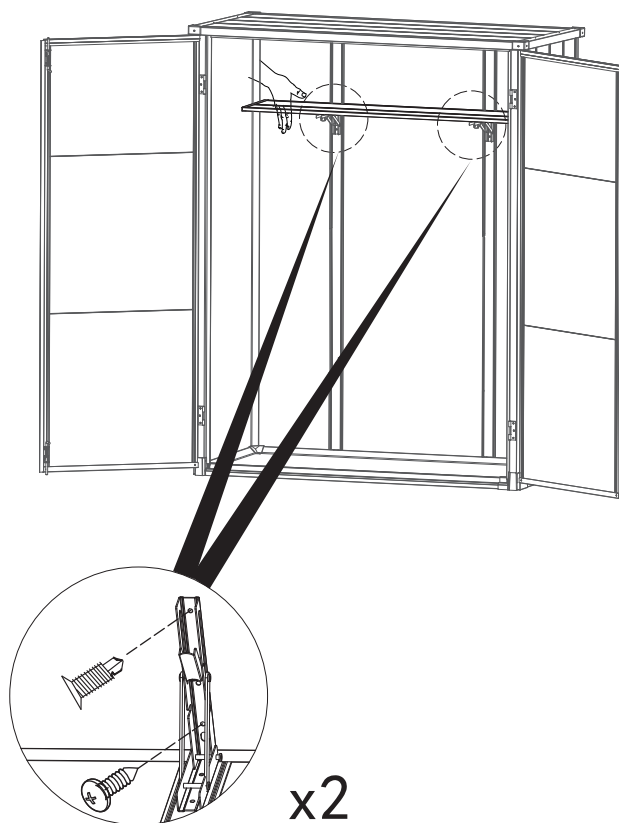

Please place the crease surface on it.

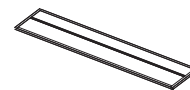

Complete laminate x1

ZW413



x2

Z410




x2



Caution:
Please use Drill to predrill
hole at depth 1mm before screw.



STEP 33


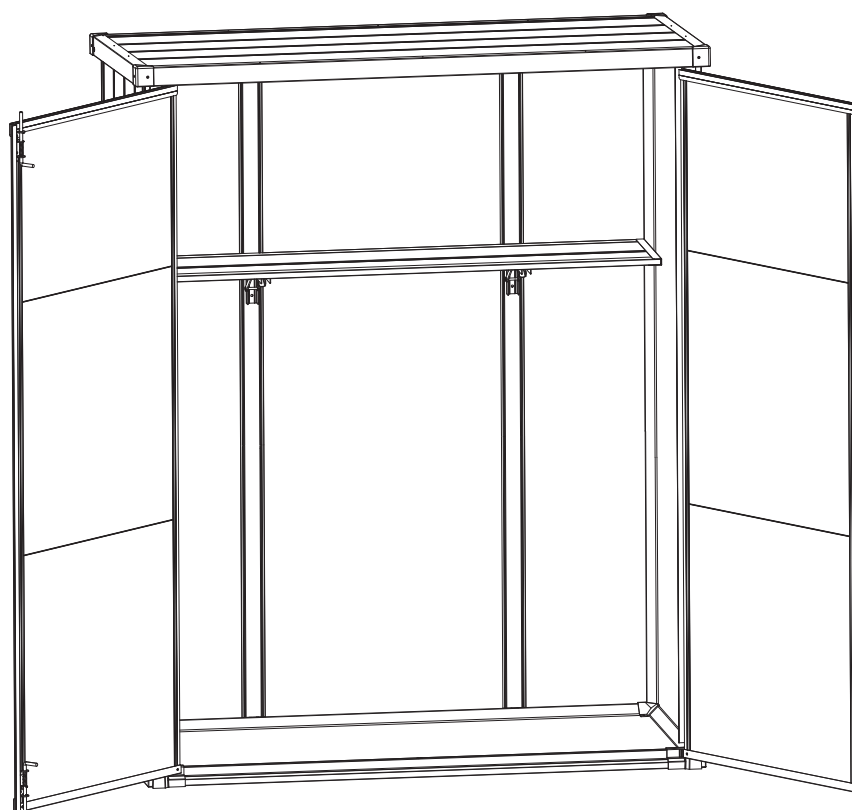


DOOR SECTION PREVIEW

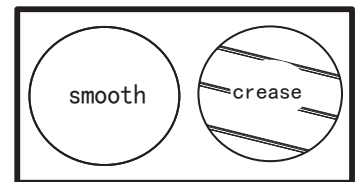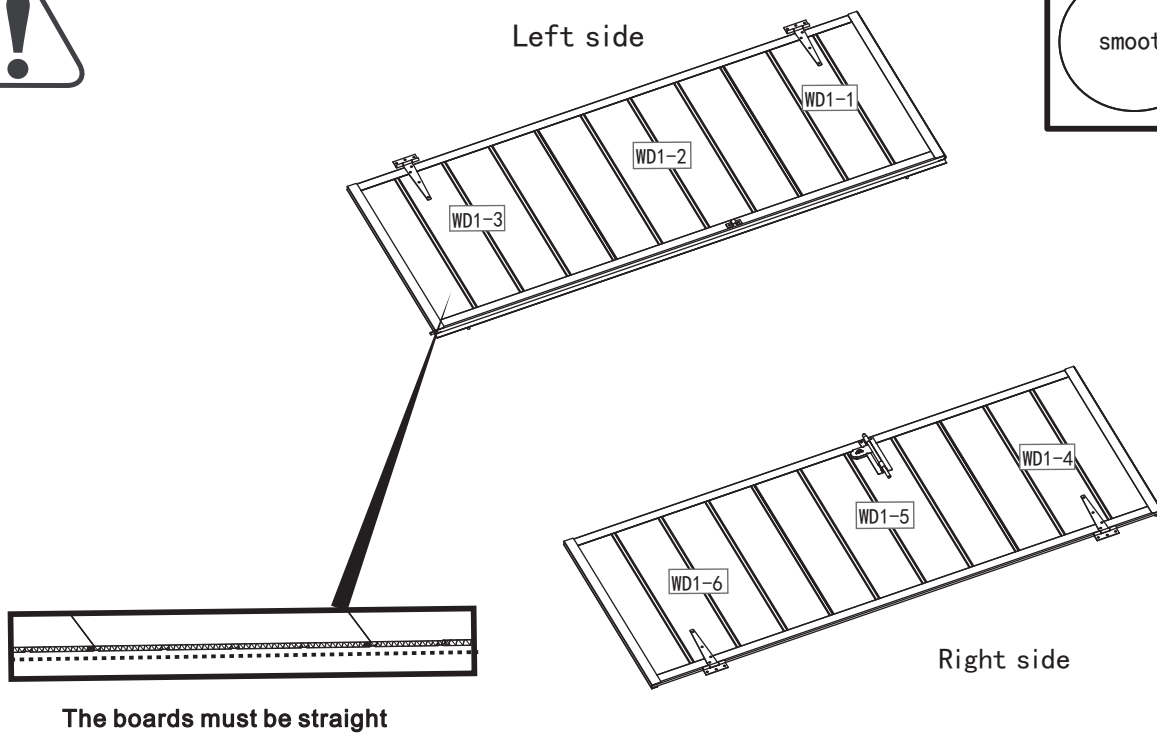


STEP 34

This link creases the surface on top.

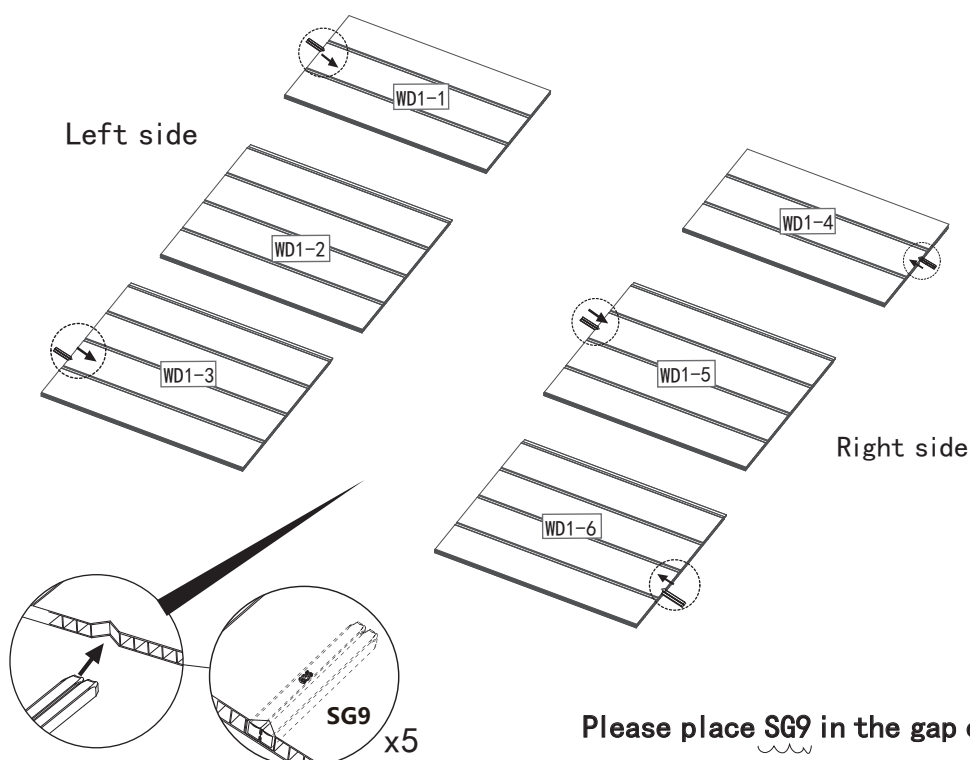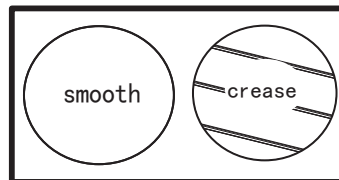







WD1-1 1 PC	WD1-2 1 PC
WD1-4 1 PC	WD1-5 1 PC
	WD1-3 1 PC
	WD1-6 1 PC
	SG9 5 PC

STEP 35

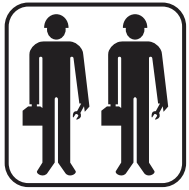

Left side

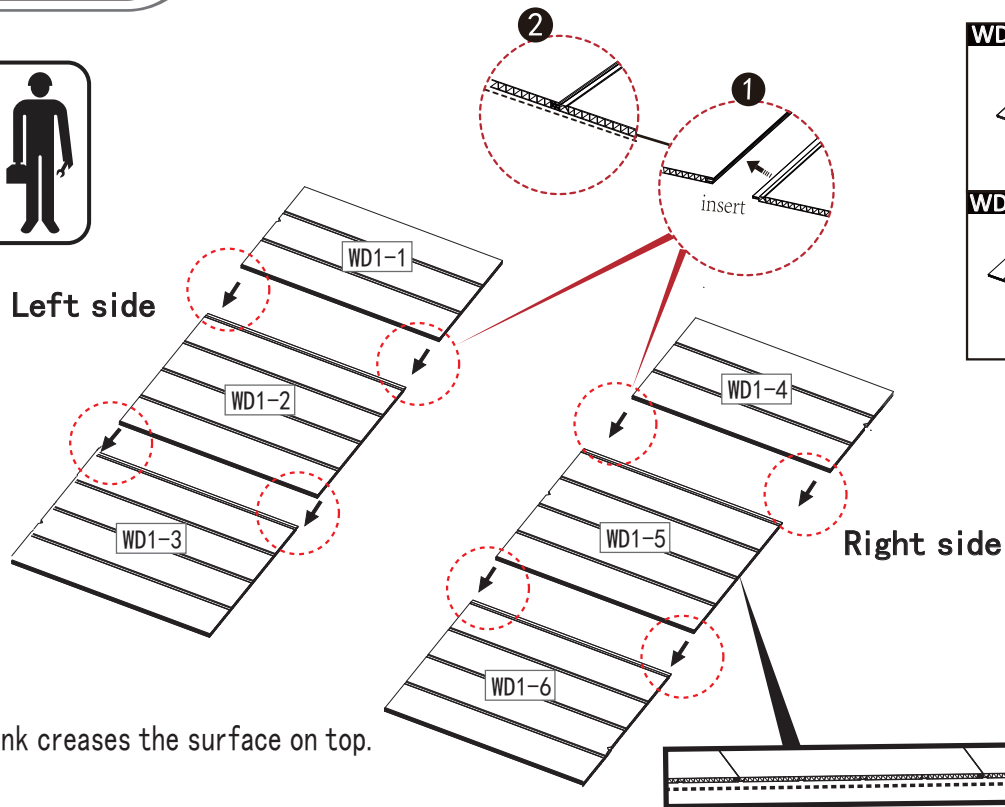


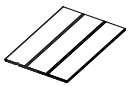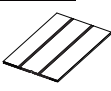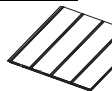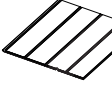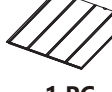
WD1-1  1 PC	WD1-2  1 PC
WD1-4  1 PC	WD1-5  1 PC
WD1-3  1 PC	
WD1-6  1 PC	

This link creases the surface on top.

• The floor panels must be straight


STEP 36

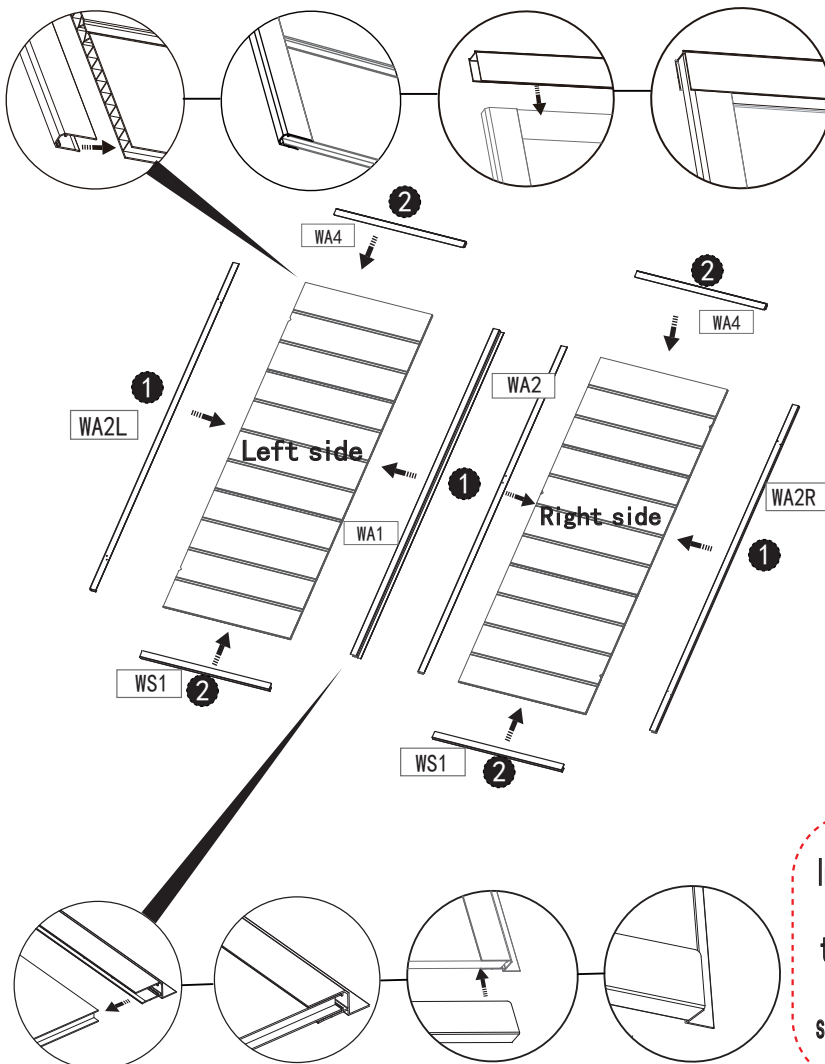


WA4  2 PC	WA2L  1 PC
WS1  2 PC	WA1  1 PC
SG8  1 PC	WA2  1 PC
WA2R  1 PC	

Install the first component according to the figure, secure the left and right panels of the board, and then install the second component to secure the first part.

STEP 37

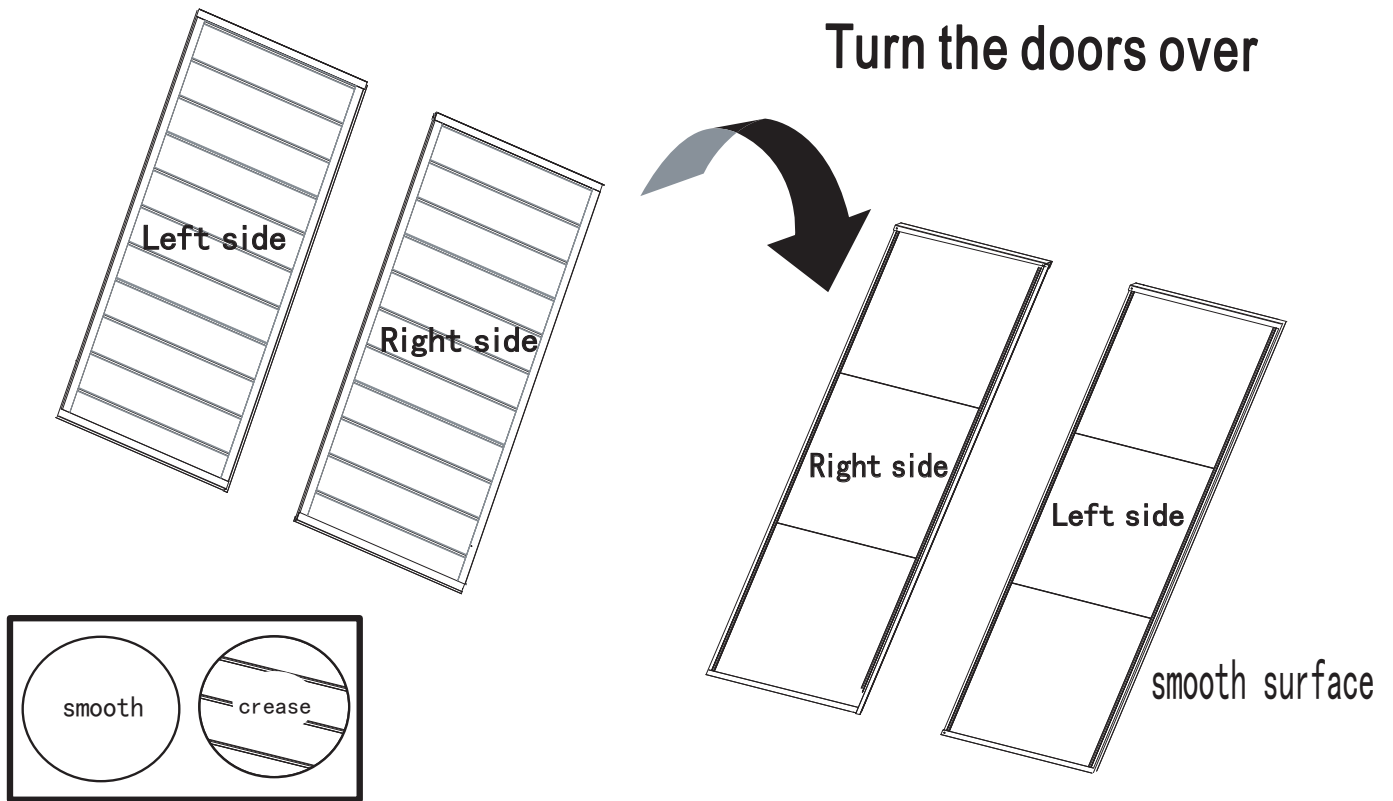


STEP 38

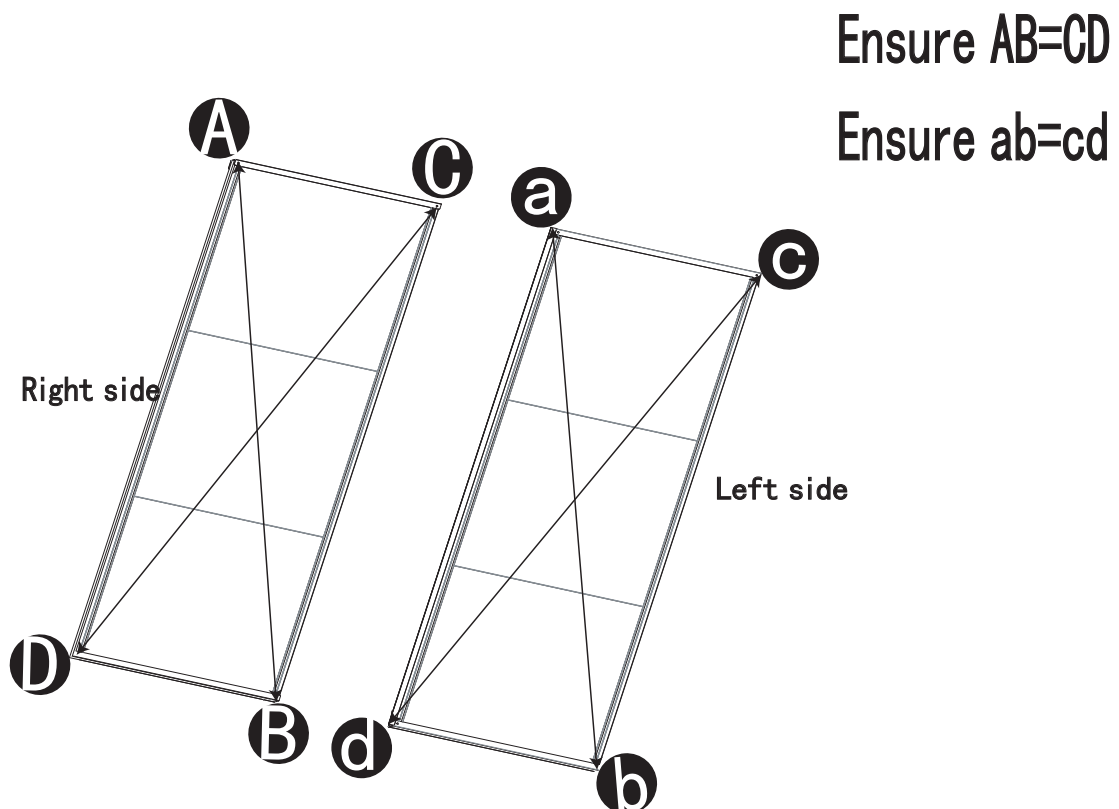

This step is crucial, otherwise it may result in incorrect installation.

STEP 39

This link is smooth on top.

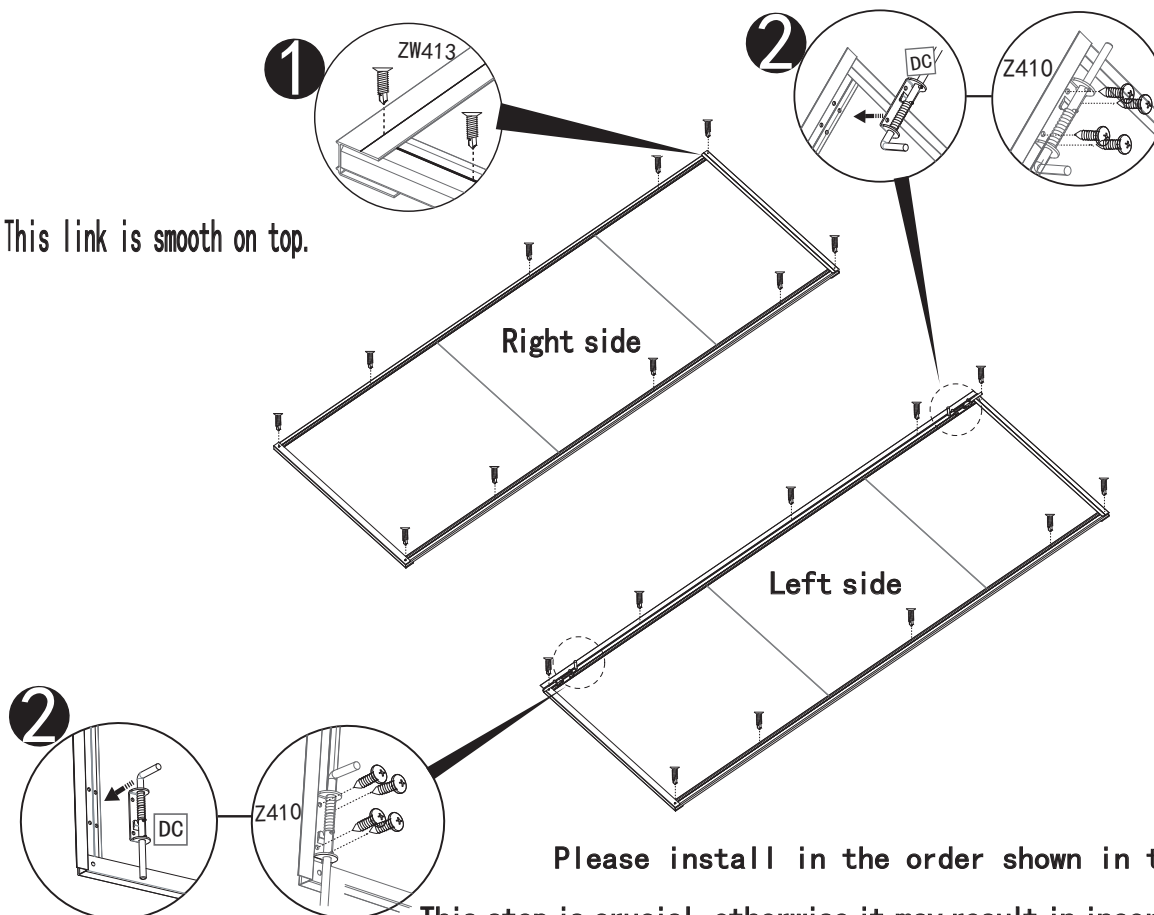

ZW413




20 PC

Z410







8 PC

DC




2 PC

STEP 40

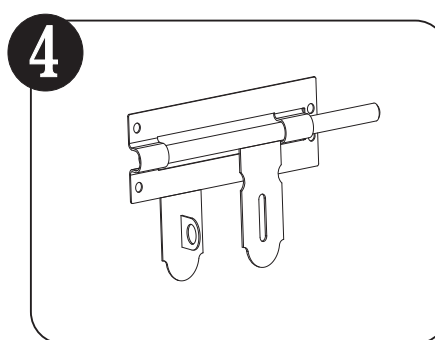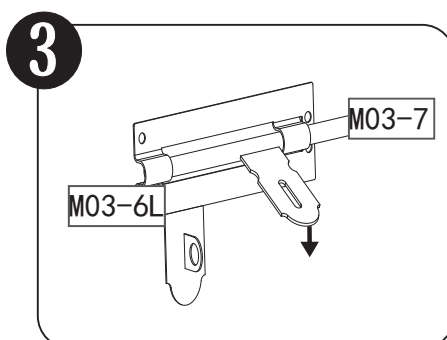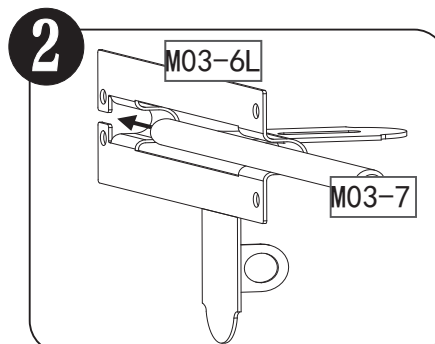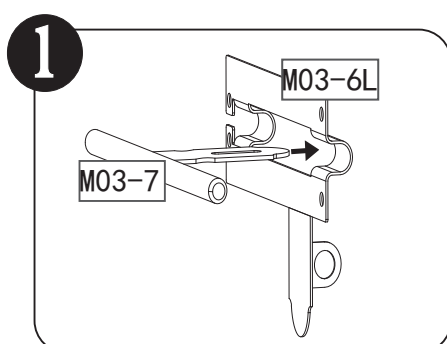


M03-6L



1 PC


M03-7



1 PC


STEP 41

Turn the doors over

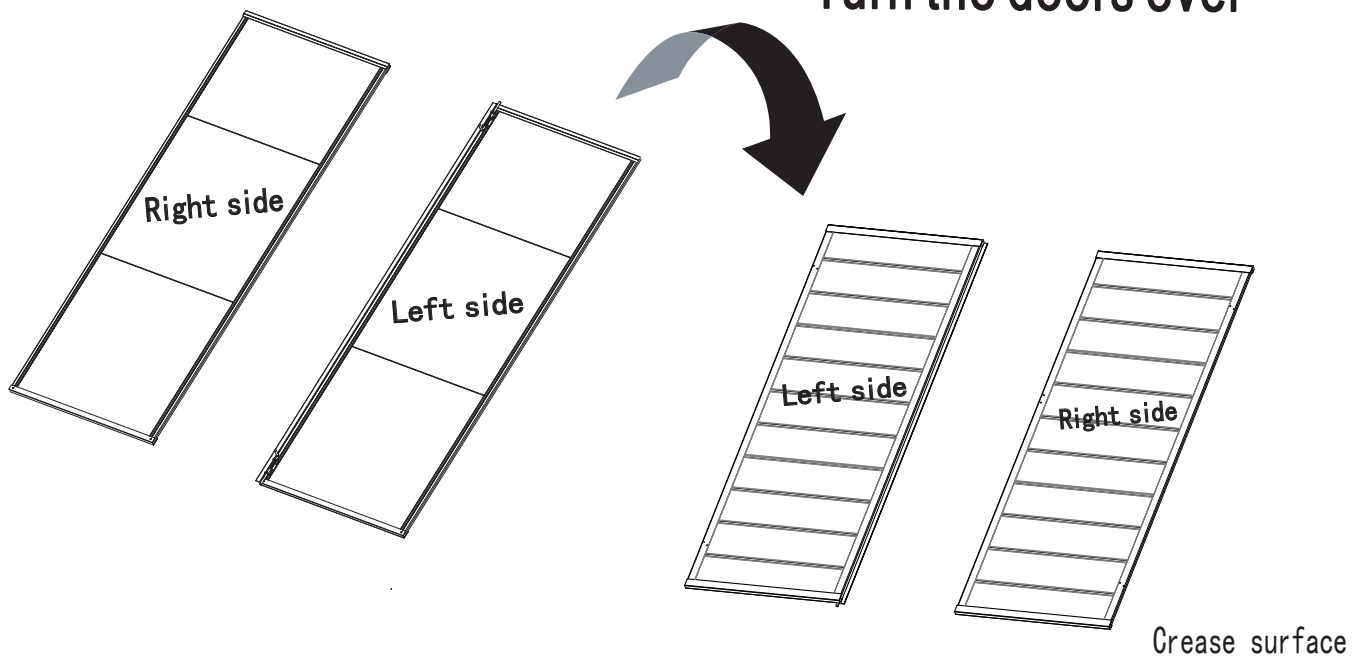

STEP 42

This link creases the surface on top.

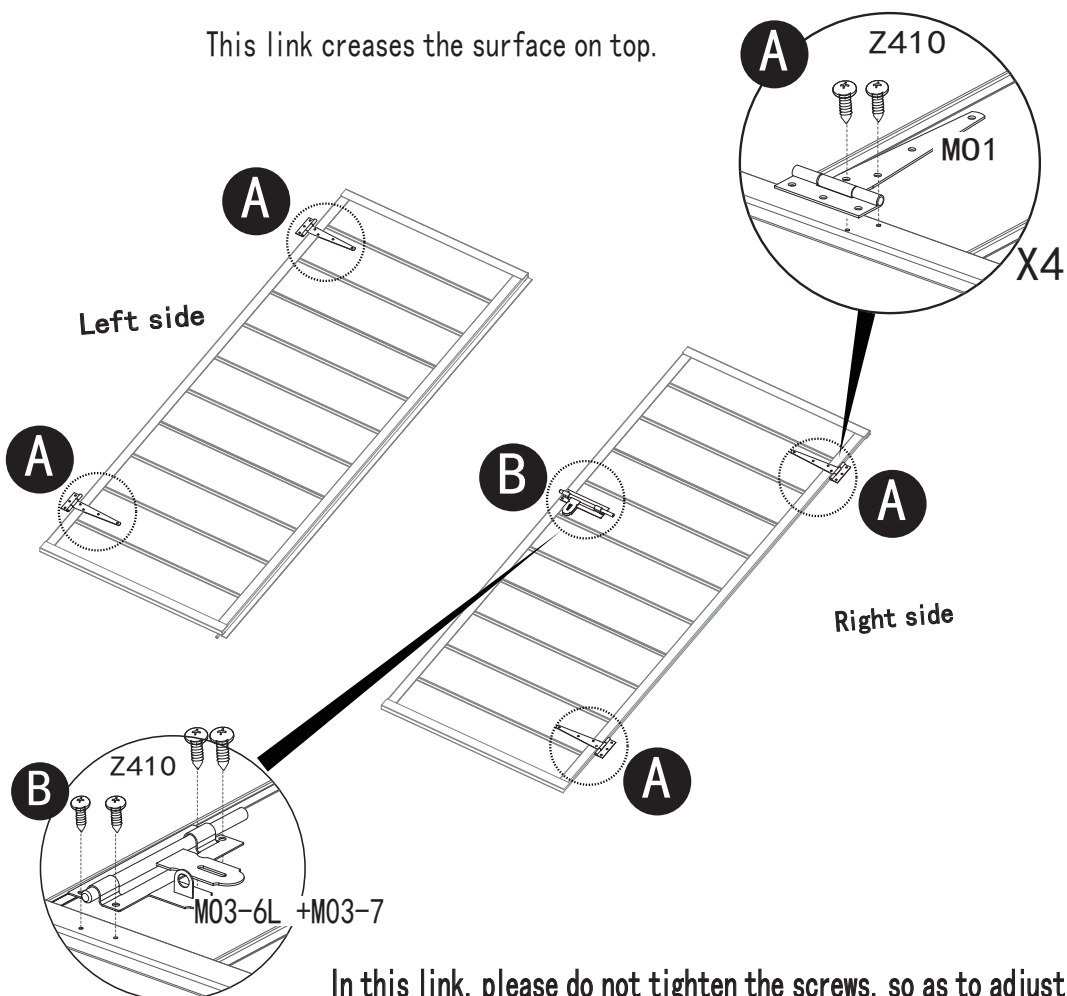


Z410




12 PC

M01



4 PC




M03-6L + M03-7

In this link, please do not tighten the screws, so as to adjust the position of the door.

STEP 44



Door Assembly Done!

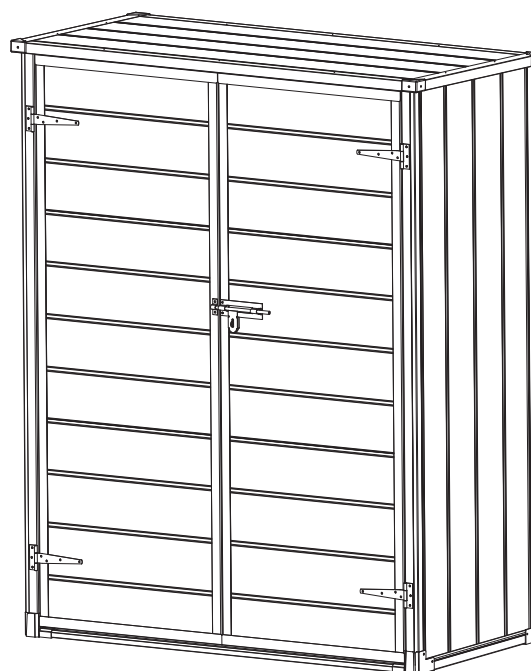

Congratulations on completing the installation!

AFTER-SALE SERVICE CARD

If you have any suggestions for our products or find that the products have quality problems, please contact us first, our after-sales team will reply you within 24 hours, and we will do our best to give you solutions until you are satisfied.

Guaranteed Customer Service

Your shopping experience is very important to us!
Feel unsatisfied? **Contact us!**
Have any questions? **Contact us!**

Wanna share how wonderful our smart products makes your home?
Share your pictures with us.
Any suggestions? **Contact us!**
We gotcha back!

✉ Patiofurniture Serviceteam@outlook.com

