


# ASSEMBLY INSTRUCTIONS


ITEM NO.WF291041

If you have any questions, please feel free to contact us.  
Email: [lowes.team@qualfurn.net](mailto:lowes.team@qualfurn.net)

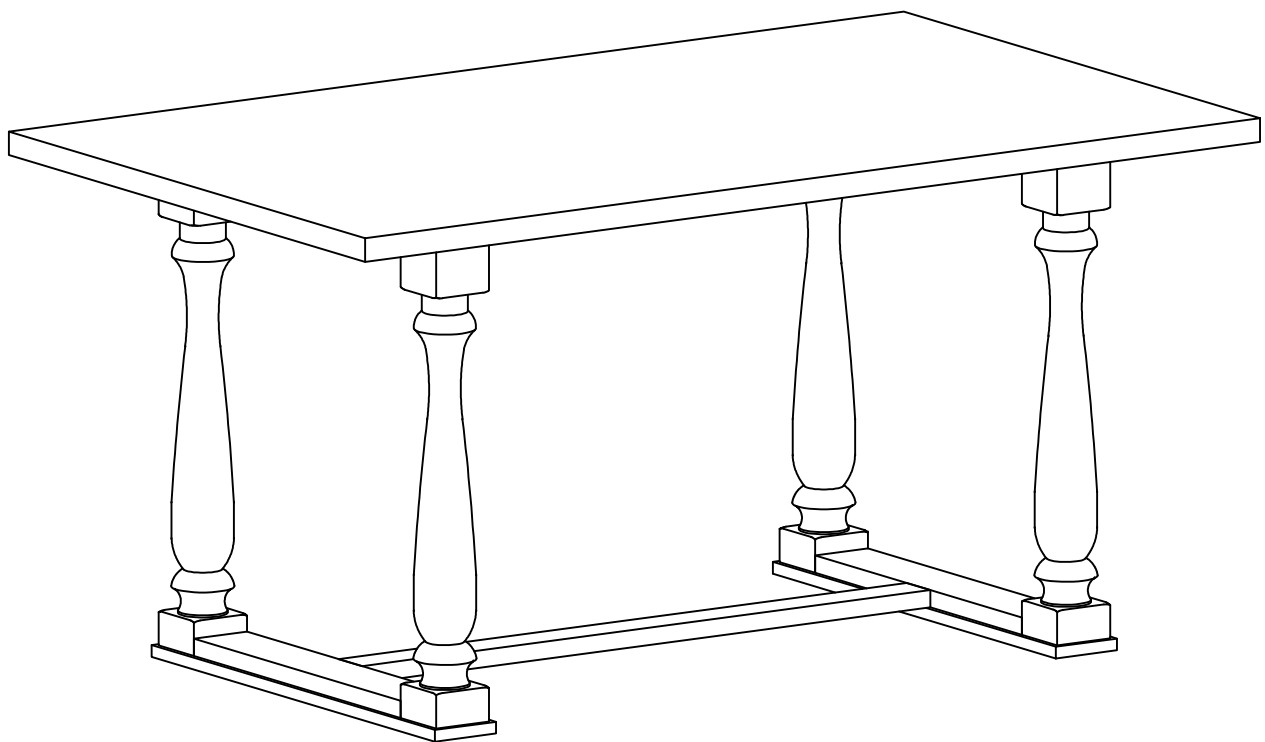





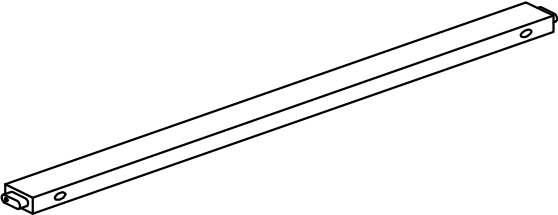



## IMPORTANT NOTE :

- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN,KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE TABLE IS FULLY SET-UP.

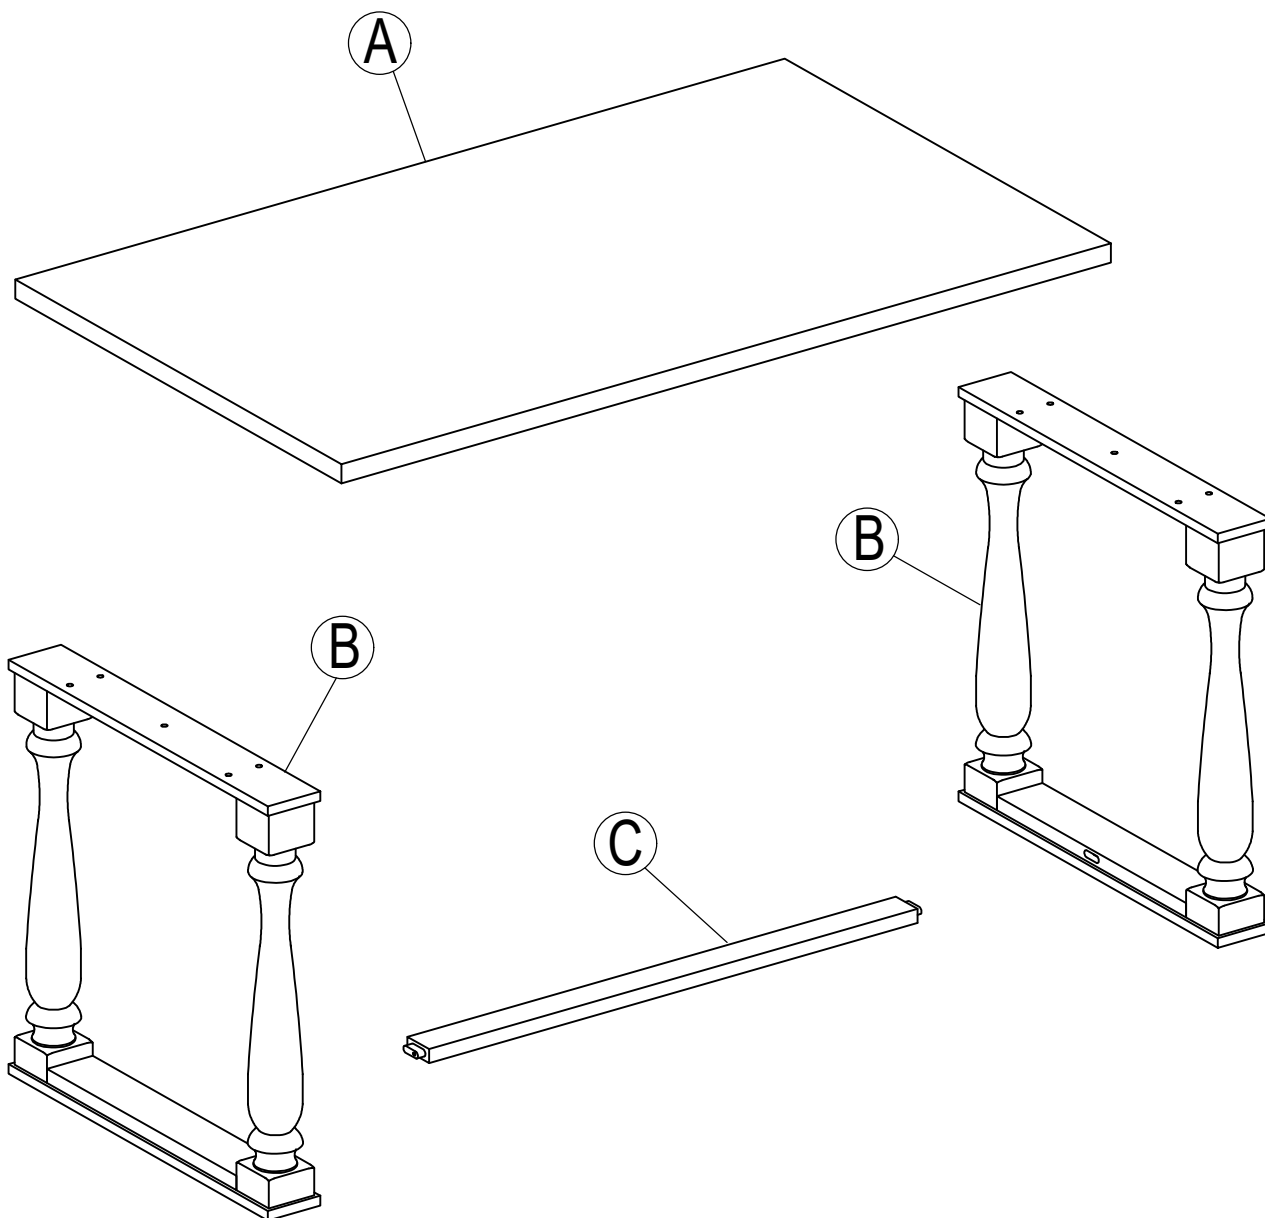


# Part List

# Hardware List
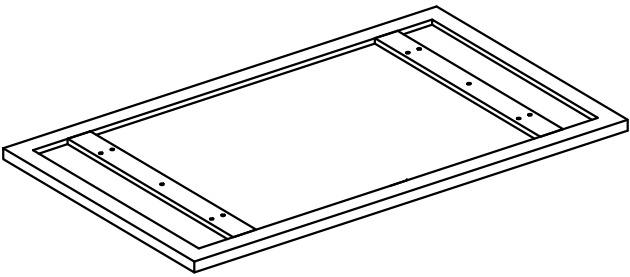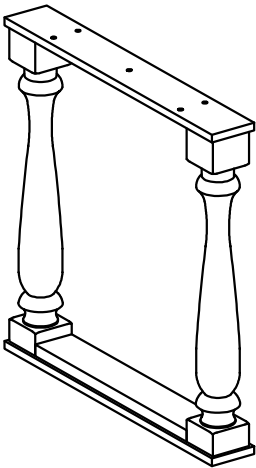
<p><b>(A)</b></p> 	<p><b>1</b></p>  <p>Ø 5/16" x 40 mm</p>
<p>TABLE TOP(1 pc)</p>	<p>BOLT (10 pcs)</p>
<p><b>(B)</b></p> 	<p><b>2</b></p>  <p>Ø5/16" x 13 mm</p>
<p>TABLE LEG (2 pcs)</p>	<p>FLAT WASHER (10 pcs)</p>
<p><b>(C)</b></p> 	<p><b>3</b></p>  <p>Ø5/16" x 19 mm</p>
<p>TABLE STRETCHER (1 pc)</p>	<p>LOCK WASHER (10 pcs)</p>
	<p><b>4</b></p>  <p>4 mm</p>
	<p>ALLEN KEY (1 pc)</p>
	<p><b>5</b></p>  <p>Ø4 x 38mm</p>
	<p>WOOD SCREWS (2 pcs)</p>

## STEP 1:

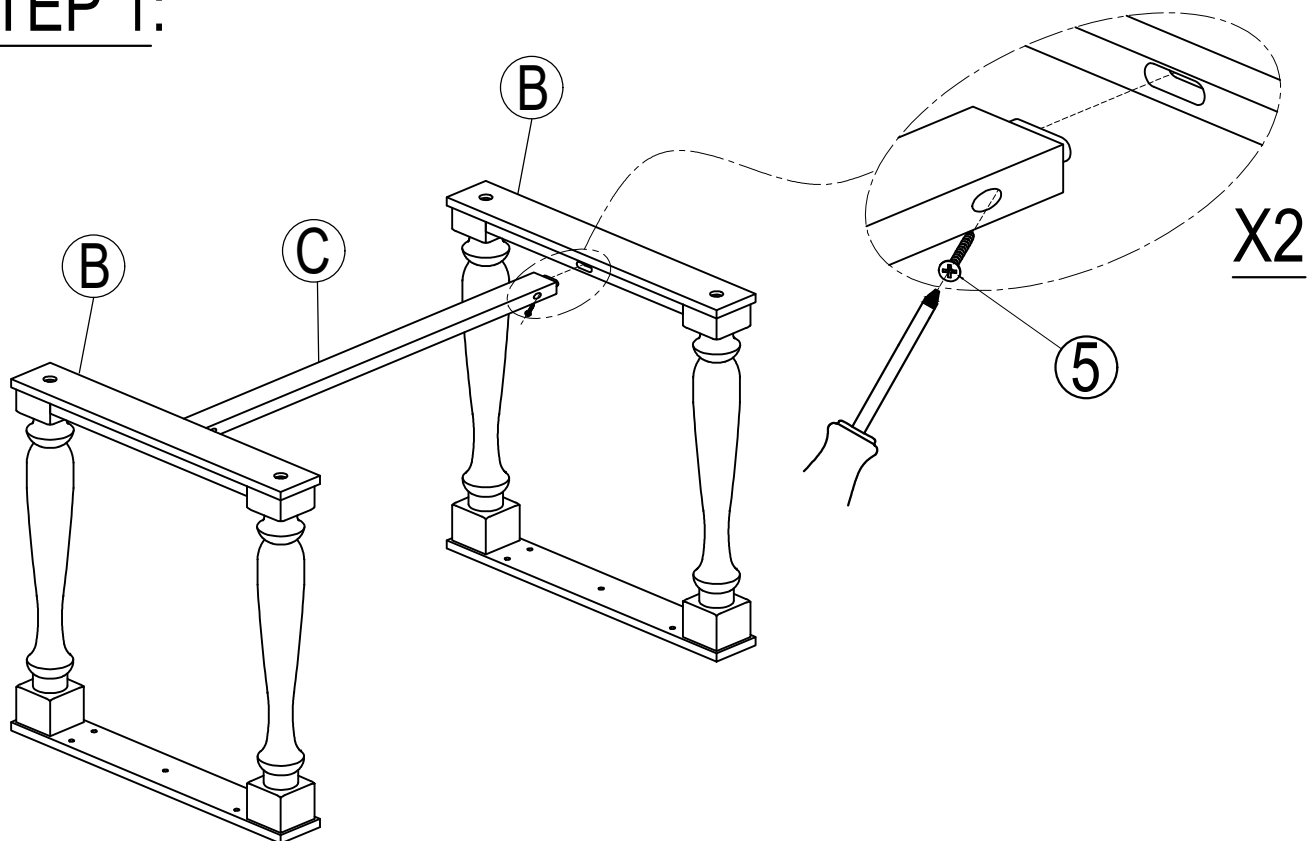

## STEP 2:

