

## SRDRT2BF-LRDDS7135-VRDDS7135- INSTRUCTIONS

**You will need 2 person(s) for this assembly.**

**You will need a Phillips Head Screwdriver and a Rubber Mallet to Assemble.**

### Reception Desk

#### Hardware :

**A:** Corner Brackets(6) • **B:** Small Screws(36) • **C:** Cam Pins(16) • **D:** Cam Covers(16)

**A**



**B**



**C**



**D**



Fig. 1a



#### Parts :

**E1:** Right Leg **E2:** Left Leg • **F:** Desk Top • **G:** Transaction Top • **H:** Modesty

**E1**



**E2**



**F**



**G**




**H**



**STEP 1 :** Screw cam pins(C) into legs(E1&E2).  
(5 each.)

Right leg(E1)

Left leg(E2)

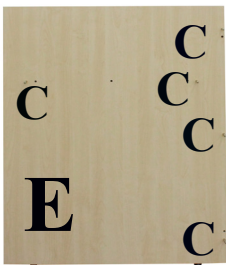

**STEP 2 :** Lay modesty(H) down so the cam locks face up and connect right leg(E1) to the modesty by inserting cam pins(C) into locks. **DO NOT TIGHTEN CAM LOCKS YET.**



#### IMPORTANT NOTICE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws/bolts until completely assembled.
- Keep all hardware parts out of reach of children.

## SSP4224-LRDDS7135-LRDRT4724-VRDDS7135-VRDTR4724 - INSTRUCTIONS

**You will need 2 person(s) for this assembly.**

**You will need a Phillips Head Screwdriver and a Rubber Mallet to Assemble.**

**STEP 3a :** Screw 3 cam pins(C) into Modesty(H).


**STEP 3b :** Attach desk top(F) to modesty(H) and right leg(E1) by inserting cam pins(C) into locks and tightening (See Fig. 1a).

*You may need to move the leg's(E) cam pins(C) out of the locks on modesty(H) from step 2 to fit the desk top in snugly.*



**STEP 4a :** Attach left leg(E2) by inserting cam pins(C) into locks and tightening. (See Fig. 1a)

**STEP 4b :** Attach 4 corner brackets(A) to bottom of desk with 6 small screws(B) each. Place them in the locations shown on the image below.

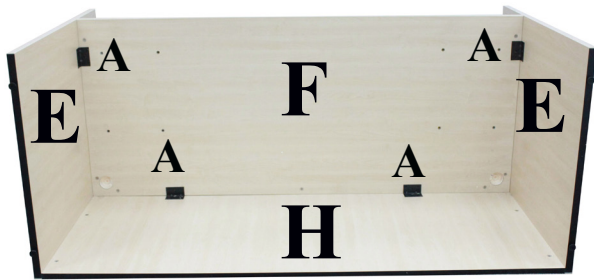

**STEP 5 :** Attach 3 cam pins(C) to transaction top(G) then attach transaction top to desk by inserting cam pins(C) into locks and tightening (See Fig. 1a). Secure top to desk by attaching last 2 corner brackets(A) to the underside of the transaction top and sides with 6 screws(B) each bracket.

