
ASSEMBLY INSTRUCTIONS 30 INCH BATH VANITY-CABINET

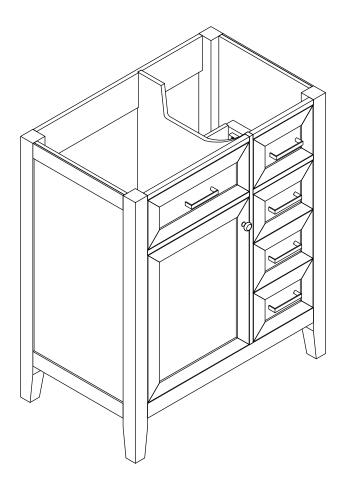

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware. Compare with the parts list to be sure all parts are present. "DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"



Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!! Please assemble on a clean soft surface to avoid damage.











IMPORTANT: PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY Thank you for buying our products.

Please read the installation manual carefully before installation,

we need you to follow the instructions on the accessories and hardware

step by step assembly complete, our instructions are very detailed.

Products are environmentally friendly products,


Please rest assured that you do not soak in water, do not place very heavy items,

do not malicious push and pull,

if you have any problems in the process of assembly and use, please contact us.


Thank you again for your purchase of our products,

I wish you a happy life.

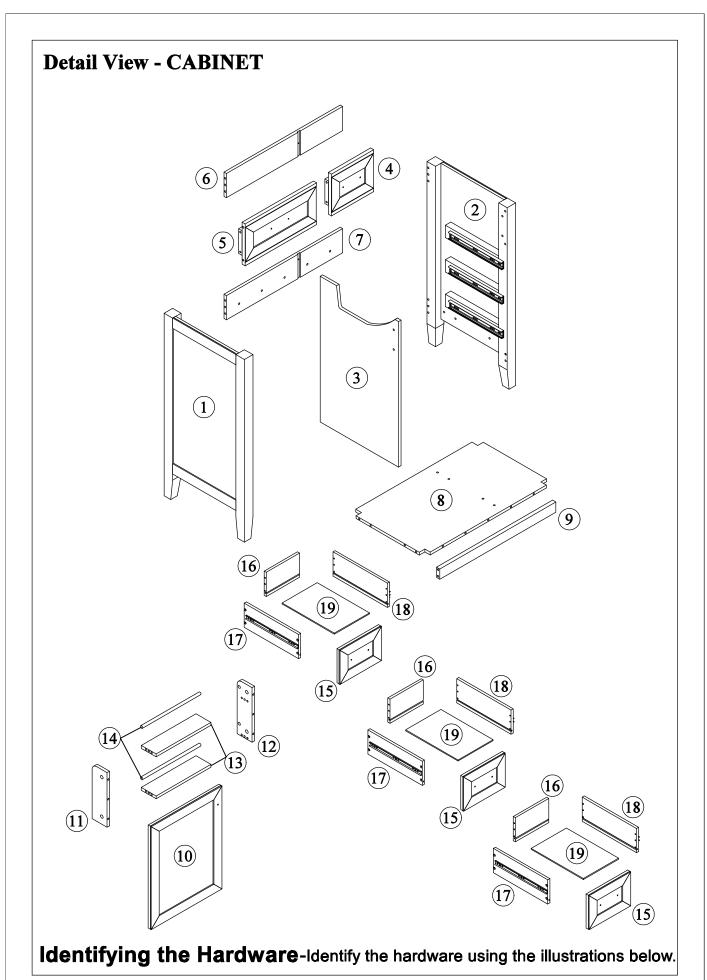


Part List - WF321000 2 1 Side Panel (L) - 1pc Side Panel (R) - 1pc 3 4 Mid Panel - 1pc Drawer Fake (R) - 1pc 5 6 Drawer Fake (L) - 1pc Top Panel Rear - 1pc 7 8 Bottom Panel Rear - 1pc Bottom Panel - 1pc 9 10 **Bottom Crossbar Front - 1pc** Cabinet Door - 1pc 12 11 Door Side Panel (R) - 1pc Door Side Panel (L) - 1pc 13 14 Door Mid Panel - 2pcs Round Bar - 2pcs


Part List - WF321000

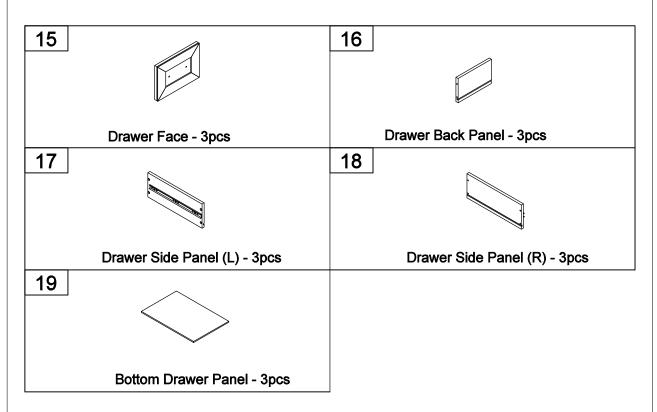



Hardware List - WF321000


Α	В	С
(a)	<u> </u>	
ø13x1/4"x28mm	ø13x1/4"x50mm	ø1/4"x16x1mm
Hex-Head bolts(4p		Washer(6pcs)
D	E	F
ø6x35mm	ø14.5x12mm	
Three in one bolts(34	pcs) Three in one lock(34pcs)	Handle (1pc)
G	Н	I
		(S)
	ø5/32"x20mm	ø5/32"x15mm
Handle (5pcs)	Handle screw (1pc)	Handle screw (4pcs)
J	K	L
		(2)
ø5/32"x25mm	ø8xø4x25mm	ø8xø4x32mm
Handle screw (6p	cs) Round head screw(2pcs)	Round head screw(24pcs)
M	N	0
<u> </u>	(†)200000000>	9////
(9)	ø7xø3.5x15mm	ø8x30mm
Damping hinge (2p	cs) Flat head screw(12pcs)	Wood dowel(30pcs)
Р	Q	R
		Q/////)
4mm		ø6x30mm
Allen key(1p	c) Anti fall hardware(1set)	Wood dowel(12pcs)

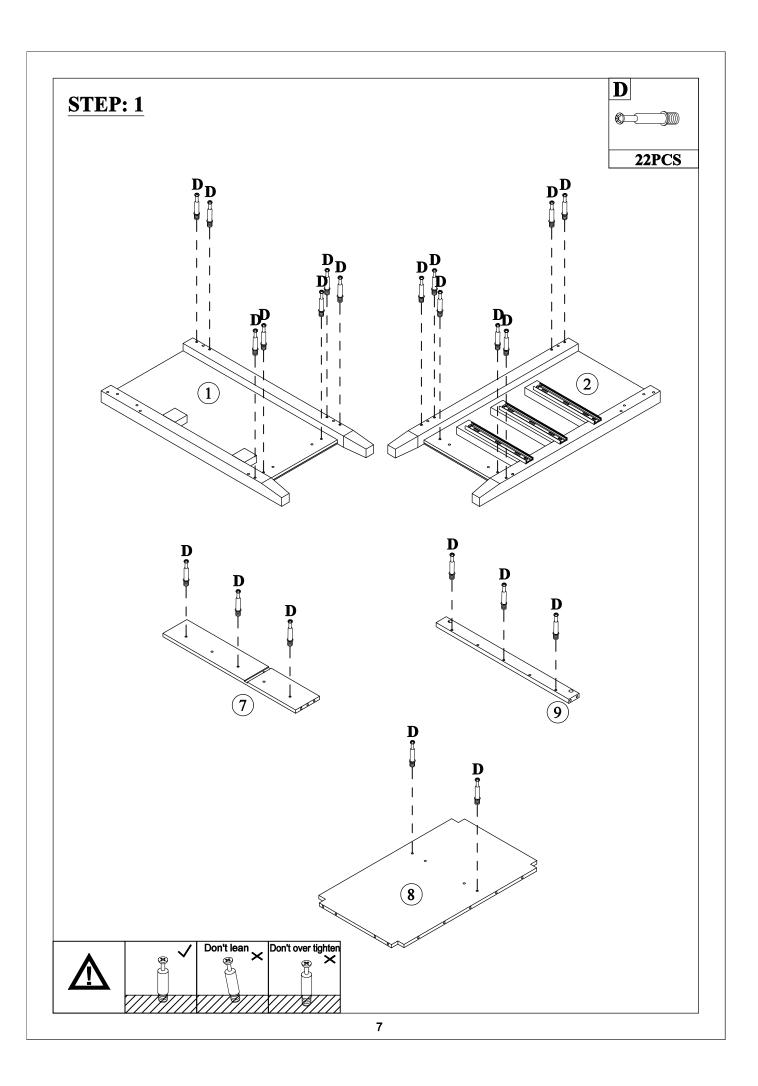


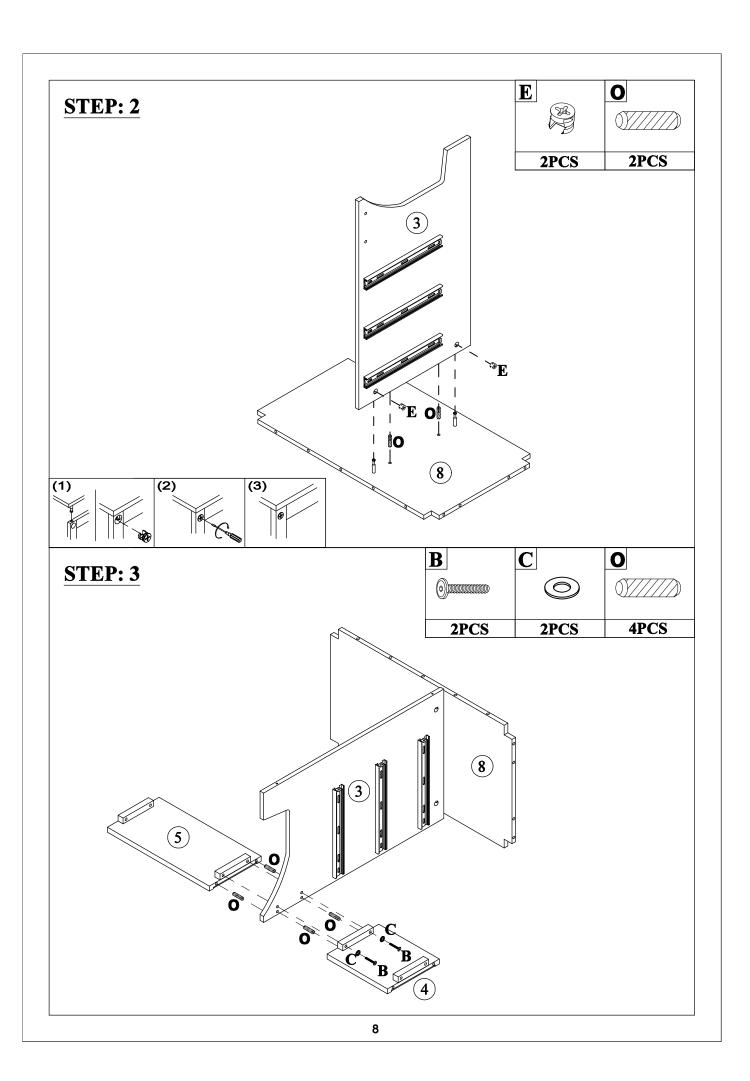


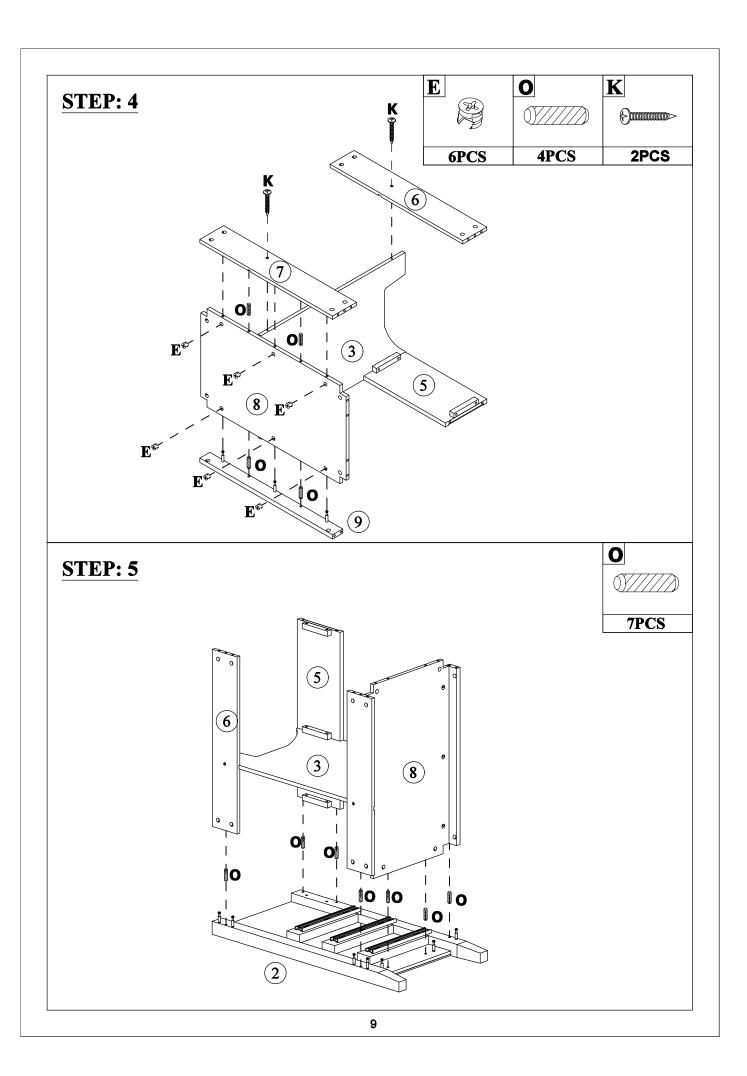


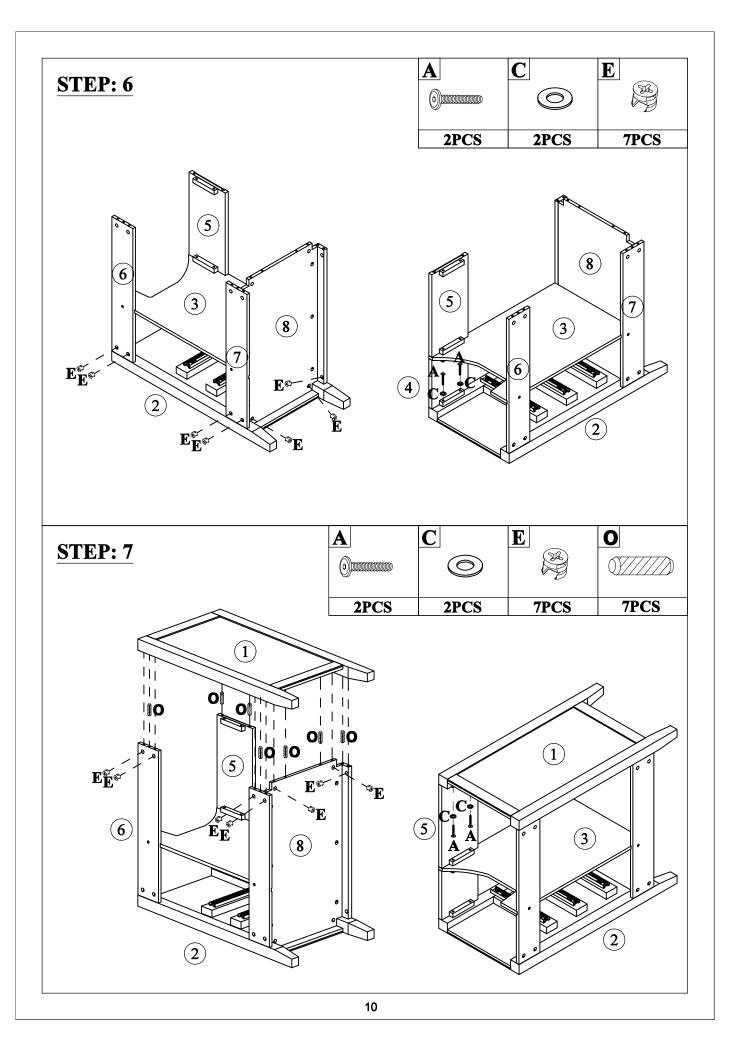


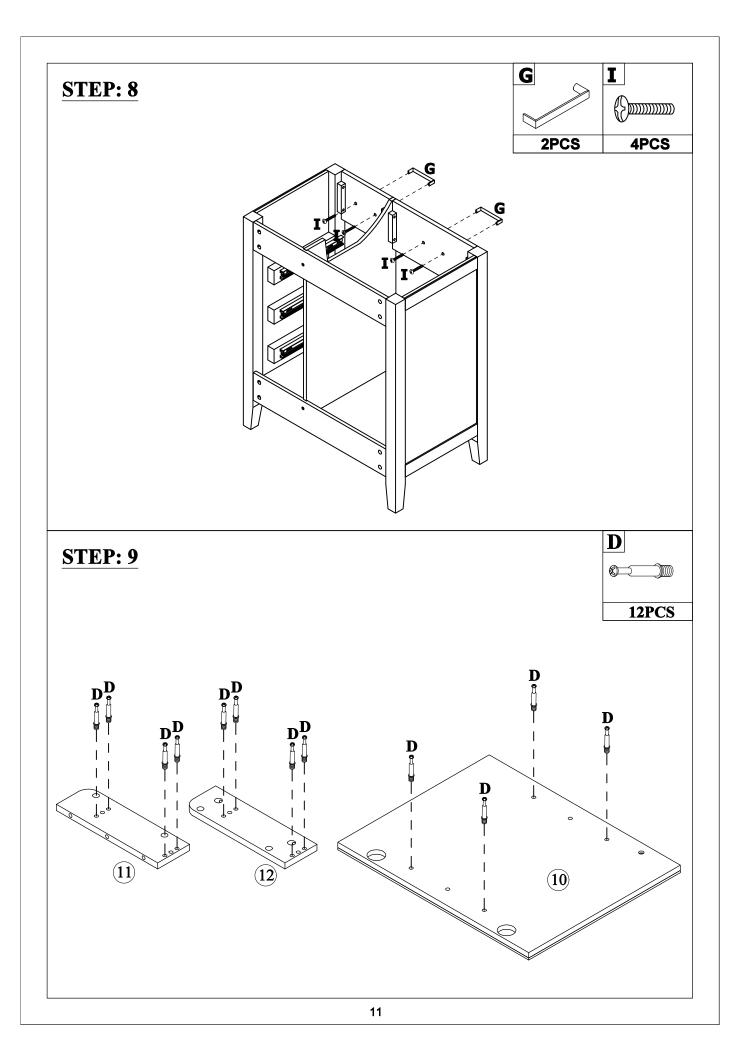

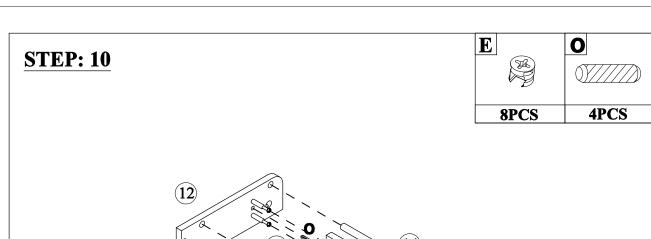


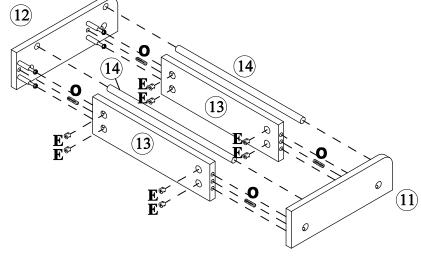


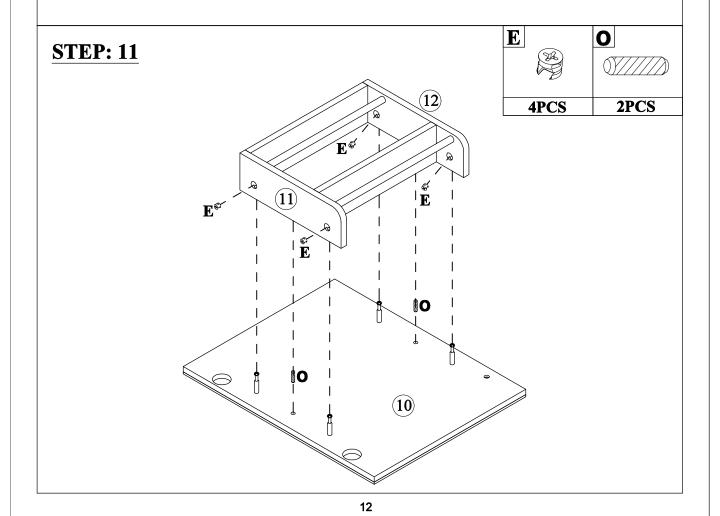

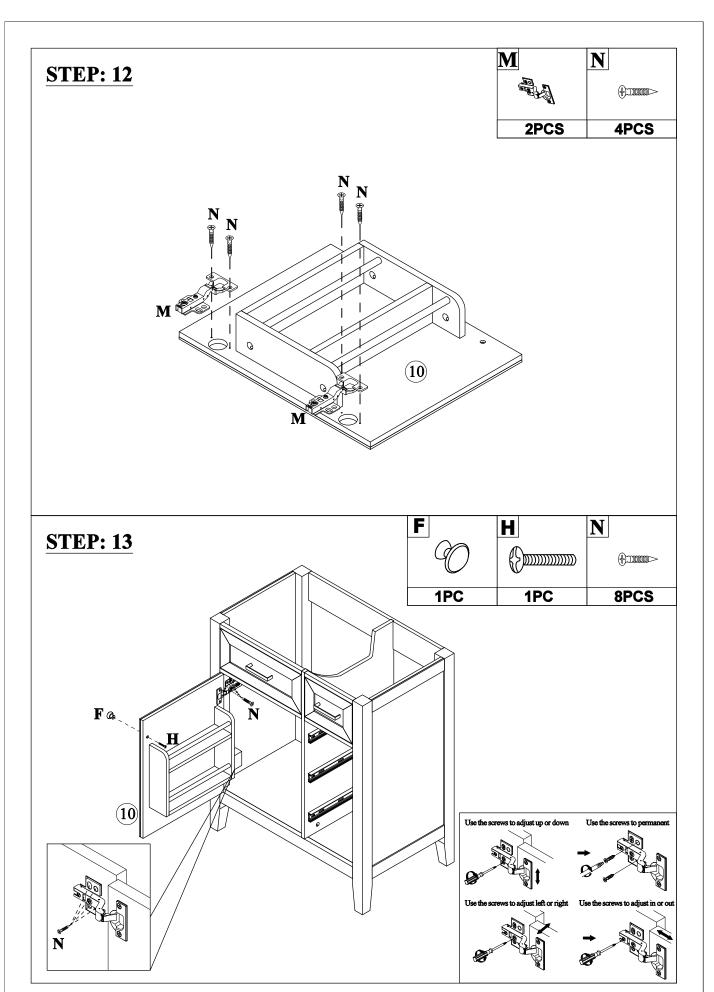



STEP: 14



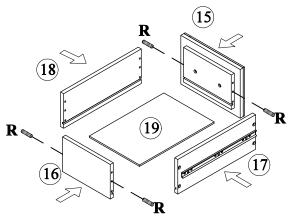





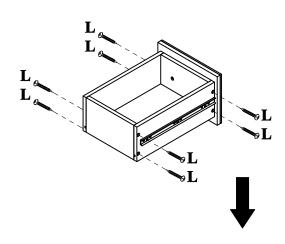

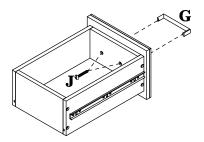


x3

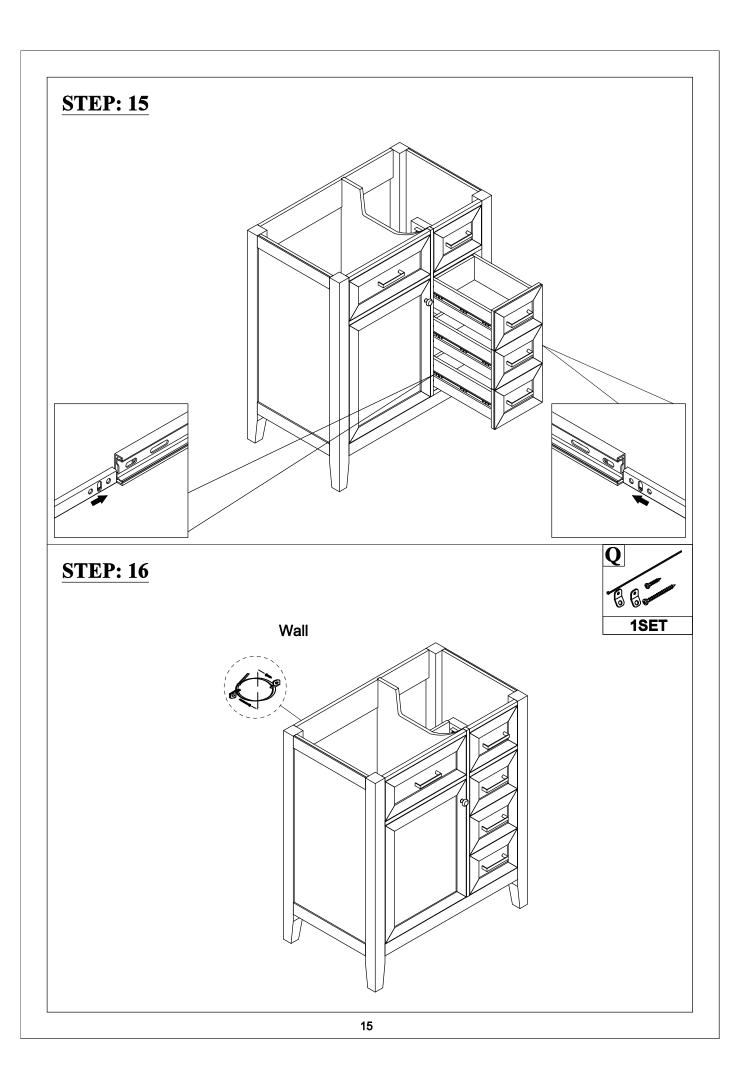

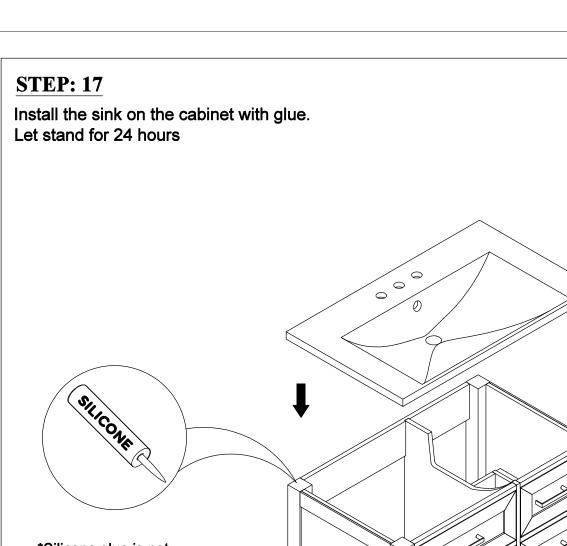


STEP: 18

HINGE ADJUSTMENTS

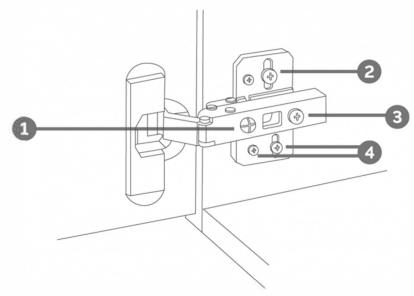

1 Sideways / Tilt adjustment


Turn the screw clockwise to move the door further away from the side of the cabinet anticlockwise to move the door closer to the side of the cabinet

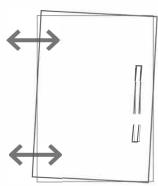

2 4 Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up anticlockwise to move the door down

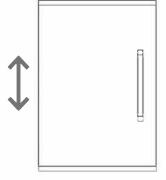

3 Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

