



Assembly Instruction  
Item#107-4X  
Mid-Century Modern Wood Plant  
Display Stand, Fit Up to 12"

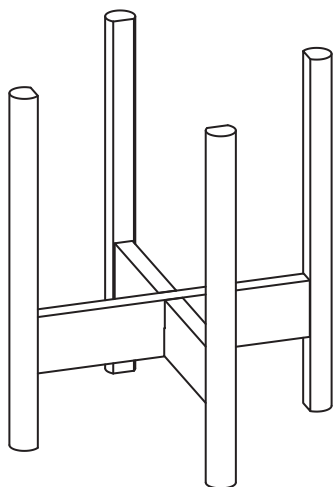


Hardware



x1


RF10003

Screws JCA 1/4" x 32




RF40015

Allen Wrench

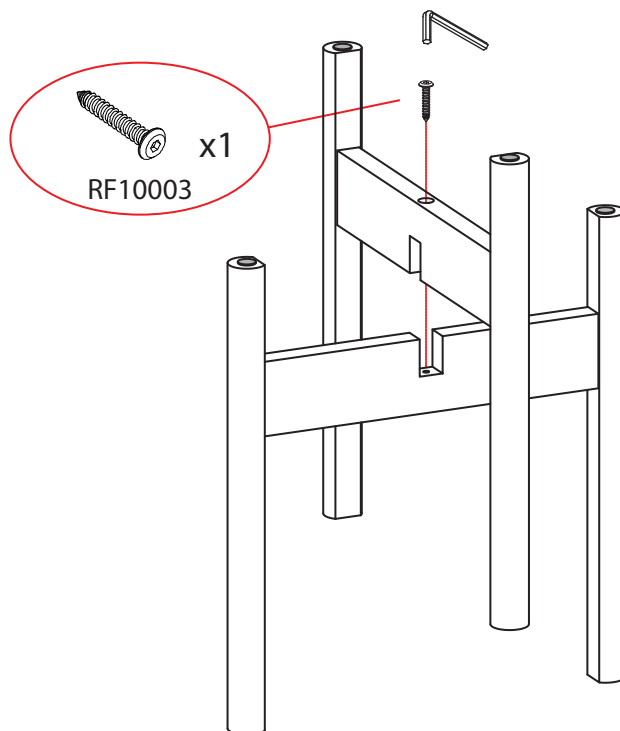


Assemble the plant holder by  
using Screw (RF10003) as shown.

Assembly Instruction  
Item#107-4X  
Mid-Century Modern Wood Plant  
Display Stand, Fit Up to 12"

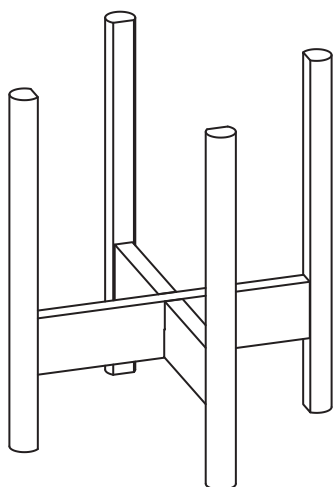


Hardware



x1


RF10003

Screws JCA 1/4" x 32



RF40015

Allen Wrench

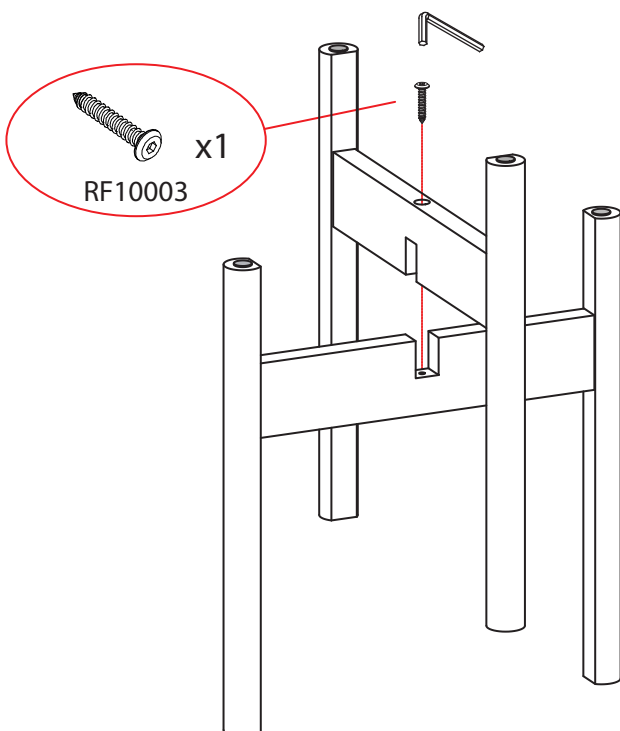

Assemble the plant holder by  
using Screw (RF10003) as shown.