




Remove old threshold and clean floor surface.

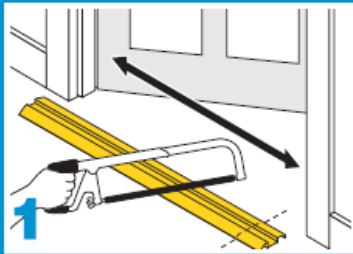

1 Measure door opening at floor level and cut threshold to fit with hacksaw. Trim equal amount from each end.

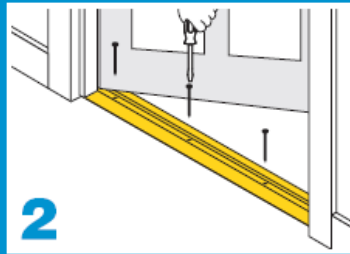

2 Install with fasteners (included). Plastic or lead anchors required for installation on concrete (detailed instructions on back of label).

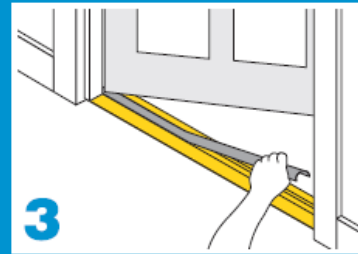

3 Place one edge of vinyl insert in retaining groove. Snap other edge of insert into opposite groove.

Quite el sardinel existente y limpie la superficie del piso.

1 Mida la abertura de la puerta en el piso y corte el sardinel a ese tamaño con una segueta. Recorte cada extremo al mismo largo.

2 Instale con los sujetadores (provistos). Para instalar en concreto se requieren anclajes plásticos o de plomo (vea los detalles para la instalación al reverso).

3 Coloque una orilla del inserto de vinilo en la ranura retenedora y enganche la otra orilla del inserto en la ranura opuesta. opuesta.