



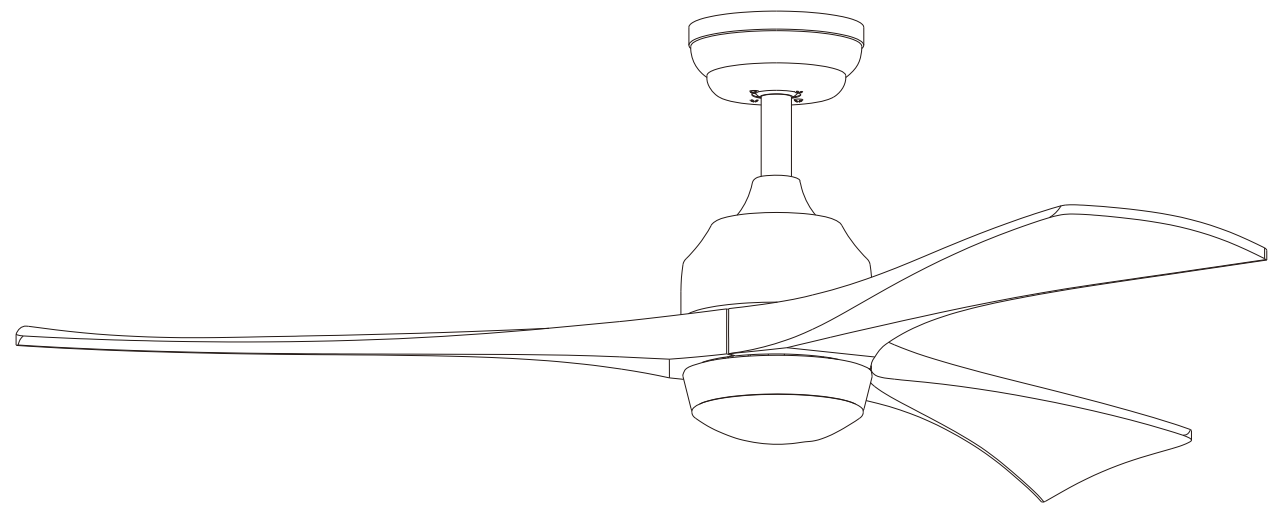

52-INCH DEROCATE CEILING FAN USE AND CARE GUIDE

Installation of the hanging bracket

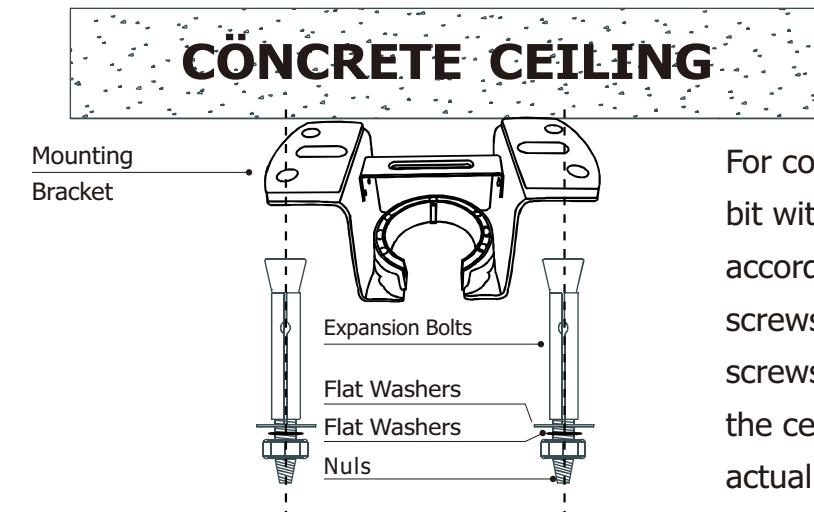


For concrete ceiling, use the percussion bit with diameter 8mm to drill holes according to the length of expansion screws. Then use the attached expansion screws to fix the hanging bracket onto the ceiling (selection is made according to actual requirements of the customers).

STEP 1 A-CONCRETE CEILING

SWITCH OFF THE ELECTRICAL MAINS AT THE CIRCUIT BREAKER FUSE BOX.

- 1) Use the Mounting Bracket as a guide, mark the spots where the 4 Expansion Bolts will be drilled.
- 2) Remove the Mounting Bracket, drill 2 holes and insert 2 Expansion Bolts into the concrete ceiling, install the mounting bracket and secure with Flat Washers, Spring Washers and Nuts.

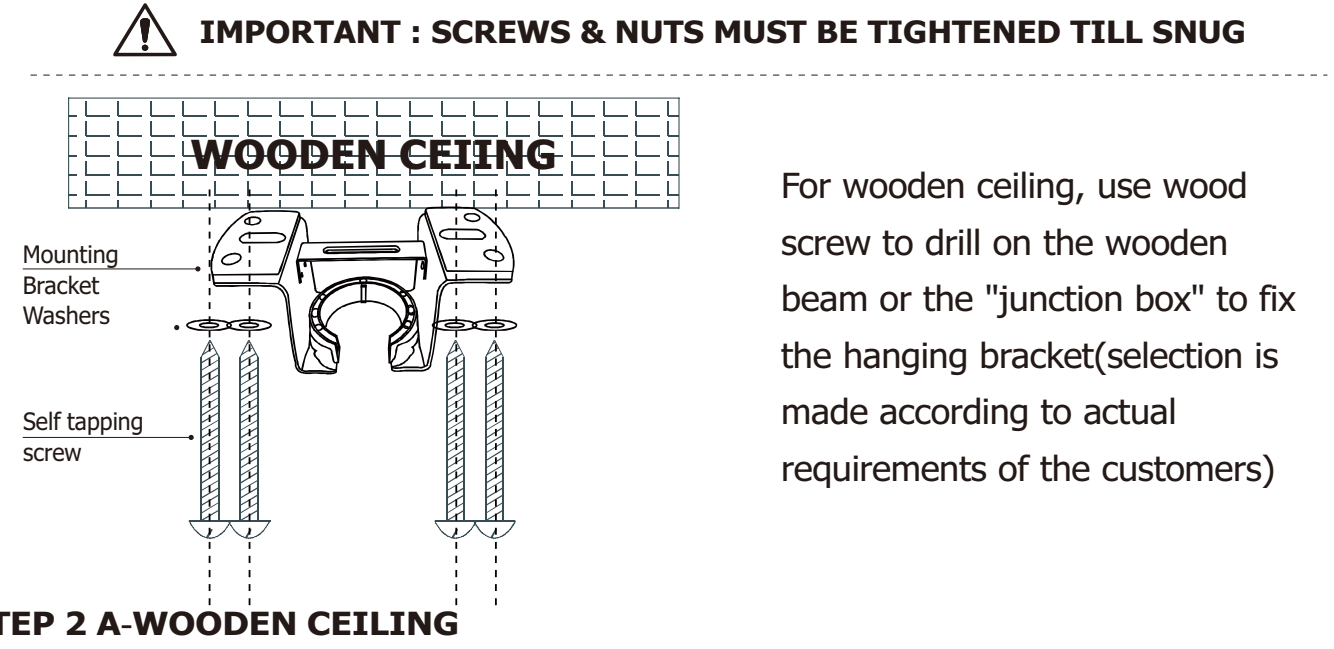

For wooden ceiling, use wood screw to drill on the wooden beam or the "junction box" to fix the hanging bracket(selection is made according to actual requirements of the customers)

SWITCH OFF THE ELECTRICAL MAINS AT THE CIRCUIT BREAKER FUSE BOX.

- 1) Use the Mounting Bracket as a guide, mark the spots where the 4 Self Tapping Screws will be drilled.
- 2) Remove the Mounting Bracket, drill 4 holes for 3MM diameter, install the mounting bracket onto wooden ceiling with the 4 Self Tapping Screws & Washers

Pre-Installation

Light kit fitter assembly

Fan-Motor assembly ×1PCS Light kit fitter assembly ×1PCS LED ×1PCS

Blade X 3PCS

Slide - on mounting bracket (inside canopy) X 1PCS 4.92 inch Ball/downrod assembly X 1PCS Canopy X 1PCS Coupling cover X 1PCS


9.84 inch Ball/downrod assembly X 1PCS

Parts Kit


AA Mounting screws ×4 BB Expansion bolts ×2 CC Plastic wire nut (not to scale) ×3 DD Blade attachment screw ×7 EE Iron Washers ×7

NOTE Hardware not shown to actual size.

Install downrod assembly

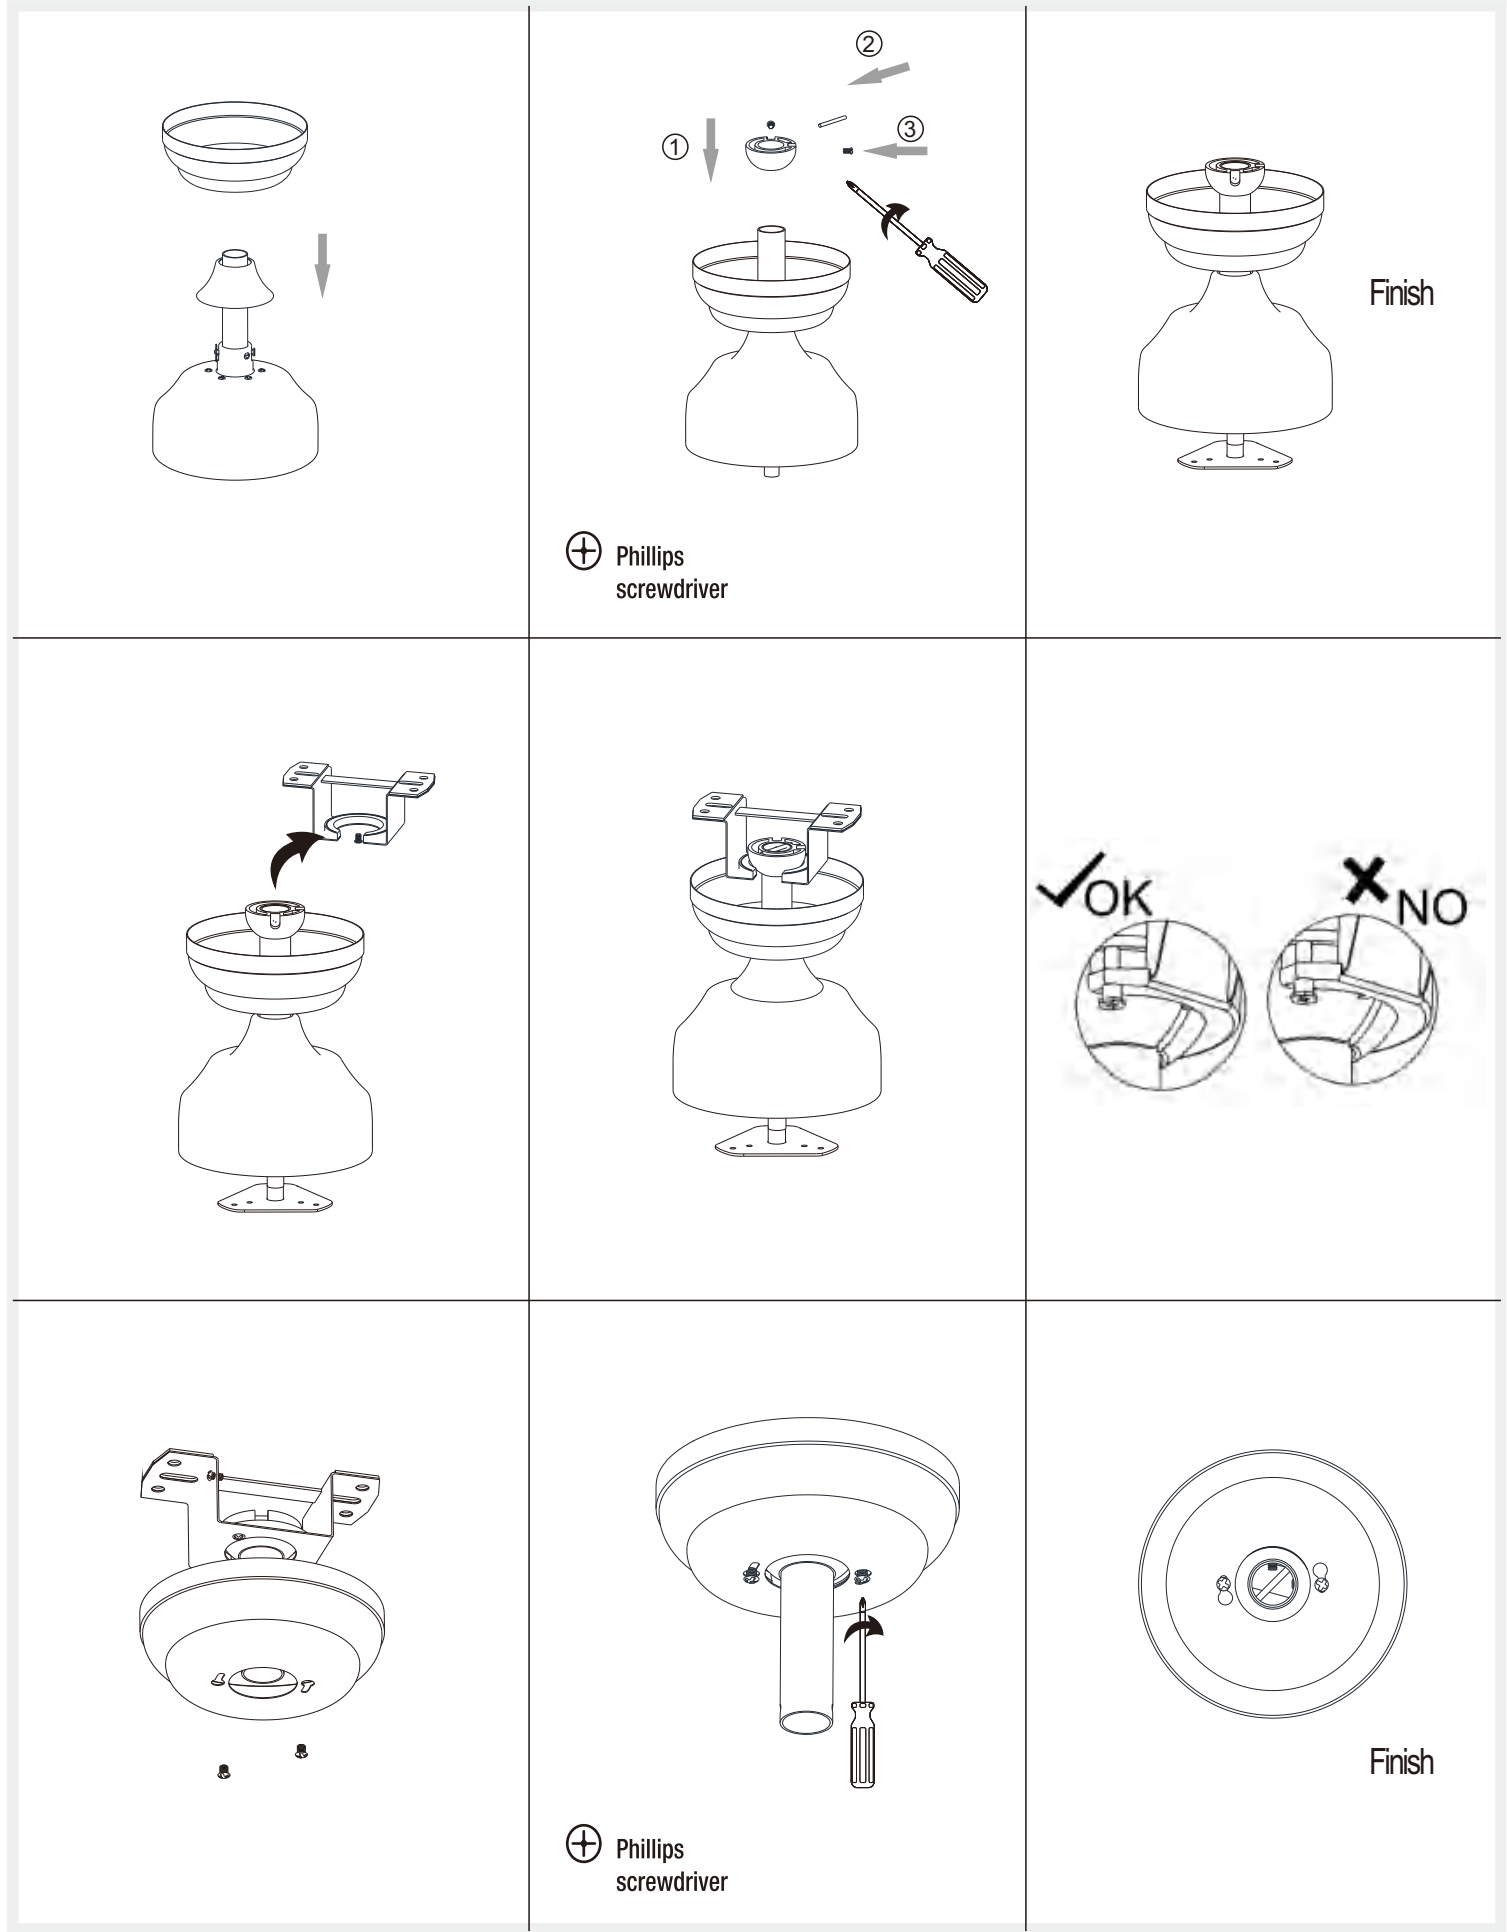

Fastening the blade arms to the motor

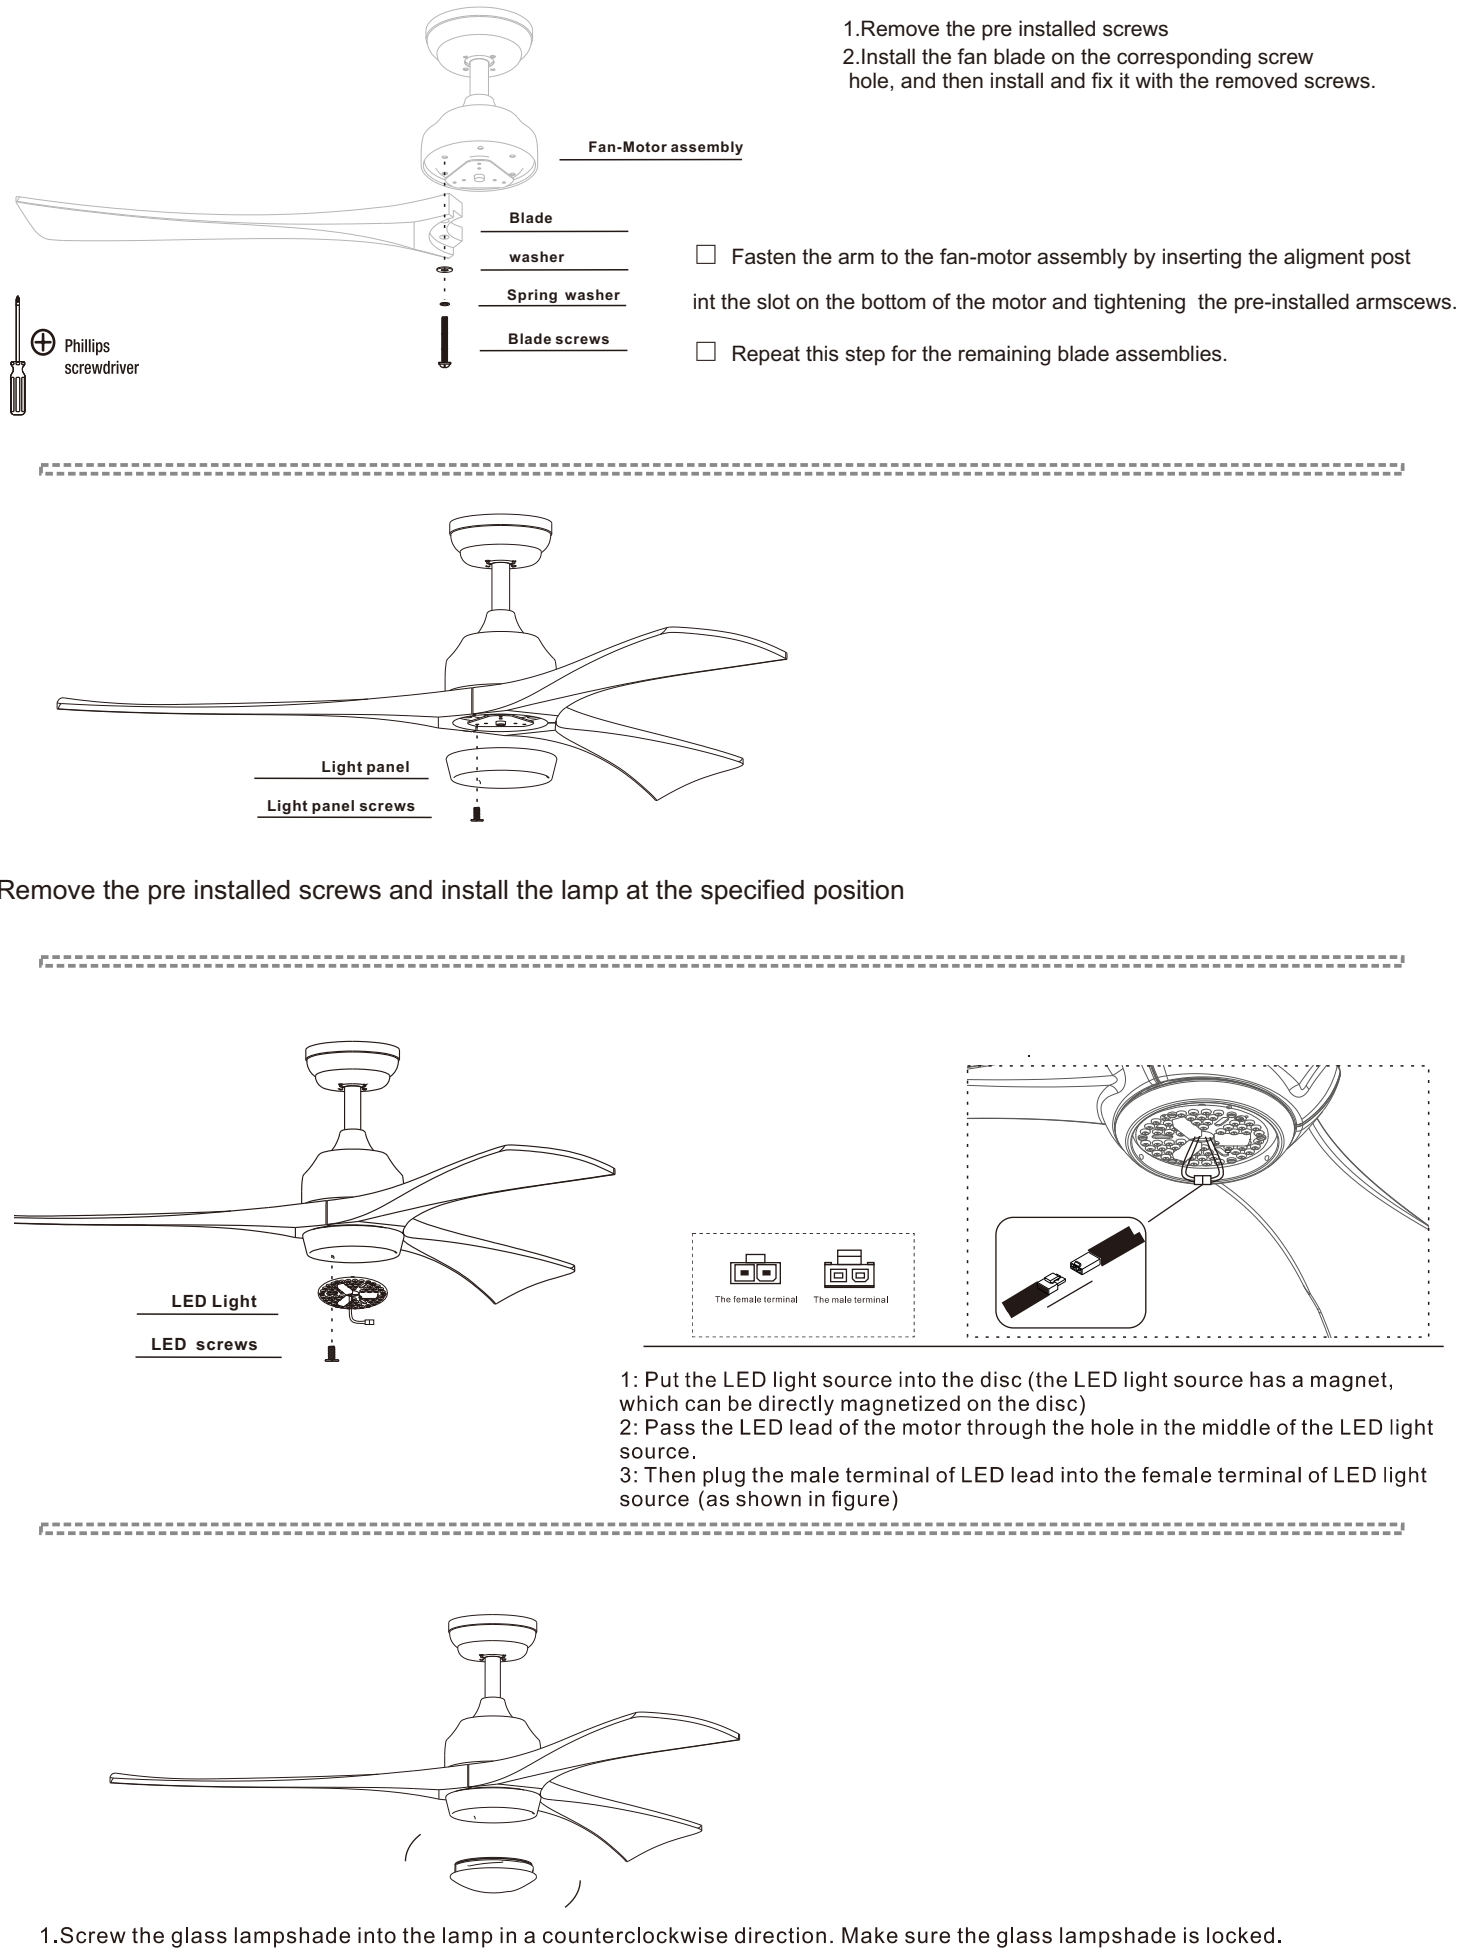

Install downrod assembly

Hang the fan

1. Lift the fan motor assembly up to the mounting bracket and seat the hanger ball in the mounting bracket socket. Rotate the fan motor assembly until the check groove drops into the registration slot and seats firmly. The downrod should not rotate if this is done correctly.

2. Slip coupling cover, canopy cover and canopy onto the downrod.

3. Align the holes and replace hanger pin and locking pin.

4. Tighten the two collar setscrews.

5. Carefully feed the motor wires up through the downrod.

Install canopy


1. Ensure the loosened screws are inserted into the key holes on the mounting bracket.

2. Carefully raise the canopy up to the mounting bracket. Rotate the canopy clockwise.


3. Secure the canopy by replacing the screws previously removed and tightening the screw previously loosened.

4. Place the canopy cover (if applicable) and rotate the canopy cover clockwise until it locks into position.


Making the electrical connections

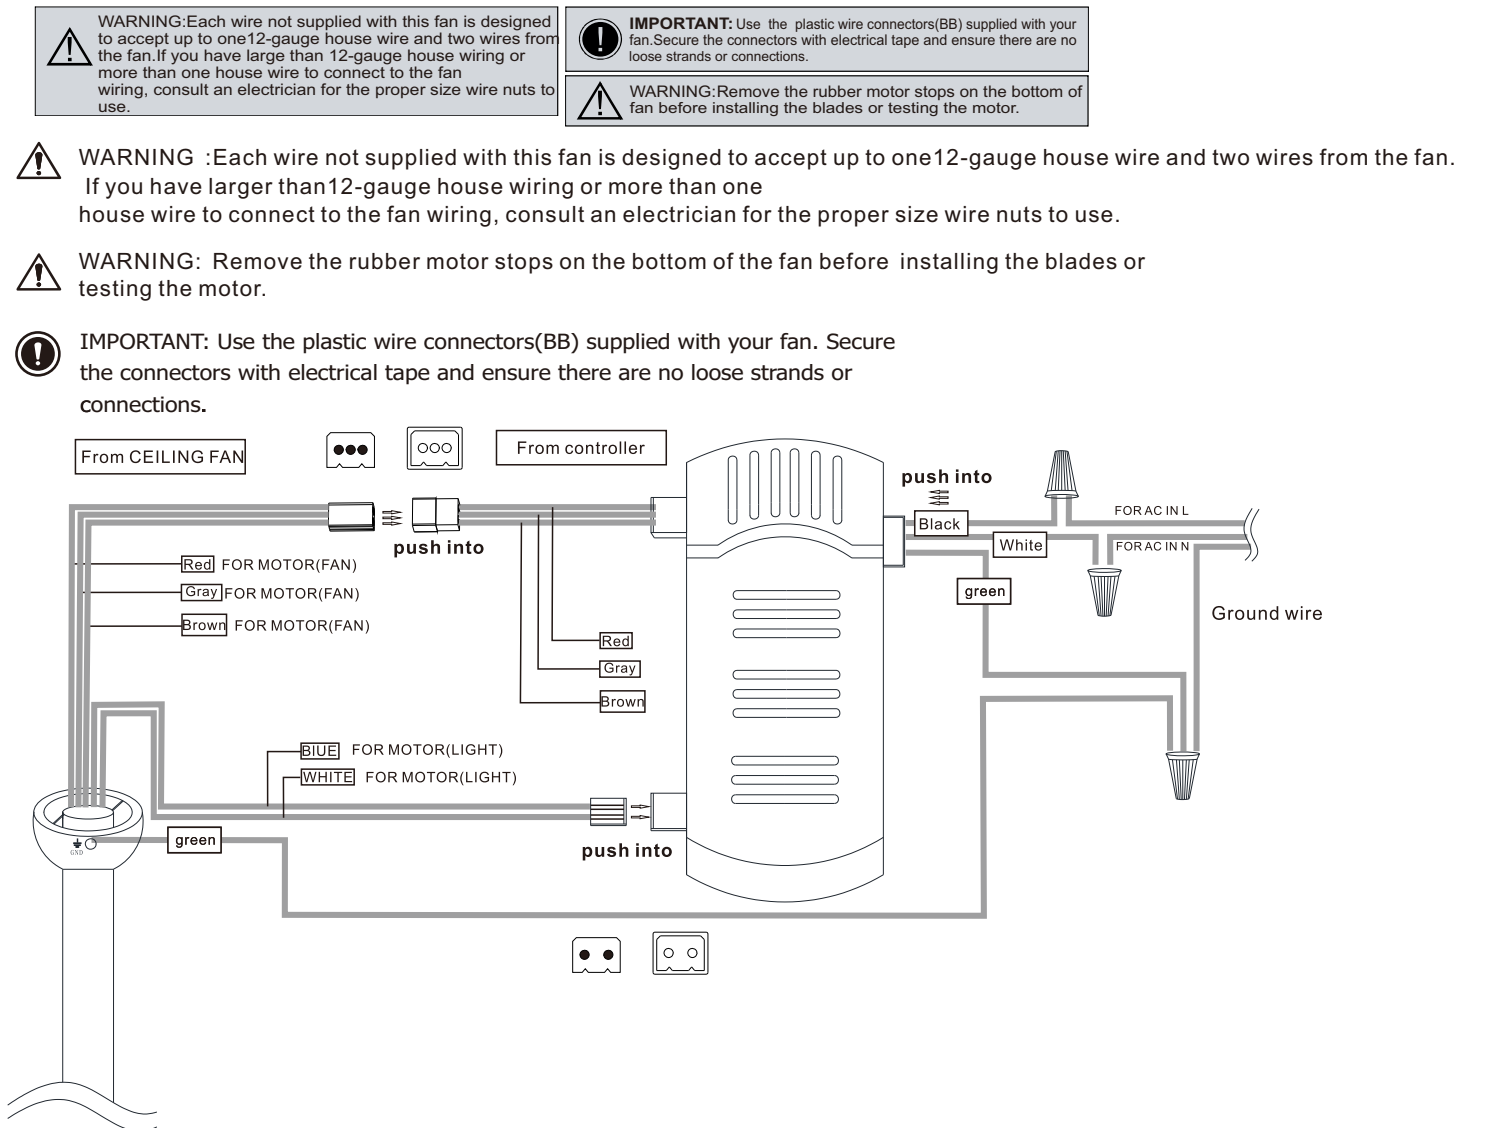

Install remote control

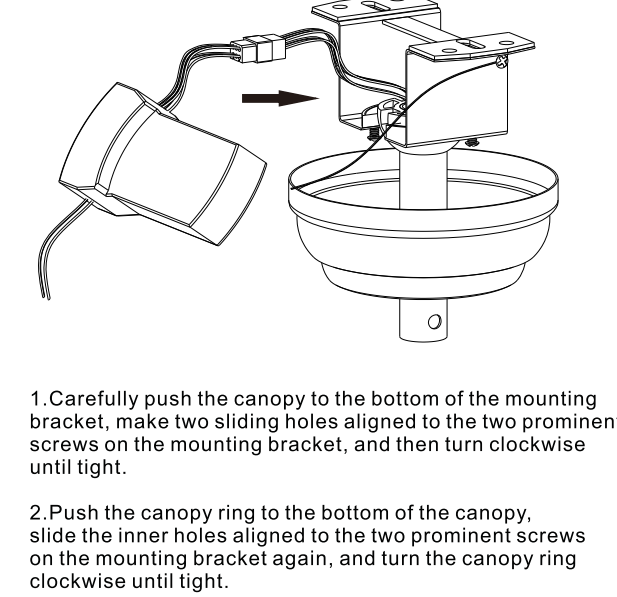

Preparing for mounting

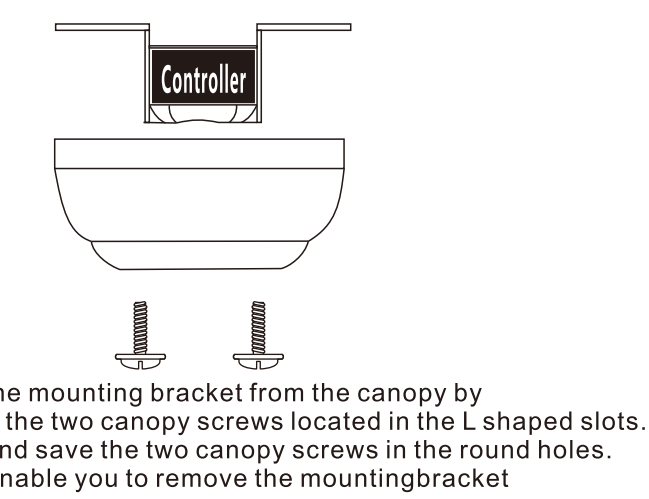

LIGHT MUST BE KEPT AT THE ON POSITION
FAN MUST BE KEPT AT THE HIGH SPEED

Use of remote control

REMOTE CONTROL MANUAL

FUNCTION INSTRUCTIONS:

- ⊕ Fan Rotating Direction
- ⊖ Natural wind
- ⊕ Fan speed control/ Fan on
- ⊖ Fan off
- ⊕ Light on
- ⊖ Mute
- ⊕ Light off
- ⊖ Timer

Note:
Remote control pairing: Turn off main power for one minute; Turn on power, within 10 seconds, press ⊕ Fan off button(⊕) until hearing "beeb" sound, pairing successful!

If the remote control is not working:
1. Please check if the batteries are installed correctly.
2. Exclude using same kind of remote controls nearby.
3. Please check if the main power is within the rated power.

