## For Style 1209P7 Assembly Instruction Sheet #IS-1209P7

Is Required: Plathand screwidriver, Phillips screwidriver, plians, who exispens, electrical laps, eatily glasses.

1 deverse: (1) SUGGESTED LED GO BULD MAX SW (Not include).

1 deverse: (1) SUGGESTED LED GO BULD MAX SW (Not include).


1 services: Identify and inspect all parts before beginning investigation. Check peckage content list and diagrams below to be sure all parts are


1 fary parts are missing or damaged, do not attempt to assemble, Install, or operate the Solute. Context outcomer service for replacement

## 

These instructions are provided for your selfety. It is very important you read them completely before installing the focure. We strongly recommend that a licensed, professional electrician perform the installation. Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal

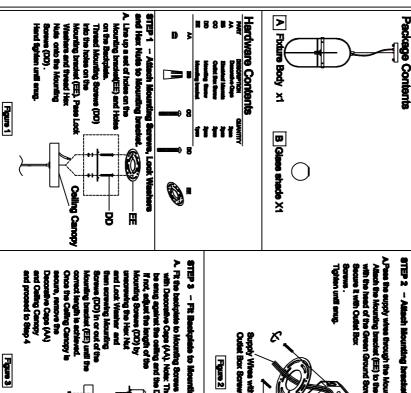

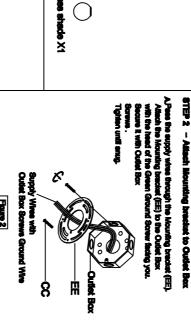


A. Fit the baciplate to Mounting Screwe (DD) and secure with Decorative Cape (AA). Note: The baciplate should STEP 8 — Fit Backplate to Mounting bracket Assembly Decorative Cape (AA). Ceiling Cano B ⋛

A.Carefully track all views into the outset box and position the Calling Caropy of the Foture Body (A) over the outset box. Align the hotes

n the Calling Canopy with the Mounting Screws (DD).

ve Cape (AA) and hand tighten until enug

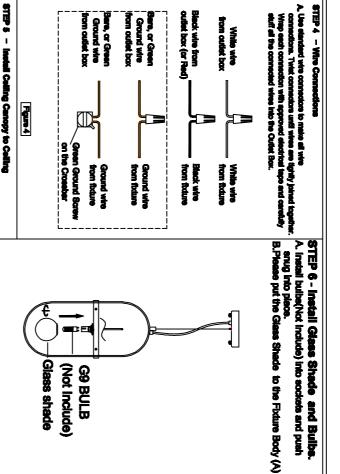

ReleasedDate:2019-4-1

1 of 2

Figure 5

Figure 6