



HERB



SHALLOW




MEDIUM

## COMPOSITE RAISED GARDEN BED INSTALLATION GUIDELINE

### ASSEMBLE PANELS

1. Slide one end of the T&G Board (A) into the open end of the Garden Hinge (B)
2. Insert one Garden Cap (C) on both side to lock in place
3. Repeat on opposite side of T&G Board (A), ensure to flip over Garden Hinge (B)
4. Repeat for all T&G Boards

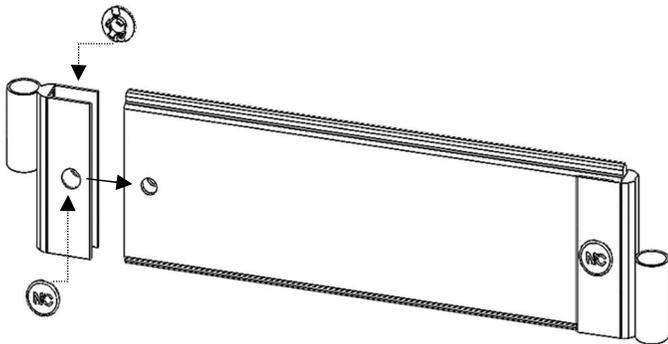

### COMPONENTS

#### RAISED HERB GARDEN BED

- A. T&G Board (Qty 4)
- B. Garden Hinge (Qty 8)
- C. Garden Cap (Qty 20)
- D. Garden Stake (Qty 4)

#### RAISED SHALLOW GARDEN BED


- A. T&G Board (Qty 8)
- B. Garden Hinge (Qty 16)
- C. Garden Cap (Qty 40)
- D. Garden Stake (Qty 8)

#### RAISED MEDIUM GARDEN BED

- A. T&G Board (Qty 12)
- B. Garden Hinge (Qty 24)
- C. Garden Cap (Qty 60)
- D. Garden Stake (Qty 12)

### ASSEMBLE RAISED HERB GARDEN BED


5. Once the panels are assembled, layout the herb garden bed in the desired location in a straight square (2x2) or Rectangle (4x2)
6. Lock panels in place by sliding the Garden Stake (D) into the Hinge securing into the ground
7. *For Herb Bed Only:* Install the remaining Garden Caps to the top of the Stake aligning the cap to lock in place

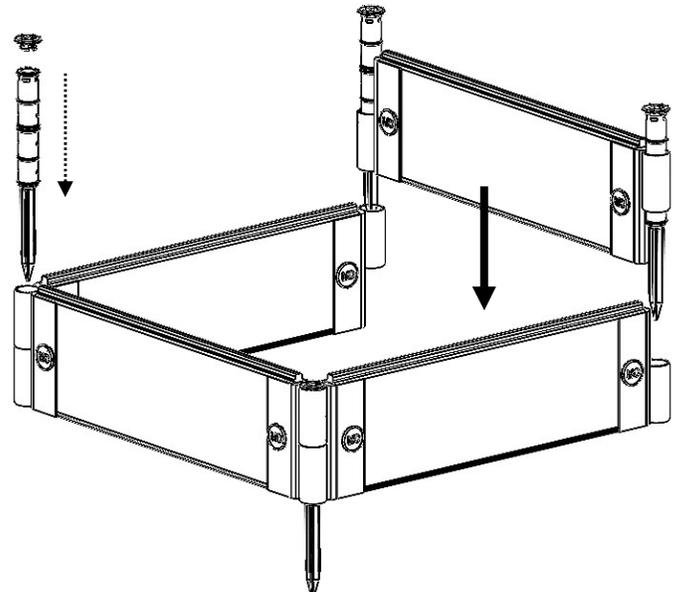

## RAISED SHALLOW GARDEN BED

*If your Garden Stakes have a Garden Cap installed, remove*


12. Stack the next level of panels, connecting the tongue and groove.
13. Drop the stake into the hole of the herb level stakes
14. For Shallow Garden Beds Only: Install the remaining Garden Caps to the top of the Stake aligning the cap to lock in place (in your kit you will have 4 extra caps)

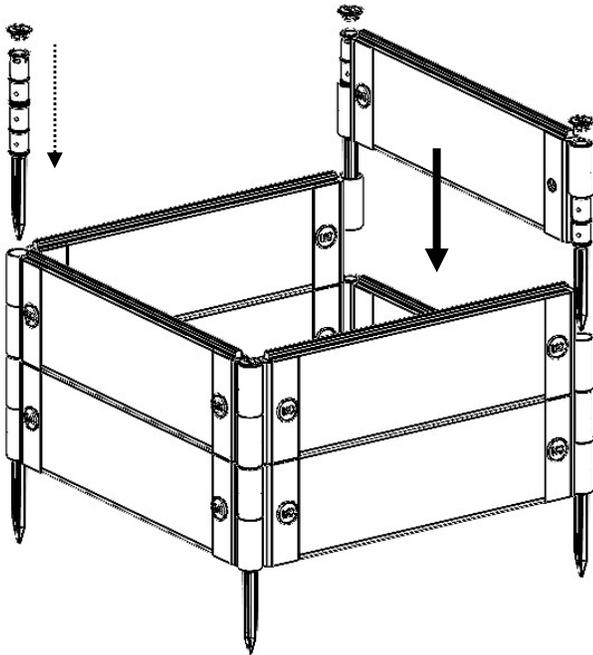

## RAISED MEDIUM GARDEN BED

*If your Garden Stakes have a Garden Cap installed, remove*

9. Stack the next level of panels, connecting the tongue and groove.
10. Drop the stake into the hole of the shallow level stakes
11. For Medium Garden Beds Only: Install the remaining Garden Caps to the top of the Stake aligning the cap to lock in place (in your kit you will have 8 extra caps)

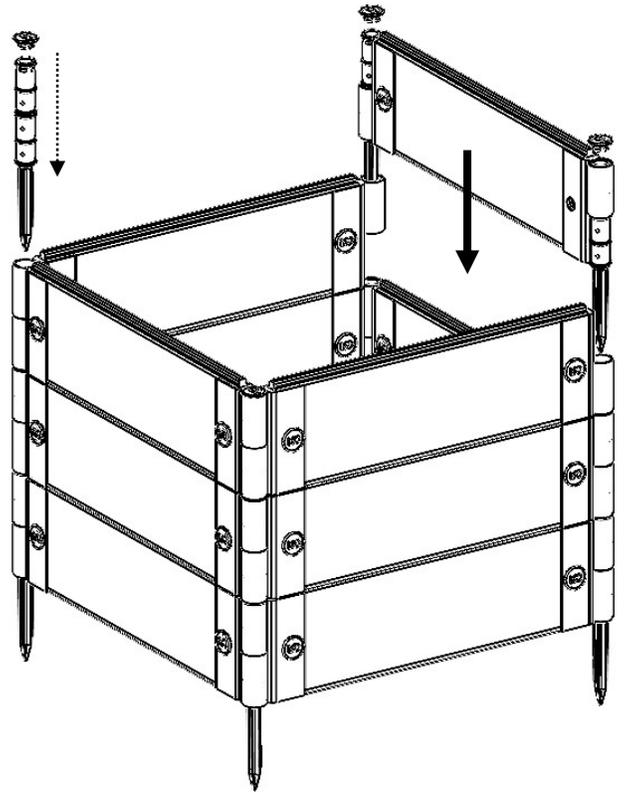

**To Fill Planter: Fill Planter with lightweight potting soil mix, avoiding using heavy soil mixtures that contain clay, sand and/or gravel. Drill ¼" holes in base boards for additional drainage.**