


PACKAGE CONTENTS

Contenido del paquete



(1) 10-32 x 3/4 in. bolt and nut

(1) perno y tuerca de 10-32 x 3/4 in.



(1) #10 lock washer

(1) Arandela de seguridad #10



(1) #14 x 1-1/2 in. screw

(1) tornillo #14 x 1-1/2 in.



(1) #14 x 1-3/8 in. plastic wall anchor

(1) Anclaje plástico para pared #14 x 1-3/8 in



(1) Hose washer

(1) arandela para manguera



(1) 1/4 in. x 1-1/2 in. large screw

(1) tornillo grande de 1/4 in. x 1-1/2 in.



(1) 1/4 in. x 1 in. metal wall anchor

(1) Anclaje metálico para pared de 1/4 in x 1 in








(1) 7-1/4 in. brace

(1) Soporte de 7-1/4 in.

INSTALLATION INSTRUCTIONS

Instrucciones para la instalación

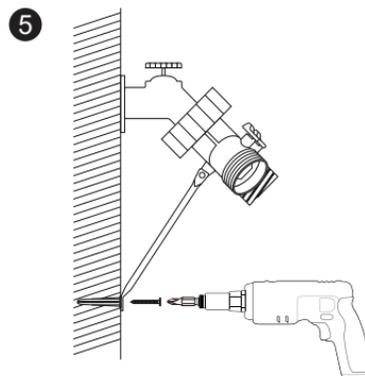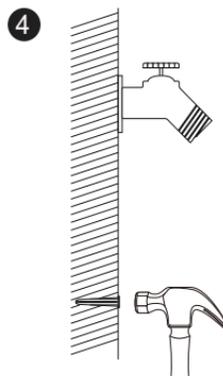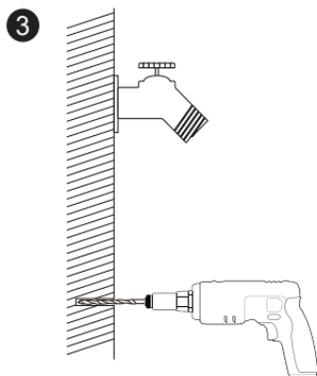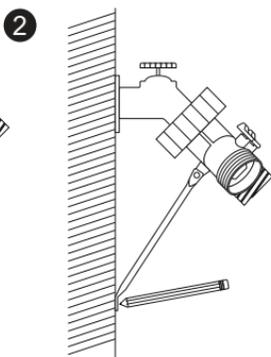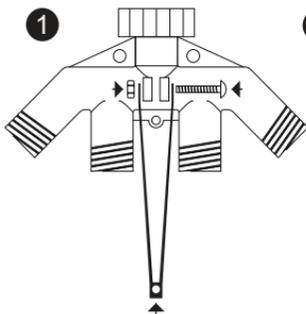

Caution:

- Use a metal anchor when installing into masonry; use a plastic anchor when installing into stucco.
- Brace must be installed to avoid damage to the hose faucet. Refrain from putting pressure on the manifold by tugging at the hose.
- Check local plumbing codes. Codes vary and some may require use of anti-siphon valves to be installed at the ends of the manifold.
- Freezing areas: disconnect the manifold from the faucet prior to freezing weather to avoid faucet damage.

Precaución:

- Emplee un anclaje metálico si la instalación se realiza en mampostería; si la instalación se realiza en estuco, emplee un anclaje plástico.
- El soporte debe instalarse para evitar daños en el grifo de la manguera. Evite ejercer presión sobre el distribuidor jalando la manguera.
- Compruebe los códigos locales de plomería. Los códigos pueden variar y algunos de ellos pueden exigir la instalación de válvulas antisifón en los extremos del distribuidor.
- Áreas con temperaturas bajo cero: desconecte el distribuidor del grifo antes de que se produzcan heladas para evitar daños en la llave.

