


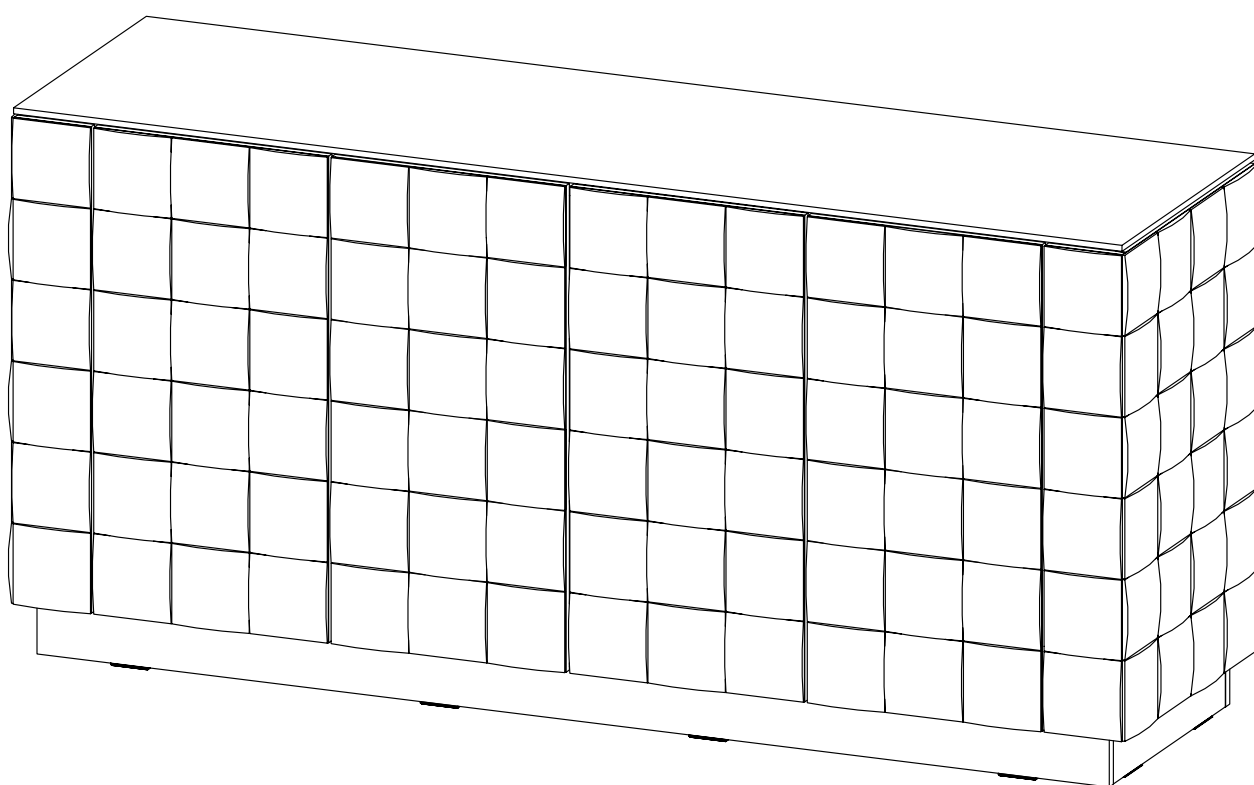

ASSEMBLY INSTRUCTIONS

Sideboard

EEI-7850 / V0.06.17.26

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome.

Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 120 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item
Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.




Care instructions are listed in the last step of this manual.

WAIT!

Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!




HARDWARE INCLUDED IN THE BOX:

A		Cam Bolt Ø6 x 32 mm	x40
B		Cam Lock Ø15 mm	x40
C		Wood Dowel Ø8 x 30 mm	x50
D		Screw M7 x 50 mm	x4
E		Shelf Support	x8
F		Floor Glide	x14
G		Push Tool	x4
H		Screw M3.5 x 13 mm	x8
I		Screw M4.5 x 12.5 mm	x48
J		Wedge	x16
K		Screw M3.5 x 15.5 mm	x16
L		Screw Cap Ø15 mm	x2
M		Screw Cap Ø15 mm	x6
N		Joining Strip	x2
O		Cable Hole Cover	x4
P		JCN Nut + Screw	x4
HGL4		Hand Grip + Allen Key	1 SET
HS26B		Hinge	x8

WHAT YOU NEED:




Phillips



Phillips Head Screwdriver



Flat




Flat Head Screwdriver

FURNITURE COMPONENTS INCLUDED IN THE BOX:

Page 3 of 21

All parts are numbered with a sticker according to this list.

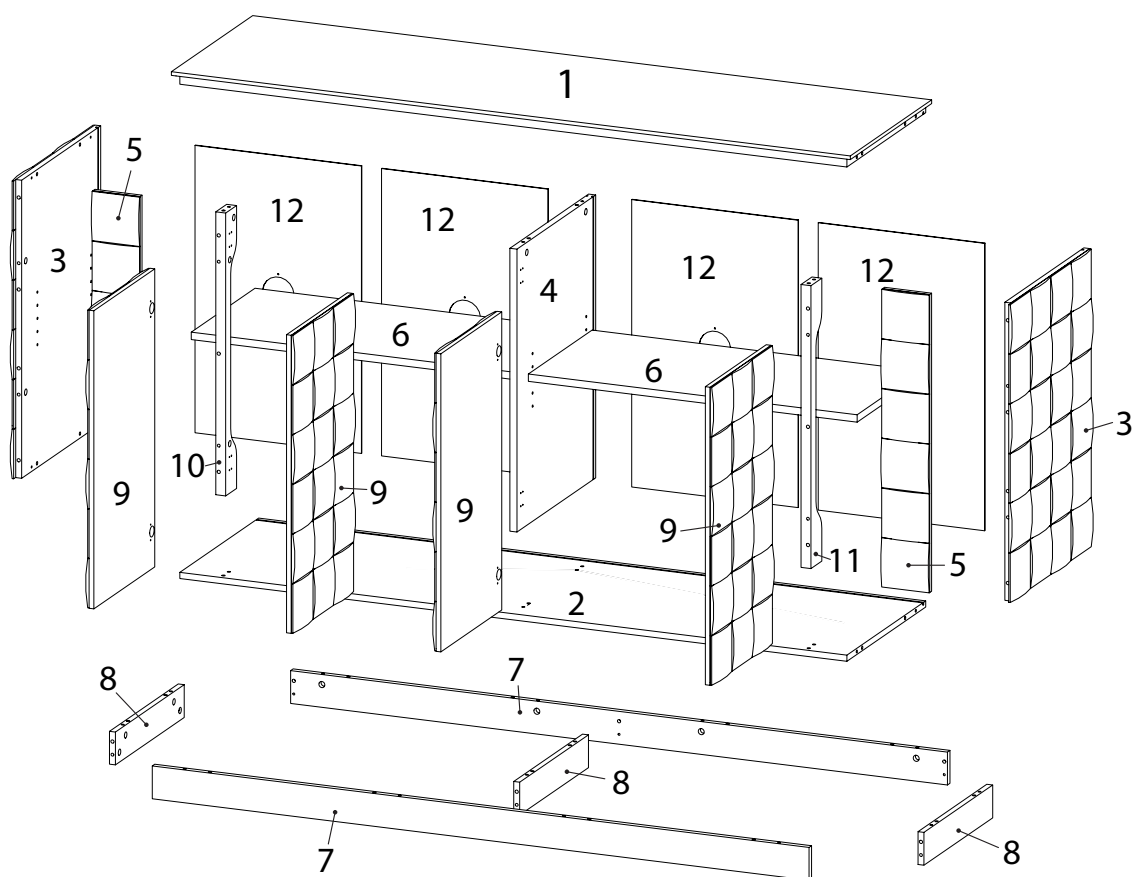

1	Top Board	x1	8	Bottom Skirt 2	x3
2	Bottom Board	x1	9	Door	x4
3	Side Board	x2	10	Support Board Left	x1
4	Center Board	x1	11	Support Board Right	x1
5	Front Board	x2	12	Back Board	x4
6	Adjustable Shelf	x2			
7	Bottom Skirt 1	x2			

Carton 1 Of 2


Label	Description	Qty
3	Side Board	x2
4	Center Board	x1
5	Front Board	x2
6	Adjustable Shelf	x2
9	Door	x4
	Hardware Pack	x1

Carton 2 Of 2


Label	Description	Qty
1	Top Board	x1
2	Bottom Board	x1
7	Bottom Skirt 1	x2
8	Bottom Skirt 2	x3
10	Support Board Left	x1
11	Support Board Right	x1
12	Back Board	x4

HARDWARE


HGL4 Hand Grip + Allen Key

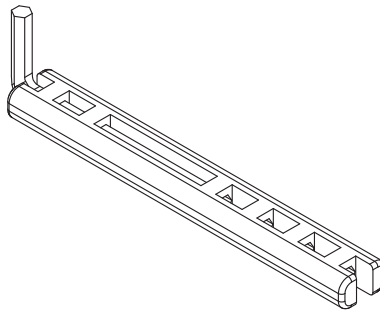

POSITION 1

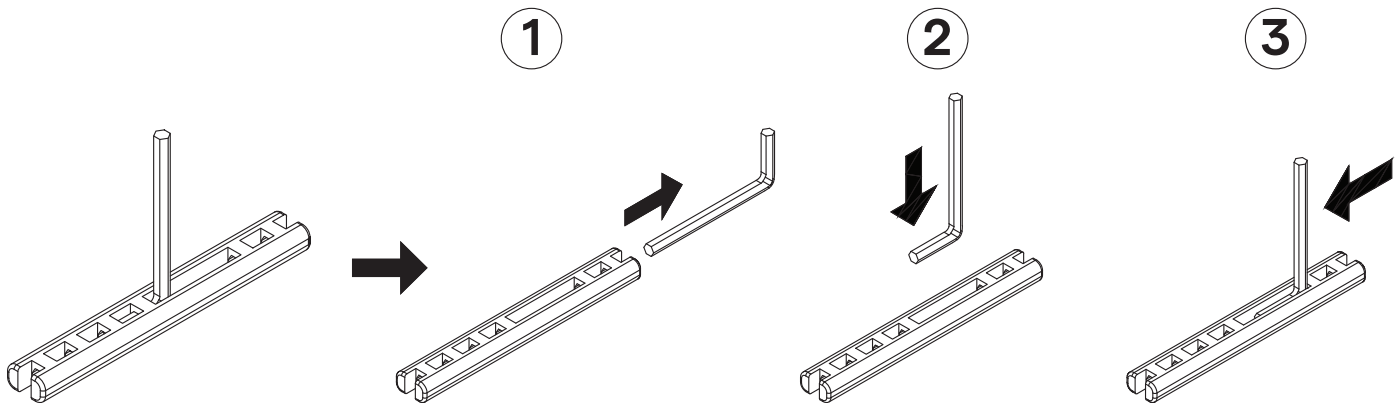

POSITION 2

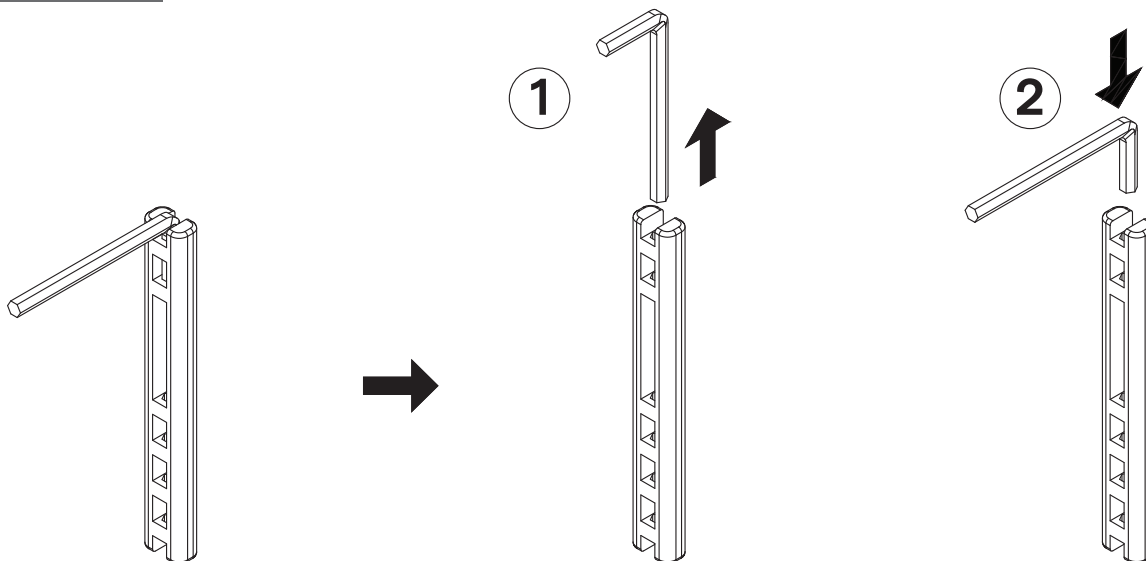

HARDWARE


A	Cam Bolt Ø6 x 32 mm	x4
C	Wood Dowel Ø8 x 30 mm	x4
G	Push Tool	x4
H	Screw M3.5 x 13 mm	x8

COMPONENTS

1	Top Board	x1
----------	-----------	----

1.1 Insert Cam Bolt Ø6 x 32 mm (A) into Top Board (1), and tighten using screwdriver, then insert Wood Dowel Ø8 x 30 mm (C).

1.2 Install the Push Tool (G) onto Top Board (1). Secure the plastic base using Screw M3.5 x 13 mm (H) and tighten with a screwdriver. Ensure the base is oriented as shown in the detail view below. Then snap the Push Tool body onto the base.

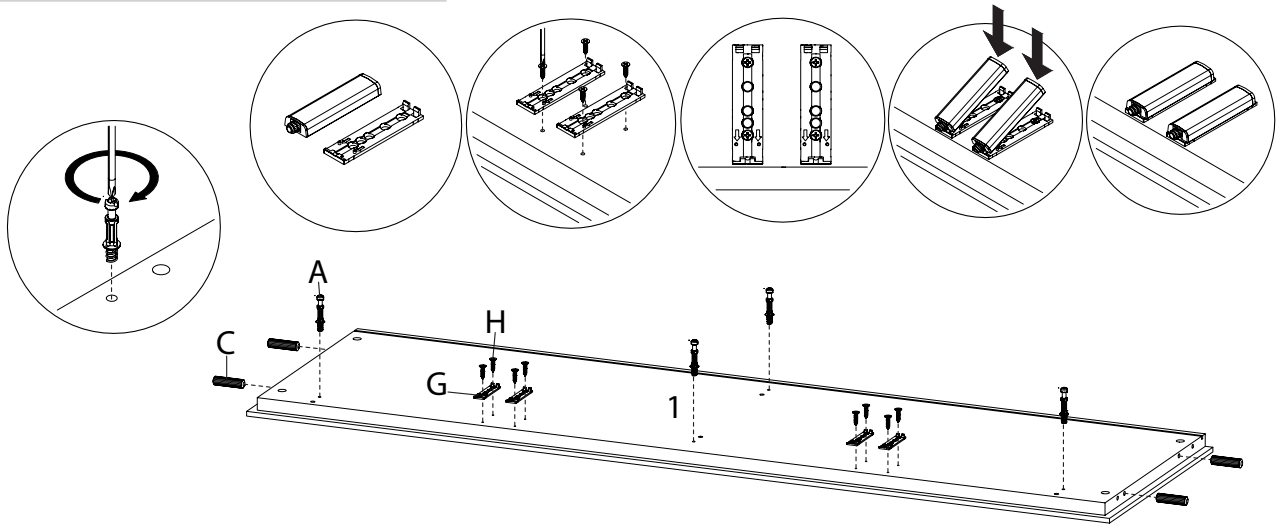

STEP 02

HARDWARE



C	Wood Dowel Ø8 x 30 mm	x14
----------	-----------------------	-----

COMPONENTS

4	Center Board	x1
10	Support Board Left	x1
11	Support Board Right	x1

2.1 Unplug dowel first before assembly Support Board Left (10) and Support Board Right (11).

2.2 Insert Wood Dowel Ø8 x 30 mm (C) into the Center Board (4), Support Board Left (10) and Support Board Right (11). Position as shown.

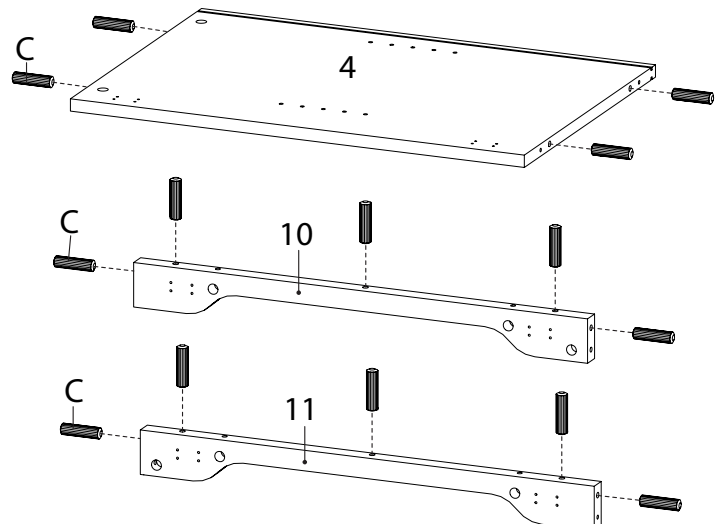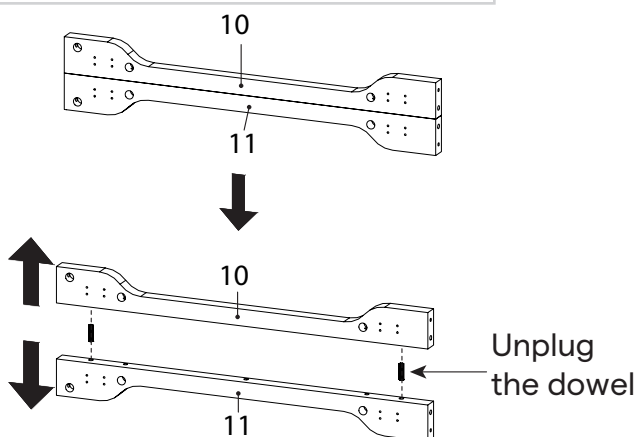


HARDWARE

B	Cam Lock Ø15 mm	x4
L	Screw Cap Ø15 mm	x2
M	Screw Cap Ø15 mm	x2

COMPONENTS

1	Top Board	x1
4	Center Board	x1
10	Support Board Left	x1
11	Support Board Right	x1

3.1 Attach Center Board (4), Support Board Left (10) and Support Board Right (11) to Top Board (1), secure with Cam Lock Ø15 mm (B), tighten using screwdriver. then put Screw Cap Ø15 mm (L) to Cam Lock on the Center Board and Screw Cap Ø15 mm (M) to Support Board Left and Right. Position as shown.

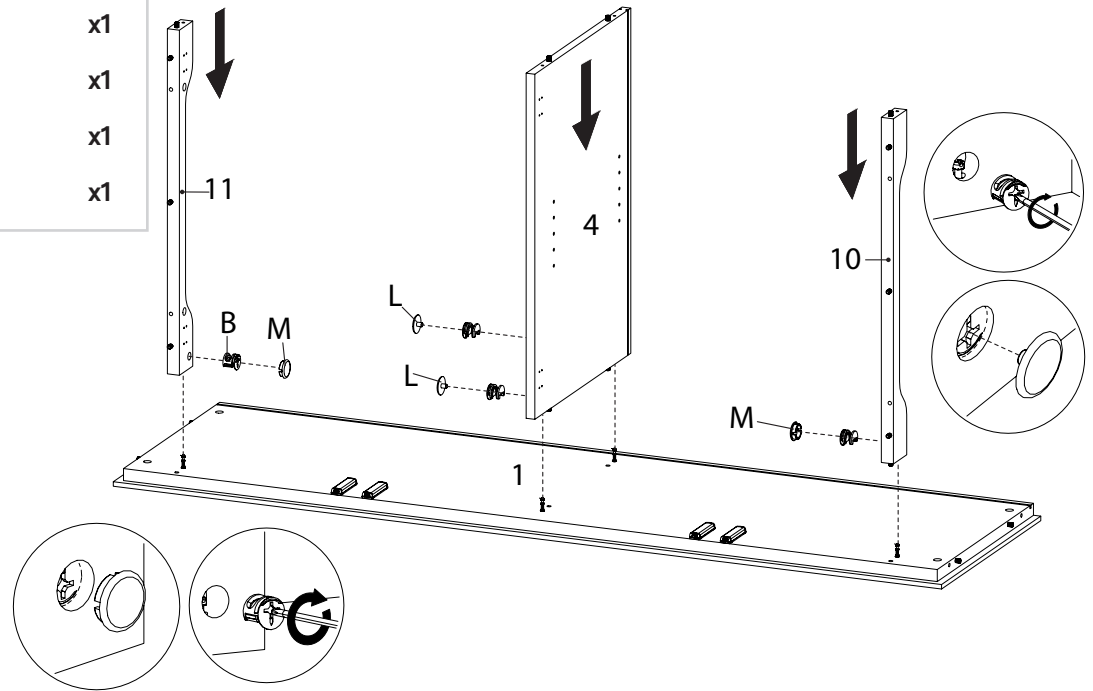

STEP 04


HARDWARE

C	Wood Dowel Ø8 x 30 mm	x4
----------	-----------------------	----

COMPONENTS


2	Bottom Board	x1
----------	--------------	----

4.1 Insert Wood Dowel Ø8 x 30 mm (C) into Bottom Board (2). Position as shown.

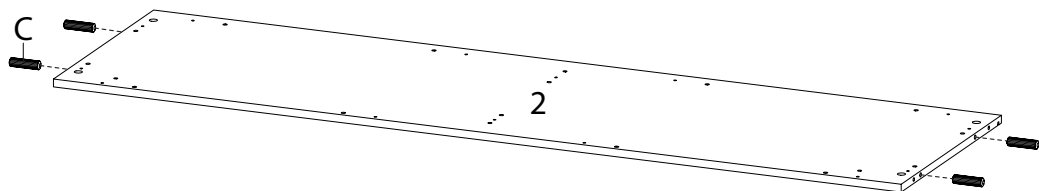

HARDWARE**D** Screw M7 x 50 mm x4**HGL4** Hand Grip + Allen Key x1**COMPONENTS****2** Bottom Board x1


5.1 Attach Bottom Board (2) to Center Board and Support Boards, secure with Screw M7 x 50 mm (D), then tighten screws using Hand Grip + Allen Key (HGL4). Position as shown.

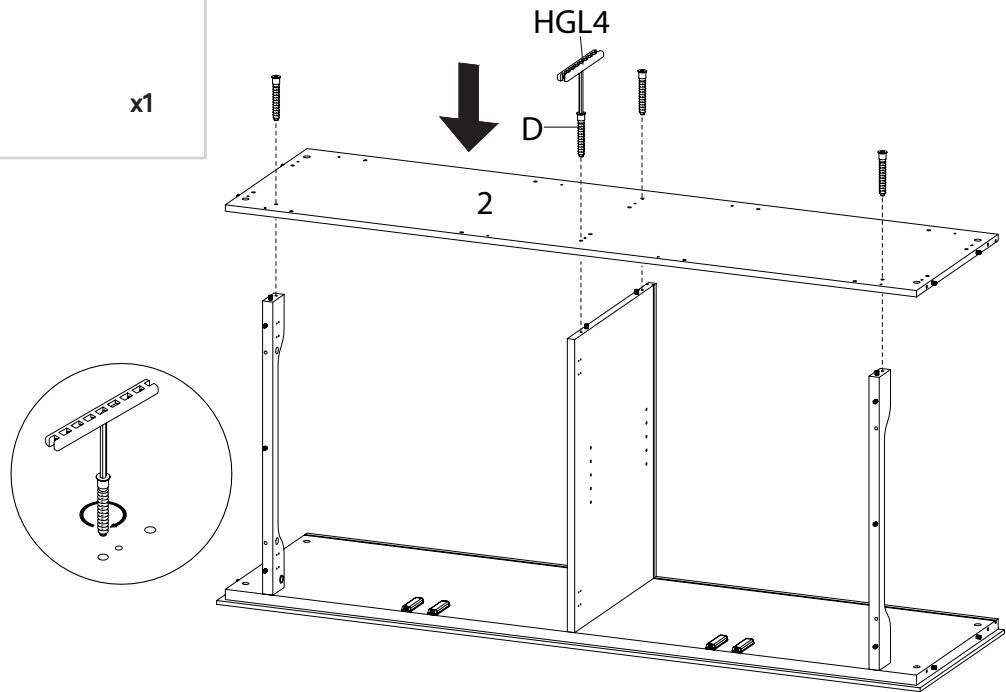

STEP 06

HARDWARE**A** Cam Bolt Ø6 x 32 mm x8**C** Wood Dowel Ø8 x 30 mm x8**COMPONENTS****3** Side Board x2

6.1 Insert Cam Bolt Ø6 x 32 mm (A) into the Side Board (3), tighten using screwdriver. Then insert Wood Dowel Ø8 x 30 mm (C). Position as shown.

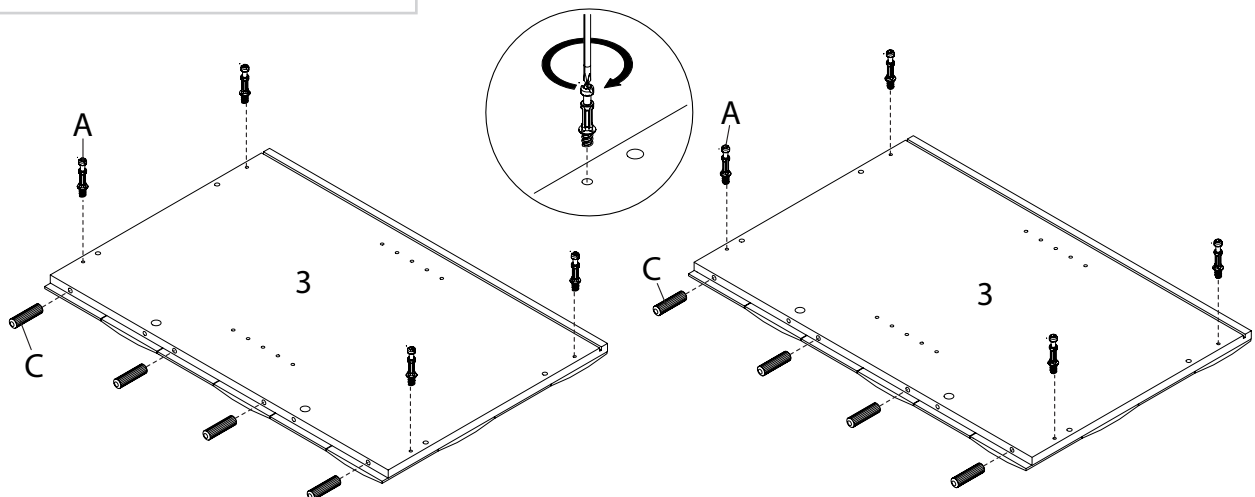


HARDWARE

(N) Joining Strip x2

COMPONENTS

(12) Back Board x4

7.1 Insert Back Board (12) into Center Board, then Insert Joining Strip (N) in between the Back Boards. Position as shown.

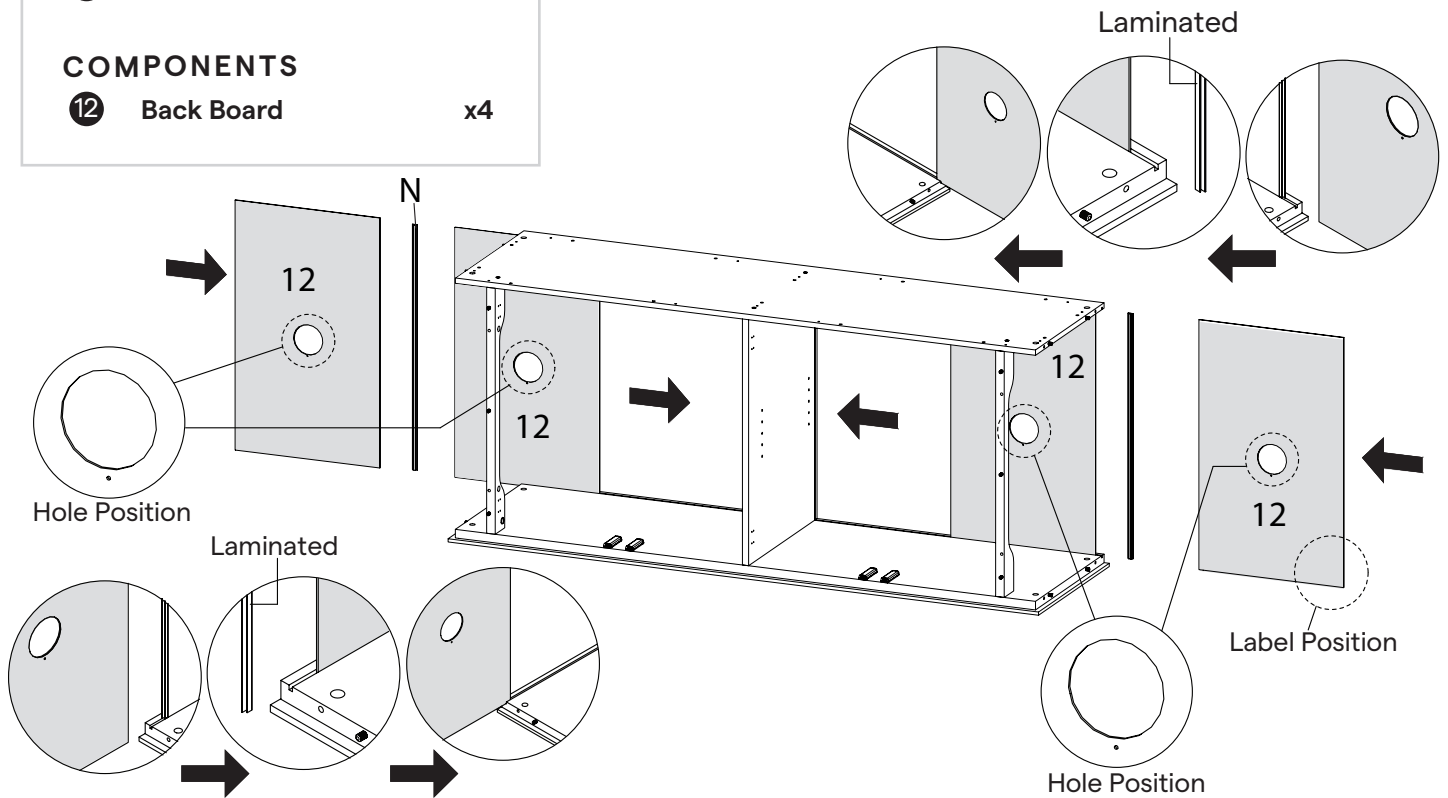


STEP 08

HARDWARE

(O) Cable Hole Cover x4


(P) JCN Nut + Screw x4

6.1 Install Cable Hole Cover (O) into Back Board (12) secure with JCN Nut + Screw (P) then tighten using screwdriver. Position as shown.

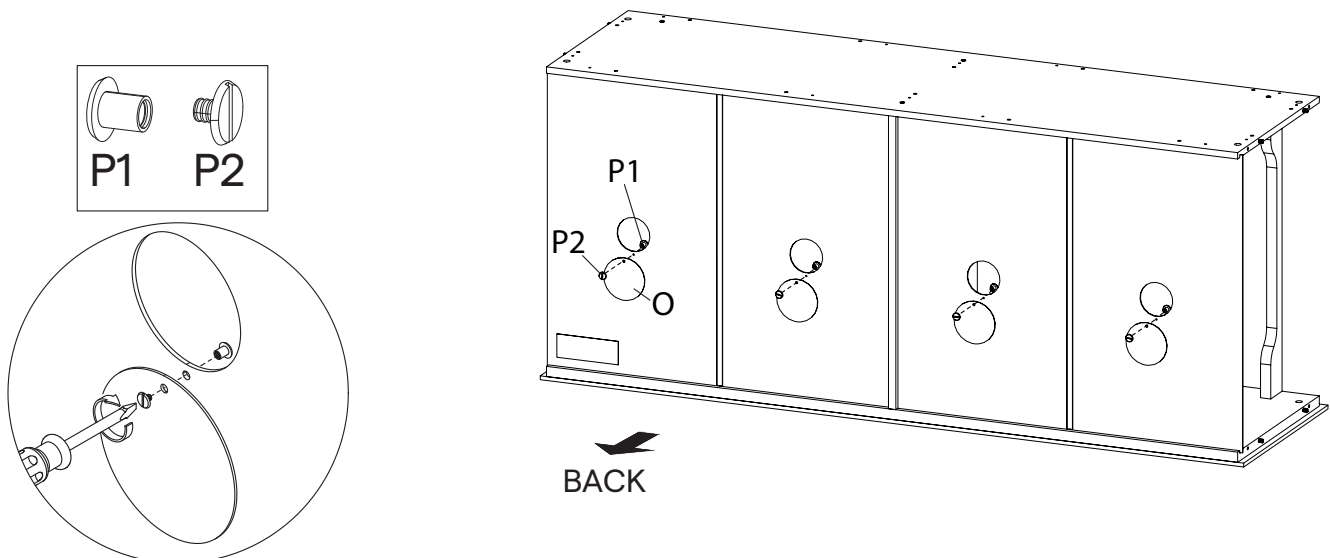

HARDWARE**(B)** Cam Lock Ø15 mm x4**COMPONENTS****(3)** Side Board x1


9.1 Attach Side Board (3) to Top Board and Bottom Board, secure with Cam Lock Ø15 mm (B) then tighten using screwdriver. Position as shown.

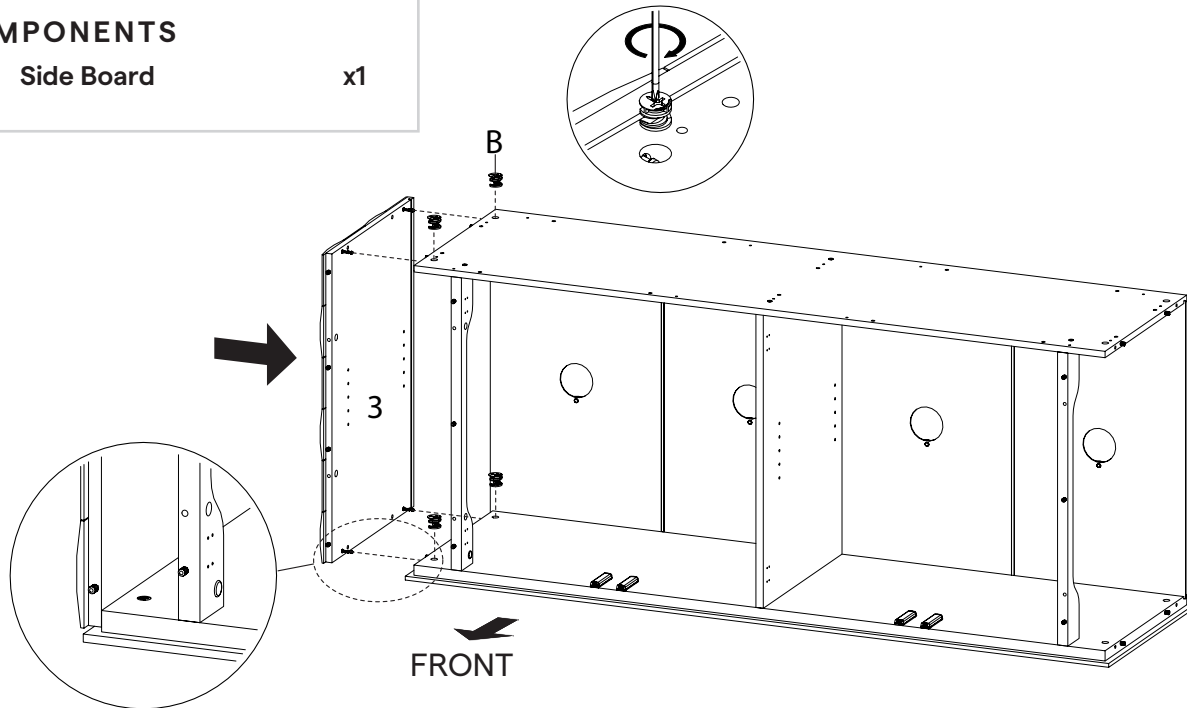

STEP 10

HARDWARE**(B)** Cam Lock Ø15 mm x4**COMPONENTS****(3)** Side Board x1


10.1 Attach Side Board (3) to Top Board and Bottom Board, secure with Cam Lock Ø15 mm (B) then tighten using screwdriver. Position as shown.

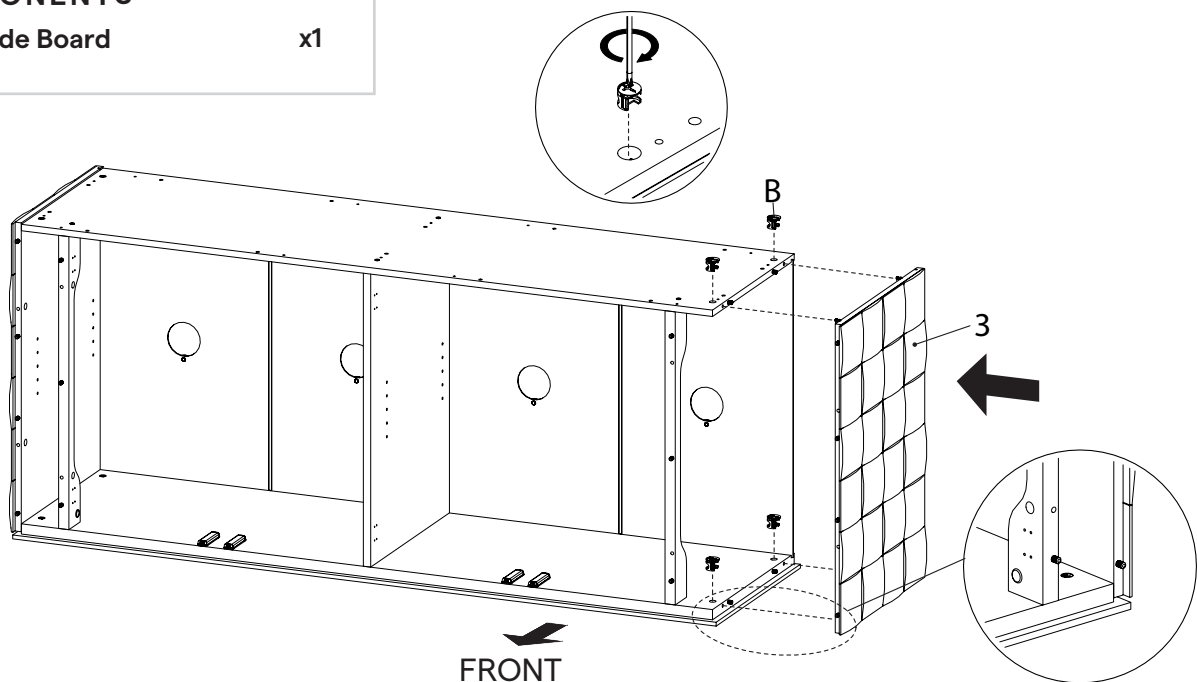

HARDWARE

A Cam Bolt Ø6 x 32 mm x14

11.1 Insert Cam Bolt Ø6 x 32 mm (A) into the Bottom Board (2), then tighten using screwdriver. Position as shown.

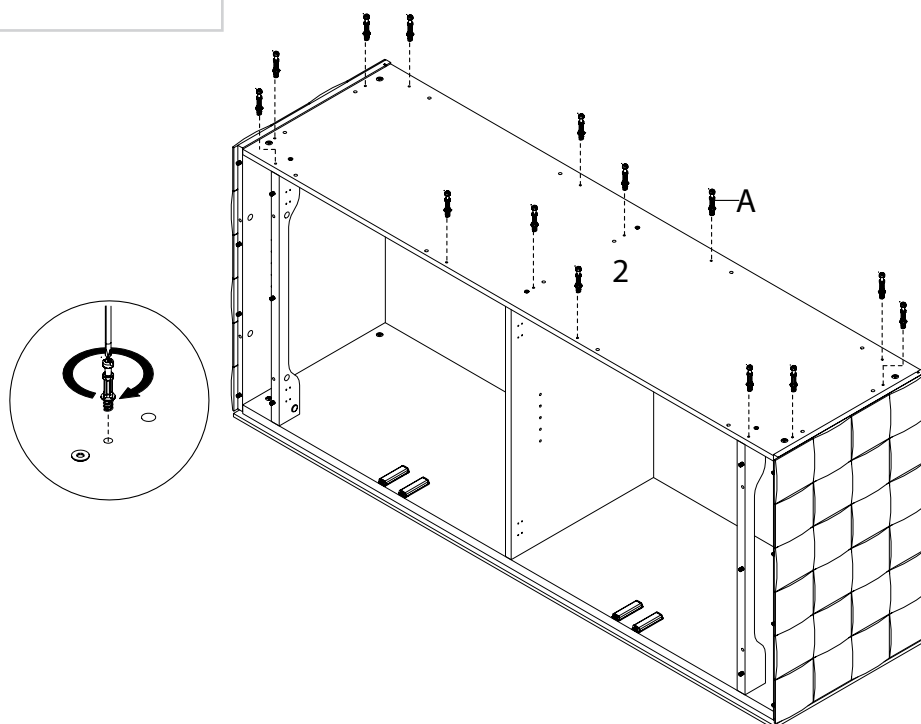

STEP 12

HARDWARE

A Cam Bolt Ø6 x 32 mm x6

C Wood Dowel Ø8 x 30 mm x6


COMPONENTS

7 Bottom Skirt 1 x2

8 Bottom Skirt 2 x3

12.1 Insert Cam Bolt Ø6 x 32 mm (A) into Bottom Skirt 1 (7), then tighten using screwdriver.

12.2 Insert Wood Dowel Ø8 x 30 mm (C) into Bottom Skirt 2 (8). Position as shown.

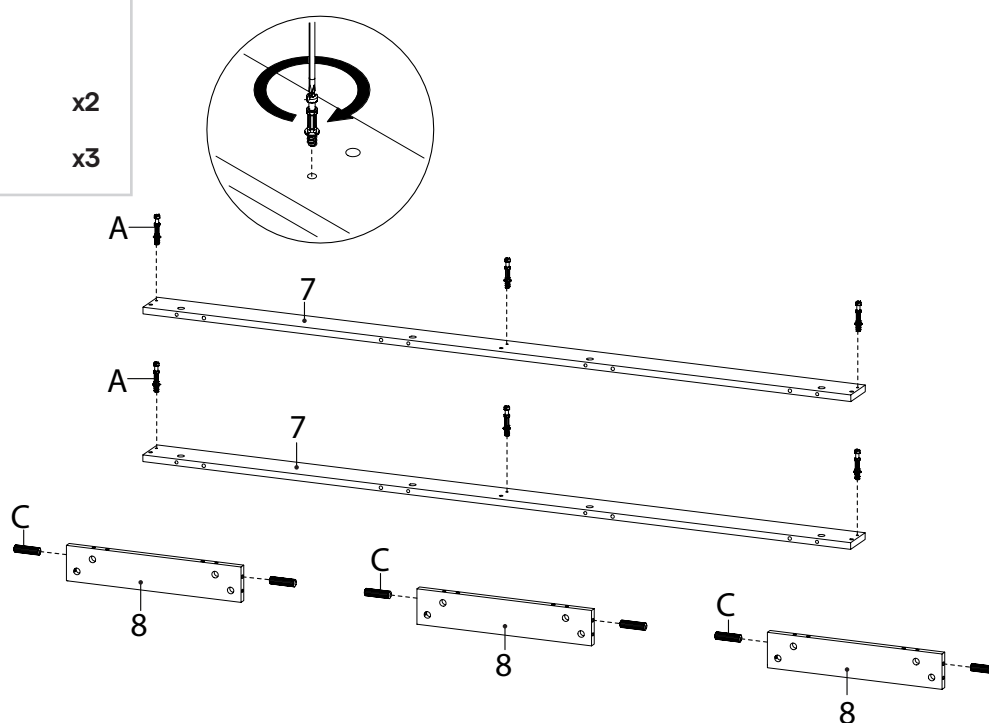

HARDWARE


B Cam Lock Ø15 mm x6

COMPONENTS

7 Bottom Skirt 1 x2

8 Bottom Skirt 2 x3

13.1 Combine Bottom Skirt 1 (7) and Bottom Skirt 2 (8), secure with Cam Lock Ø15 mm (B), then tighten using screwdriver. Position as shown.

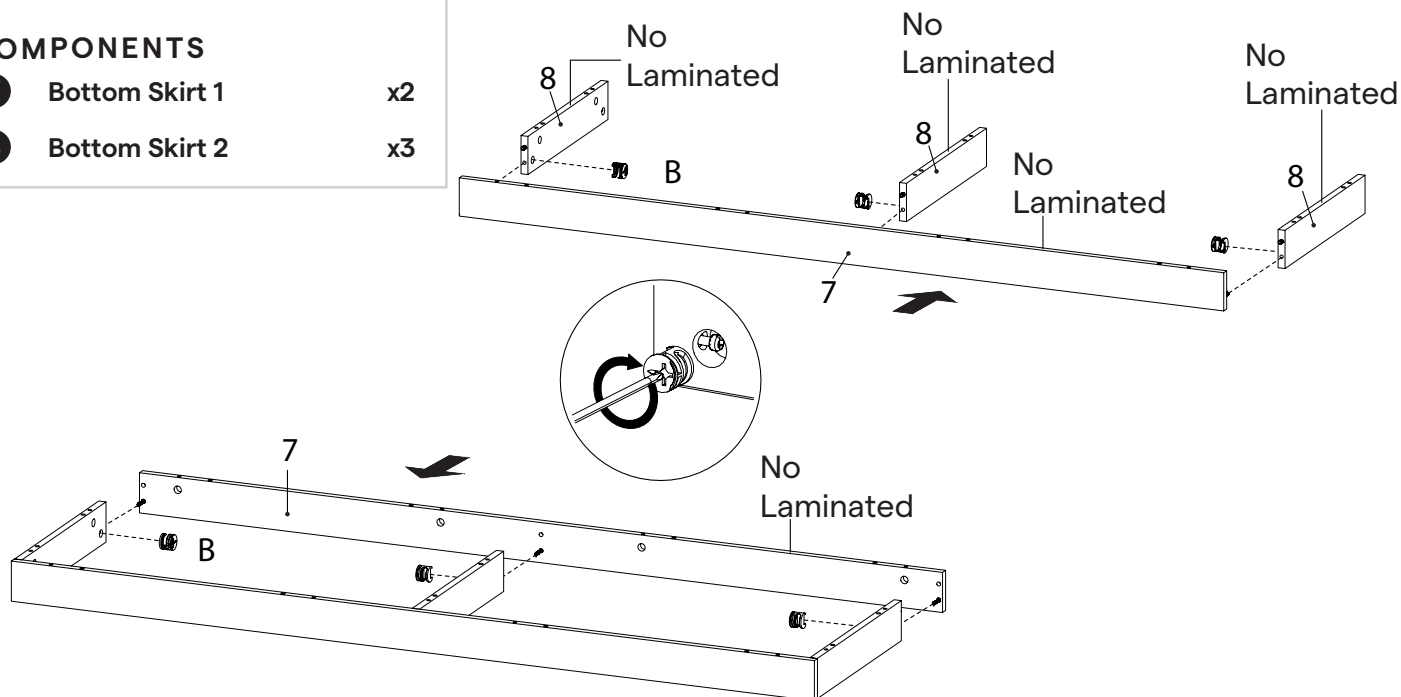


STEP 14

HARDWARE


C Wood Dowel Ø8 x 30 mm x14

14.1 Insert Wood Dowels Ø8 x 30 mm (C) into the assembled Bottom Skirt as shown.

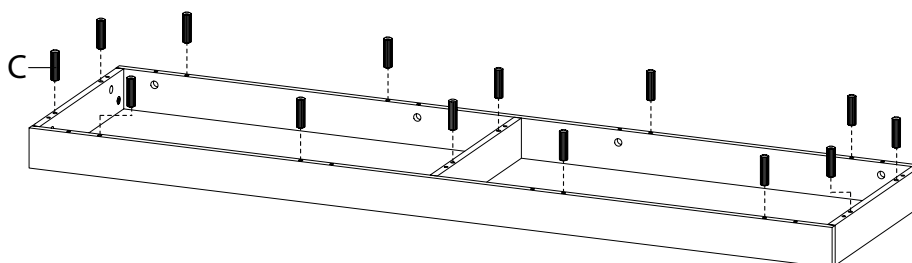

HARDWARE**B** Cam Lock Ø15 mm x14


15.1 Attach assembled Bottom Skirt to Bottom Board (2), secure with Cam Lock Ø15 mm (B), then tighten using screwdriver. Position as shown.

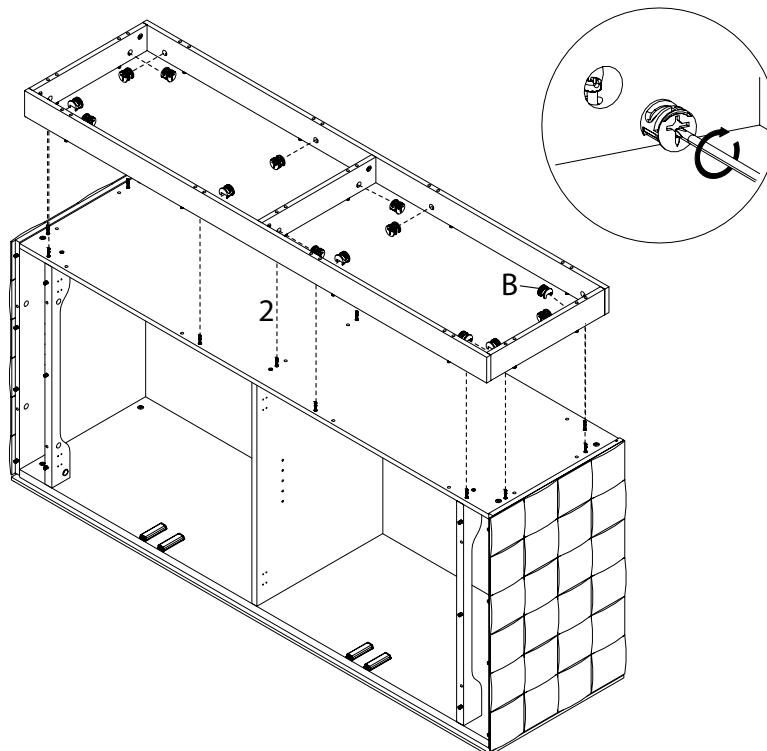


STEP 16

HARDWARE**F** Floor Glide x14

16.1 Insert Floor Glide (F) into Bottom Skirts as shown.

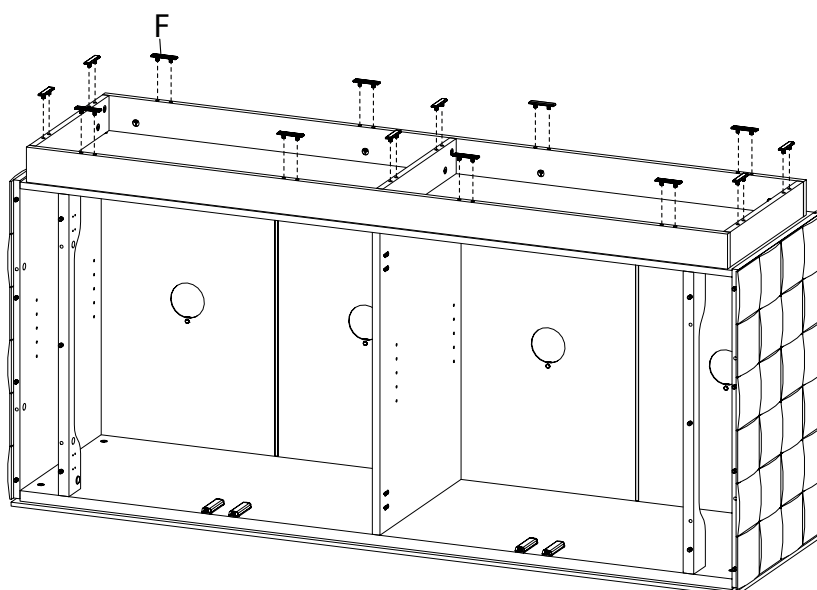


17.1 With assistance if necessary, carefully flip the unit to the upright position as shown. Ensure the unit is stable before proceeding to the next step.

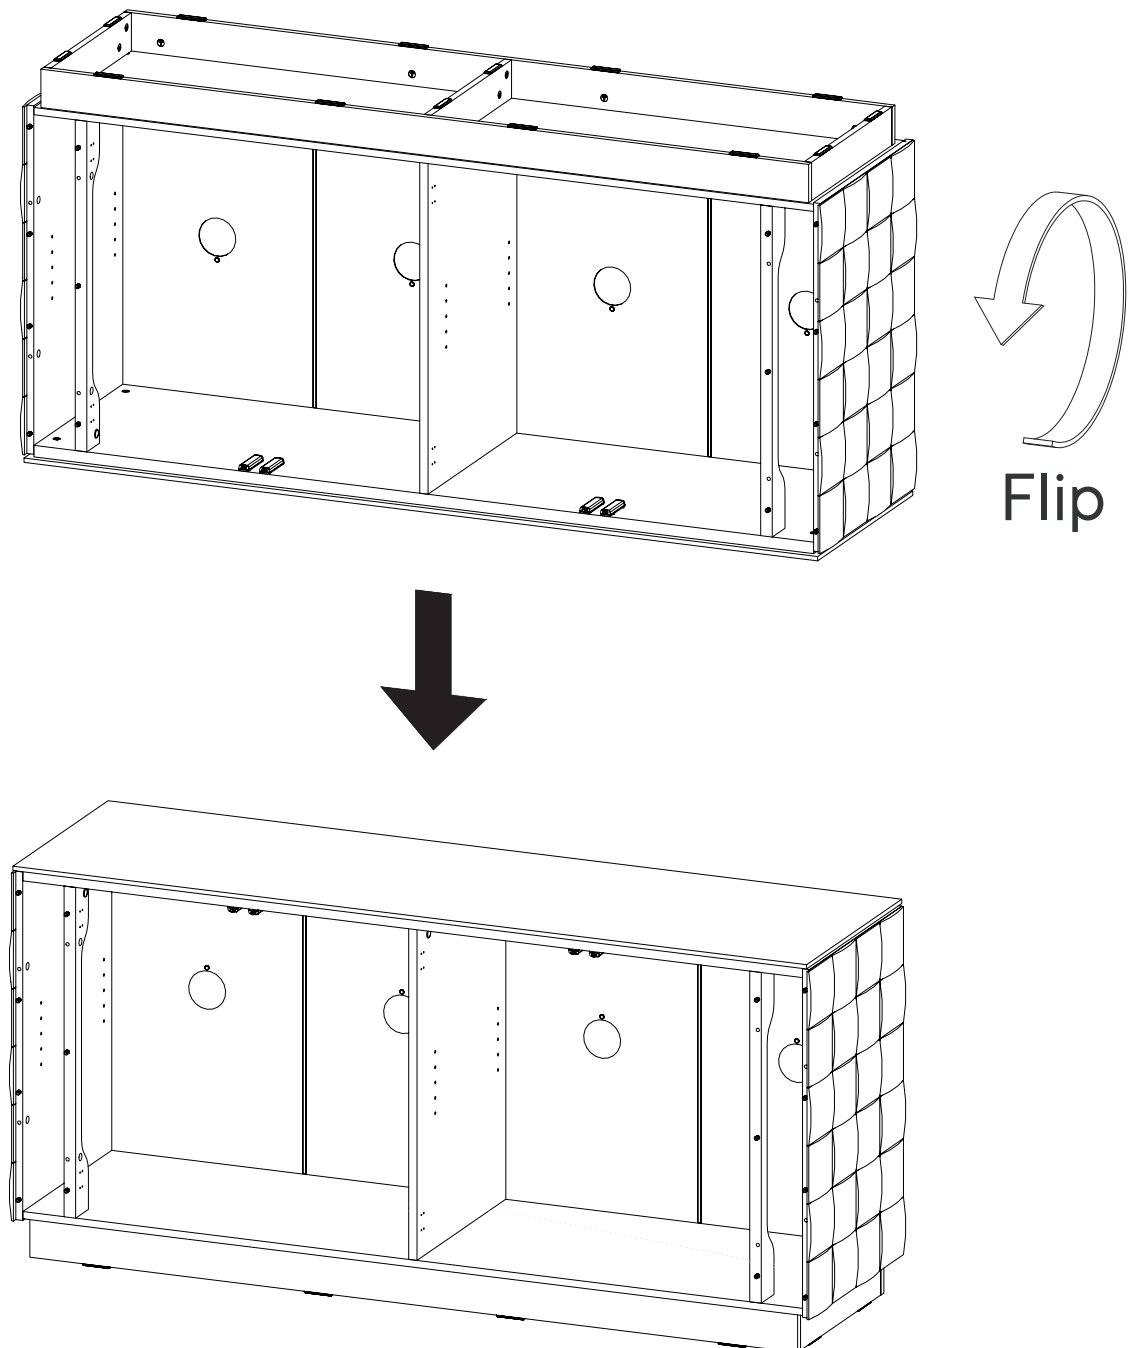

HARDWARE**E** Shelf Support x8**COMPONENTS****6** Adjustable Shelf x2


18.1 Insert Shelf Supports (E) into the desired holes on the Side Boards and Center Board, then tighten them with a screwdriver. Place Adjustable Shelf (6) onto the Shelf Supports and ensure they are securely seated. Position as shown.

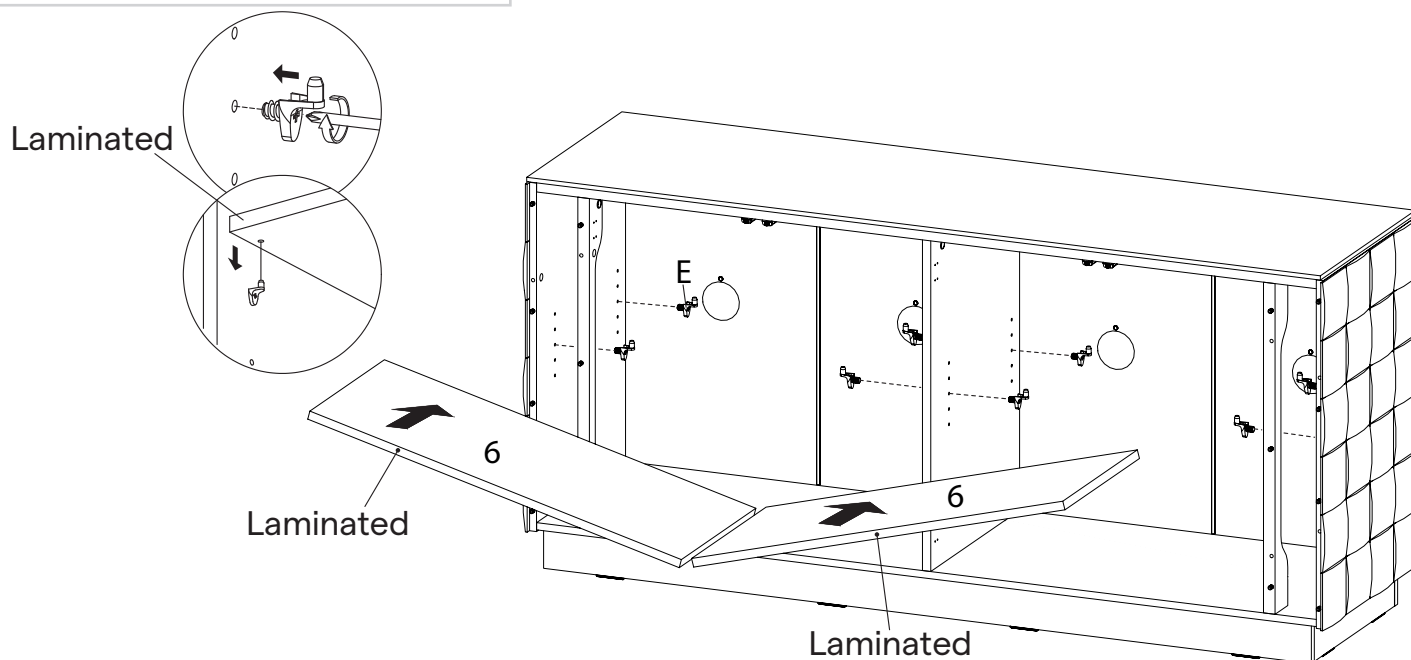

STEP 19

HARDWARE**A** Cam Bolt Ø6 x 32 mm x8**COMPONENTS****5** Front Board x2

19.1 Insert Cam Bolt Ø6 x 32 mm (A) into the Front Board (5), then tighten using screwdriver. Position as shown.

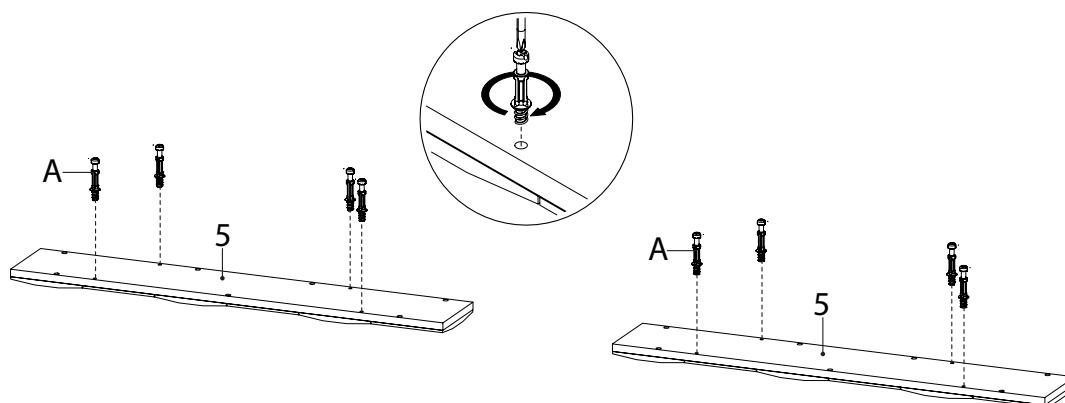


HARDWARE

- (B)** Cam Lock Ø15 mm x8
(M) Screw Cap Ø15 mm x4

COMPONENTS

- (5)** Front Board x2

20.1 Attach Front Board (5) to assembled item from previous step, secure with Cam Lock Ø15 mm (B), tighten using screwdriver then put Screw Cap Ø15 mm (M) to cam lock on the Support Boards. Position as shown.

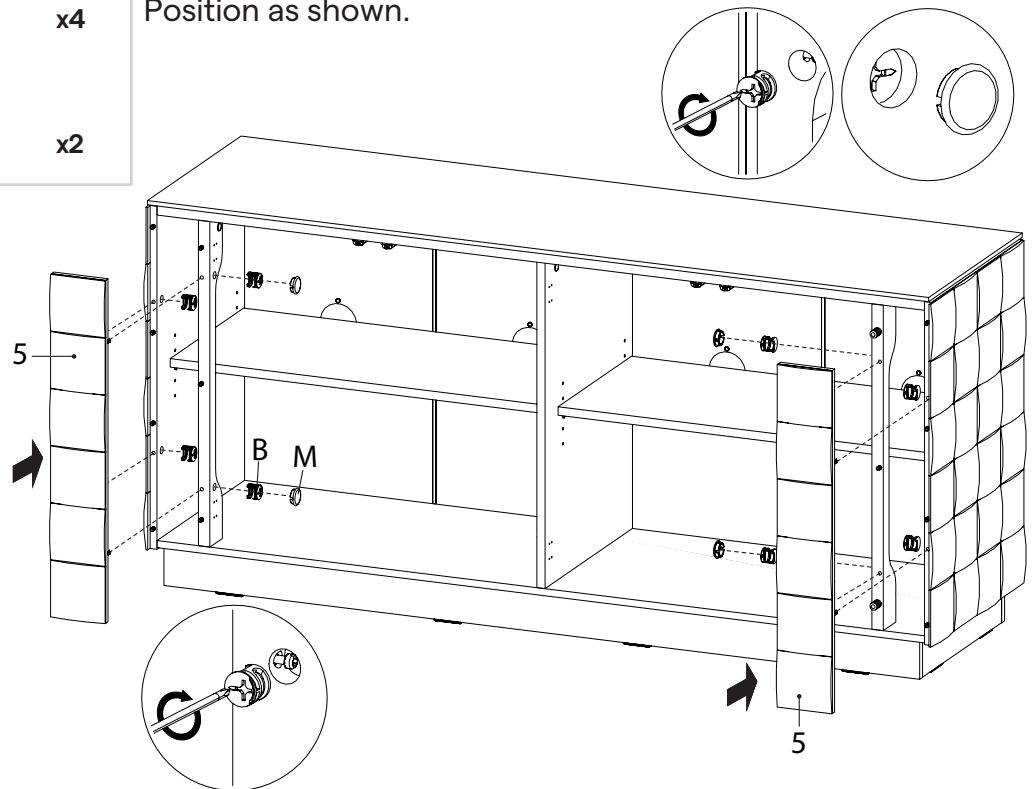

STEP 21


HARDWARE

- (I)** Screw M4.5 x 12.5 mm x16
HS26B Hinge x8

COMPONENTS

- (9)** Door x4

21.1 Install Hinge (HS26B) to Door (9), Secure with Screw M4.5 x 12.5 mm (I), then tighten using screwdriver. Position as shown.

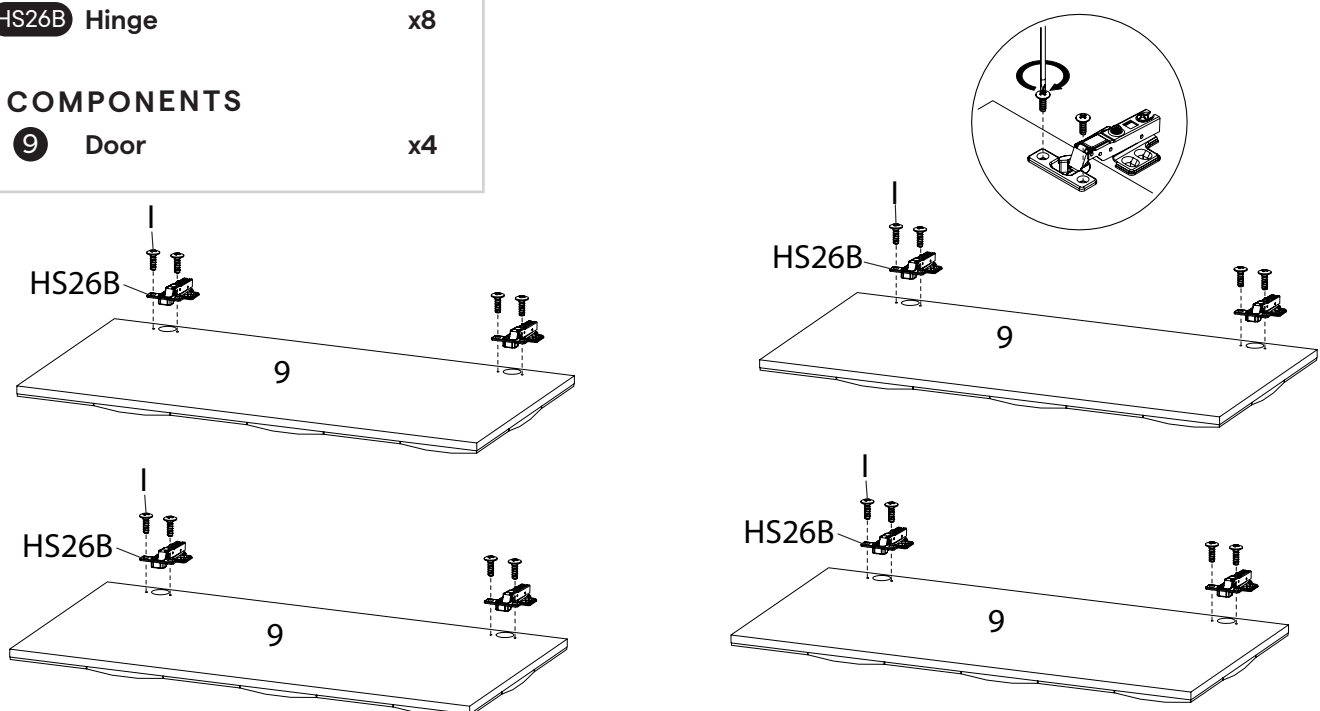


HARDWARE

① Screw M 4.5 x 12.5 mm x16

COMPONENTS

⑨ Door x2

22.1 Attach the Door (9) to Center Board and Support Board Right, secure the hinges with Screw M 4.5 x 12.5 mm (I), then tighten using screwdriver. Please refer to the last page for more guide on how to adjust hinges.

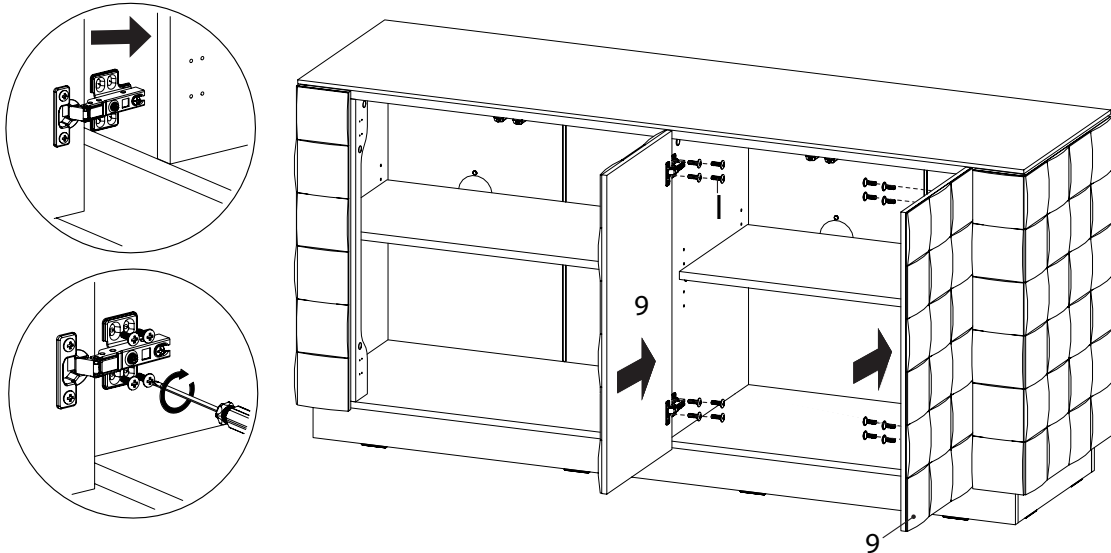

STEP 23


HARDWARE

① Screw M 4.5 x 12.5 mm x16

COMPONENTS

⑨ Door x2




23.1 Attach the Door (9) to Center Board and Support Board Left, secure the hinges with Screw M 4.5 x 12.5 mm (I), then tighten using screwdriver. Please refer to the last page for more guide on how to adjust hinges.

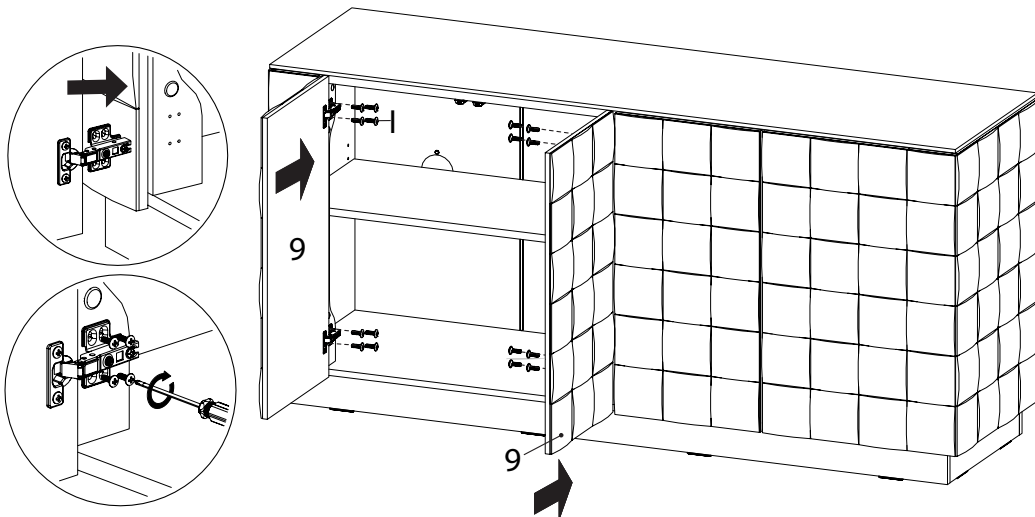

HARDWARE


J	Wedge	x16
K	Screw M3.5 x 15.5 mm	x16

24.1 Use the Wedge (J) and Screw M3.5 x 15.5 mm (K) to tighten the back of the Sideboard using screwdriver. Before securing the wedges (J), ensure that the top board and bottom board are aligned at a 90° angle against the Sideboard.

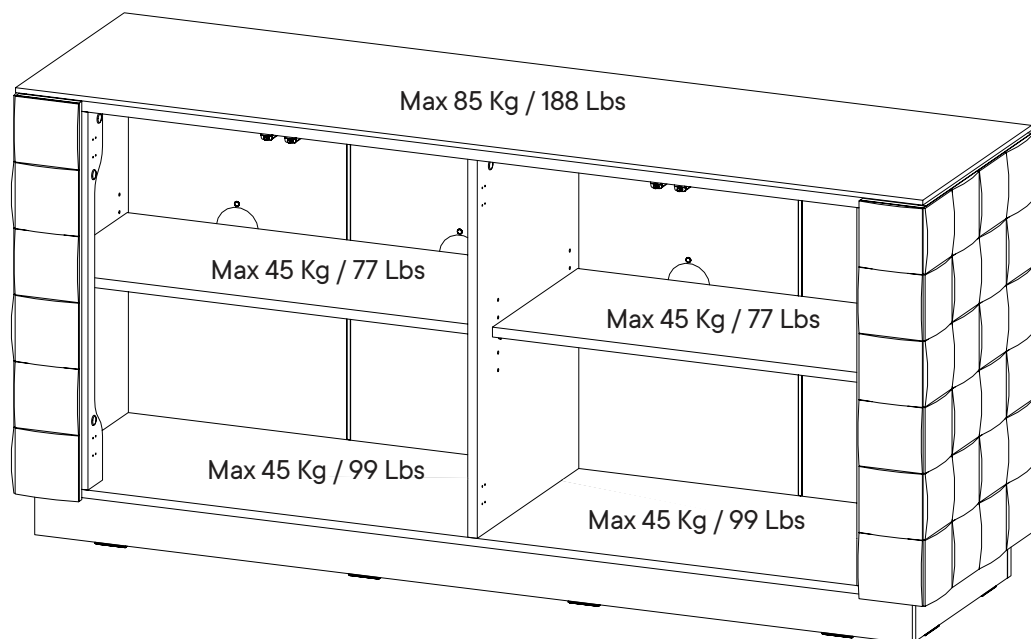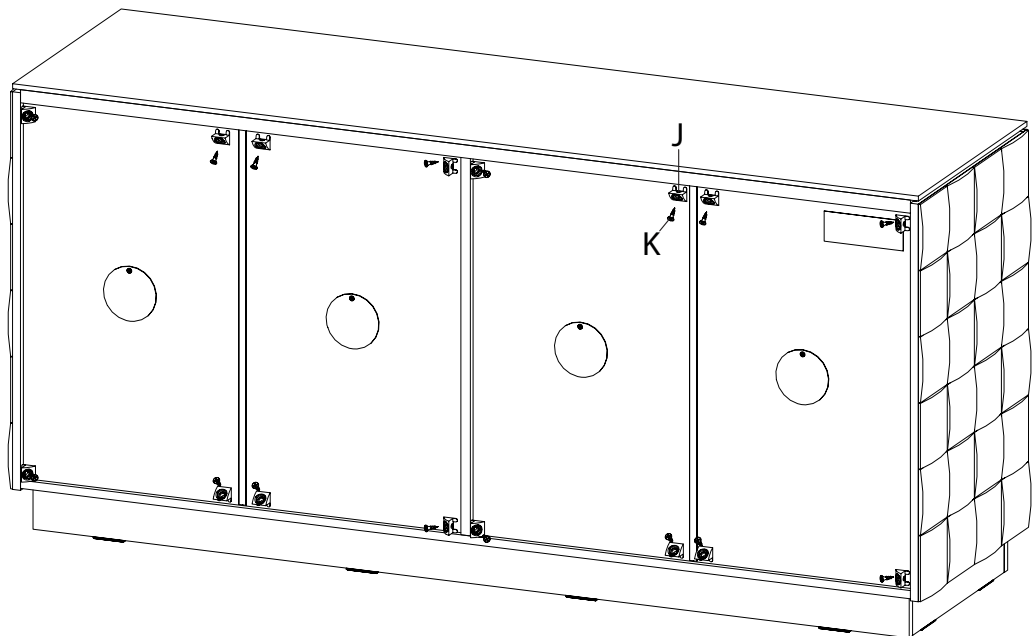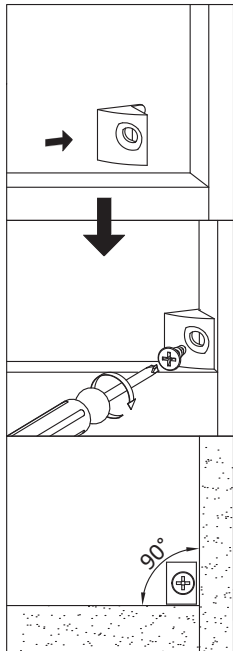

Great job!

Sideboard assembly is complete

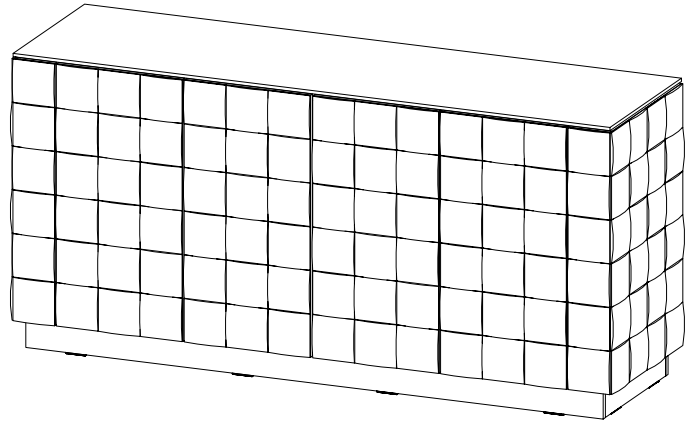

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.



CONNECT WITH US!


Tag us **@modway.furniture** and **#MyModwayHome** for a chance to be featured.

modway




Questions? Contact us!
609.256.9000
cs@modway.com

Cabinet Door Alignment

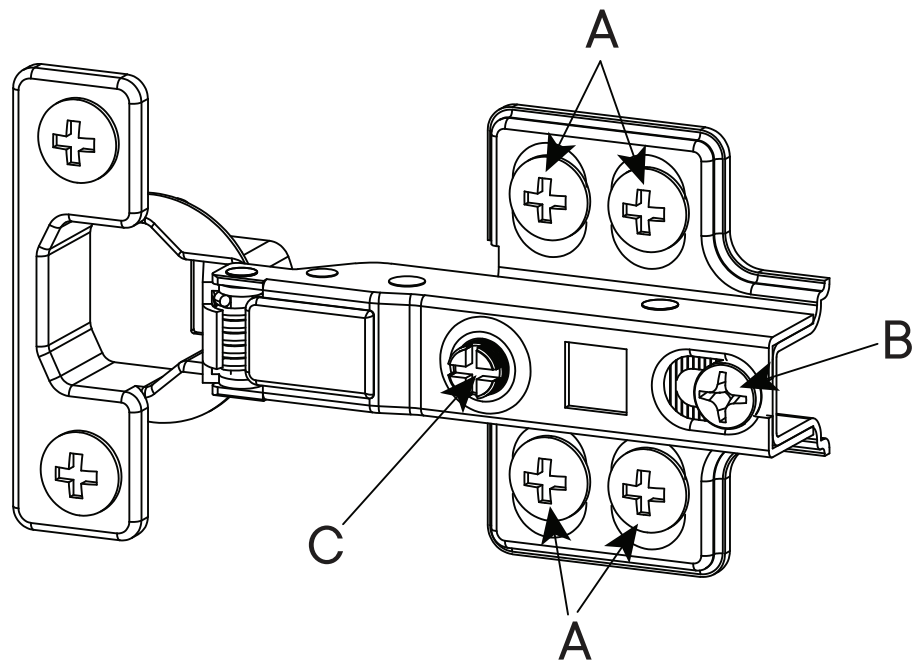


To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by few mm. Then tighten back up.

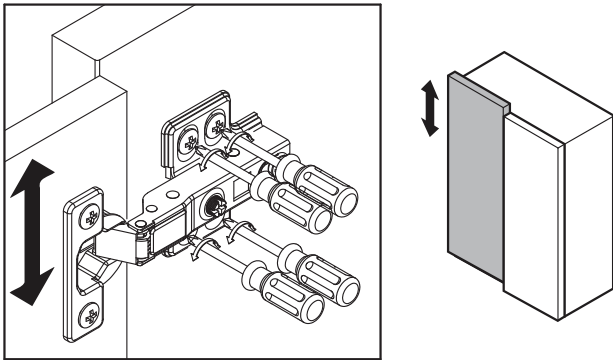


To adjust depth.

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

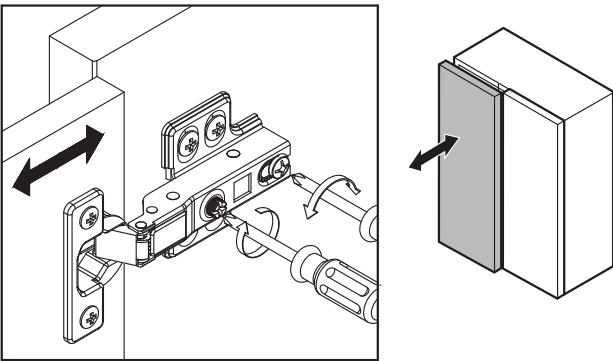

To adjust side ways.

Turn screw "C" on BOTH hinges on each door.







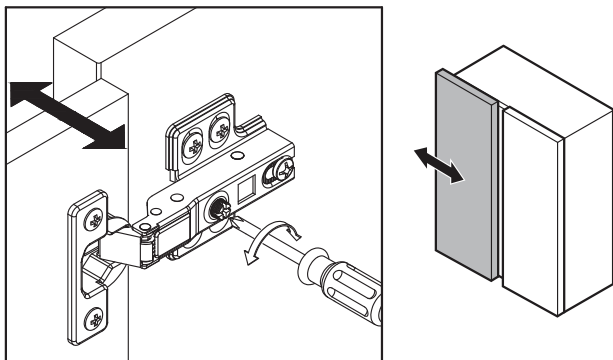


TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for you wall type.

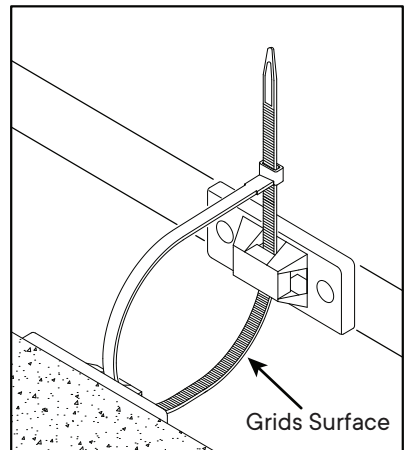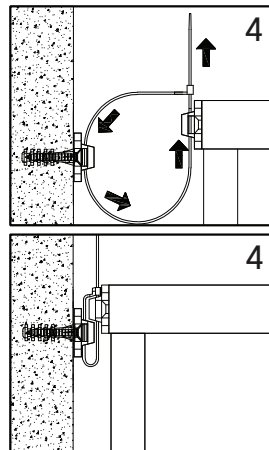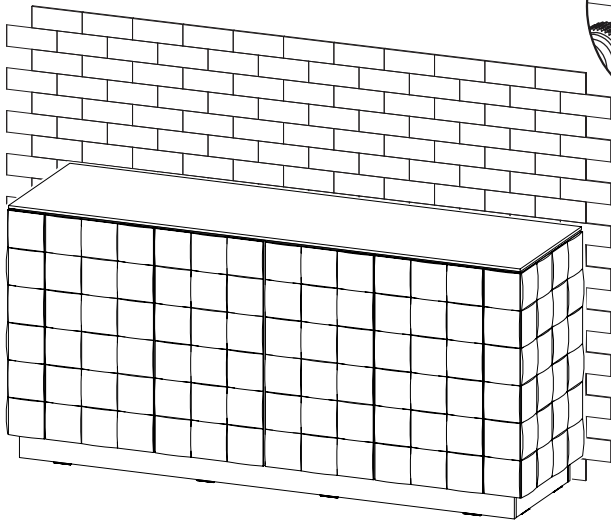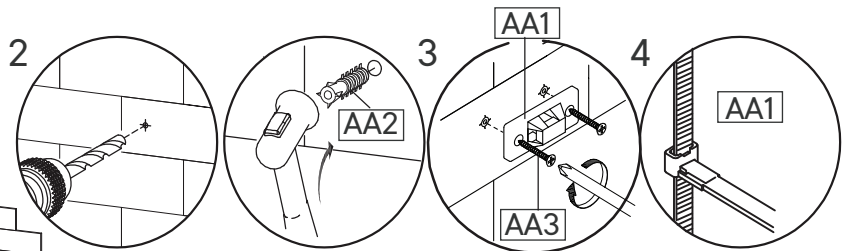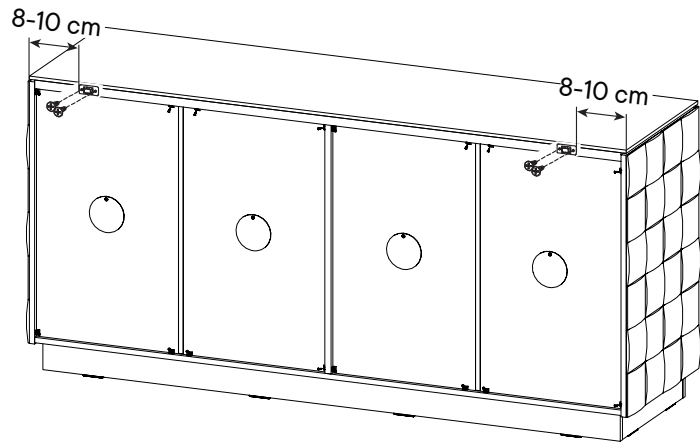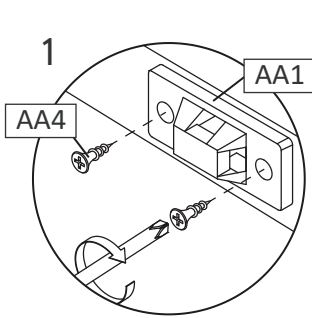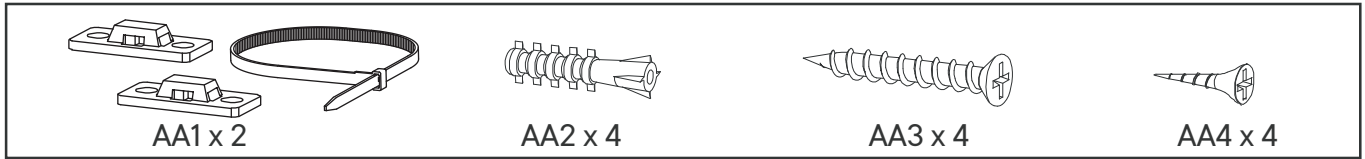

Installation Instructions :

1. Attach bracket (AA1) securely to the back top of the furniture using screw (AA4) provided. Allow 8 - 10 cm from each side.
2. Please make a hole for wall plugs position on the wall and minimum 15 mm below bracket secured to the back of unit. Attach the wall plugs (AA2).
3. Install the other bracket (AA1) on the wall over wall plugs (AA2), secure with screw (AA3). Place furniture into position so both brackets (AA1) are aligned.
4. Lace the end of the restraints strap through the larger hole in each bracket. Ensure the restraints strap with grids surface facing the inner loops. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Make sure that the strap is securely laced & locked.