

5FTx3FT Resin Storage Shed

If you have any questions about the product, please feel free to contact us.

E-Mail: Patiofurniture Serviceteam@outlook.com




After-sales mailbox:

Patiofurniture Serviceteam@outlook.com

INSTALLATION PREPARATION


Before You Begin...

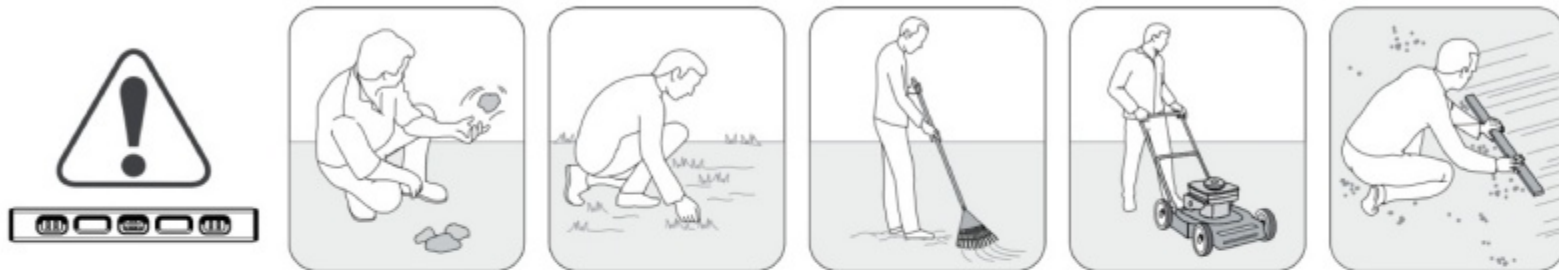

Before You Begin...

1. Check your local building codes regarding footing, location, etc.
2. Select a site that allows enough working space around the shed.
3. Determine building foundation and anchor system.
4. Read and understand the Owner's manual enclosed in the package.
5. Follow all directions and dimensions thoroughly.
6. Follow the steps given in the manual carefully for correct assembly.
7. Make sure all parts are present before you start assembling.
8. **BE SAFE:** Follow safety instructions and avoid injury. (See inside page).
9. **GROUND MUST BE EVEN:** Make sure the foundation frame lies flat on the ground. If the earth bed is uneven, remove the sod and other debris and level it with a flat shovel.
10. Separate contents of the carton by the part number and review the list. Be sure you have all the necessary parts for your shed. Refer Owner's manual for the part list.

Option **A**

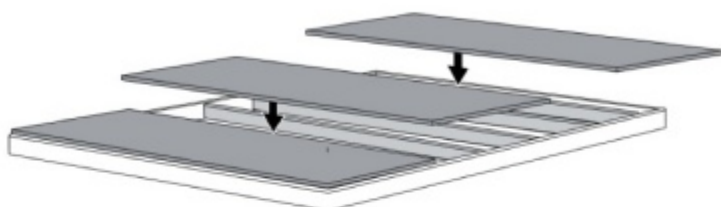

Option **B**



For ensuring the stable construction of the shed, you can choose the above two suggestions

Option A: Build a wooden foundation and mount the shed on it

Option B: Build a concrete foundation and install the shed on it

Remember: it is best to put heavy objects inside the shed to prevent the shed from being blown away by strong winds

SAFETY & PRECAUTIONS

Before You Begin...

1. Check your local building codes regarding footings, location, etc.
2. Select a site that allows enough working space around the shed.
3. Determine building foundation and anchor system.
4. Read and understand the Owner's manual enclosed in the package.
5. Follow all directions and dimensions thoroughly.
6. Follow the steps given in the manual carefully for correct assembly.
7. Make sure all parts are present before you start assembling.
8. BE SAFE: Follow safety instructions and avoid injury. (See inside page).
9. GROUND MUST BE EVEN: Make sure the foundation frame lies flat on the ground.



If the earth bed is uneven, remove the sod and other debris and level it with a flat shovel.

10. Separate contents of the carton by the part number and review the list. Be sure you have all the necessary parts for your shed. Refer Owner's manual for the part list.

For your own safety, please read and follow these instructions during the shed assembly.

1. Always wear work gloves, long sleeves and eye protection during assembly of the shed. Some pieces of the shed contain sharp edges and can cause injury.



2. Be cautious with the tools used for the assembly of the shed. Familiarize yourself with the operation of all the power tools.




3. Children and pets should be kept away from the assembly site to avoid any distractions and accidents.



4. When using a step ladder, make sure it is on even ground and fully open with the safety latch in place. Never concentrate your full weight on the roof or any part of the shed.



5. Do not attempt to assemble the shed on a windy day. Shed panels can be whipped across by the wind making the worksite difficult and dangerous.

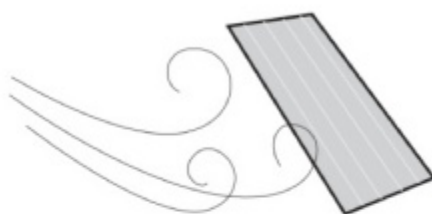


SPATULA

- Use spatula (part “**SG8**”) for easier insertion of panel into profile.



SG8 x2

- Tap lightly with a hammer (part “**A**”) to bring the components together tightly.

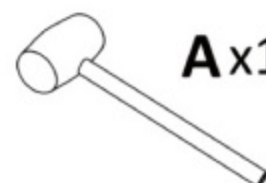

A x1



ASSWMBLY REQUIRES 2-3 PEOPLE

Care & Maintenance

Although this unit does not require any maintenance, care should be taken to prolong the life of your shed.

ROOF: Keep the roof clean of leaves and snow with a long-handled, soft-bristled broom. Heavy amounts of snow on the roof can damage the shed making it unsafe. Do not step on the roof.

WALLS: Do not rest any object against the wall panels of the shed.

DOORS: Keep doors closed to prevent wind damage.

FASTENERS: Regularly check your shed for loose screws, bolts, nuts, etc. And retighten them as necessary.

MOISTURE: With changing temperatures, condensation will accumulate inside the shed. Good ventilation will help in regulating and avoid moisture.

TIP: A noncorrosive caulking is helpful to seal the shed.



DO NOT store swimming pool chemicals in your building.
Combustibles and corrosive must be stored in airtight containers.

NOTICE

Please keep these instructions for future reference.

Dear Customer

● Thank you for your purchase. When you receive the product, please make sure that all the parts are intact. Then follow the entire installation instructions to install!

● **When installing, please be careful not to tighten the screws immediately! You need to make sure that all the screws are secured to 80%, then tighten them!**

A . The outer box is damaged

B . The product is damaged / bent / cracked while you open the box

C . The parts / accessories / assembly tools are missing

D . The instructions are not clear and can not be referred

E . The product has functional problems

F . Other aspects that you are not satisfied with

Please feel free to contact us for help. Our after-sales team service (Patiofurnitureseviceteam@outlook.com) will reply within 24 hours and will do our best to resolve the problem for you.

Please feel free to contact us for help, and provide the following information:

Platform/Shop name/Order ID/buyer's name/ Receiver's address/Problem description.

PART LIST

AW1-1



6 PCS

AW1-2



1 PC

AW1-3




1 PC

AW2-1



1 PC

AW2-2

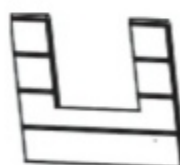

1 PC

AW2-3




1 PC

AW3-1




3 PCS

AW3-3

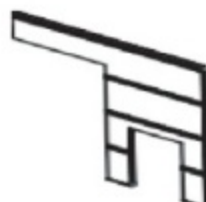

1 PC

AD1-1

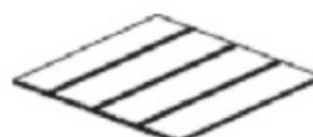

1 PC

AD1-2



1 PC

AD1-3



1 PC

AF2-1



1 PC

AF2-2



1 PC

AF2-3


















1 PC

AR3-1









1 PC







PART LIST

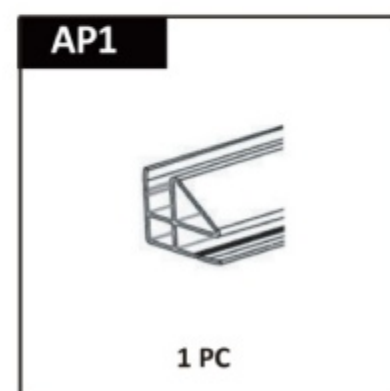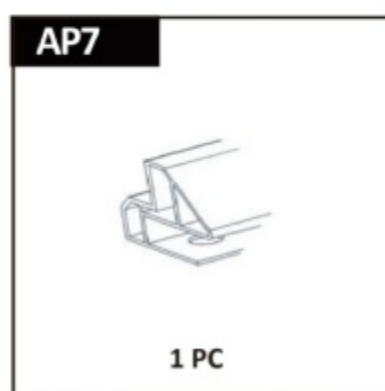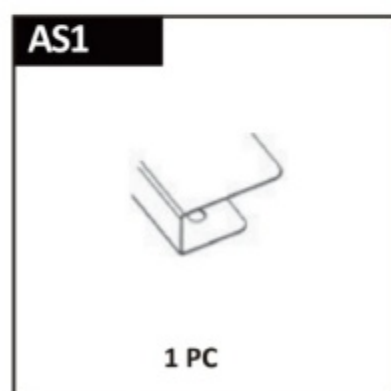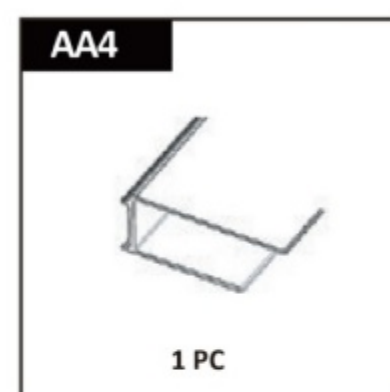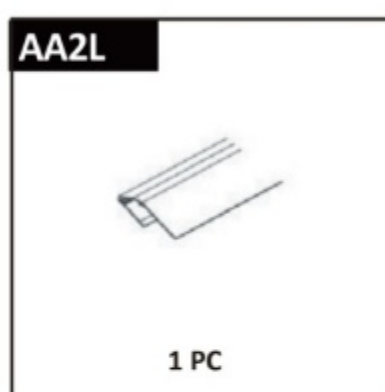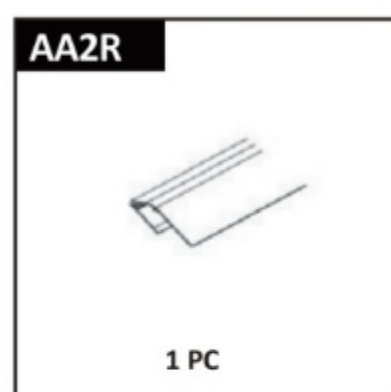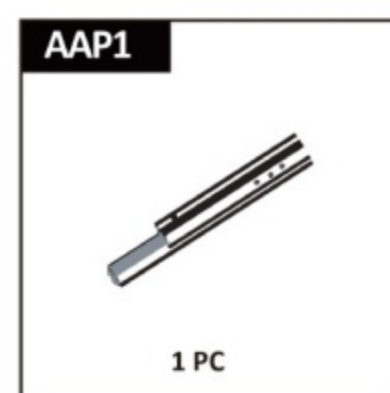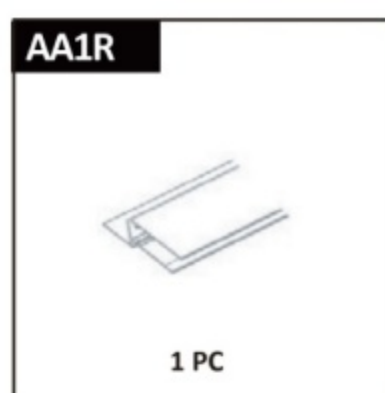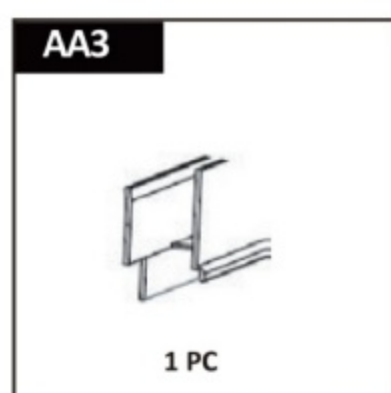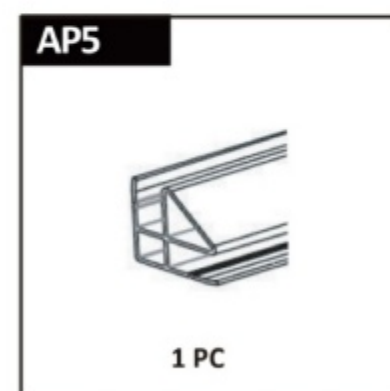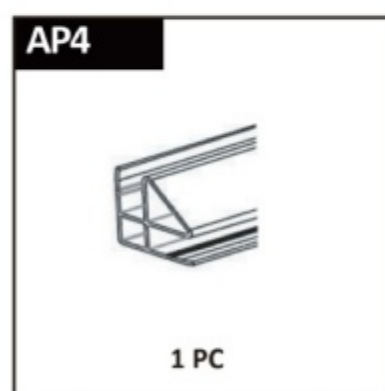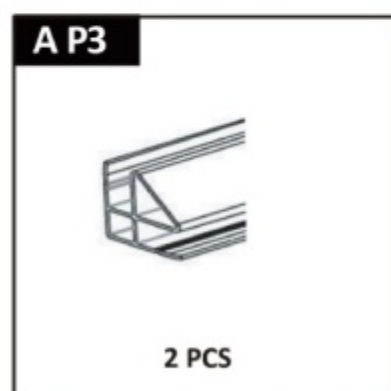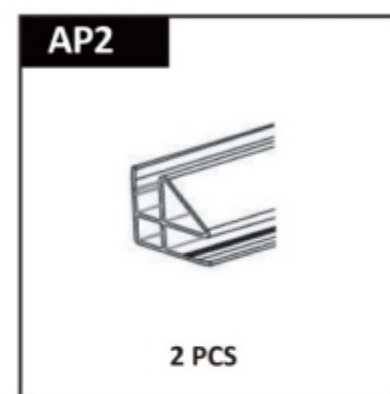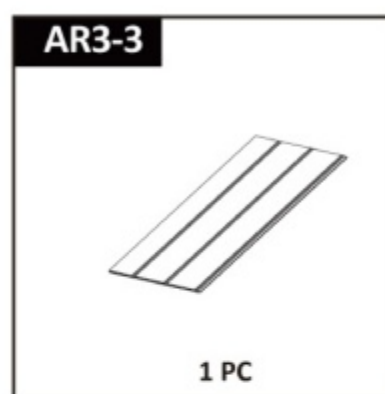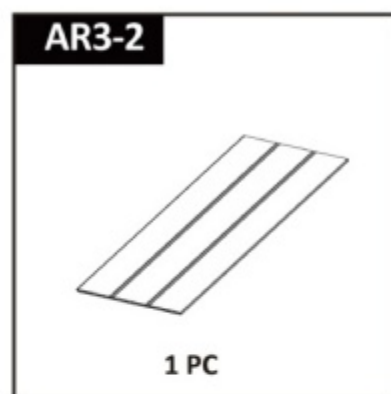

PART LIST

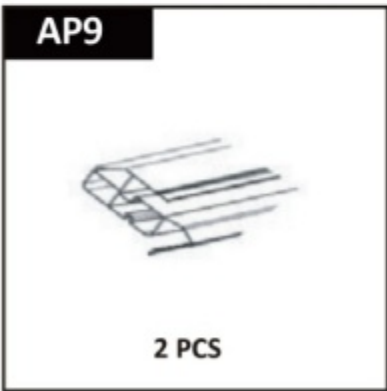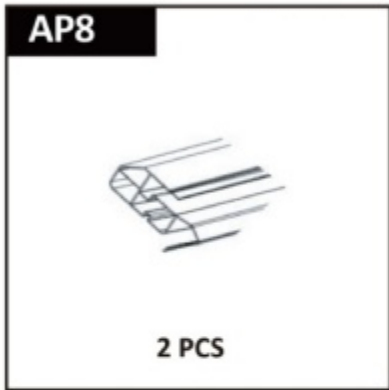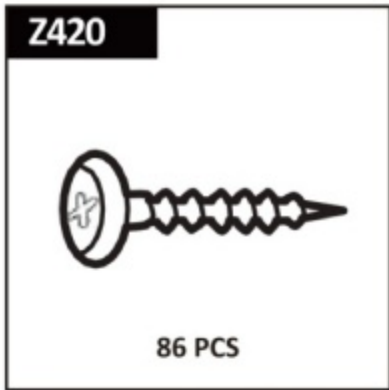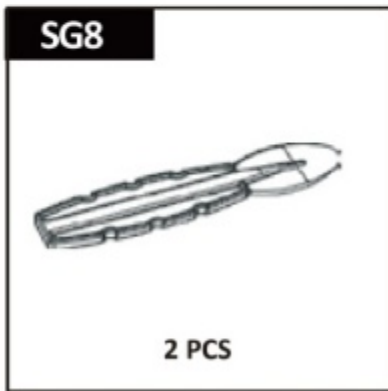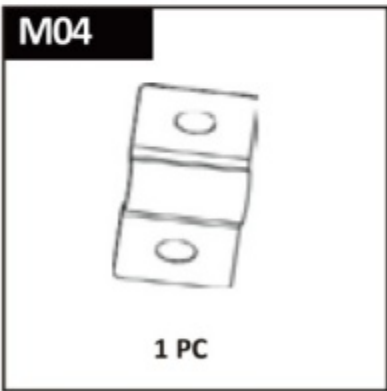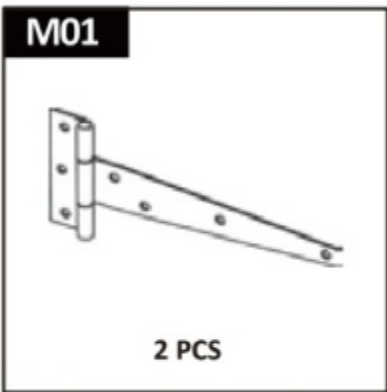

PART LIST

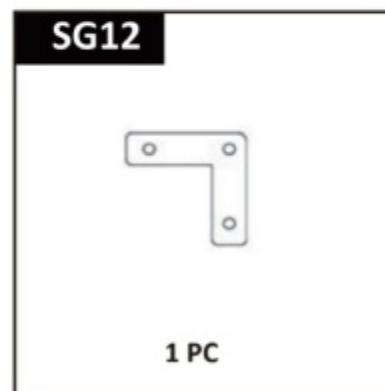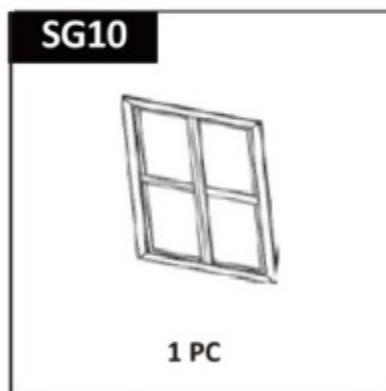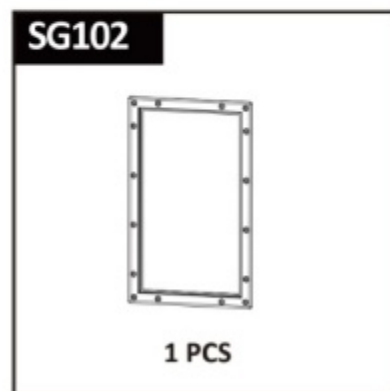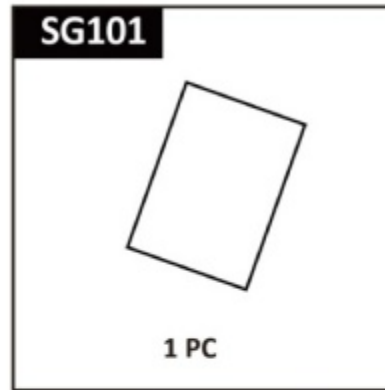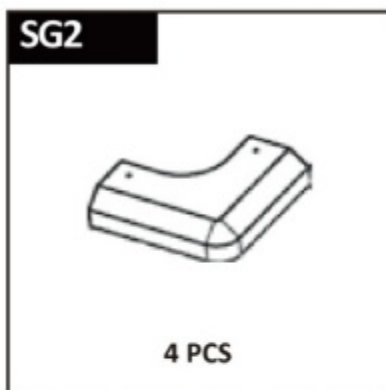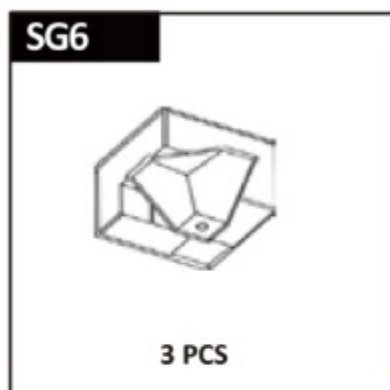


1. Please ensure that all accessories are complete before starting the installation.
 2. Due to the variety of accessories, many accessories may be glued together, please check carefully
 3. If any accessories are missing or damaged, please contact the seller immediately.
- E-Mail: Patiofurniture Serviceteam@outlook.com

- Use spatula  (part "SG8") for easier insertion of panel into profile
- Please ensure the panels are all installed on position before screwing
- Please be mindful of the screw size used during installation; using screws that are too long may damage the shed.




PARTS SCHEMATIC

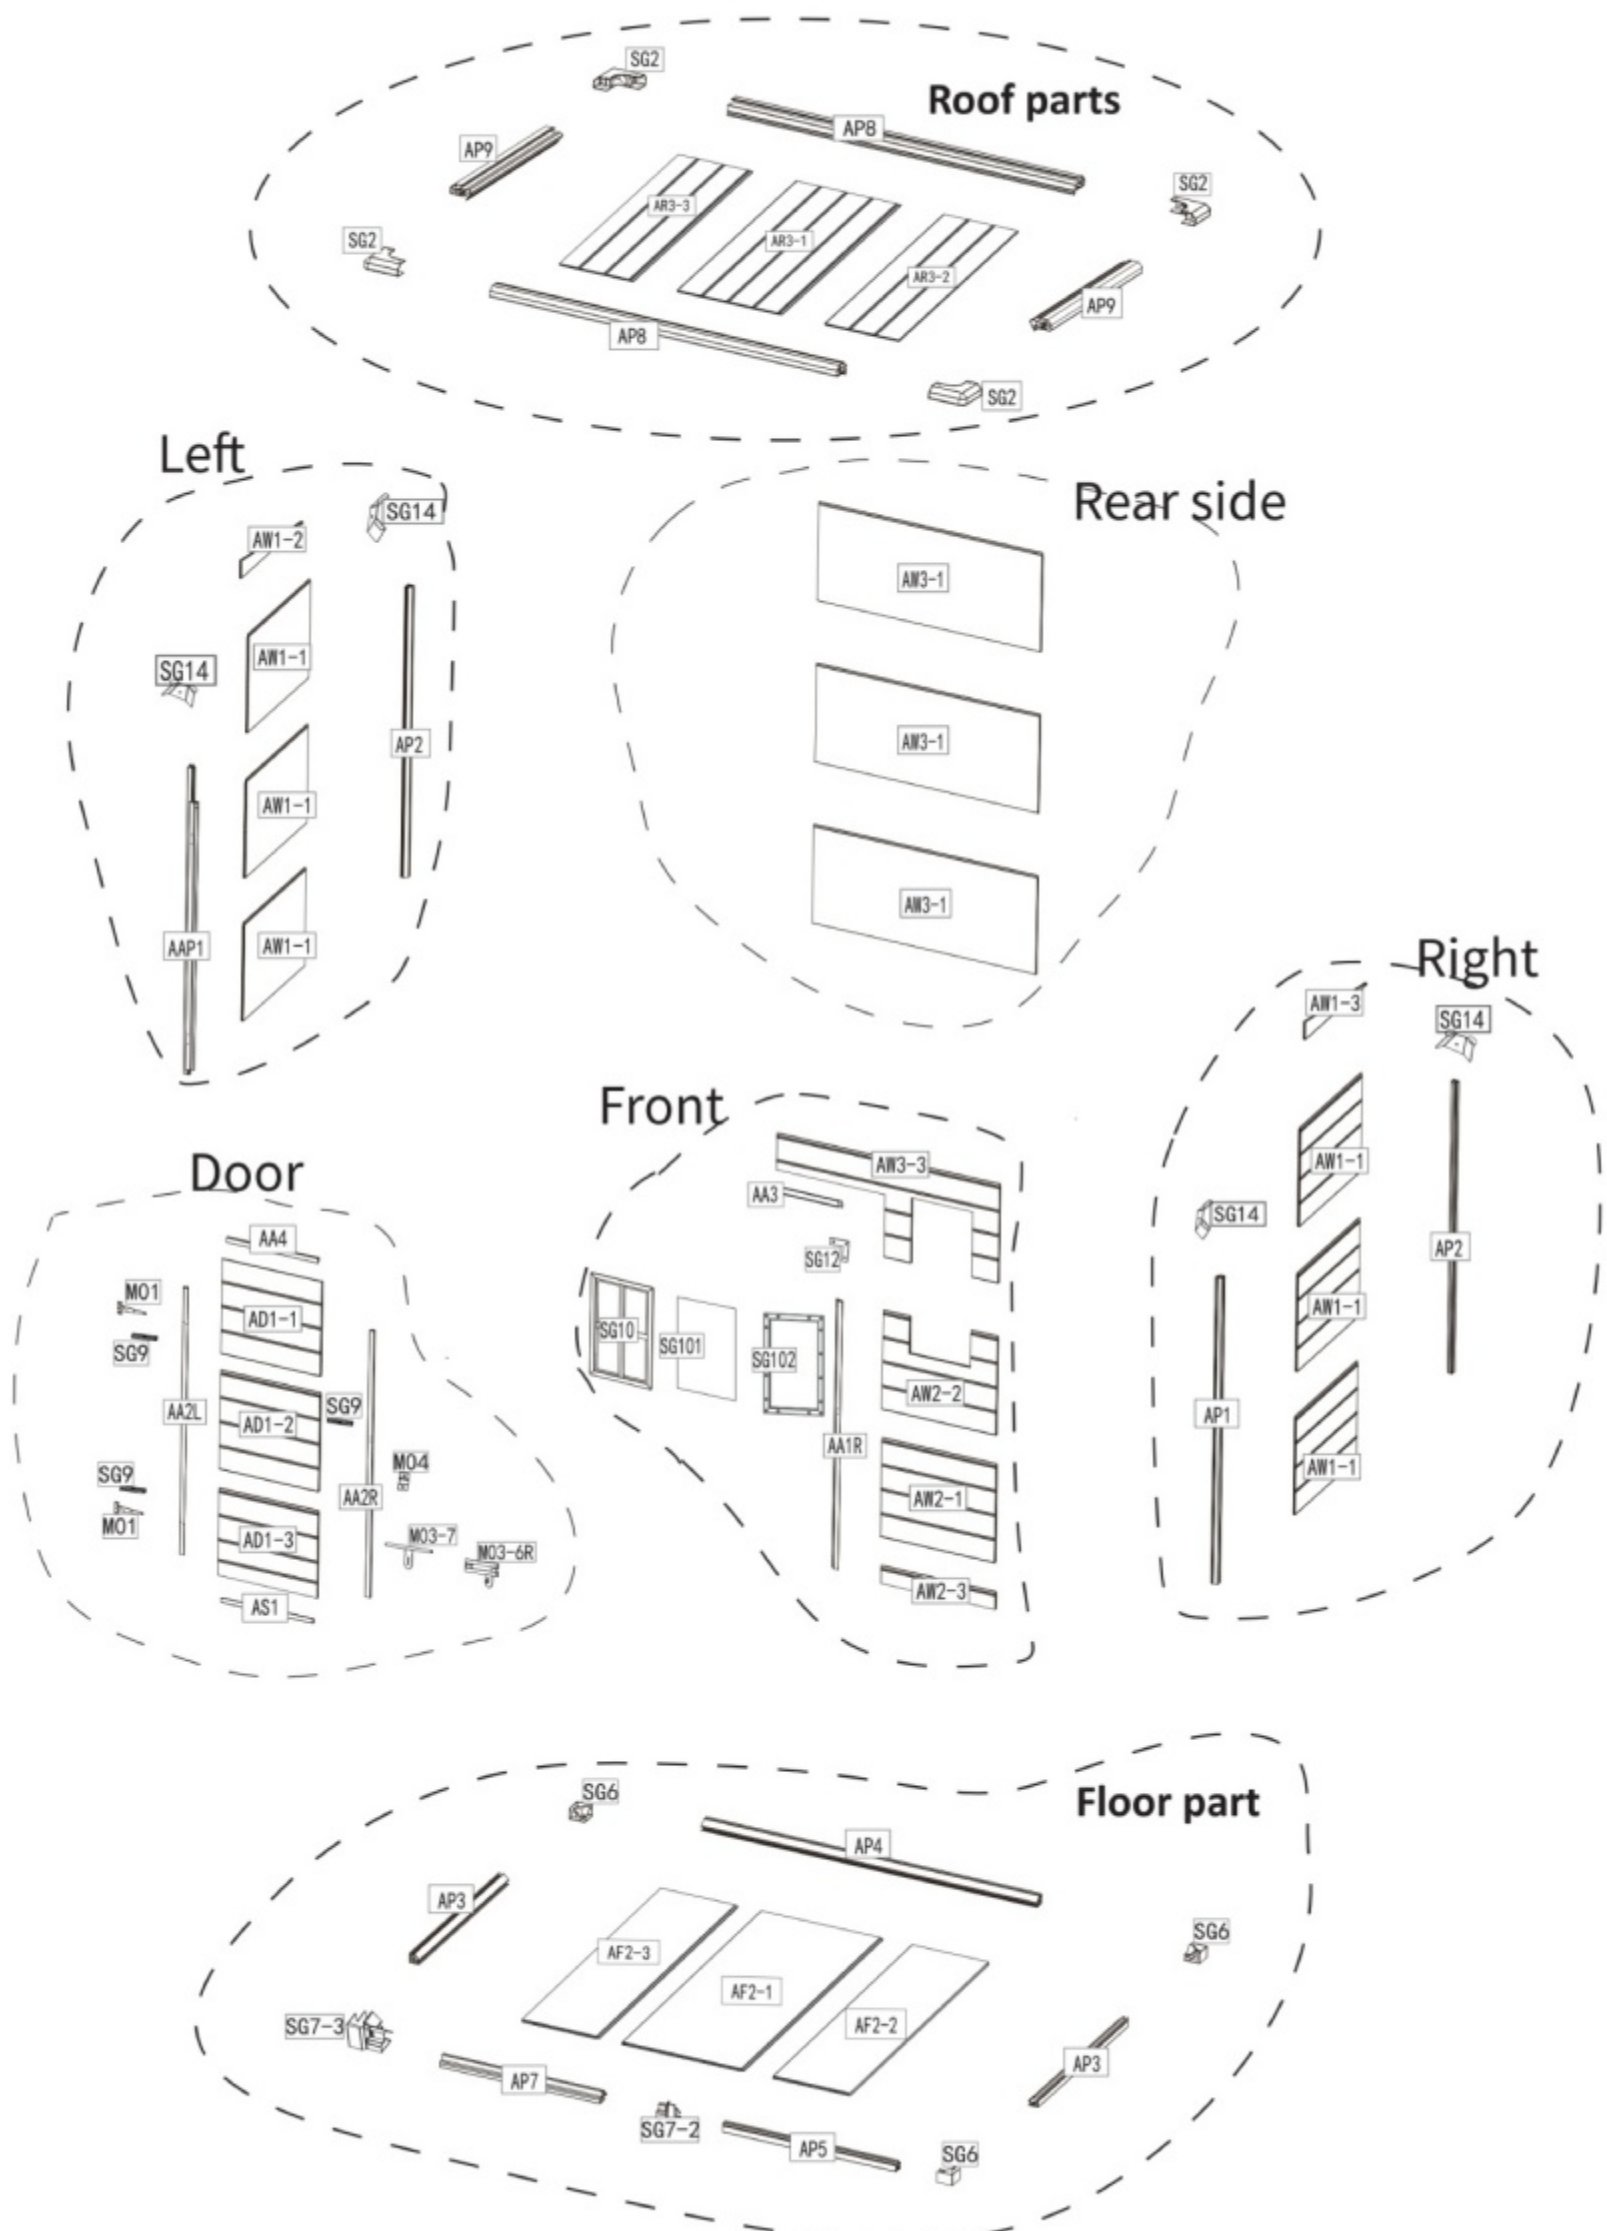


Floor Assembly



● Fully fit the panel inside the profile

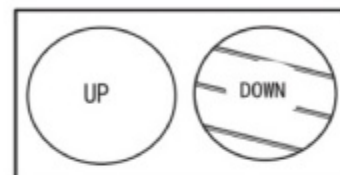

● Note: The crease line of the floor must be underneath

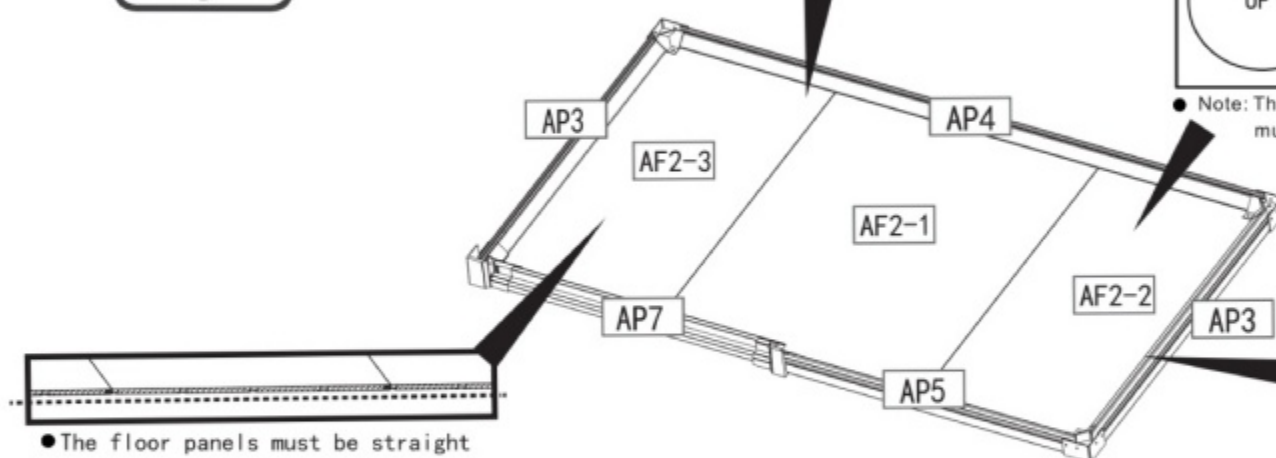


● The floor panels must be straight

● Use spatula (part "SG8") for easier insertion of panel into profile



STEP 1

1

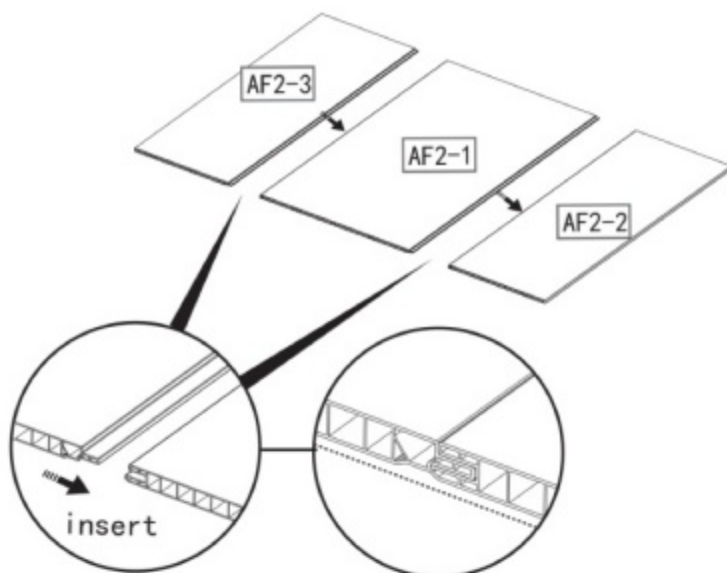


SG6 2 PC	AF2-1 1 PC
AP3 2 PC	AF2-3 1 PC
AP4 1 PC	AF2-2 1 PC


2

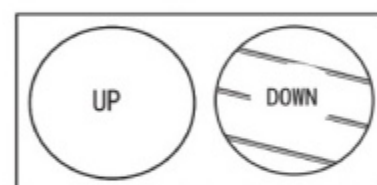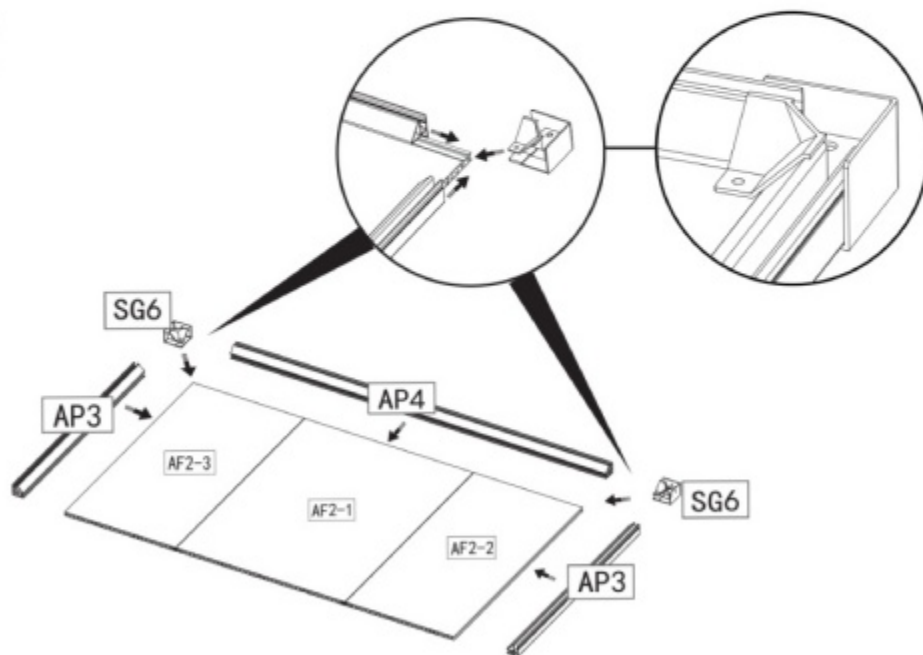

● Grain should be down



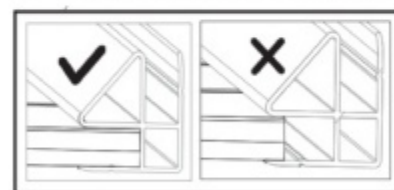


● Fully fit the panel inside the profile




● Panels are in a straight line after installation.

STEP 2

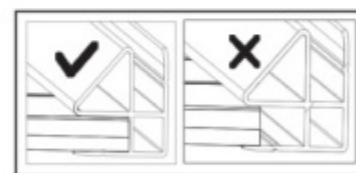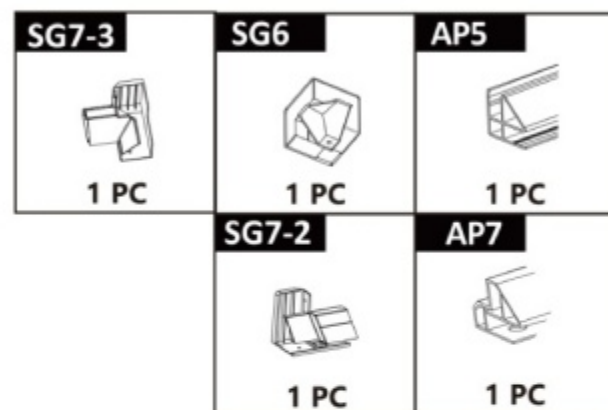
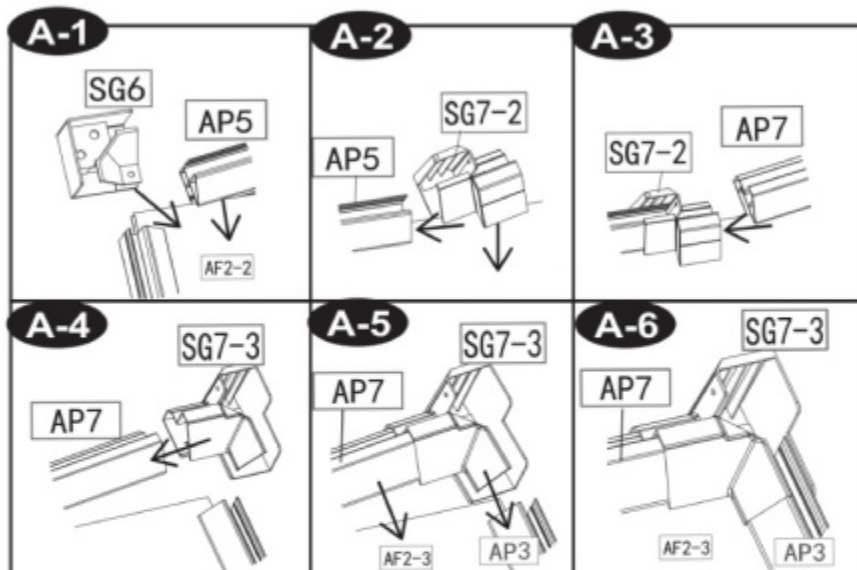


● Fully fit the panel inside the profile

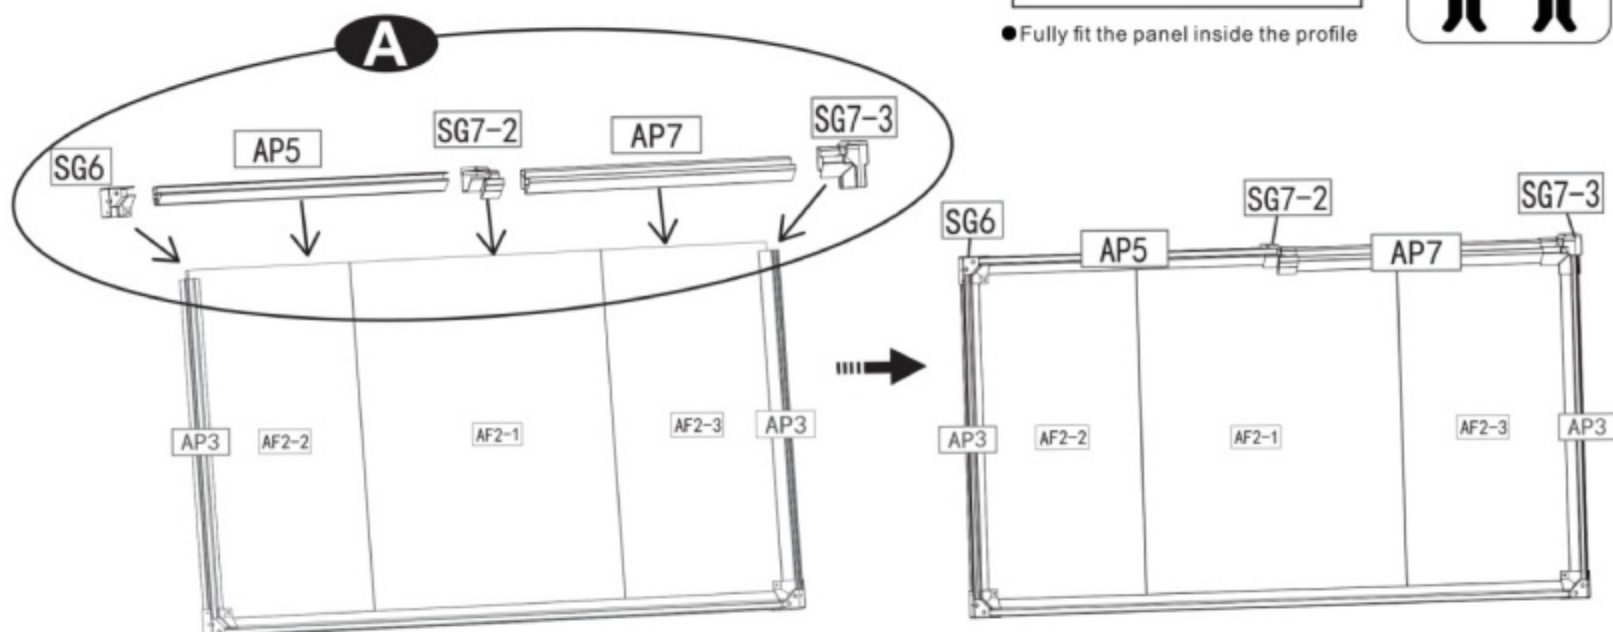



STEP 3

- Before locking the screw, lightly tap it with a hammer to make it tight.

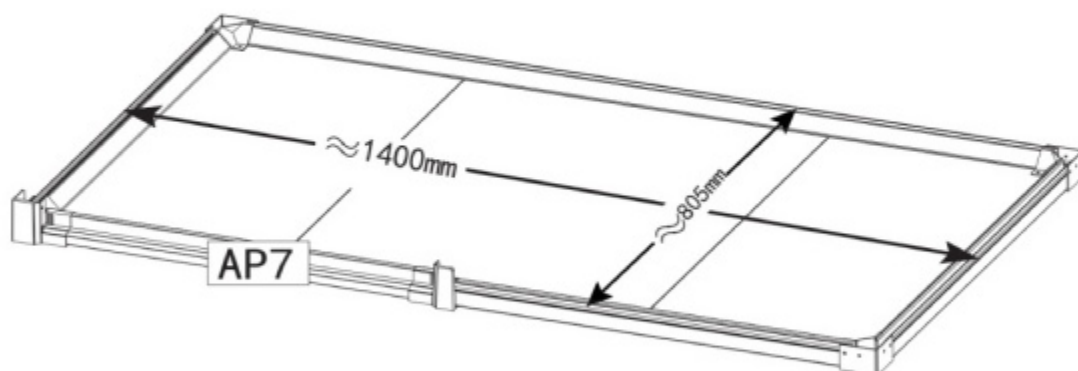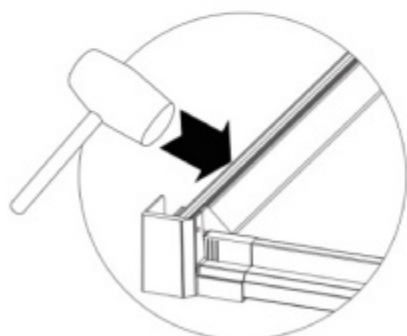


STEP 4

1

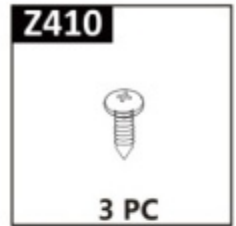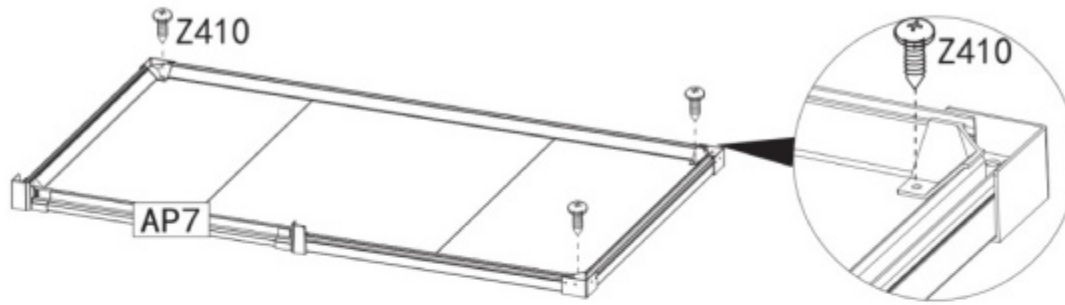


2

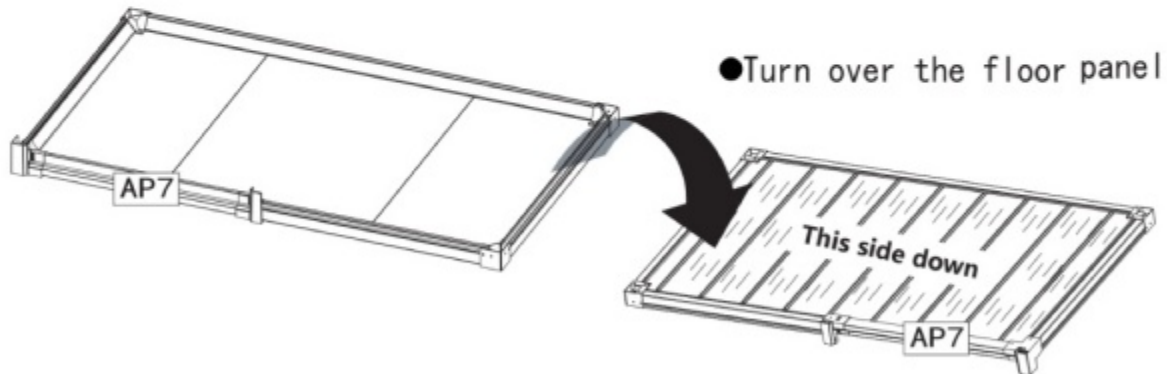

● Turn over the floor panel

3



Caution:
Please use Drill to predrill
a hole at depth 1mm before screw.

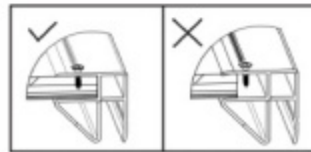


● Fully fit the panel inside the profile;
then screw on mark line



● Nail along the marked
line on profile

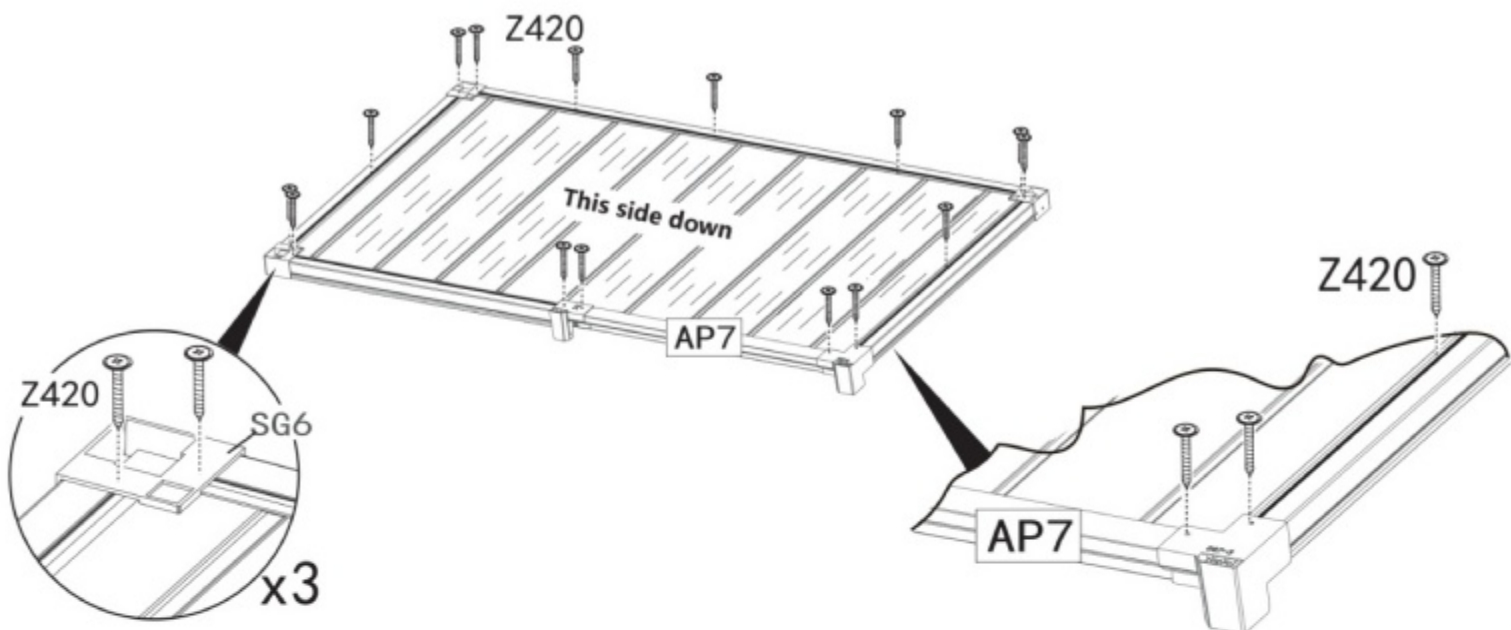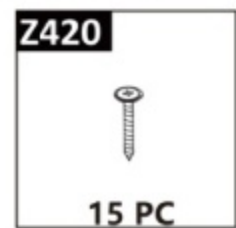


4


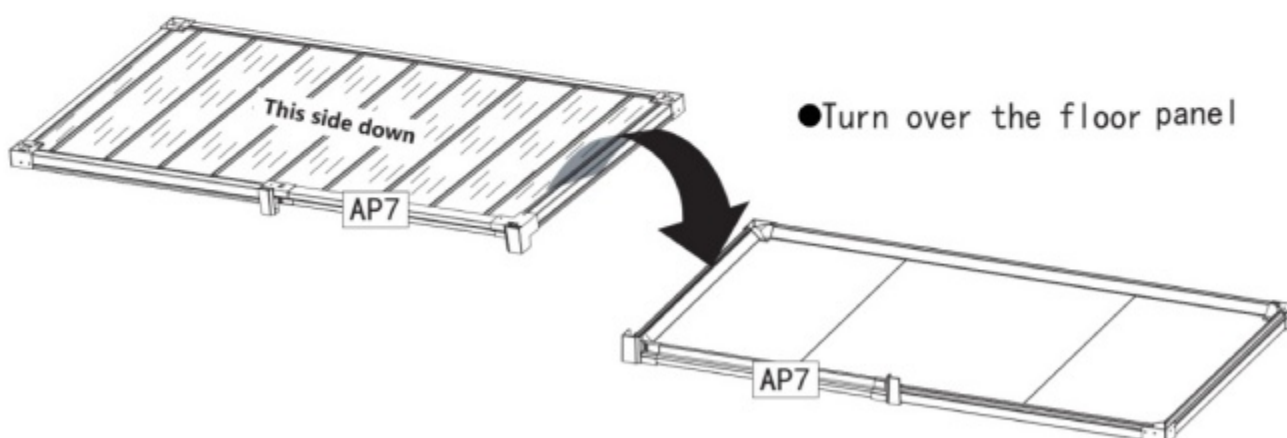


● Turn over the floor panel



Wall Assembly

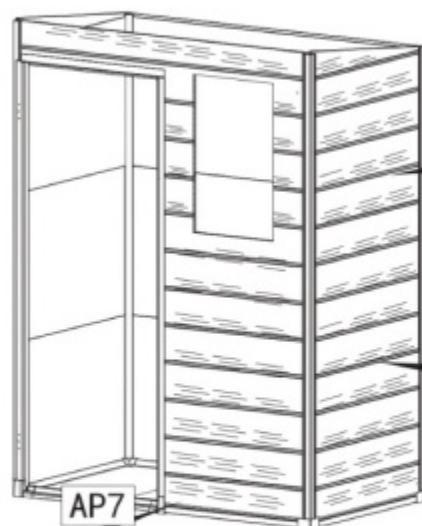




● Use spatula (part "SG8") for easier insertion of panel into profile

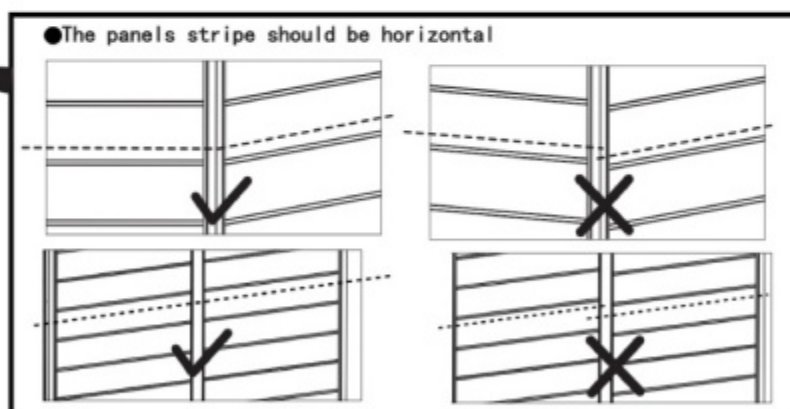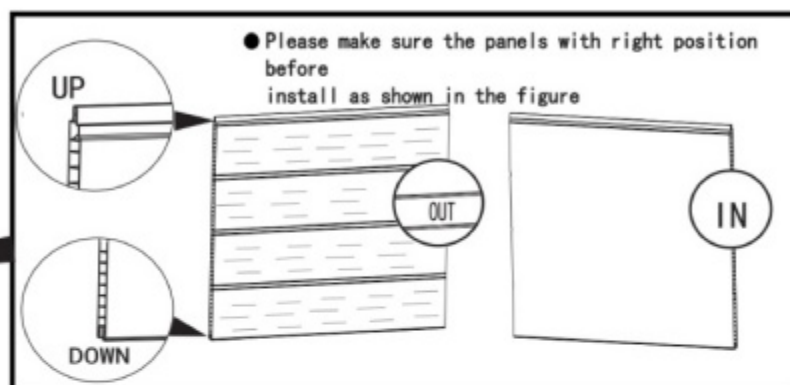


STEP 5

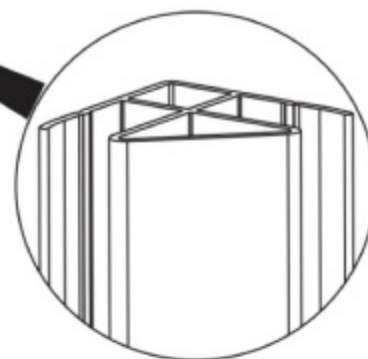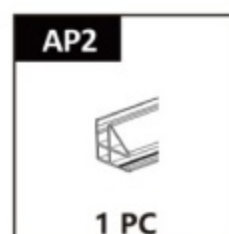





AP2

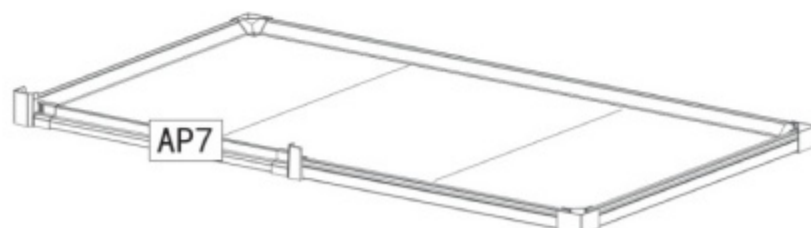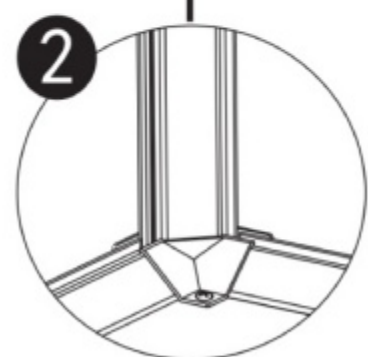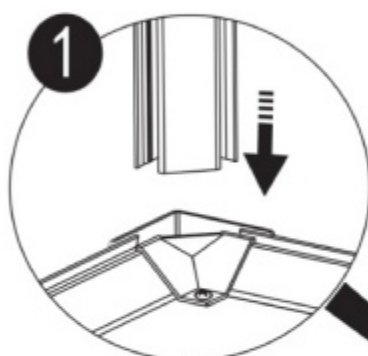

STEP 6

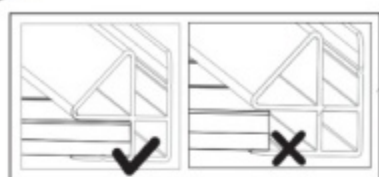






● Fully fit the panel inside the profile

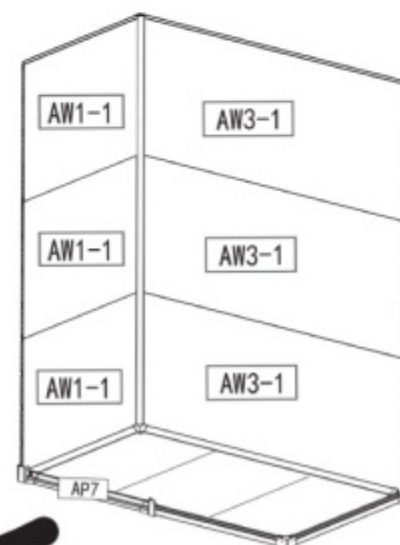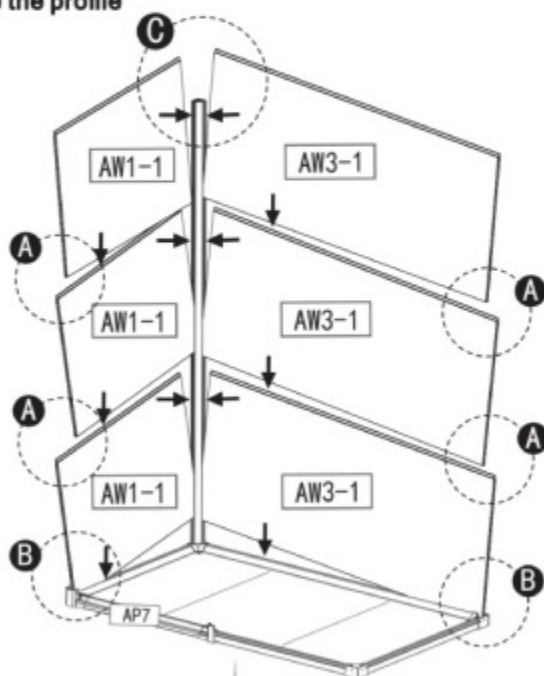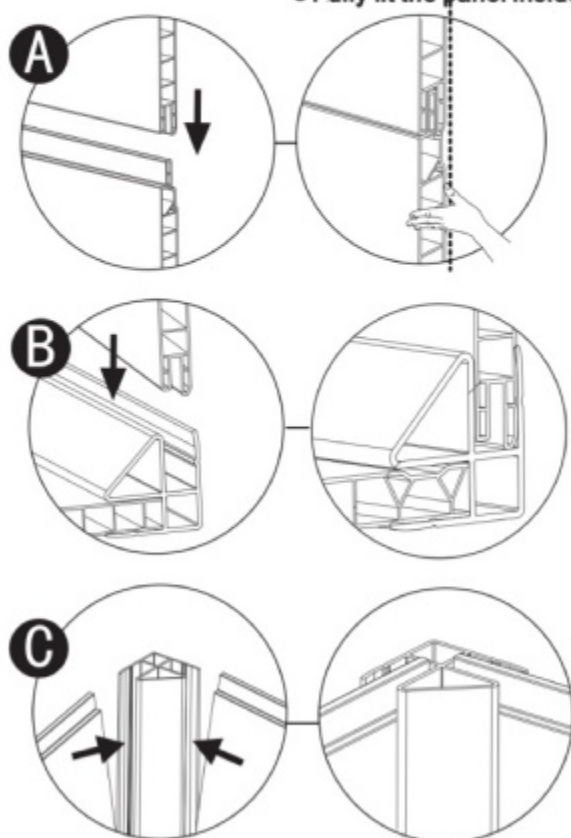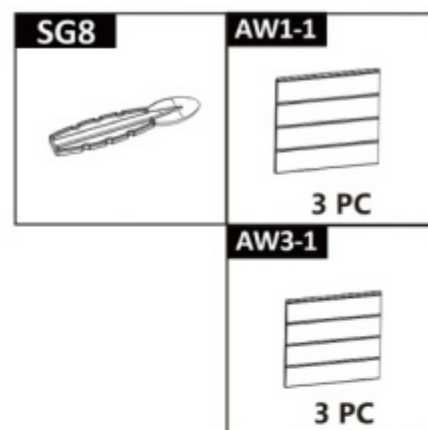


STEP 7







● Fully fit the panel inside the profile

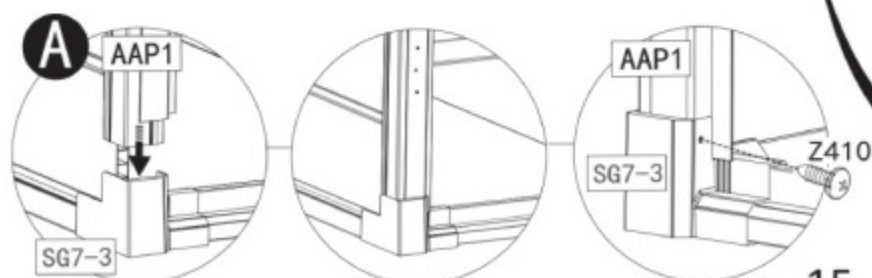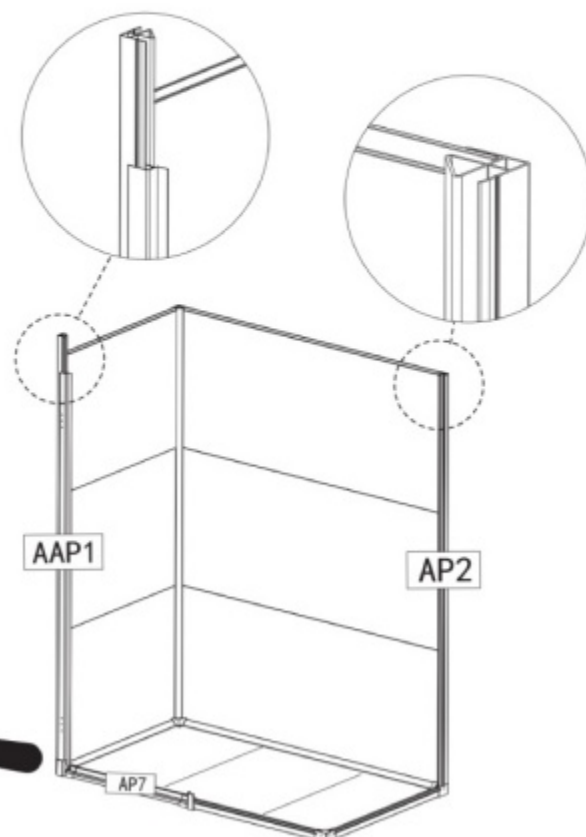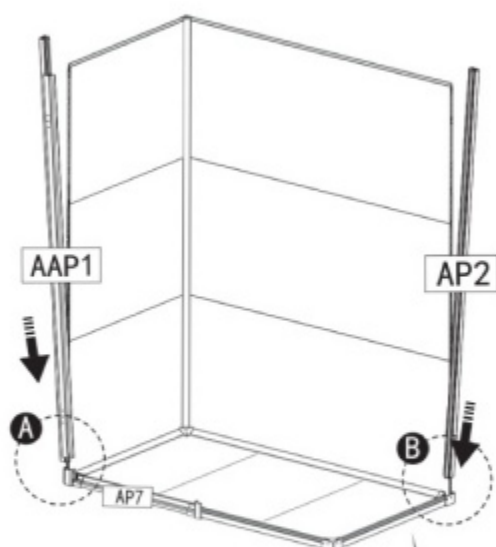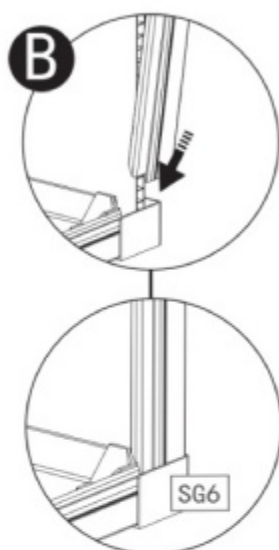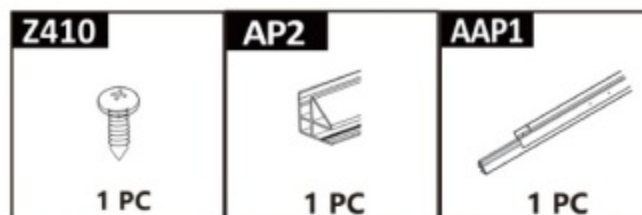


STEP 8

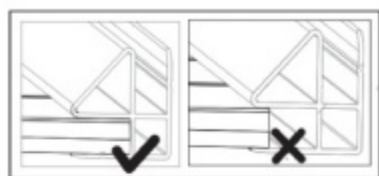

● Fully fit the panel inside the profile

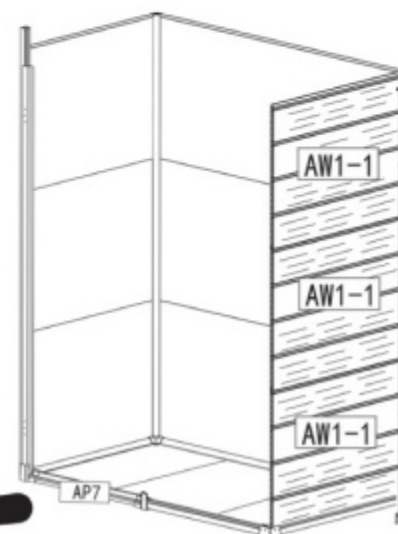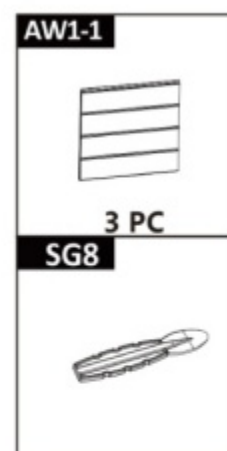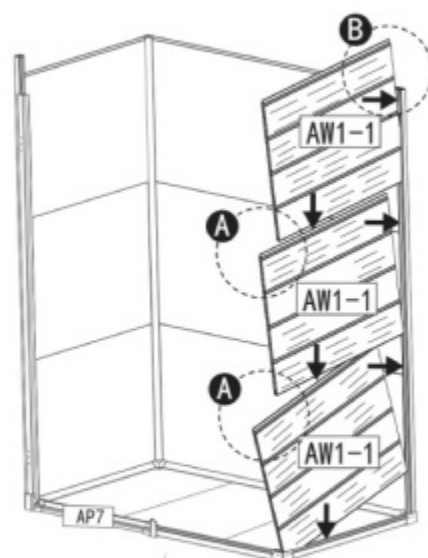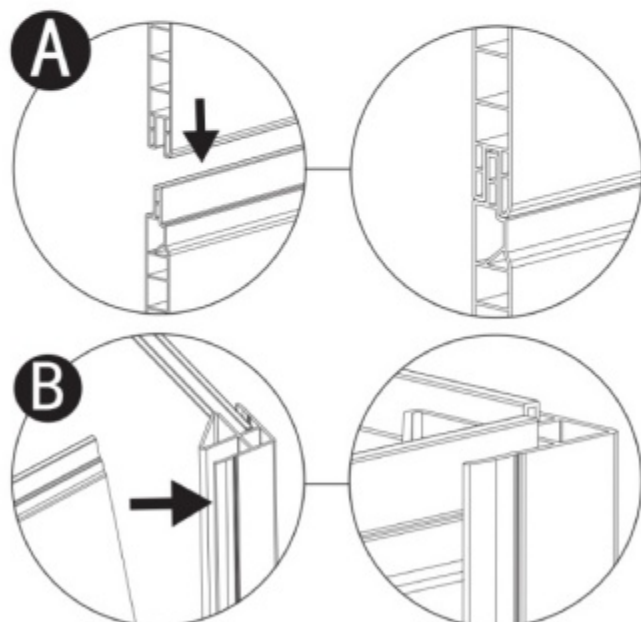


STEP 9


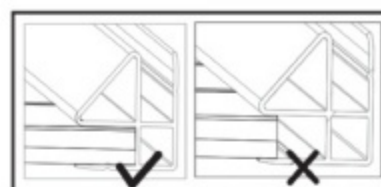


● Fully fit the panel inside the profile

1

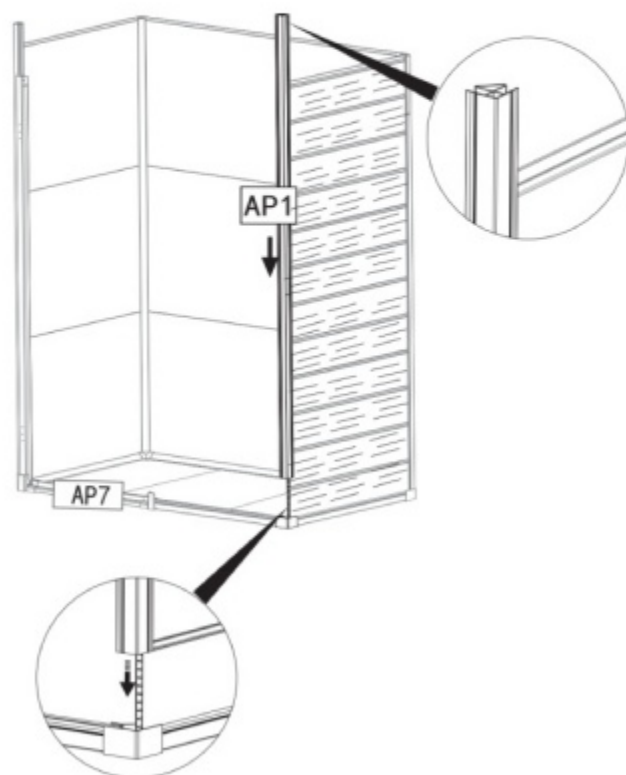


2

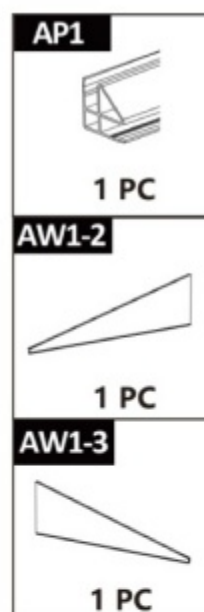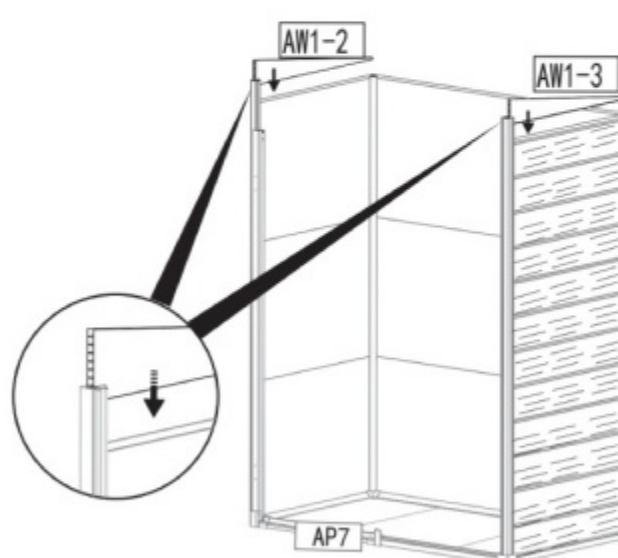


STEP 10

A B = C D

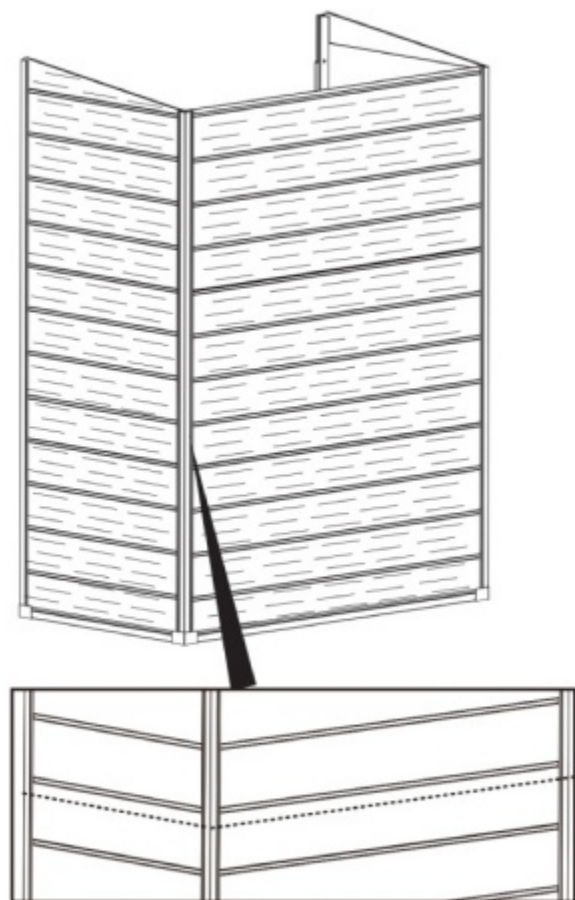



● The panels stripe should be horizontal

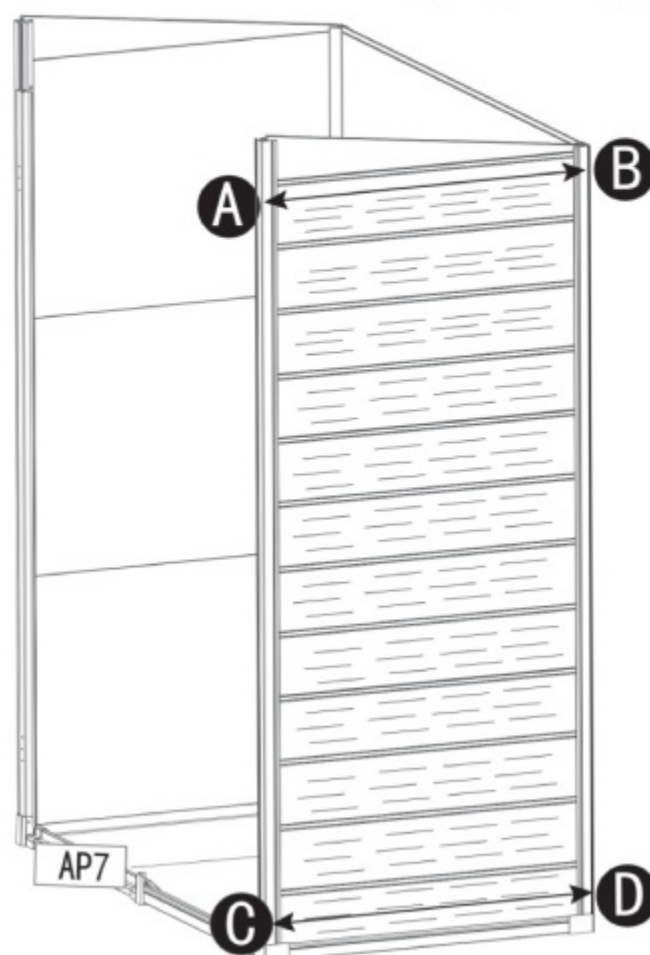


STEP 11




● Fully fit the panel inside the profile

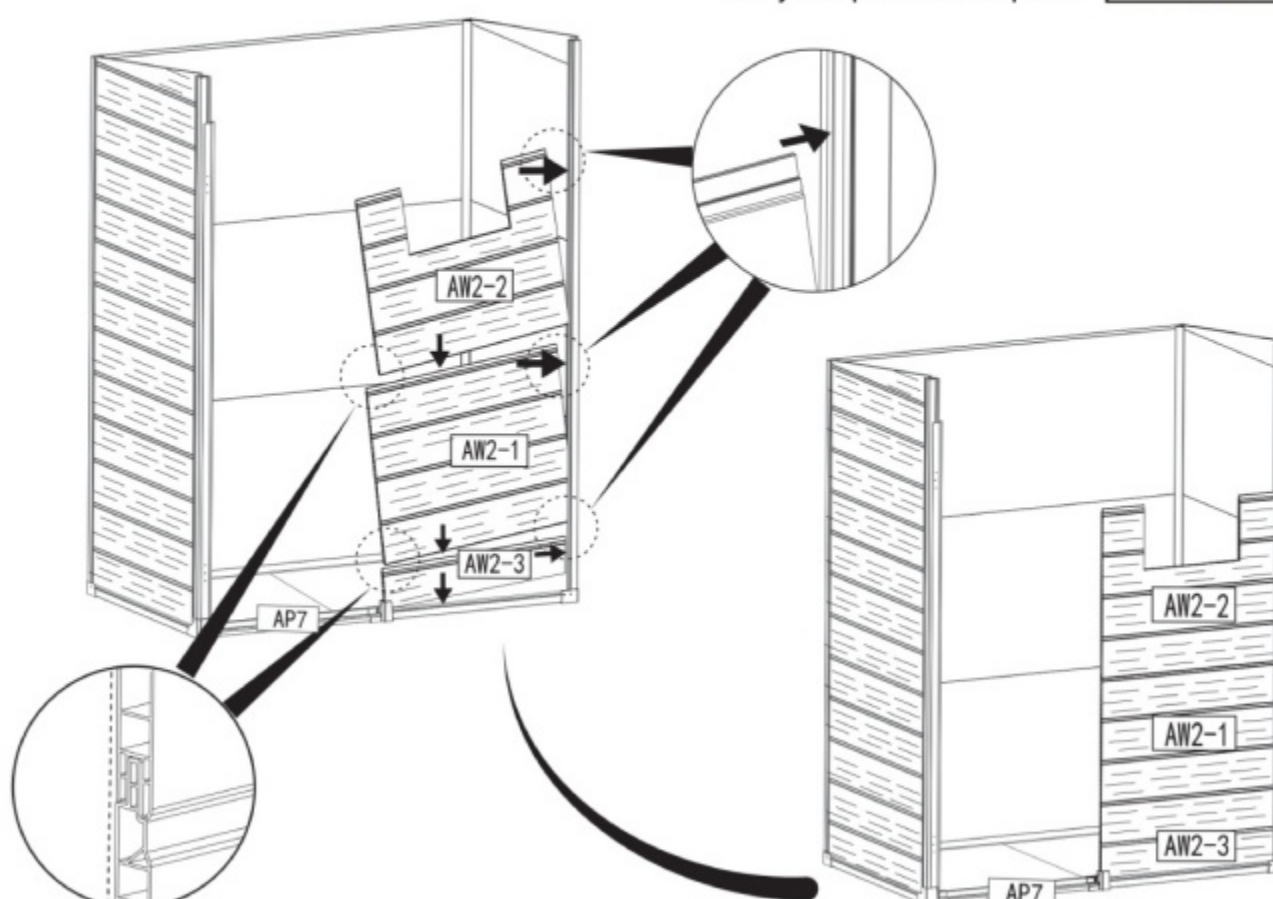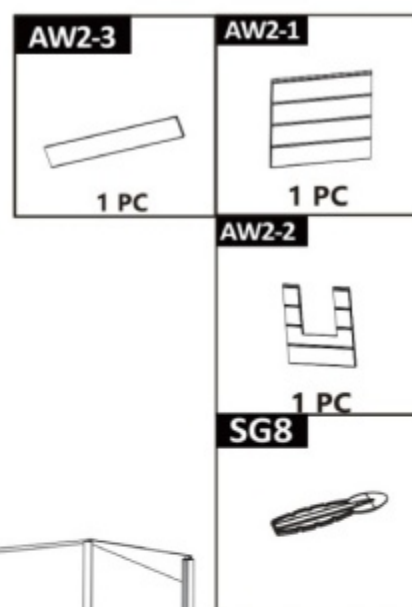

STEP 12




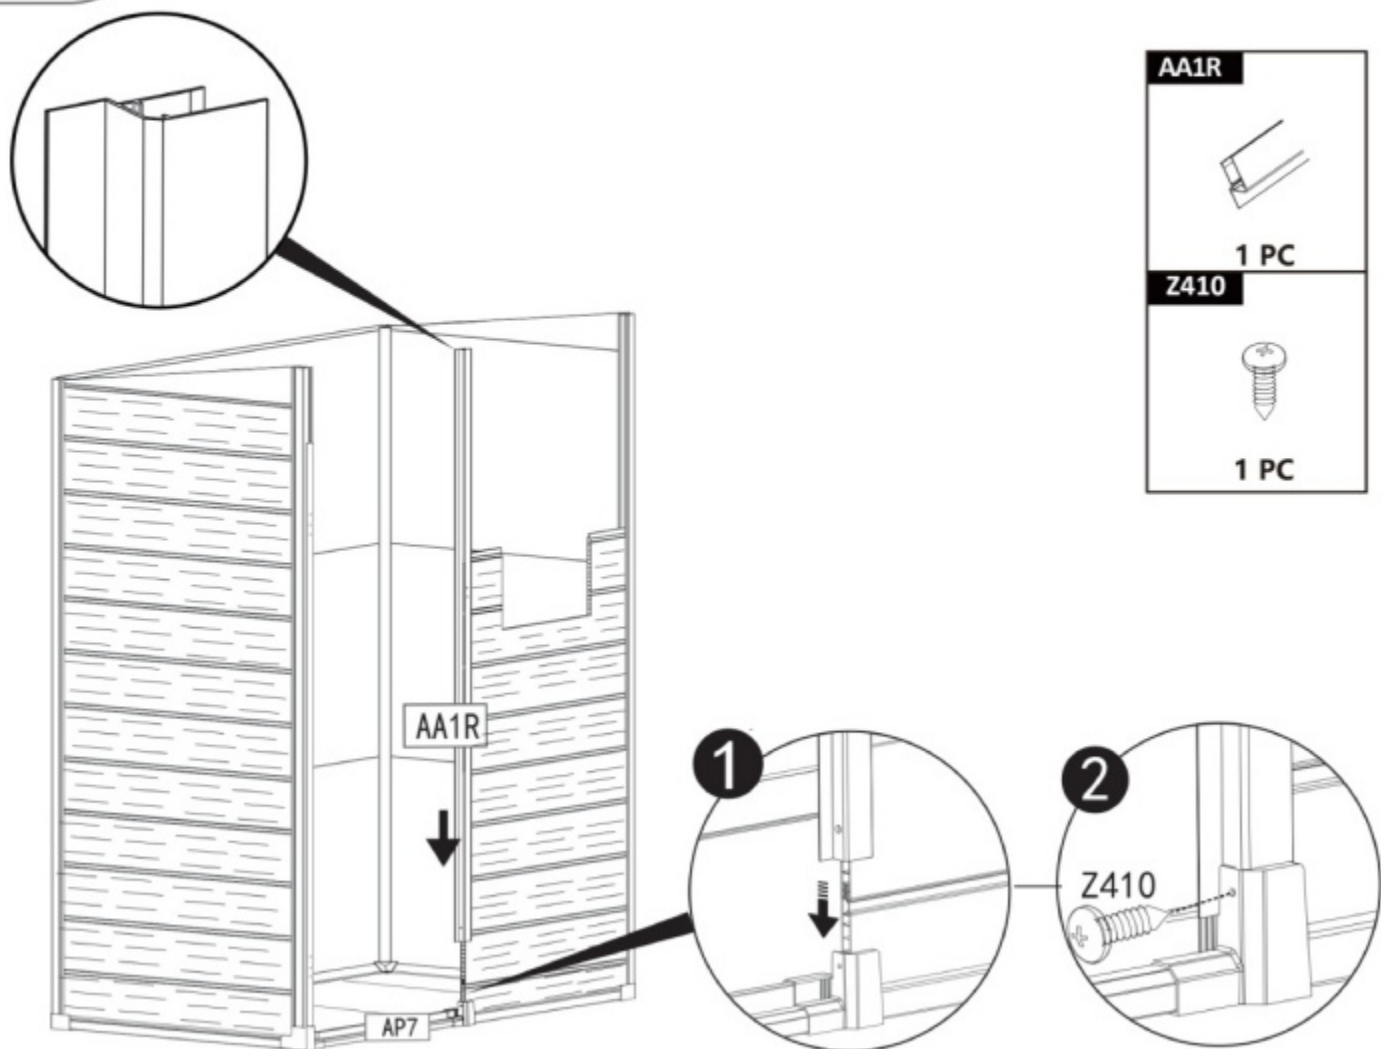


STEP 13

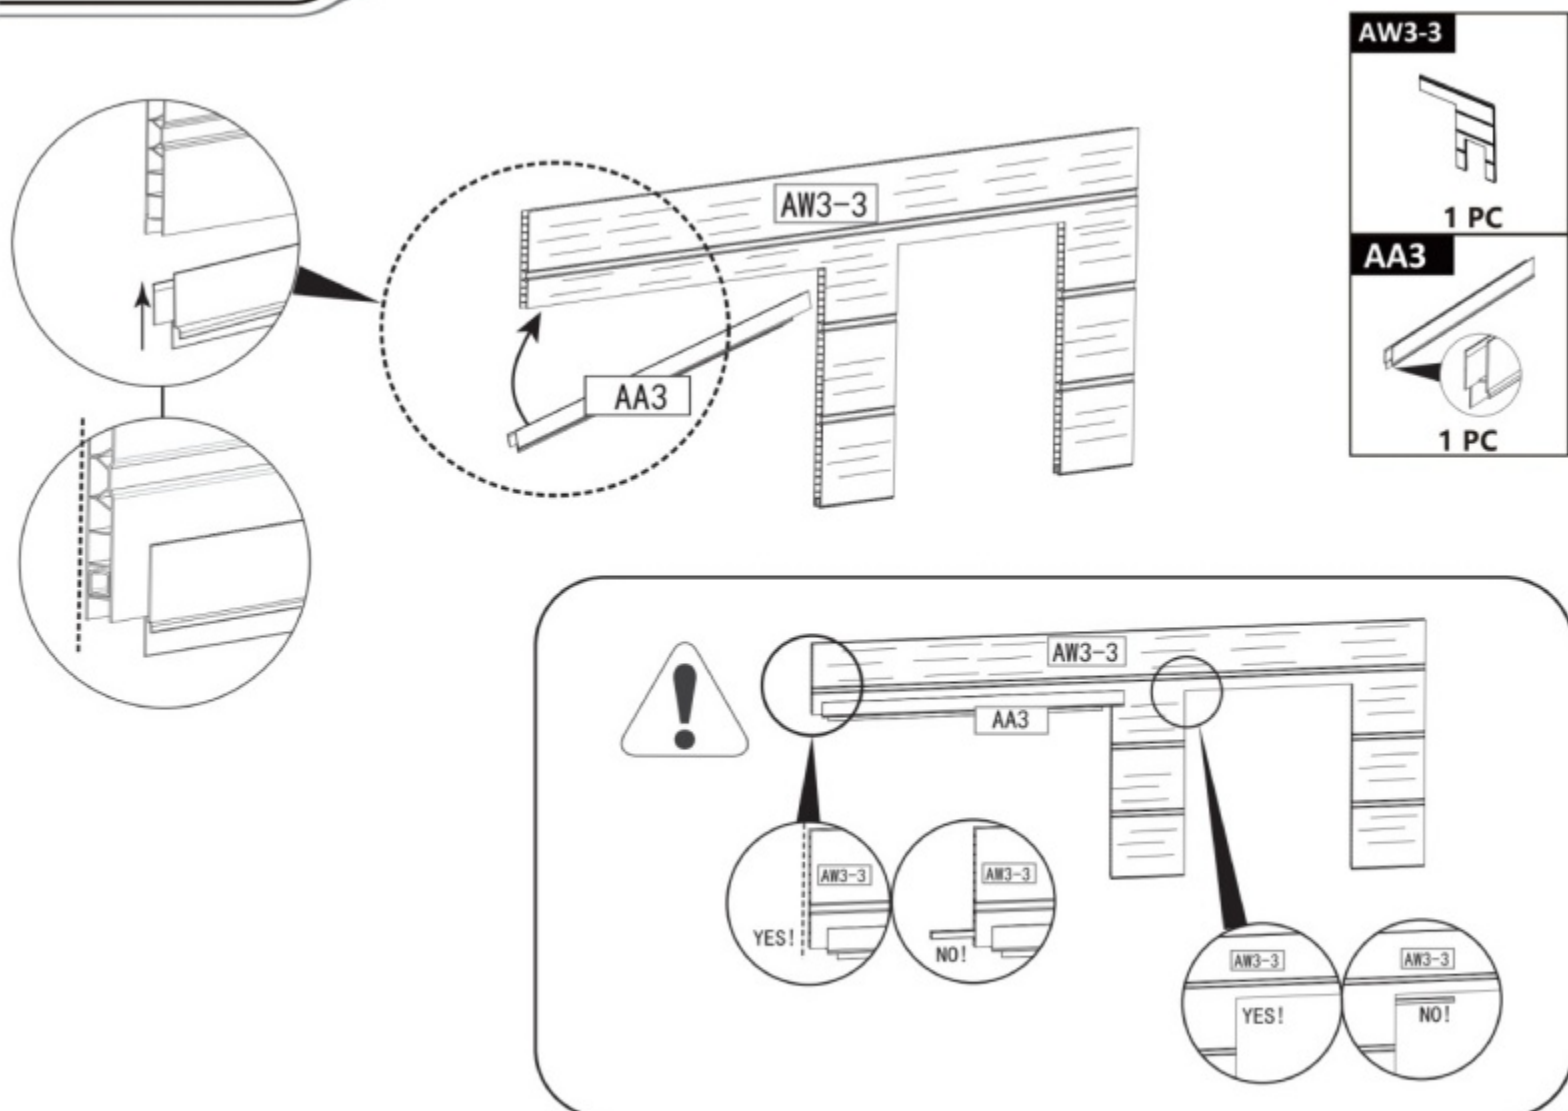


STEP 14

- Before locking the screw, lightly tap it with a hammer to make it tight

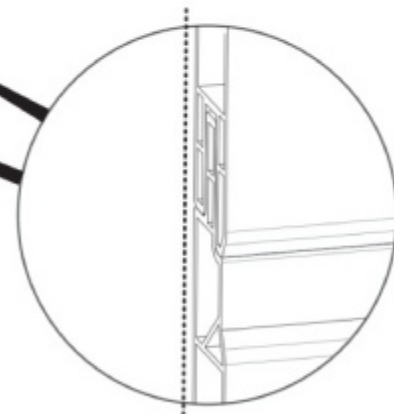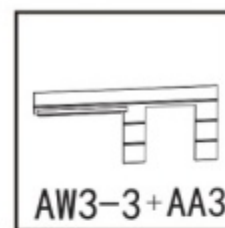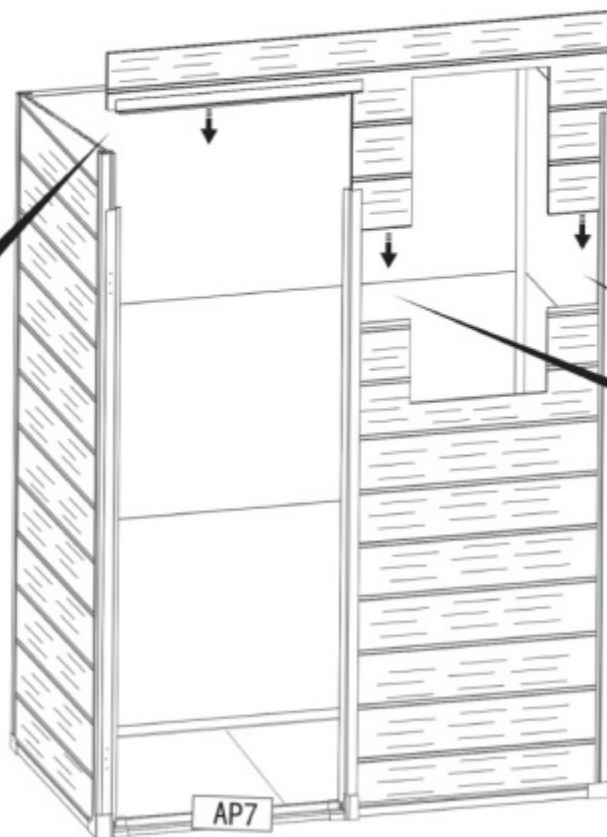
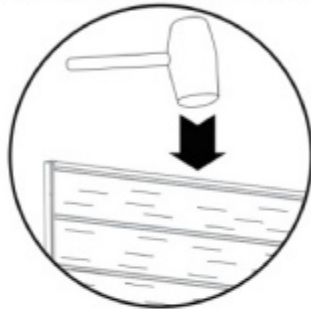


STEP 15


Determine seam alignment.

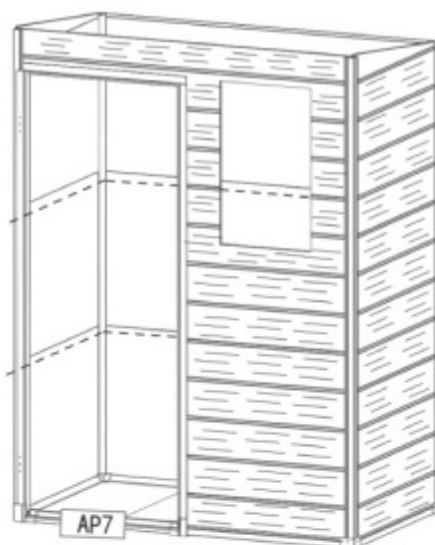


$AB=CD$

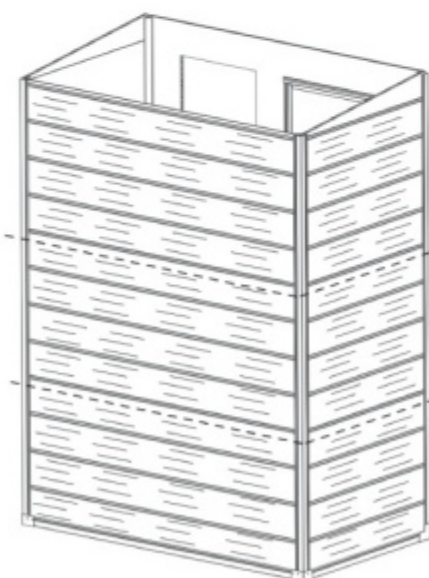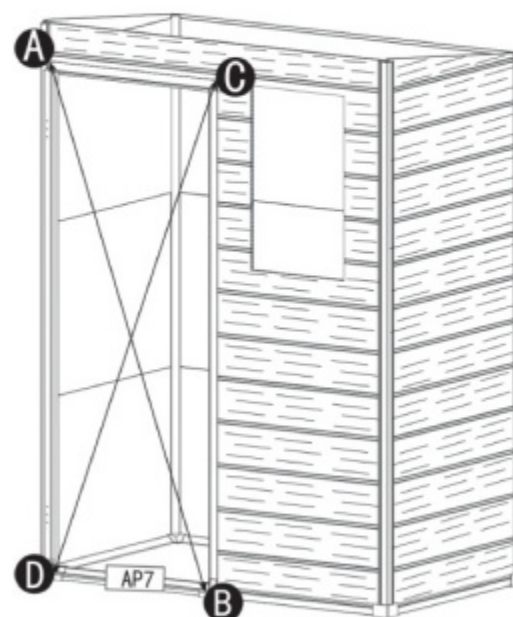

STEP 16

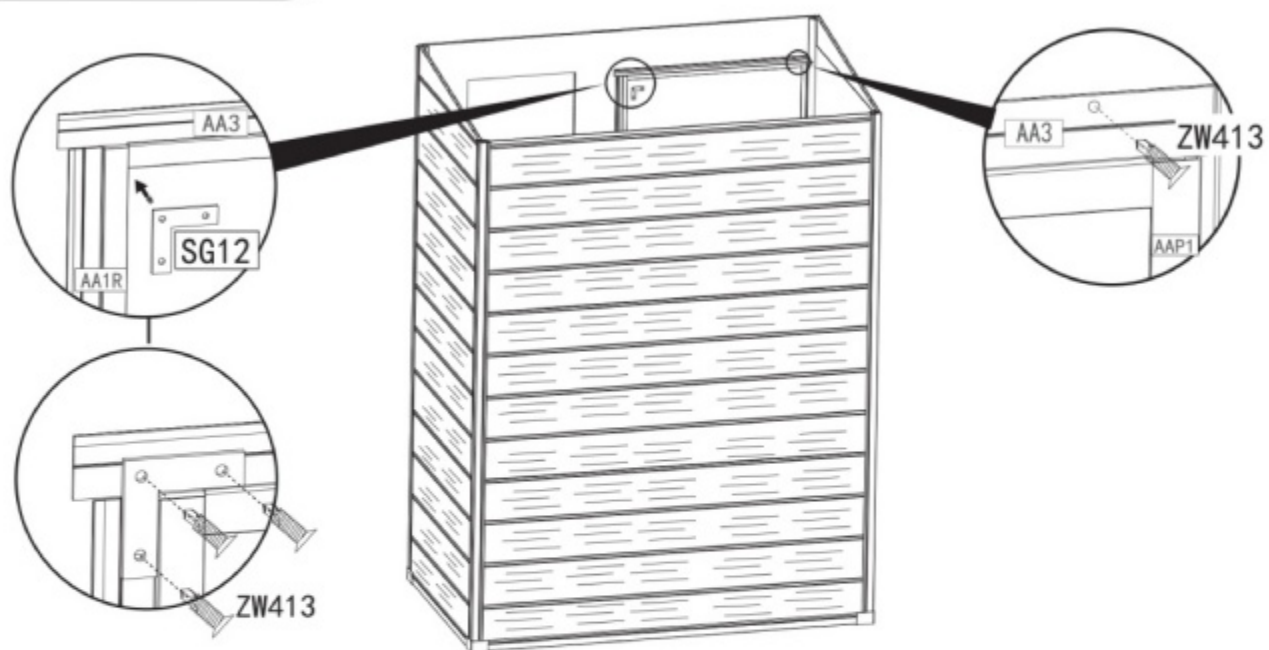

SG12



1 PC


ZW413



4 PC




• fixation after aligning!

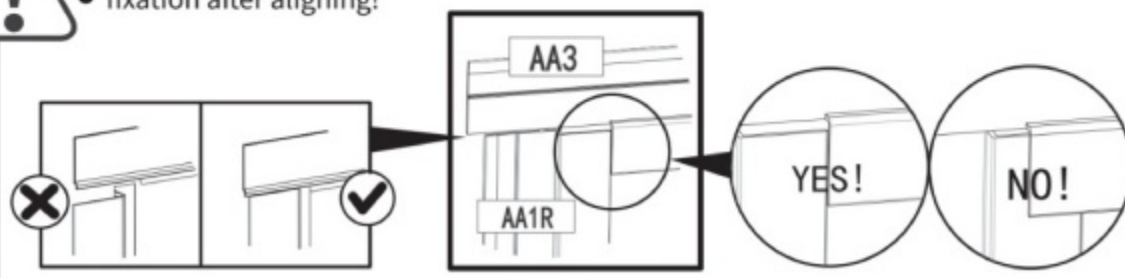

STEP 17

• Before locking the screw, lightly tap it with a hammer to make it tight

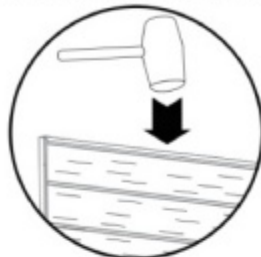

Caution:


Please use Drill to predrill a hole at depth 1mm before screw.



Z420



24 PC

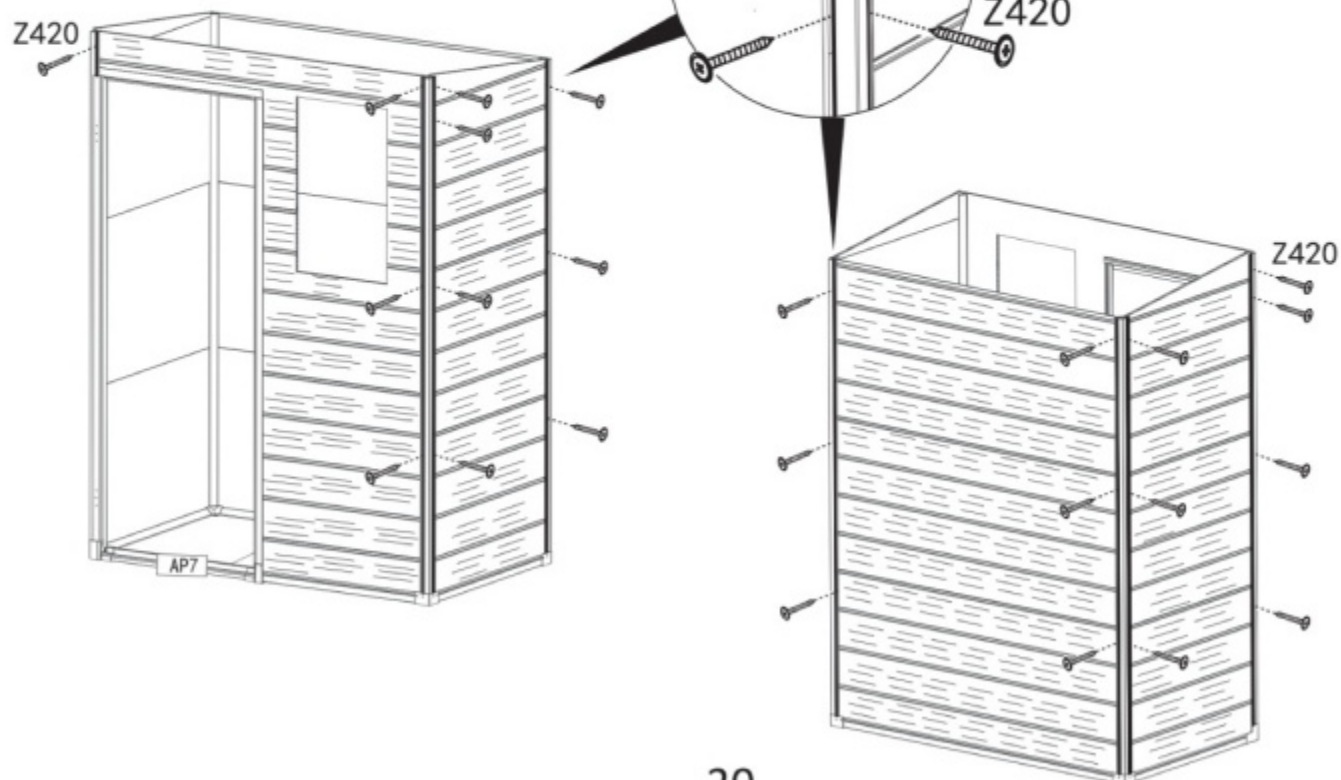

STEP 18

- Fully fit the panel inside the profile

Caution:


Please use Drill to predrill a hole at depth 1mm before screw.



Z420





13 PC

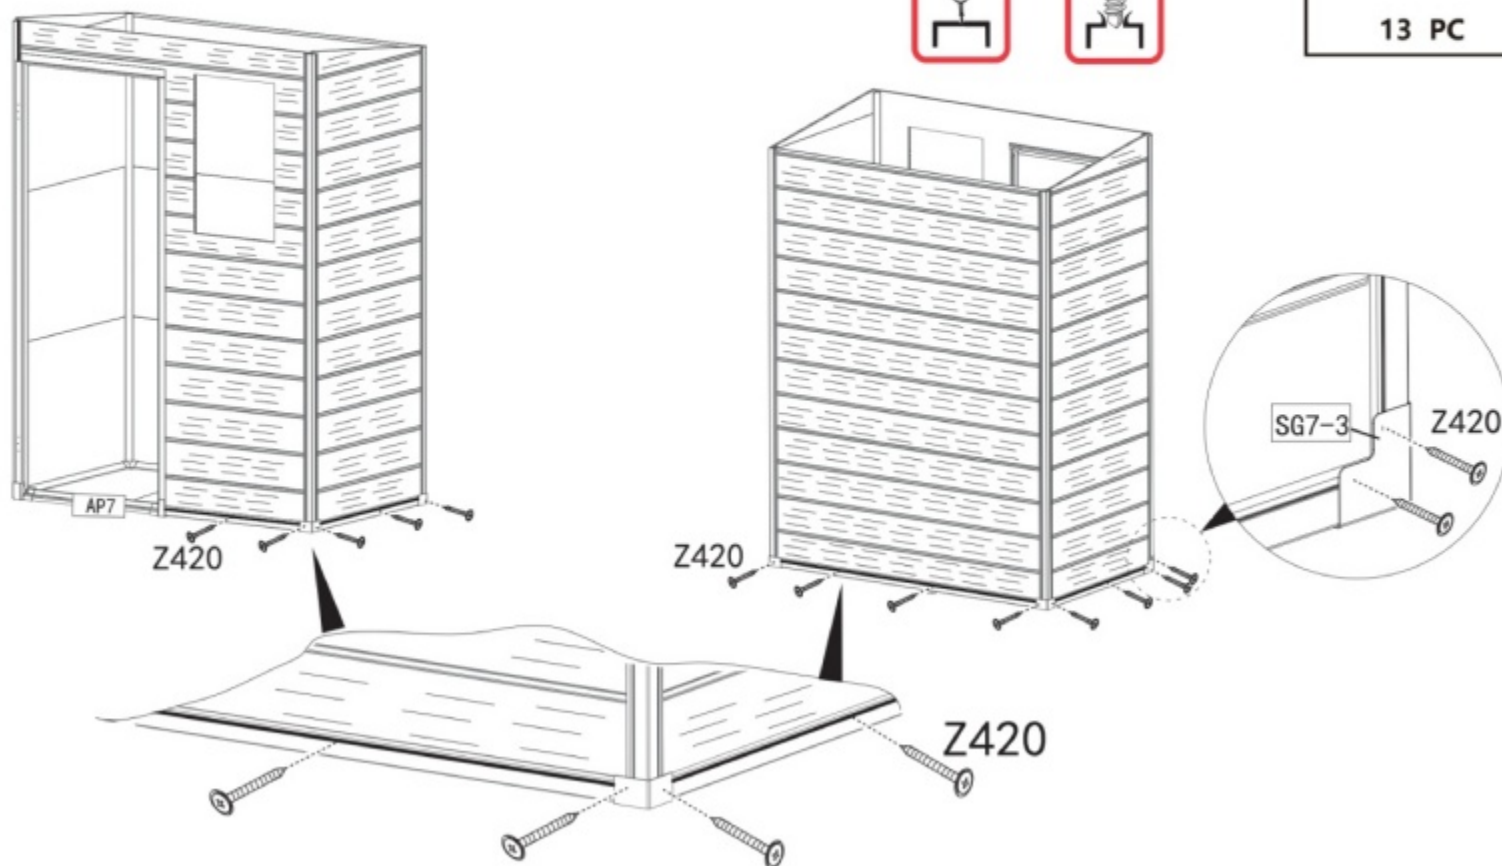


Roof Assembly



- The floor panels must be straight

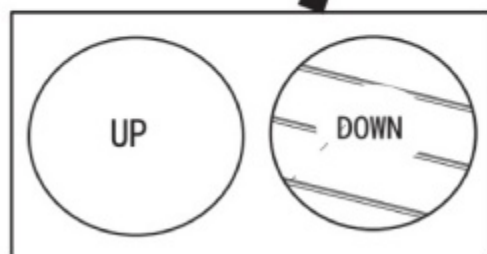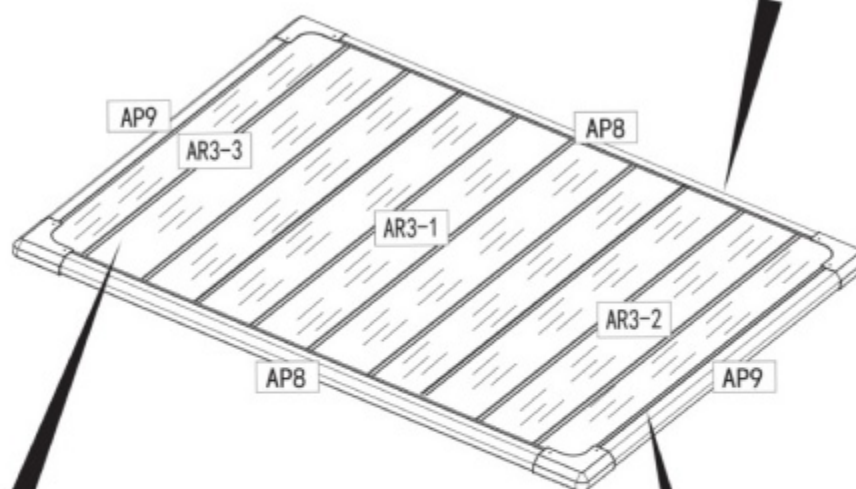


- Note: The crease line of the floor must be underneath

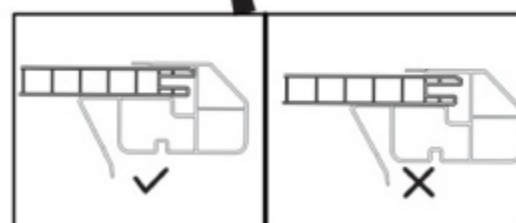


- Fully fit the panel inside the profile

STEP 19

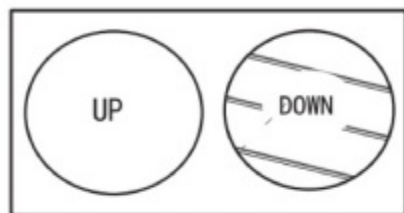


- Note: The crease line of the floor must be underneath


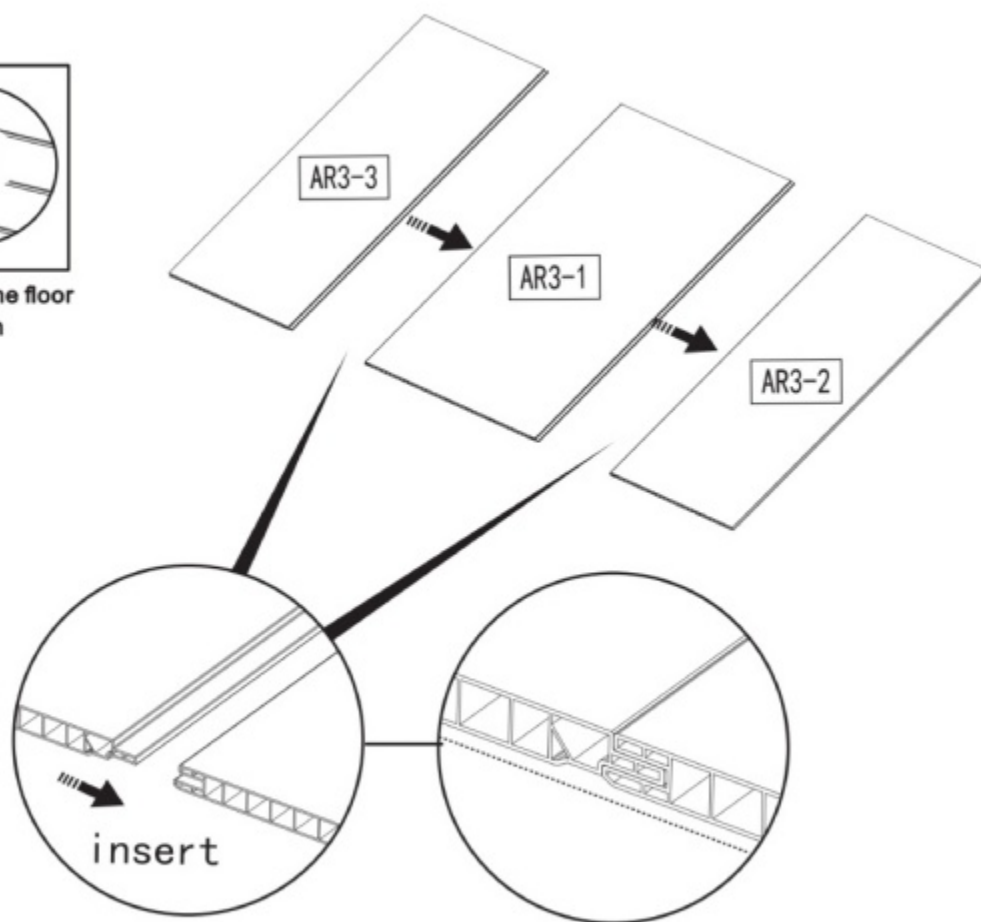


AR3-1		1 PC
AR3-3		1 PC
AR3-2		1 PC
SG8		

STEP 20

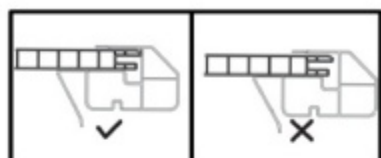

- Fully fit the panel inside the profile


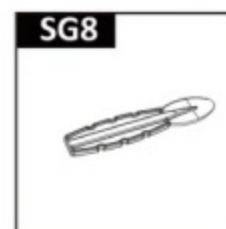
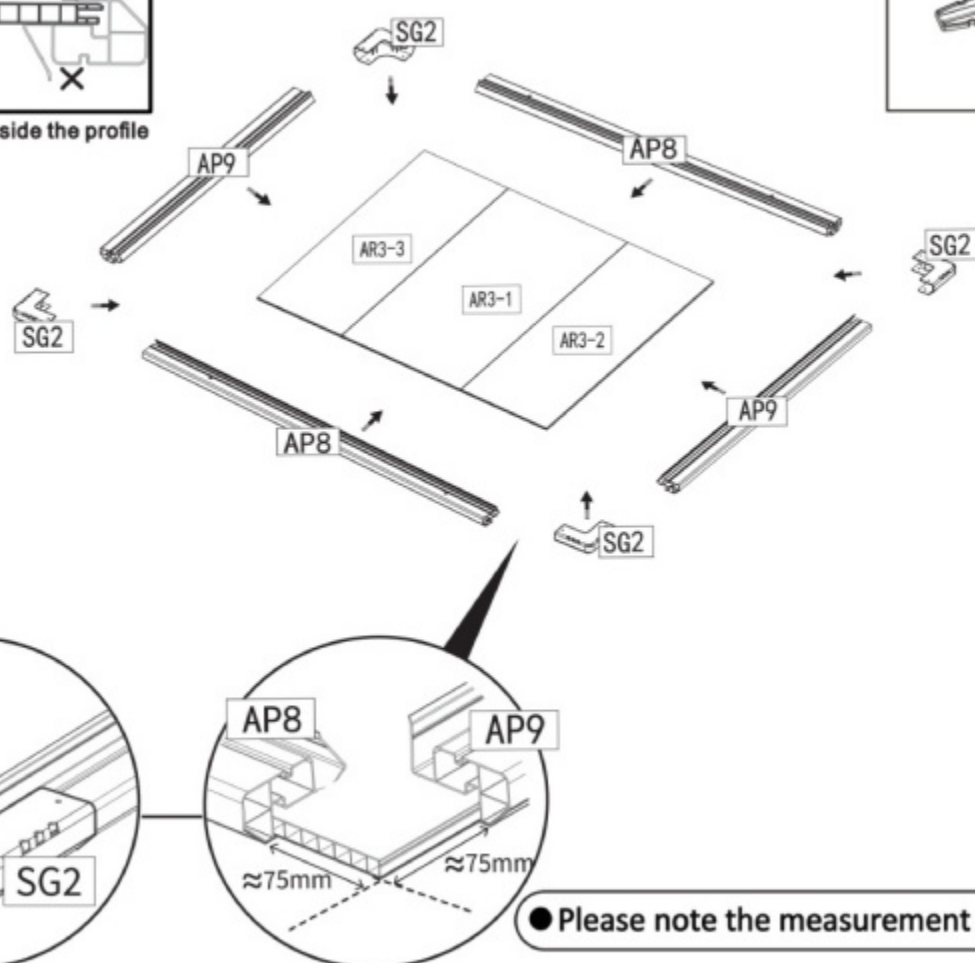


AP9		2 PC
AP8		2 PC
SG2		4 PC

- Please note the measurement dimensions


STEP 21

- Ensure AB equal to CD before nailing.

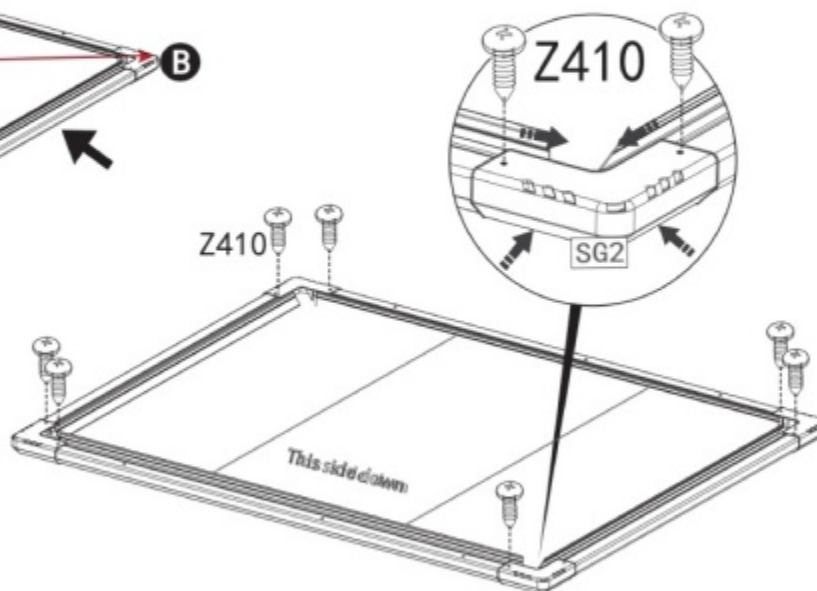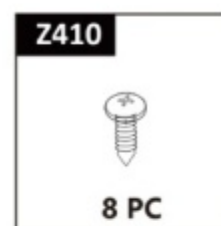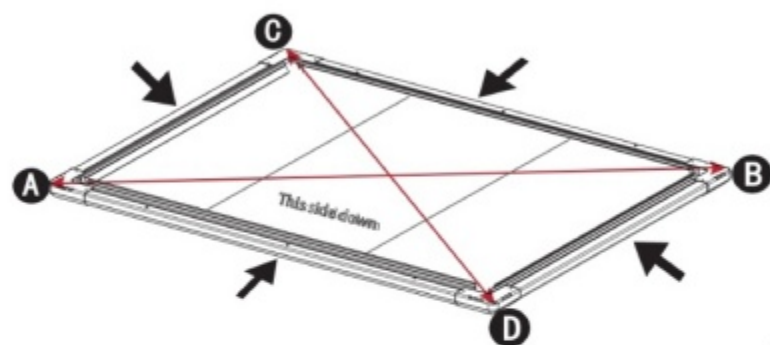


STEP 22




Flip the panel.

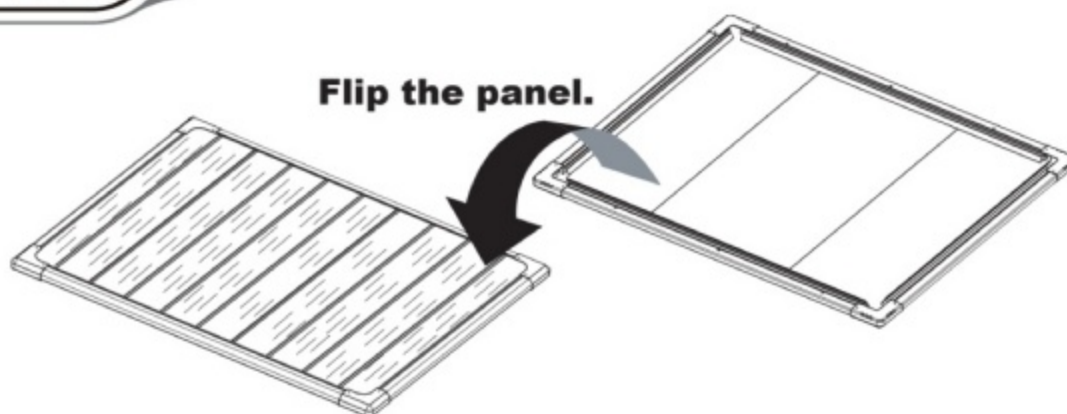

Caution:
Please use Drill to predrill
a hole at depth

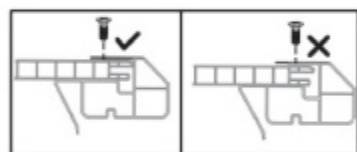


● Nail along the marked line on profile.

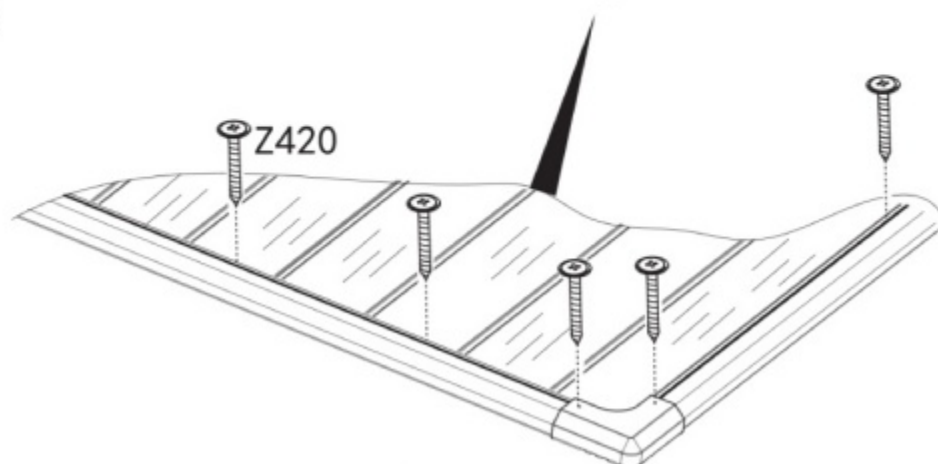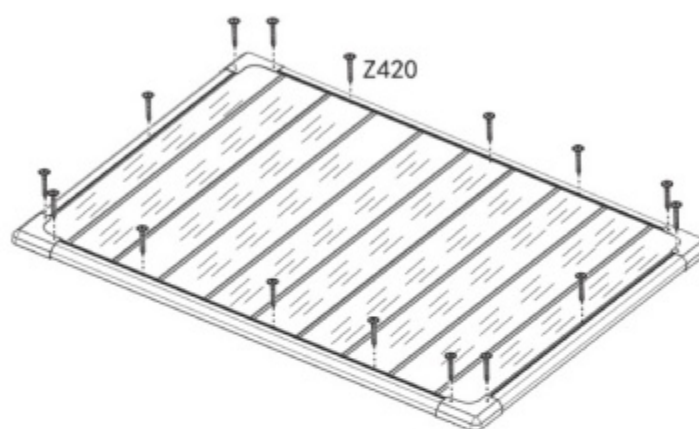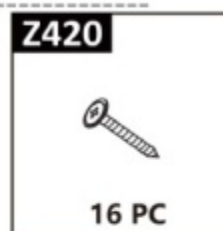

STEP 23




1

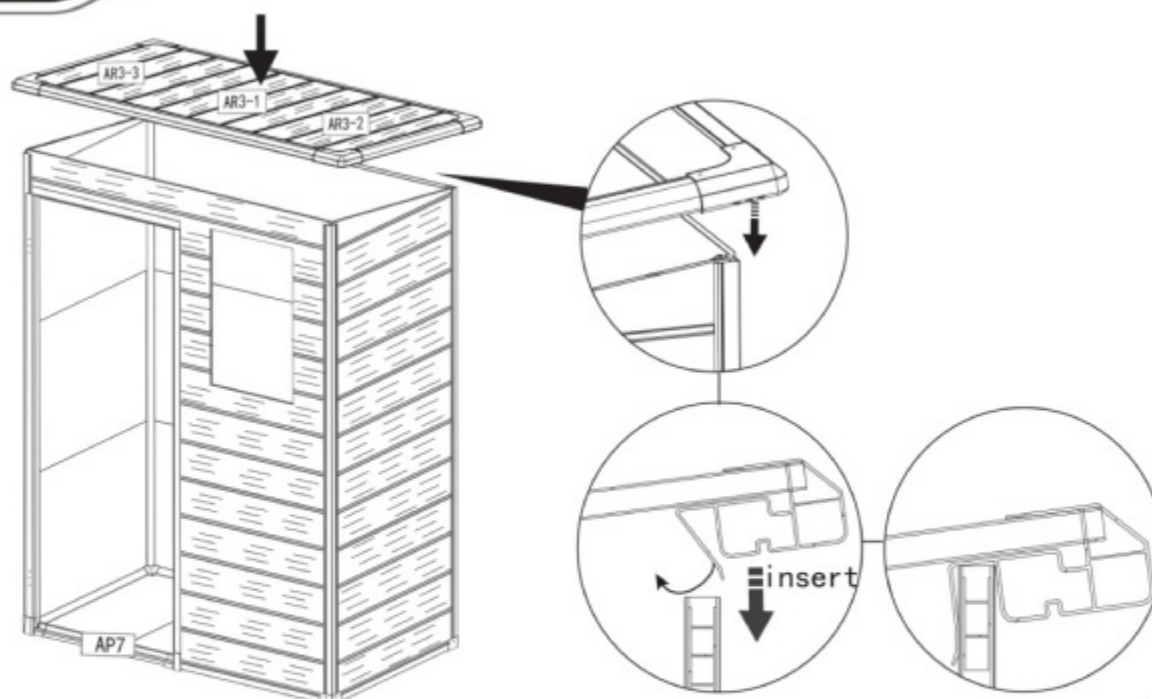

● Fully fit the panel inside the profile



2

● Ensure fully fit the panels inside the profiles of the roof, using the spatula according to the following picture.

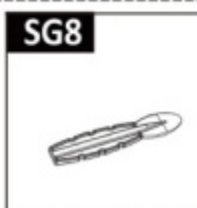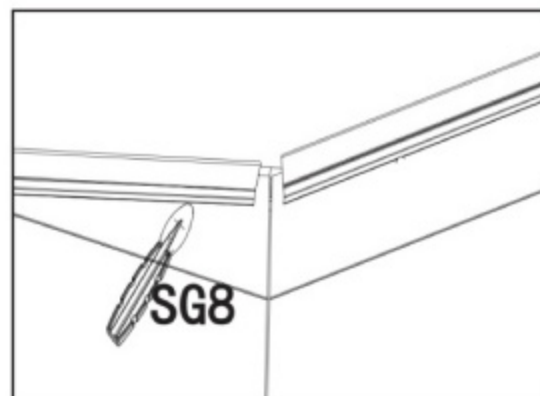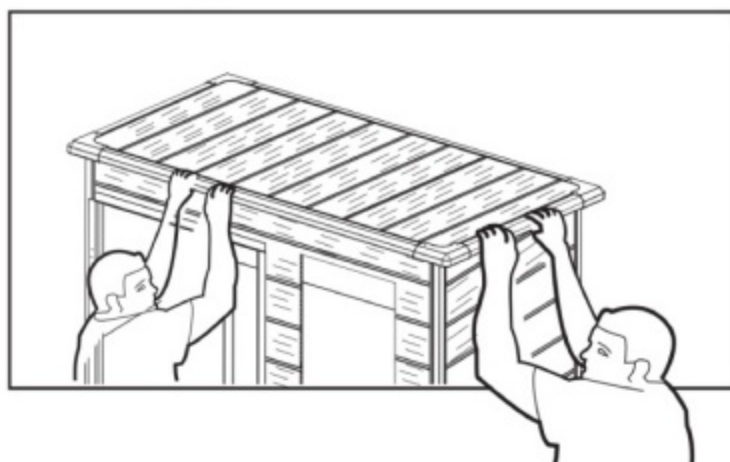

3

● Please note the nailing direction.

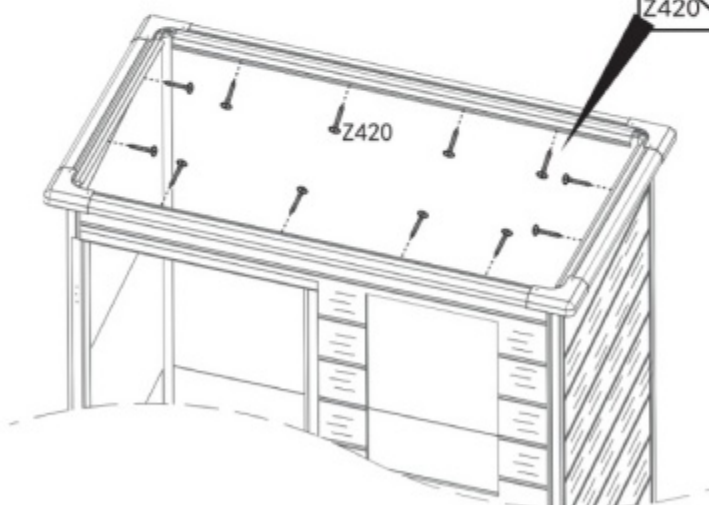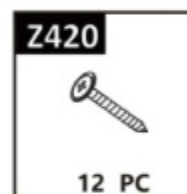


Caution:

Please use Drill to predrill a hole at depth 1mm before screw.




STEP 24

Window section

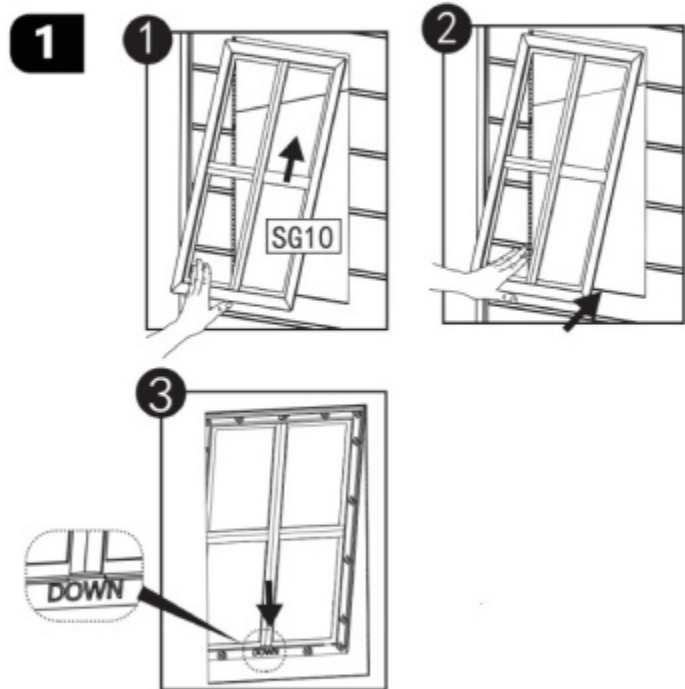


How the Windows look when they are installed

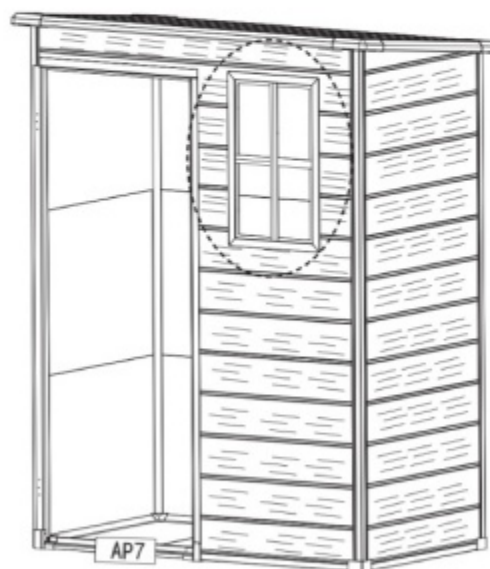


SG10		1 PC
SG101		1 PC
SG102		1 PC
Z410		16 PC


- 2**
- Remove the film before fixing SG101

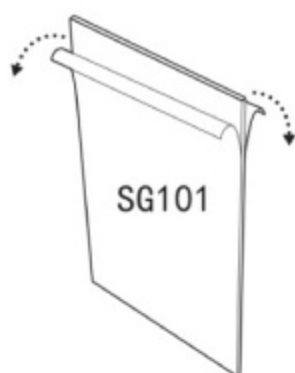


- Two persons are needed for this step, to press SG10 from outside and inside.

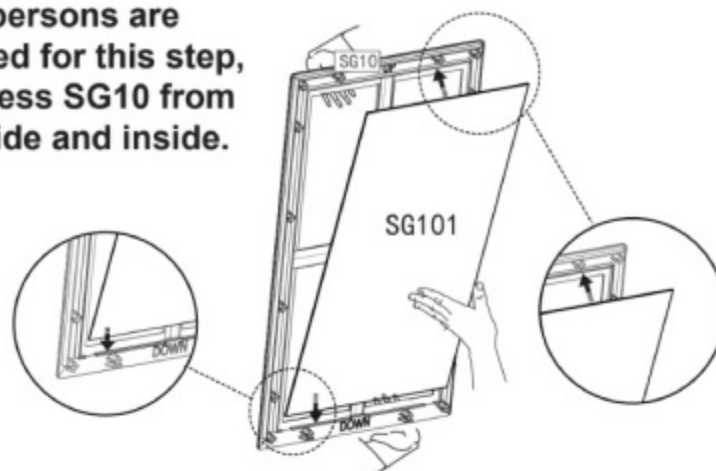

3

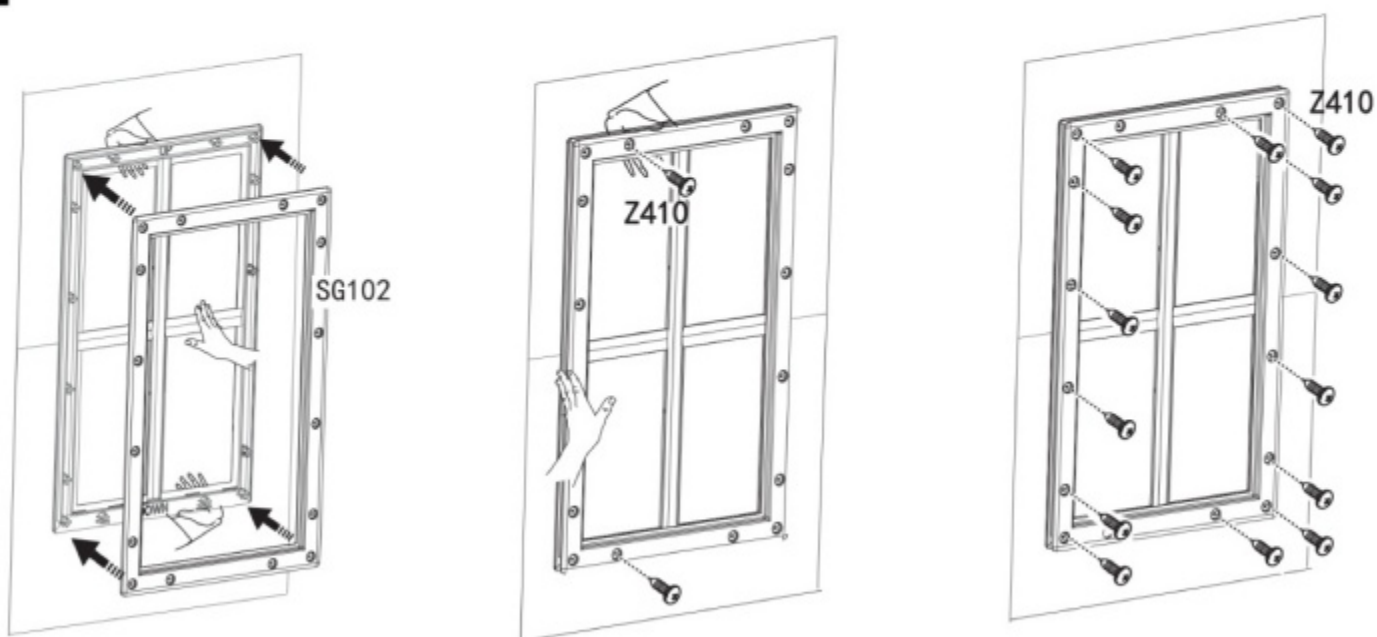

STEP 25

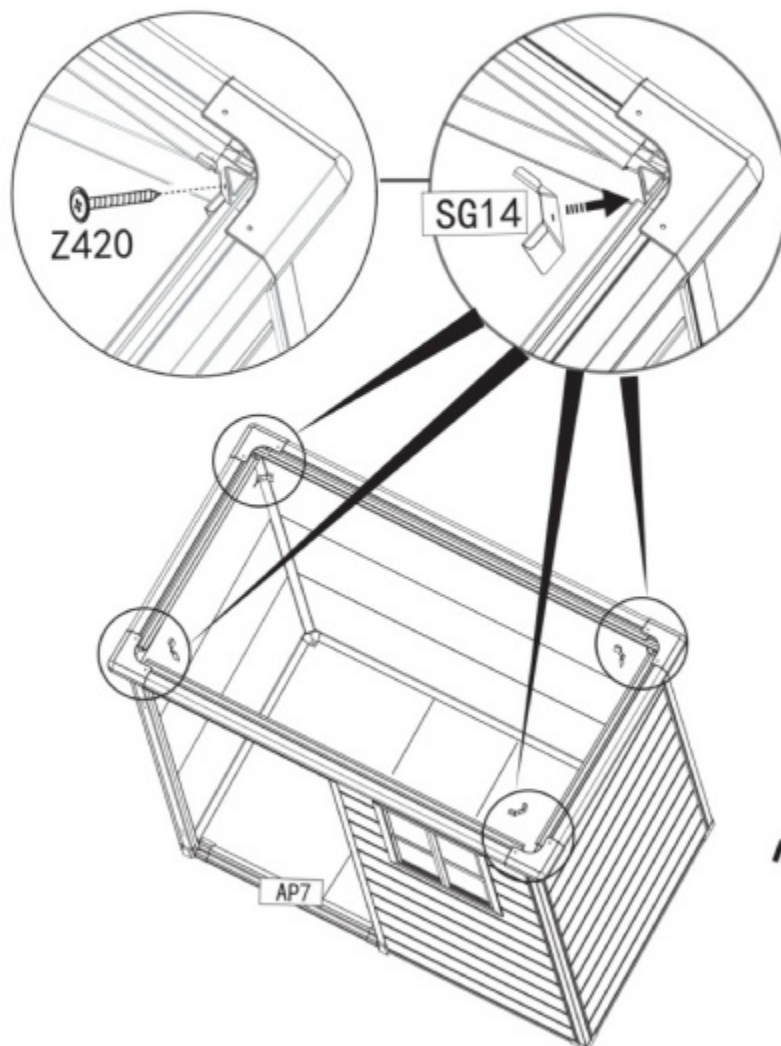

SG14

4 PC
Z420

4 PC





DOOR SECTION



The stripes should be outside


Door mount this is above

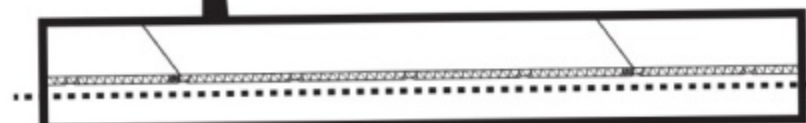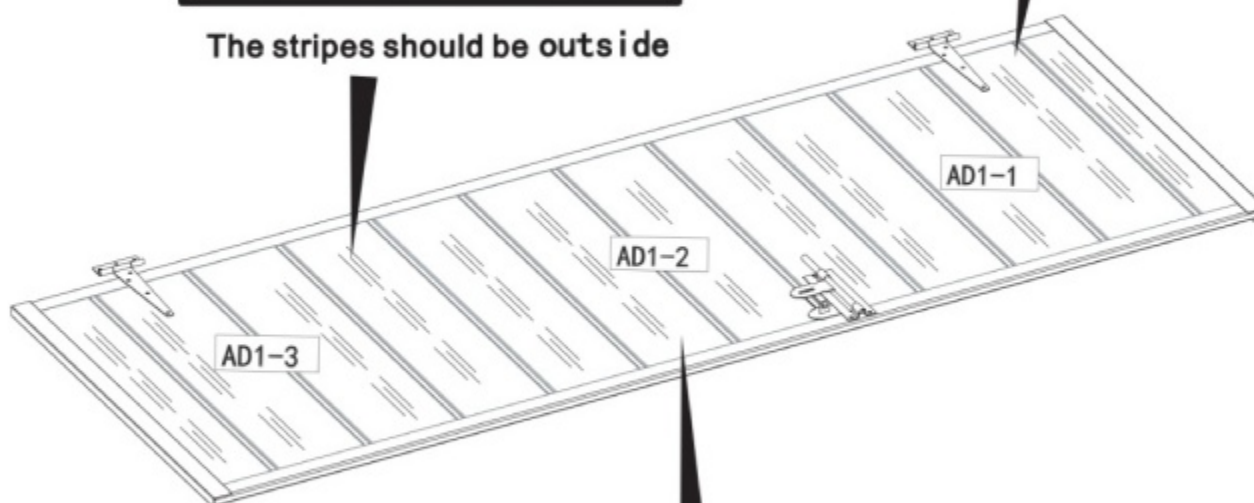

The boards must be straight



STEP 26

1

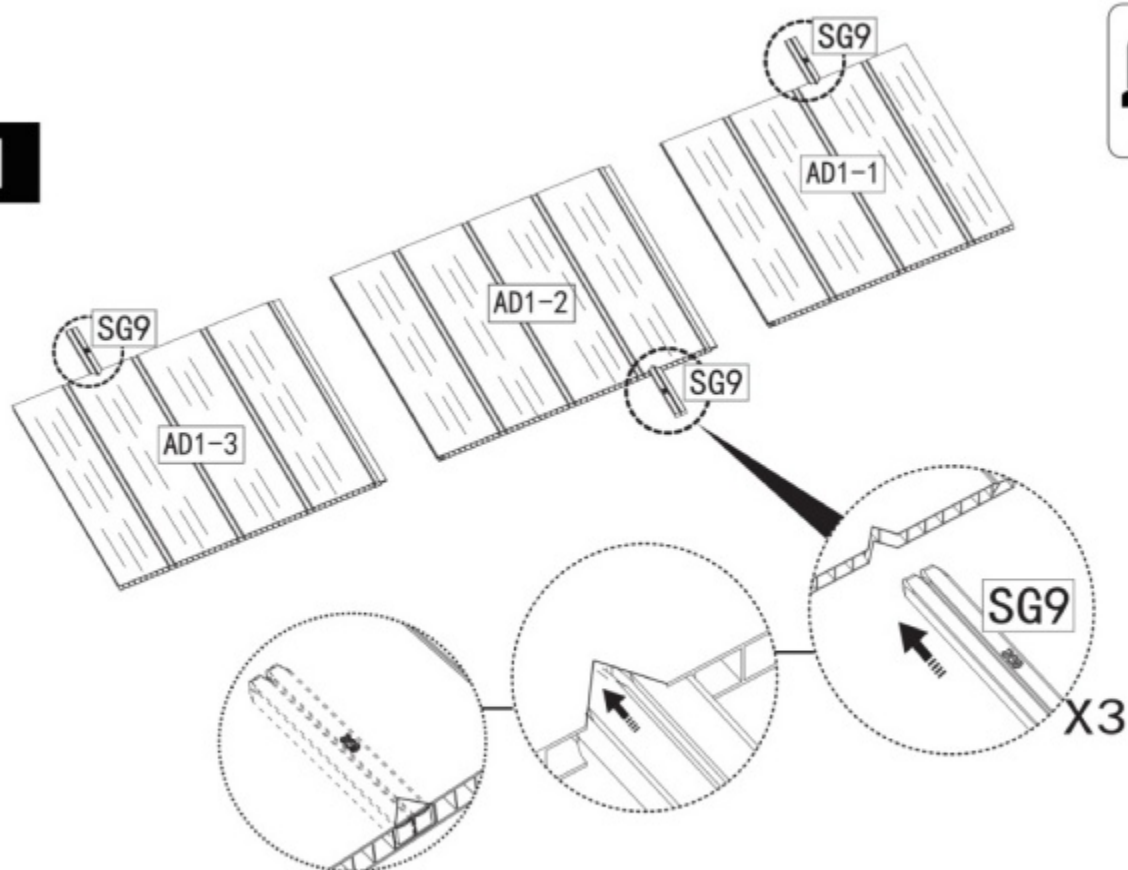



AD1-2
1 PC
AD1-3
1 PC
AD1-1
1 PC
SG9
3 PC

2


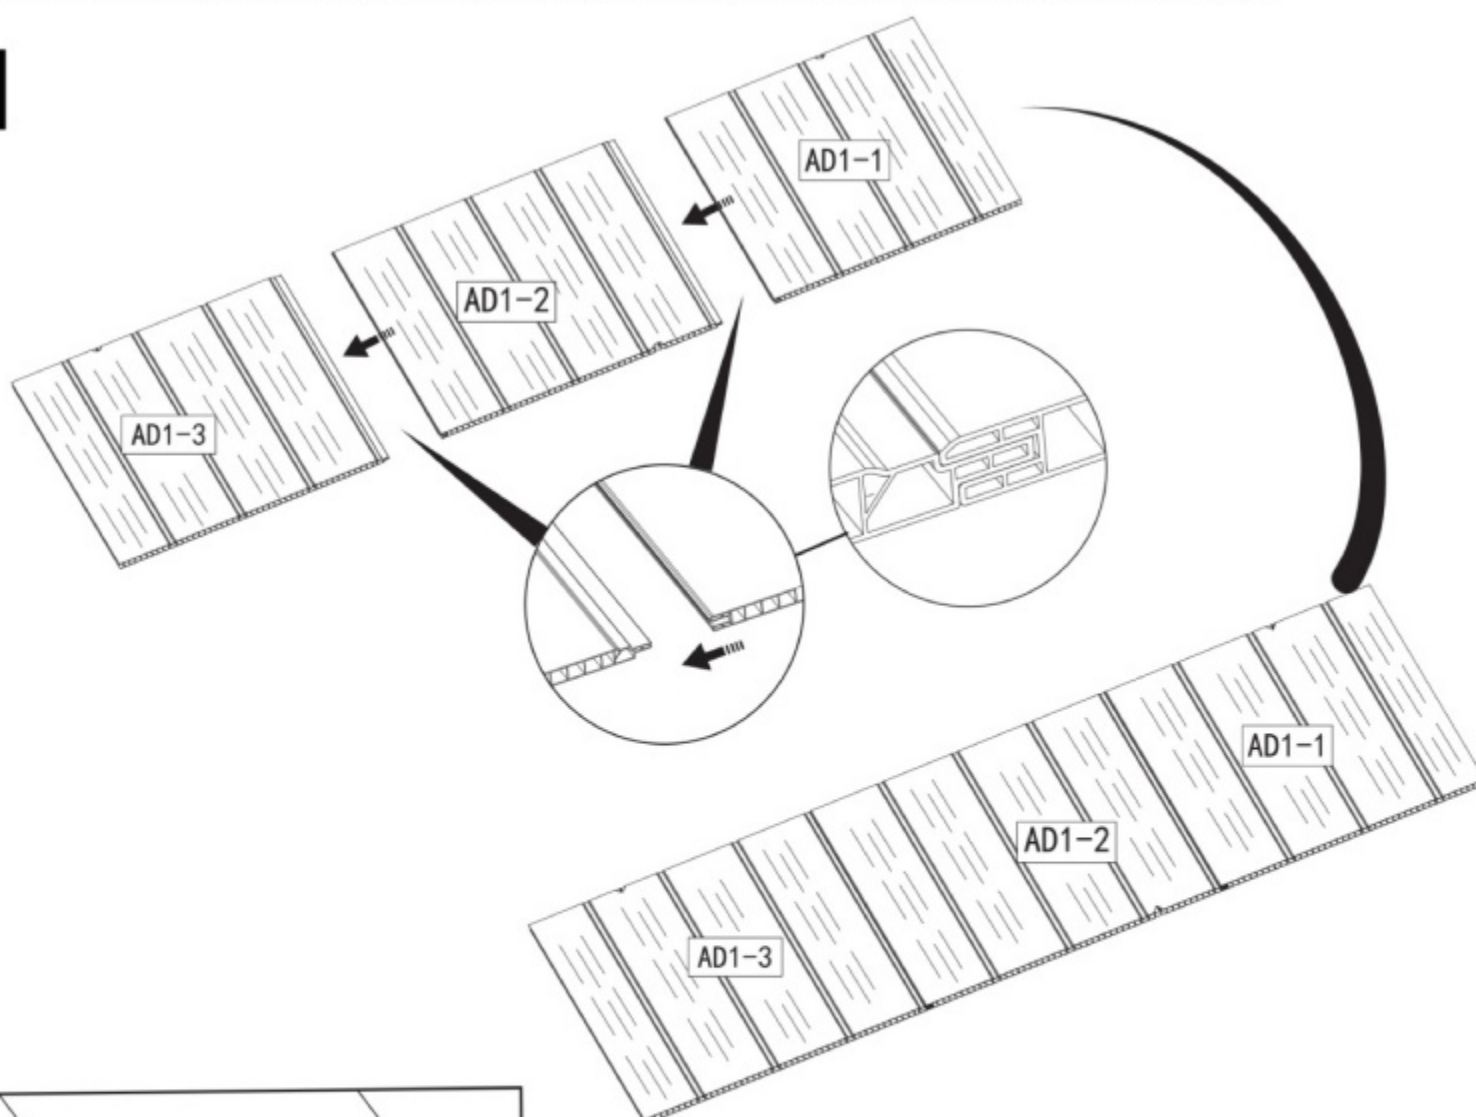


The boards must be straight

STEP 27

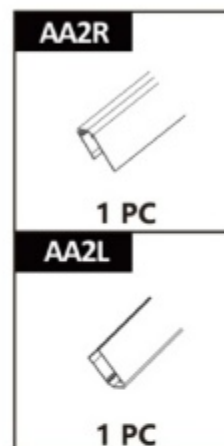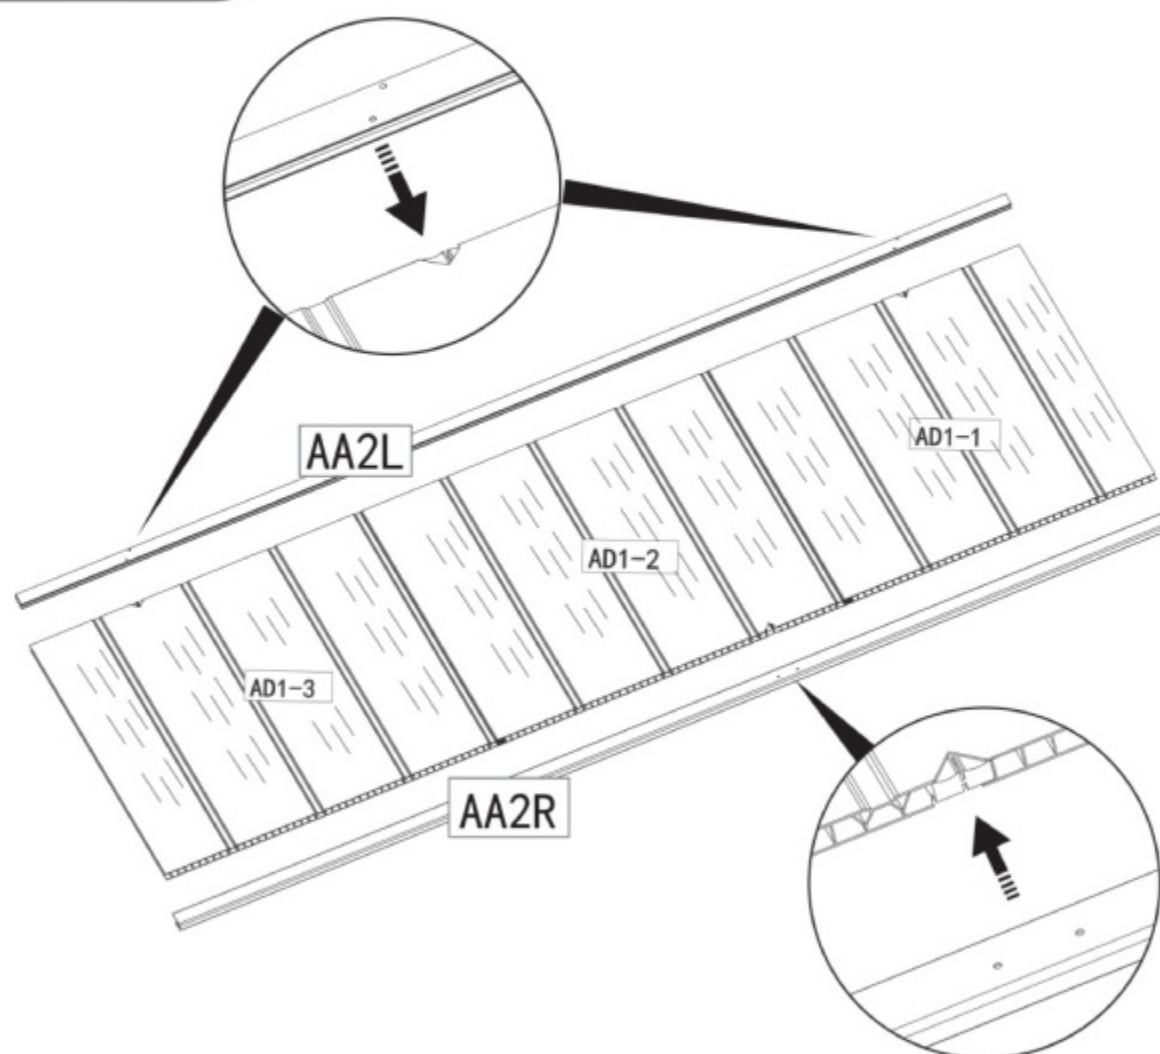


STEP 28

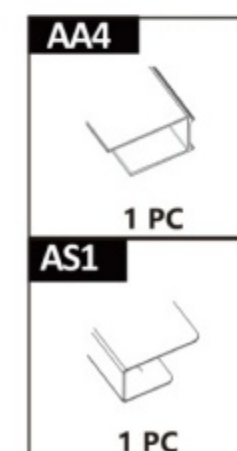
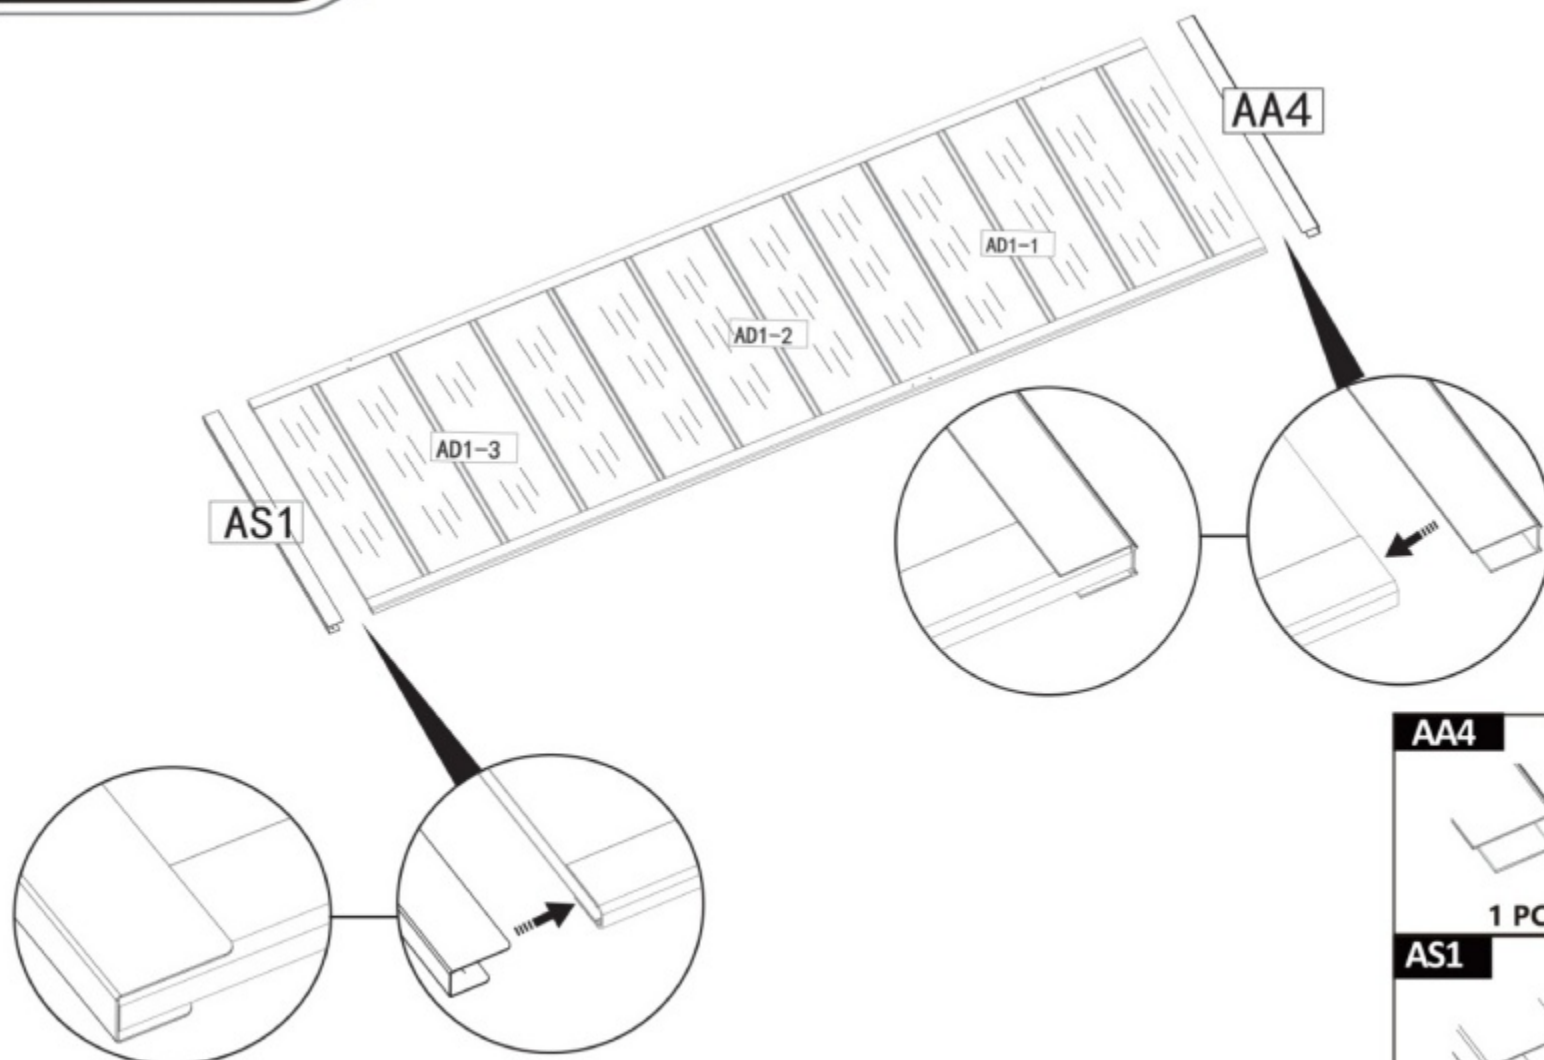


STEP 29


1

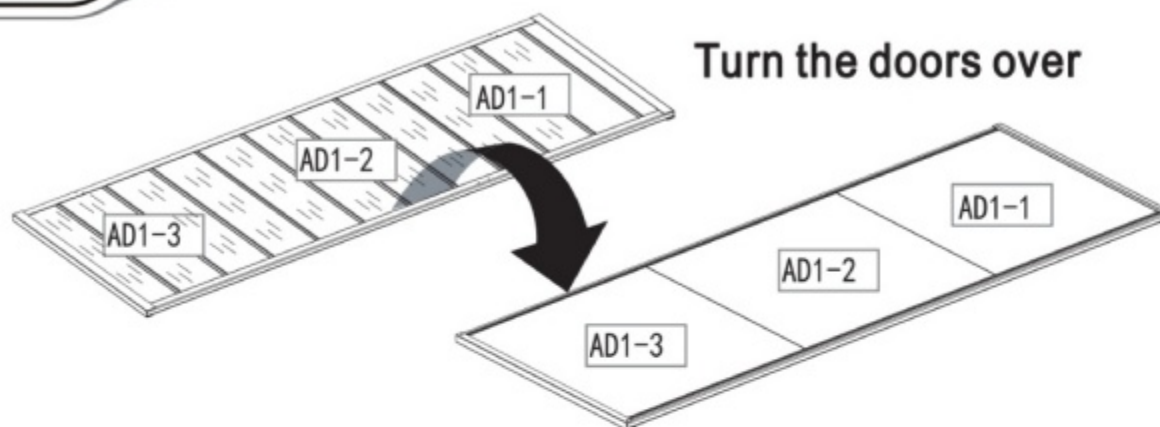


2

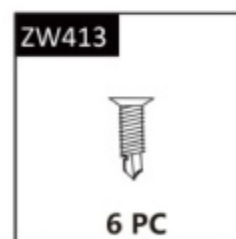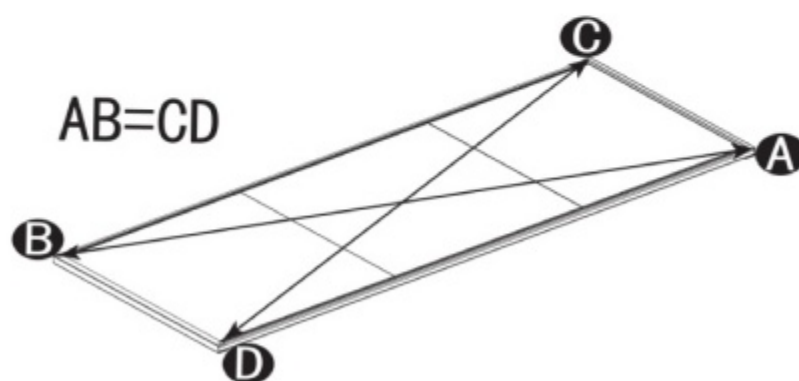

3

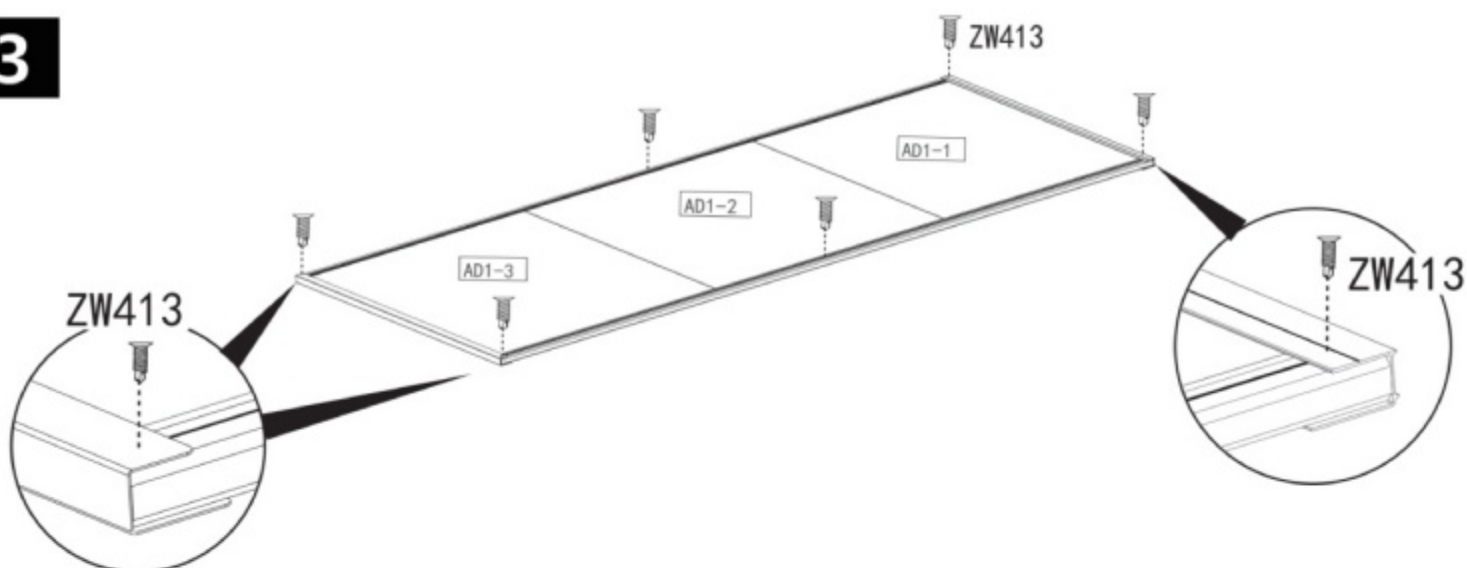


4

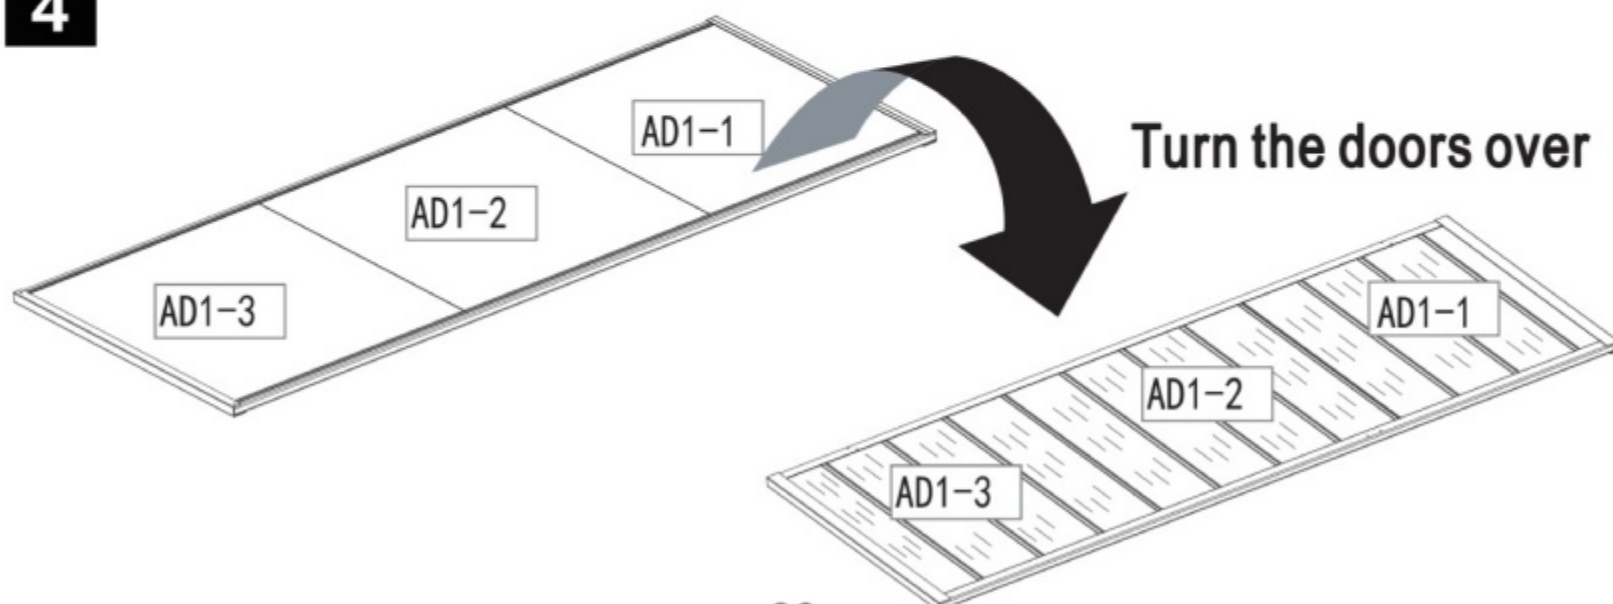

STEP 30

1

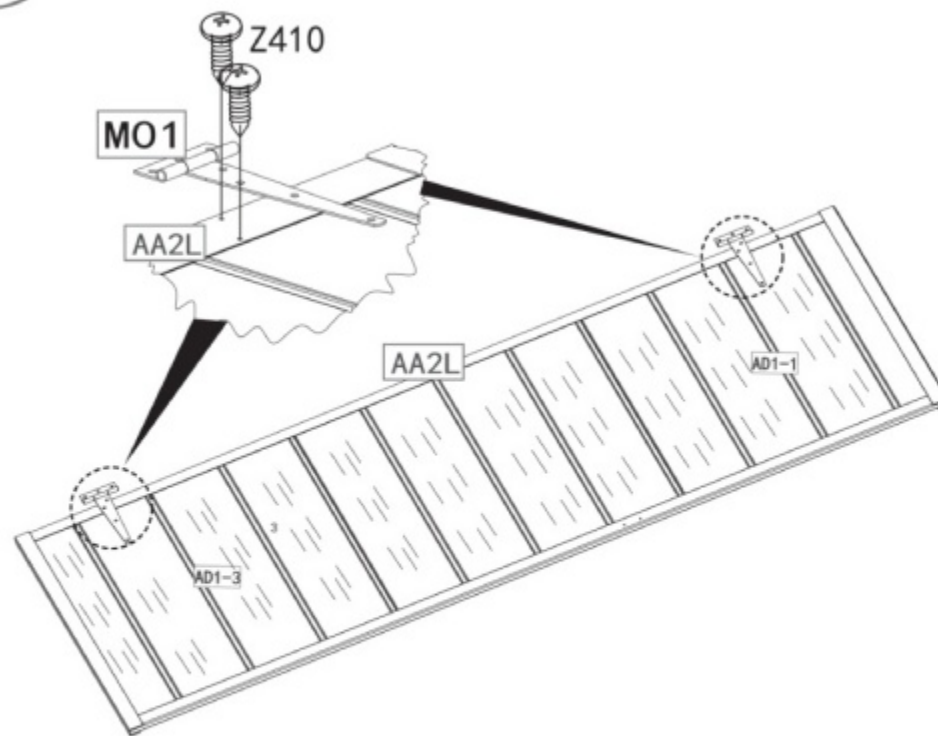

Z410




8 PC

MO1



2 PC

M03-6R







1 PC

M03-7




1 PC




2

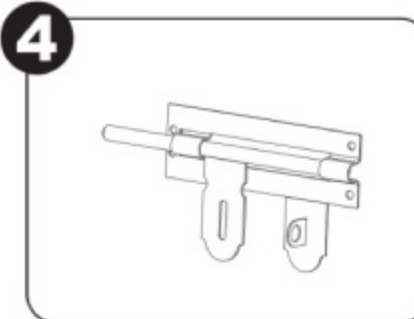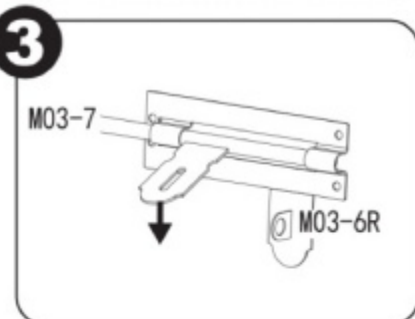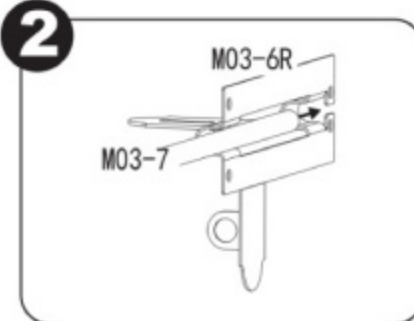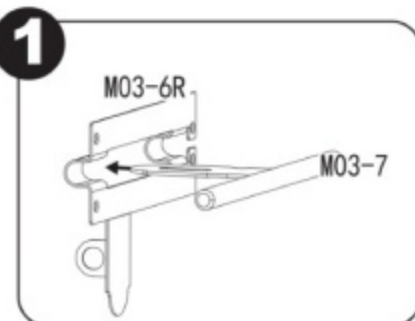

3

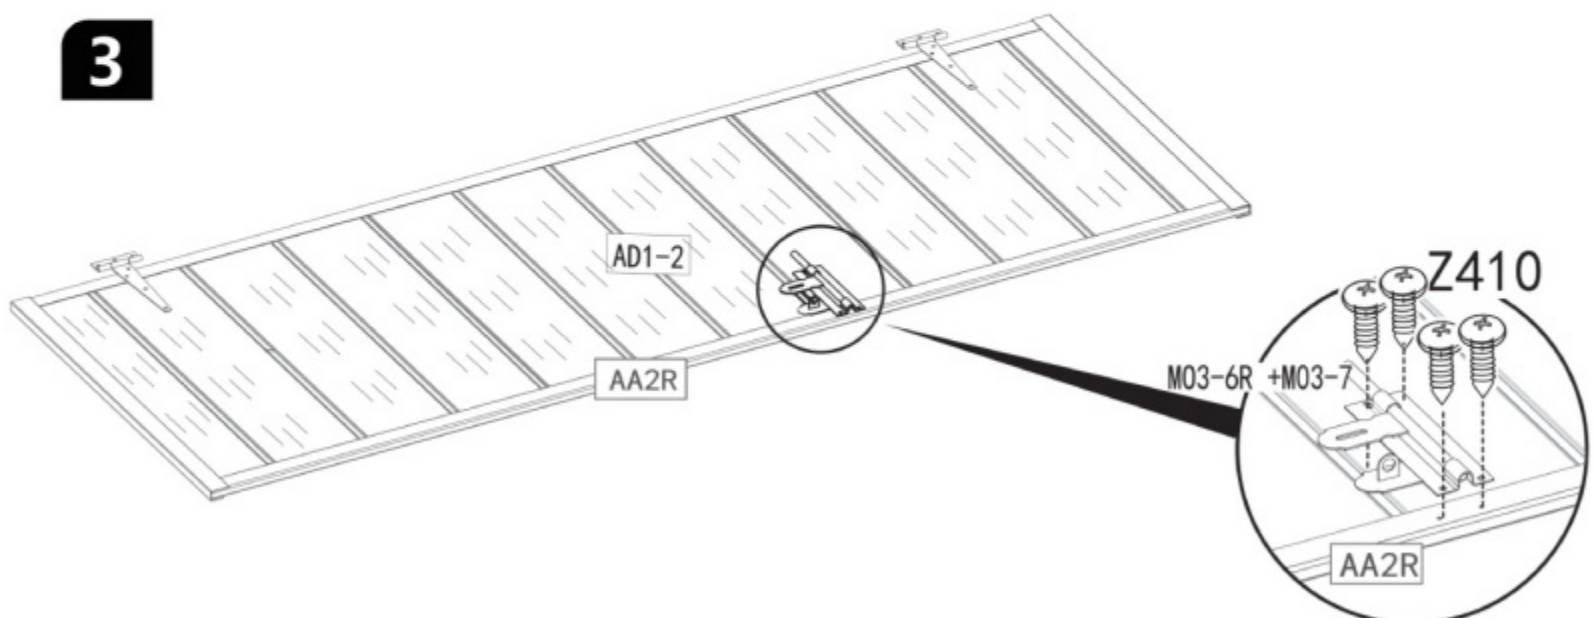

STEP 31

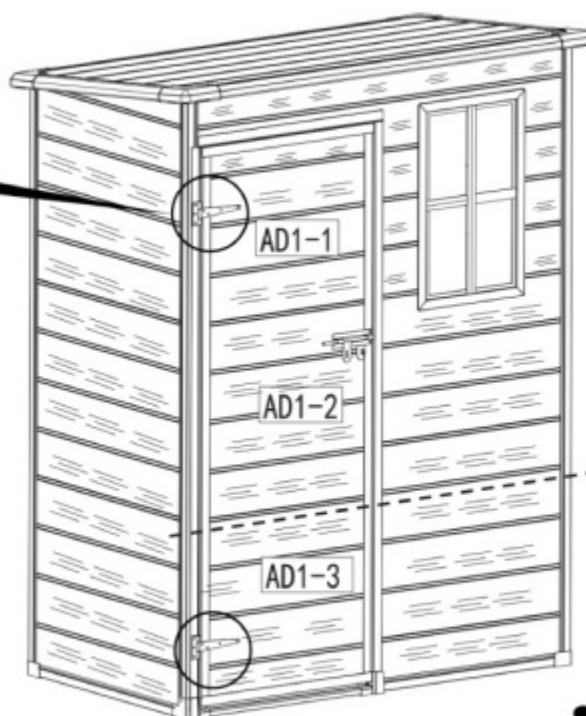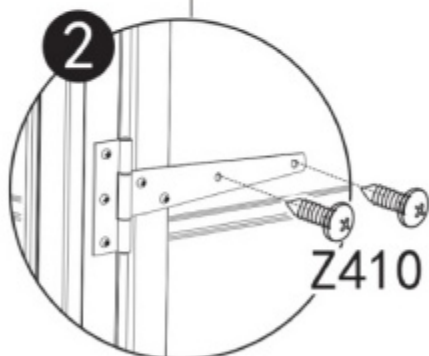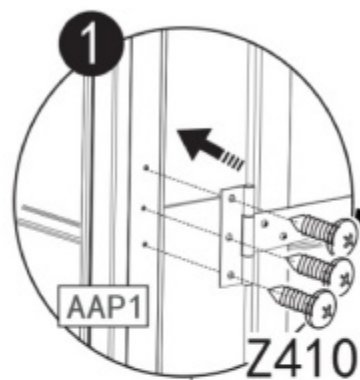

Z410




10 PC



● Grain of the door panels should align with that of the wall panels.

Nail the door after place adjustment and fasten all the screws.

STEP 32

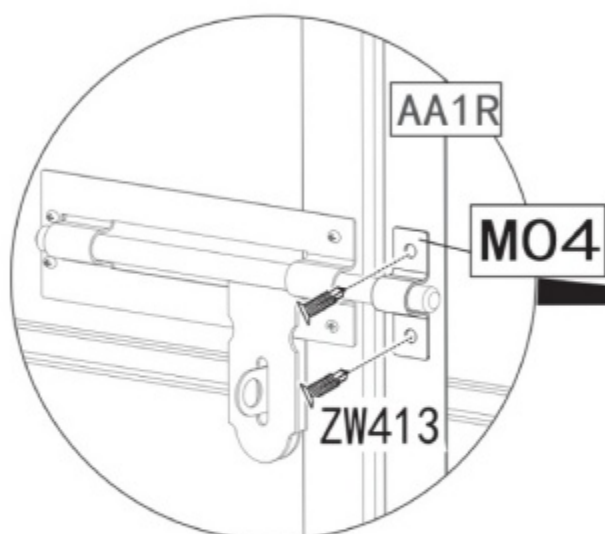

M04



1 PC

ZW413



2 PC

STEP 33

**The installation is complete.
Make sure all the screws are fully tighten.**



AFTER-SALE SERVICE CARD

If you have any suggestions for our products or find that the products have quality problems, please contact us first, our after-sales team will reply you within 24 hours, and we will do our best to give you solutions until you are satisfied.

Guaranteed Customer Service

Your shopping experience is very important to us!
Feel unsatisfied? **Contact us!**
Have any questions? **Contact us!**

Wanna share how wonderful our smart products makes your home?
Share your pictures with us.
Any suggestions? **Contact us!**
We gotcha back!

✉ Patiofurniture Serviceteam@outlook.com

