

INSTALLATION MANUAL


METAL FRAME MIRROR

CONTACT US


Thank you for shopping with us! We hope that our products have added a touch of brightness to your life. If you need any assistance, please don't hesitate to reach out. Our dedicated team is available 24/7 to ensure your satisfaction.

✉ BM@ZRSupport.com ☎ 1-888-204-3326 📱 ZRSupport

ACCESSORIES LIST

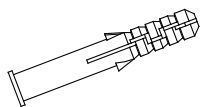


Wall Anchor-A

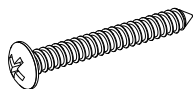


Short Screw

TOOLS REQUIRED

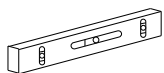

Level Ruler

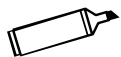


Marker




Hammer



Tape Measure

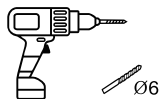

Electric Drill

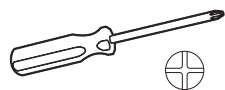


Phillips Screwdriver




Safety Goggles

INSTRUCTIONS

You can choose between a vertical or horizontal hanging orientation according to your preference.




vertical




horizontal

1. Confirm the distance between the centers of the two hanging holes and mark them on the wall (①). And use an electric drill to punch holes at mark spots and then apply wall anchors A with a hammer (②).

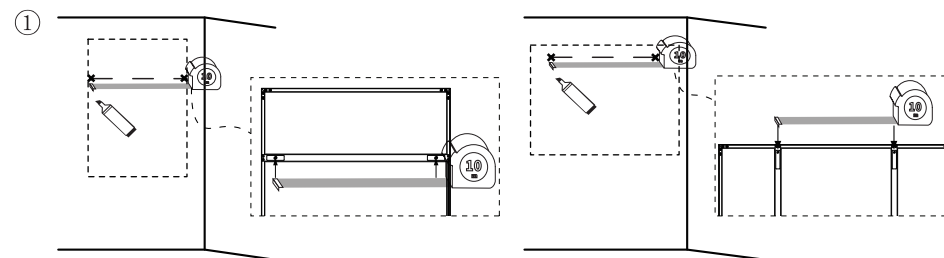

vertical

horizontal

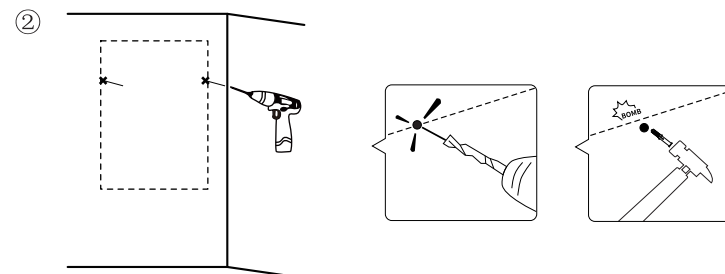

Thickness of Wall**Recommended Drill Bit**

> 16mm




1/4" (6mm) drill bit, drilling depth in 1 31/32" (50mm)

< 8mm

Unapplicable


Note: Please wear goggles and pay attention to safety.

2. Take the short screw and insert it into the wall - inserted rubber plug (the Wall-Anchor A). Make sure to leave a 7 - 14mm gap between the end of the screw and the wall surface. This will provide enough space for hanging the mirror securely.

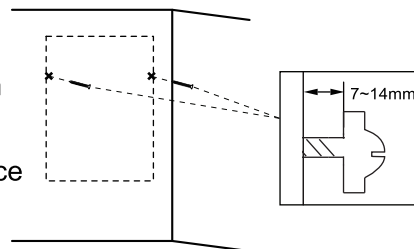


3. First, use your fingers to locate the center point of the hanging hole, align the center point with the screw, and slowly adjust it. After attaching one side, attach it to the other side to ensure that the mirror is inserted into the correct position and securely fastened hang it up.

Note: Suggest installing with two or more people.

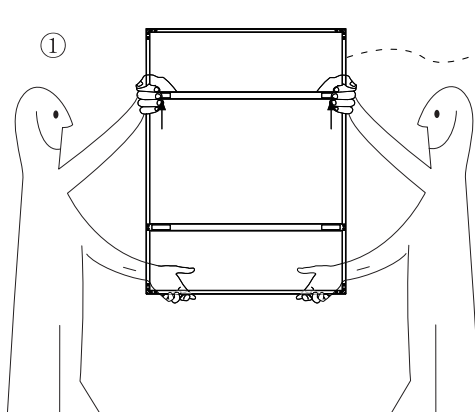

Two people install
please have one person hold one side

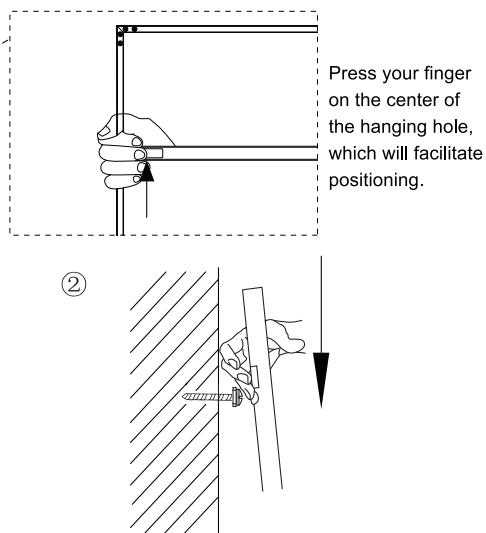

Press your finger
on the center of
the hanging hole,
which will facilitate
positioning.