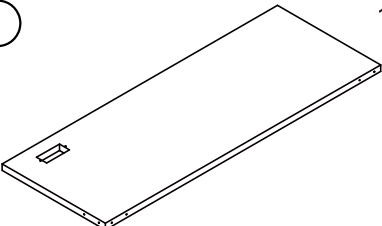
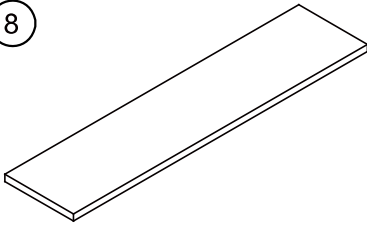
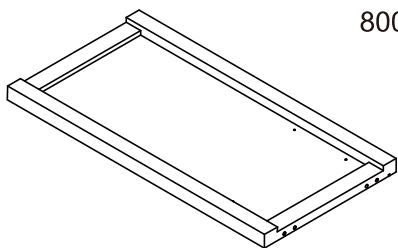
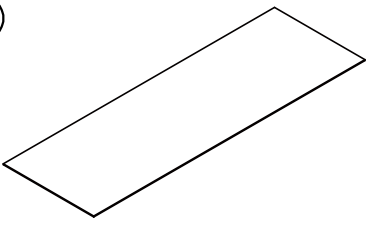
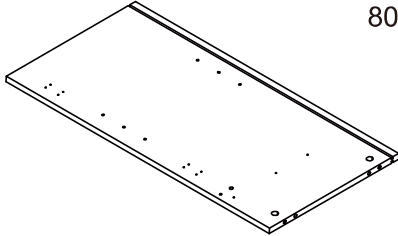
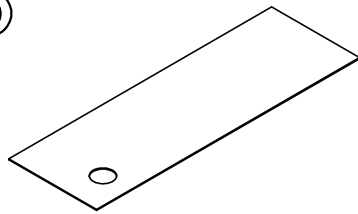
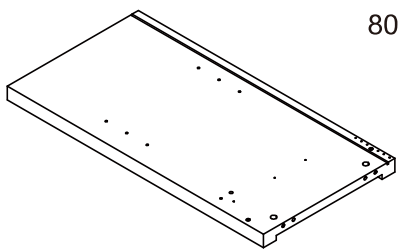
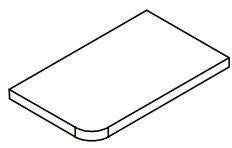
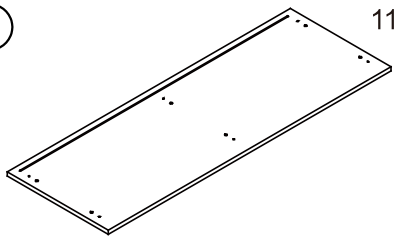
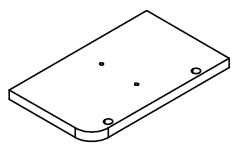
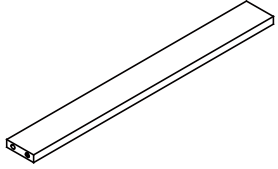
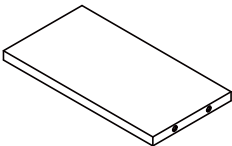
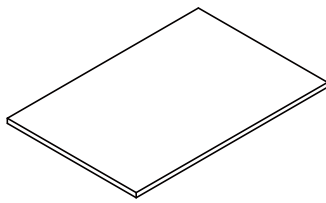
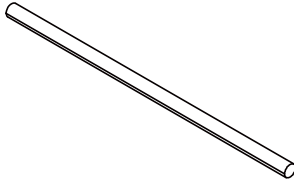
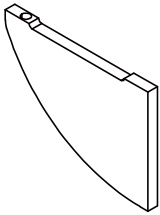
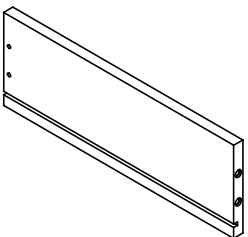
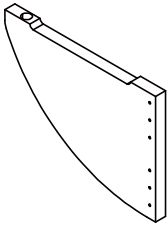
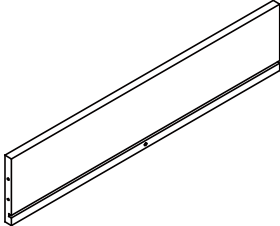
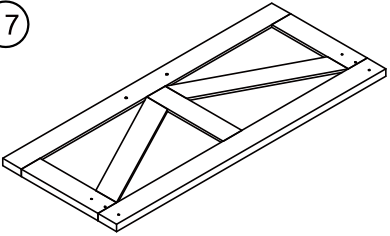
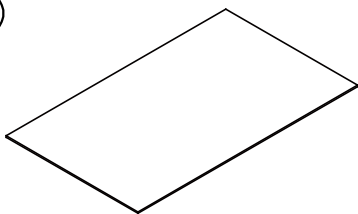
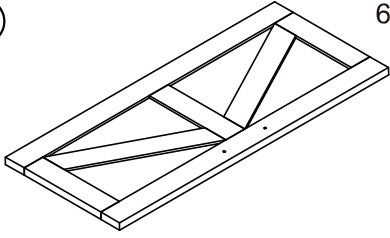
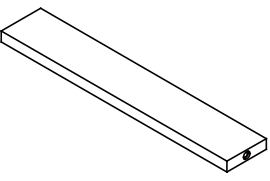
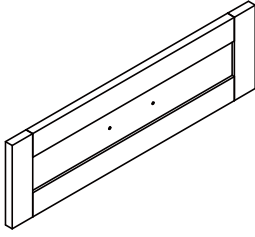
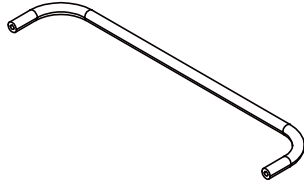
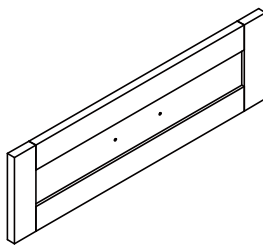
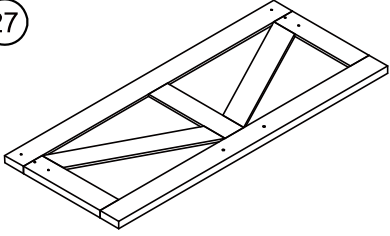
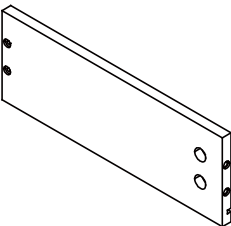
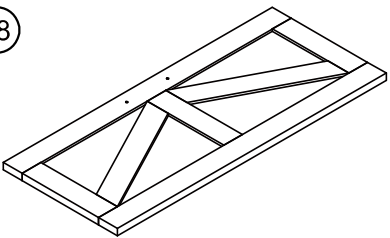


Assembly Instructions


①  1200 x 450 x 25 mm 1	⑧  1200 x 280 x 25 mm 1
②  800 x 410 x 37 mm 1	⑨  815 x 272 x 3 mm 3
③  800 x 393 x 15 mm 1	⑩  815 x 272 x 3 mm 1
④  800 x 410 x 37 mm 1	⑪  250 x 150 x 15 mm 1
⑤  1160 x 415 x 15 mm 1	⑫  250 x 150 x 15 mm 1
⑥  535 x 60 x 15 mm 2	⑬  292 x 148 x 15 mm 1
⑦  534 x 360 x 12 mm 2	⑭  310 x 18 x 18 mm 2

Assembly Instructions


15  180 x 135 x 18 mm 1	22  300 x 115 x 12 mm 2
16  180 x 135 x 18 mm 1	23  486 x 115 x 12 mm 2
17  634 x 268 x 15 mm 1	24  594 x 295 x 3 mm 2
18  634 x 268 x 15 mm 1	25  287 x 50 x 12 mm 2
19  539 x 160 x 15 mm 1	26  388 x 80 x 13 mm 1
20  539 x 160 x 15 mm 1	27  634 x 268 x 15 mm 1
21  300 x 115 x 12 mm 2	28  634 x 268 x 15 mm 1

Assembly Instructions

Step 1

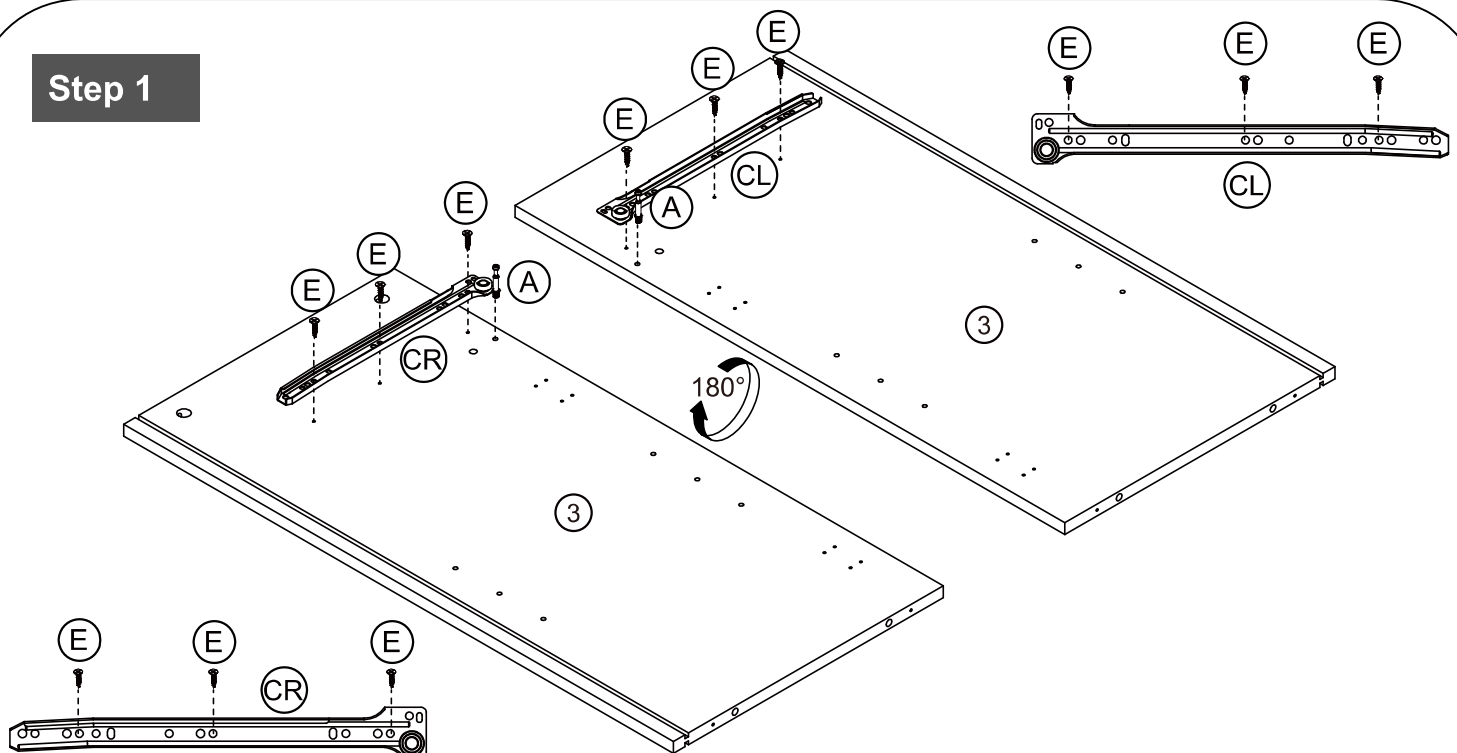

(A)



Cam Bolt x 2

(E)




3*12mm Screw x 6

(CL)




Runner 300mm x 1

(CR)




Runner 300mm x 1

Step 2

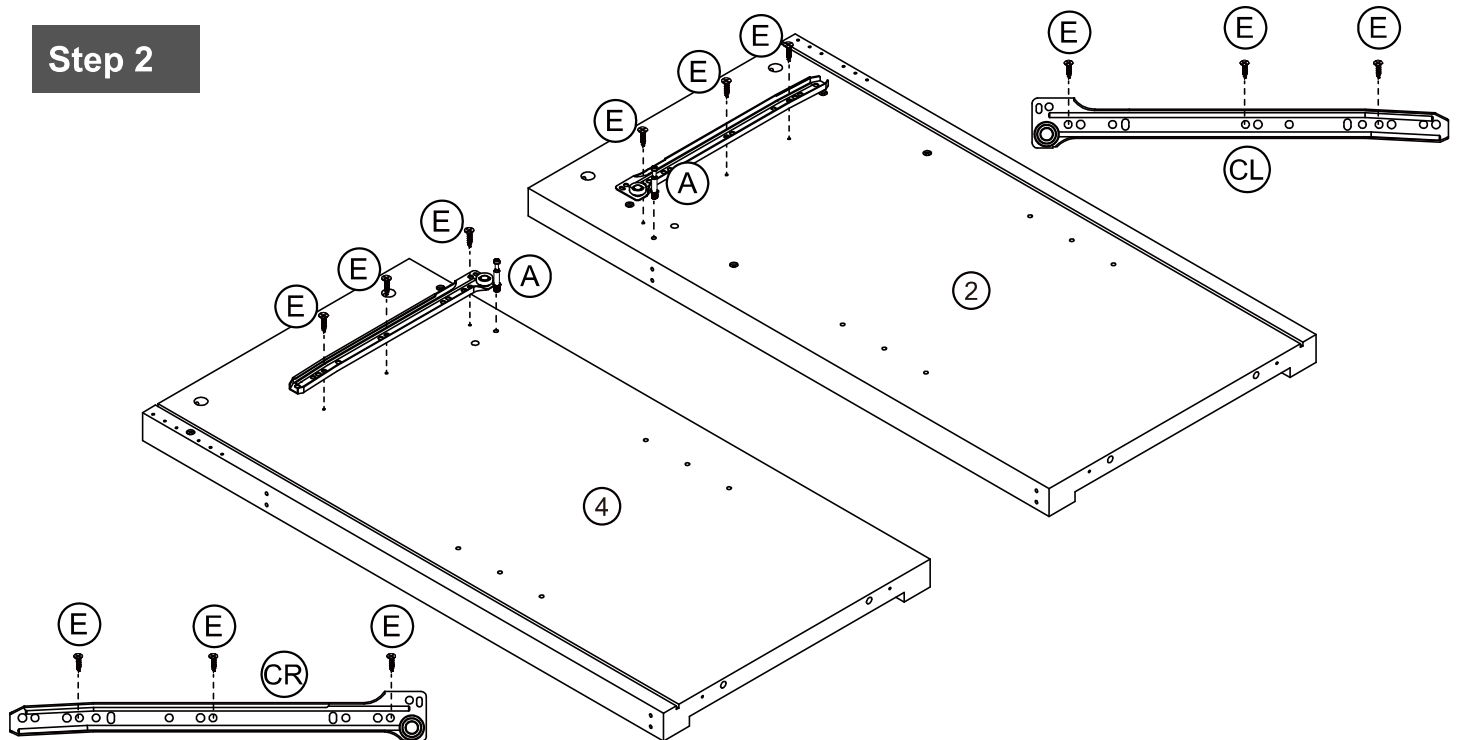

(A)



Cam Bolt x 2

(E)




3*12mm Screw x 6

(CL)



Runner 300mm x 1


(CR)




Runner 300mm x 1

Assembly Instructions

Step 3

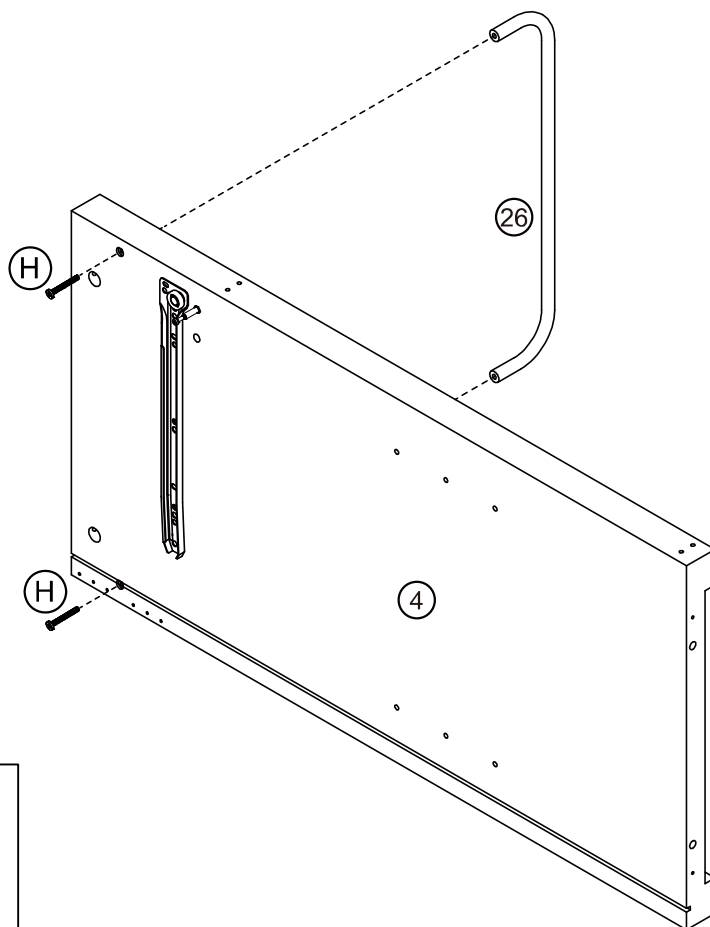


(H)




6*50mm Screw x 2

Step 4

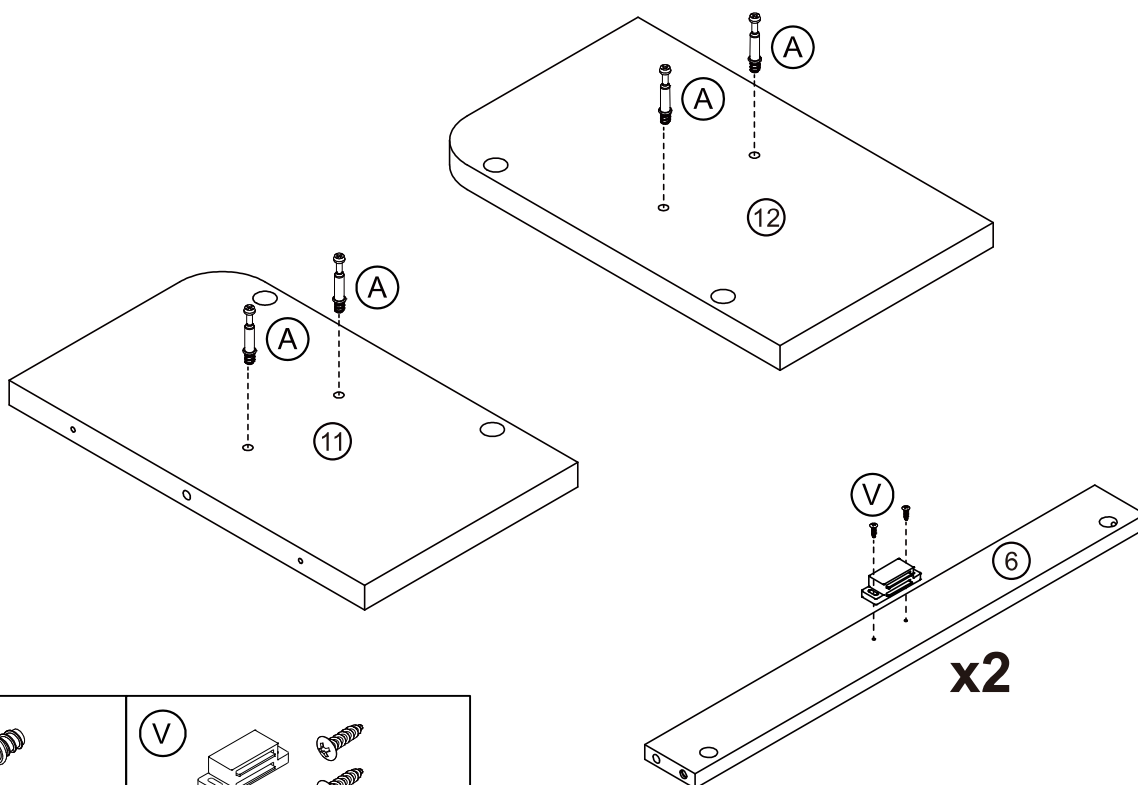


(A)



Cam Bolt x 4


(V)



Magnetic impact x 2

Assembly Instructions

Step 5

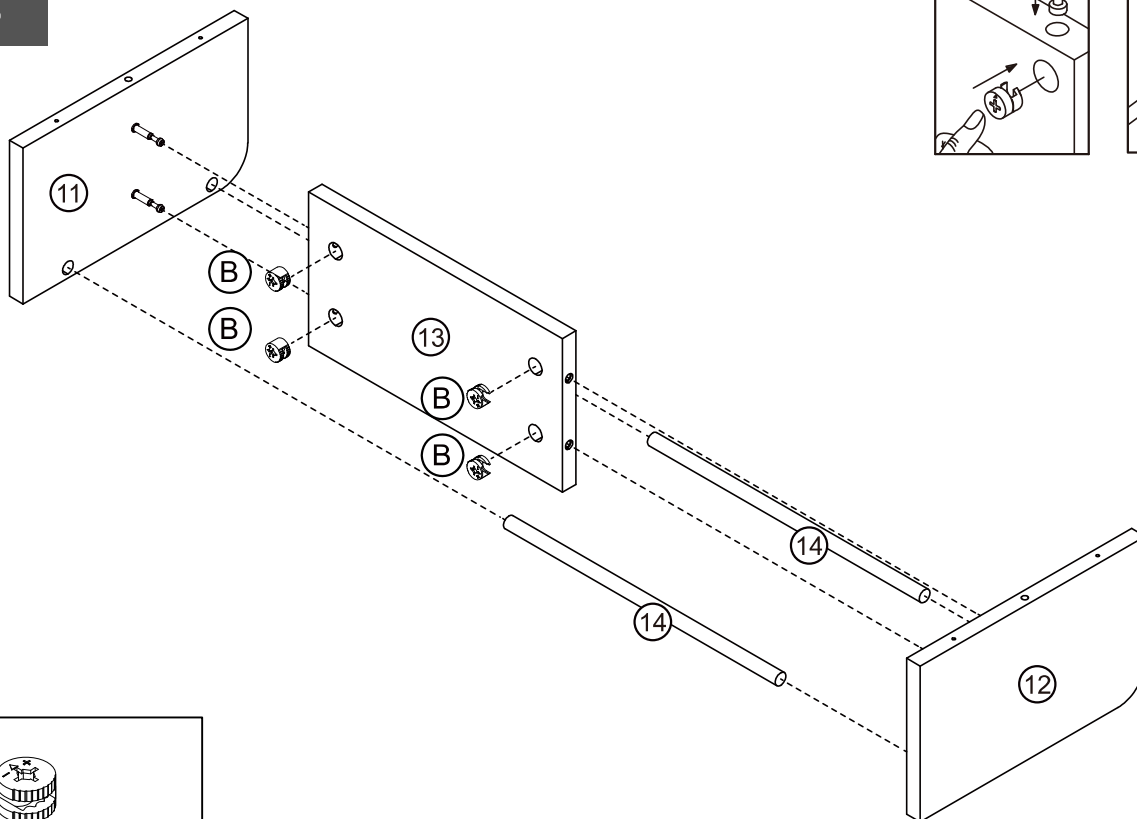


(B)



Cam lock x 4

Step 6

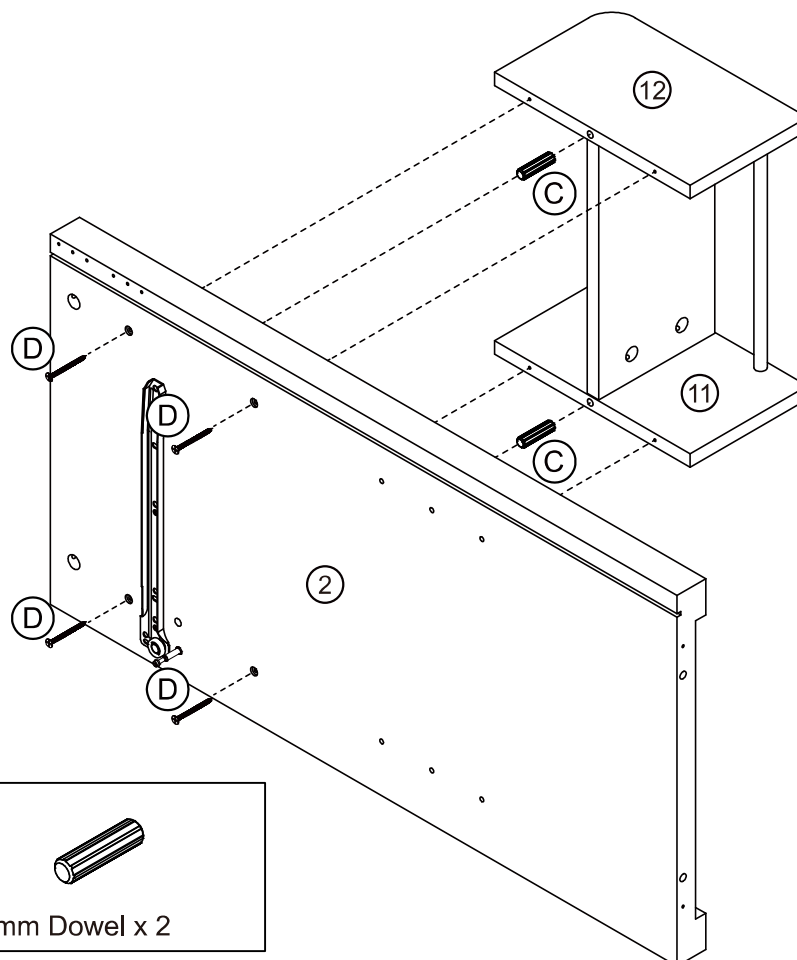

(D)




4*35mm Screw x 4

(C)




6*30mm Dowel x 2

Step 7

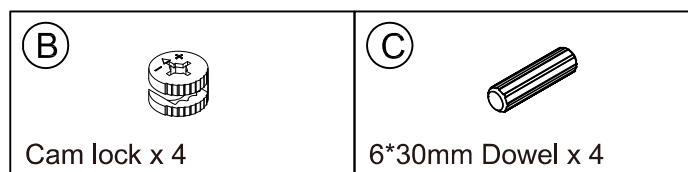


Step 8

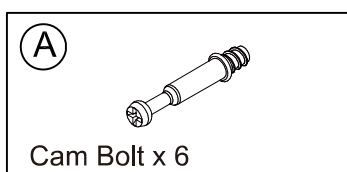

Assembly Instructions

Step 9

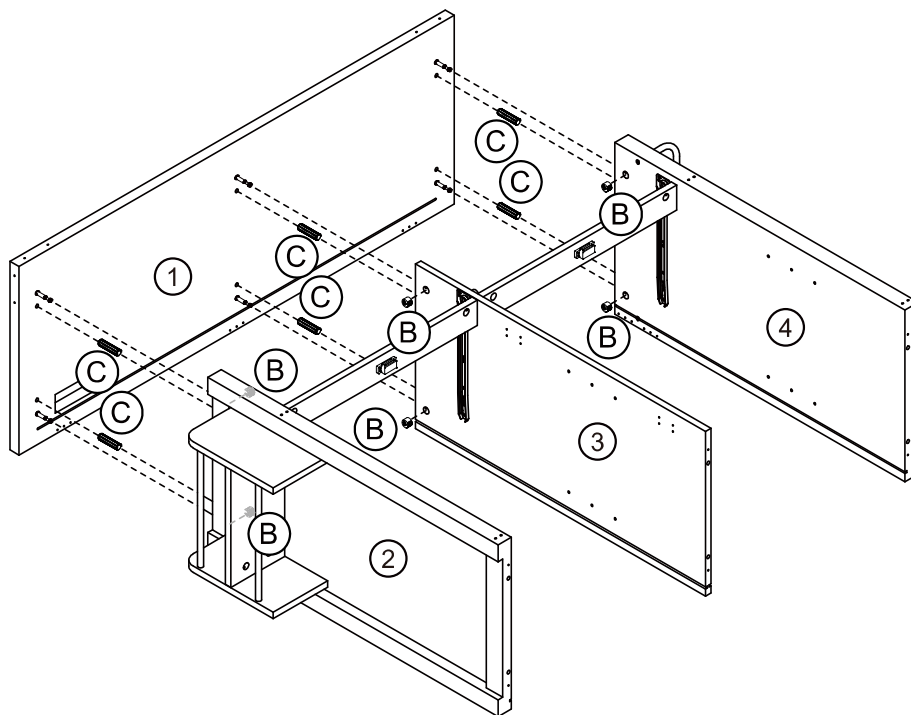

(B)





Cam lock x 6

(C)




6*30mm Dowel x 6

Step 10

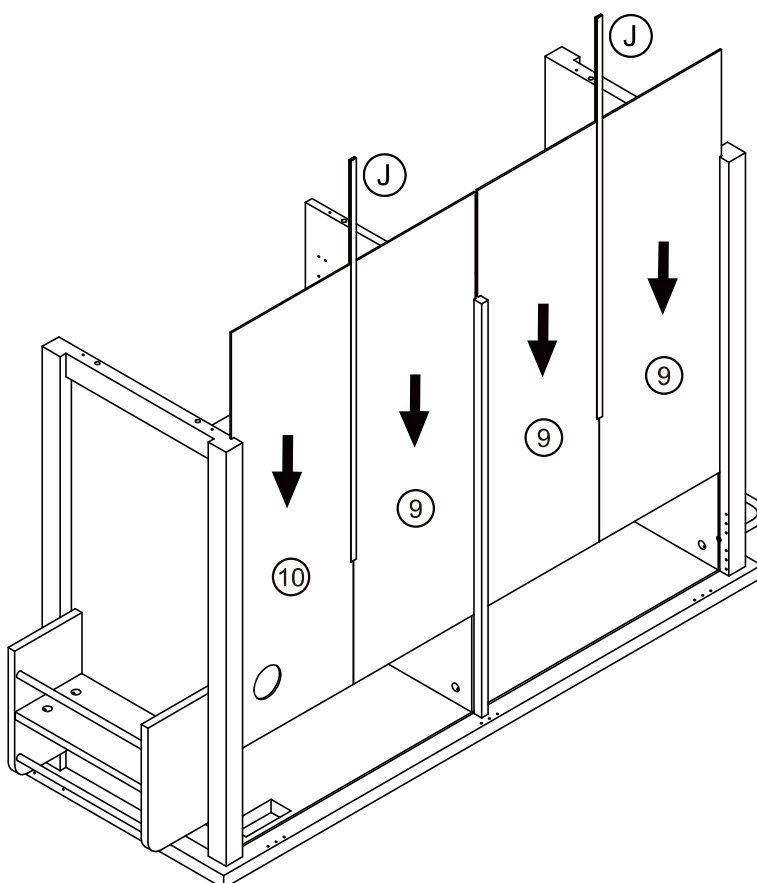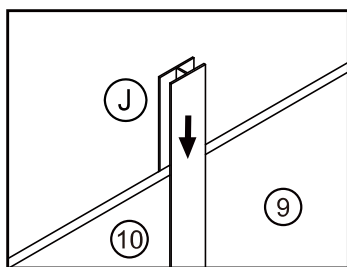


(J)

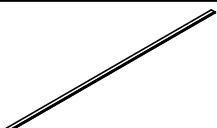

Tergite x 2

Assembly Instructions

Step 11

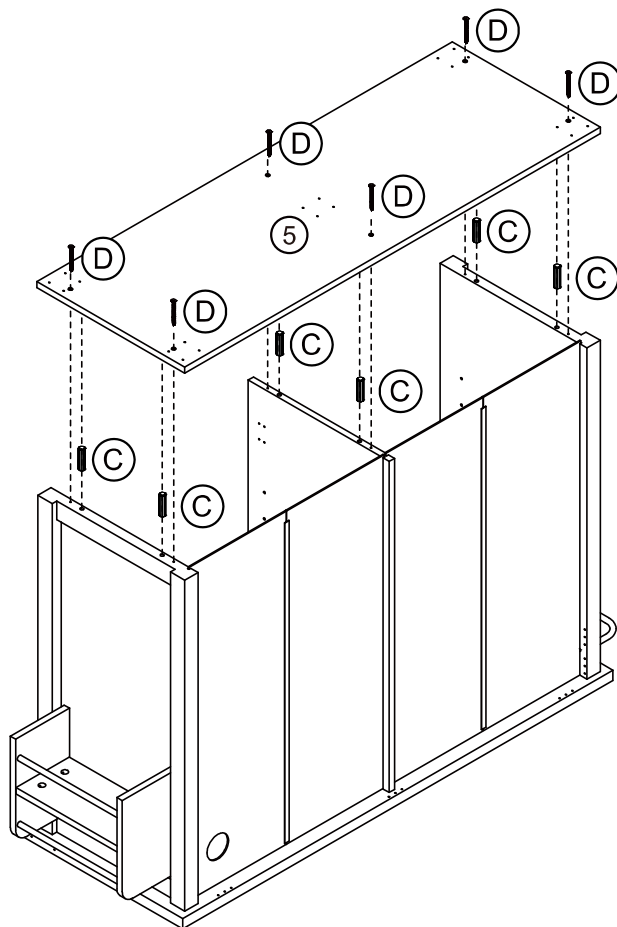

(C)





6*30mm Dowel x 6

(D)



4*35mm Screw x 6

Step 12

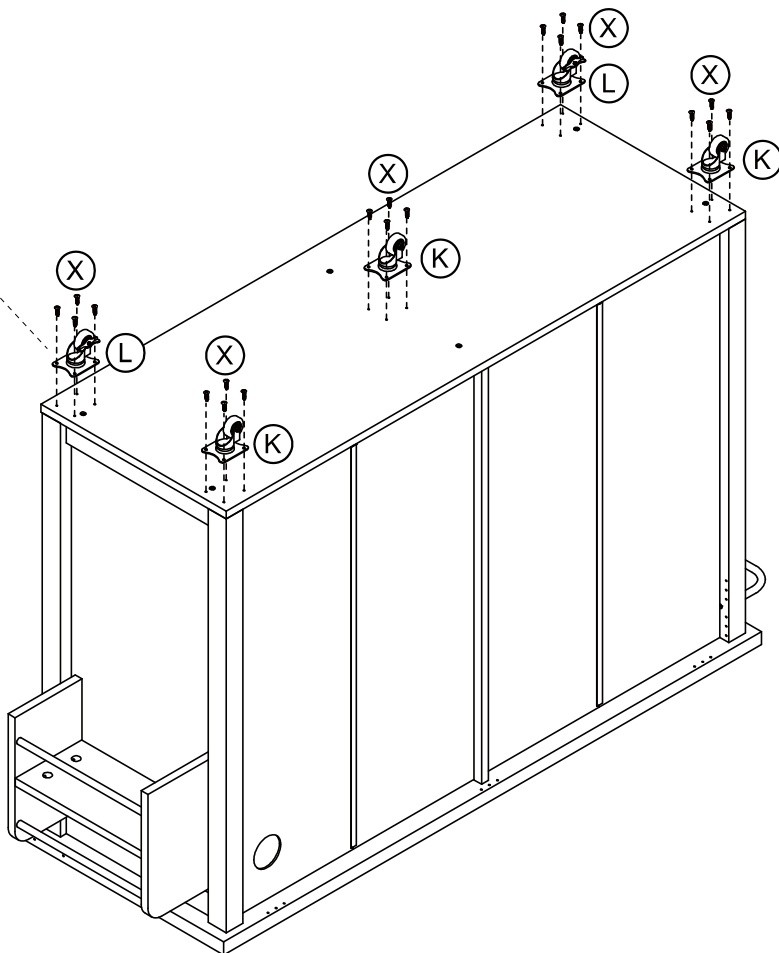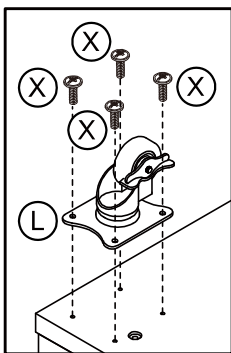


(X)




6*14mm Screw x 20

(L)



Locking caster x 2


(K)



Caster x 3

Assembly Instructions

Step 13

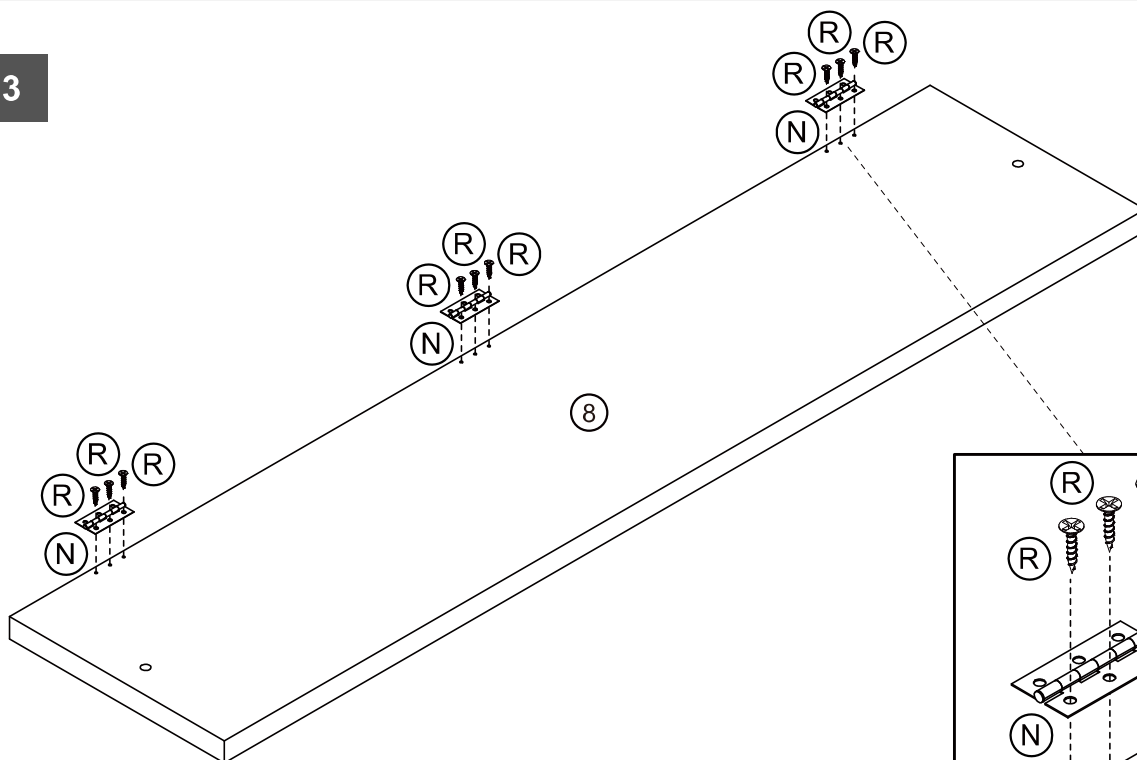


(R)




3.5*12mm Screw x 9

(N)



hinge x 3

Step 14

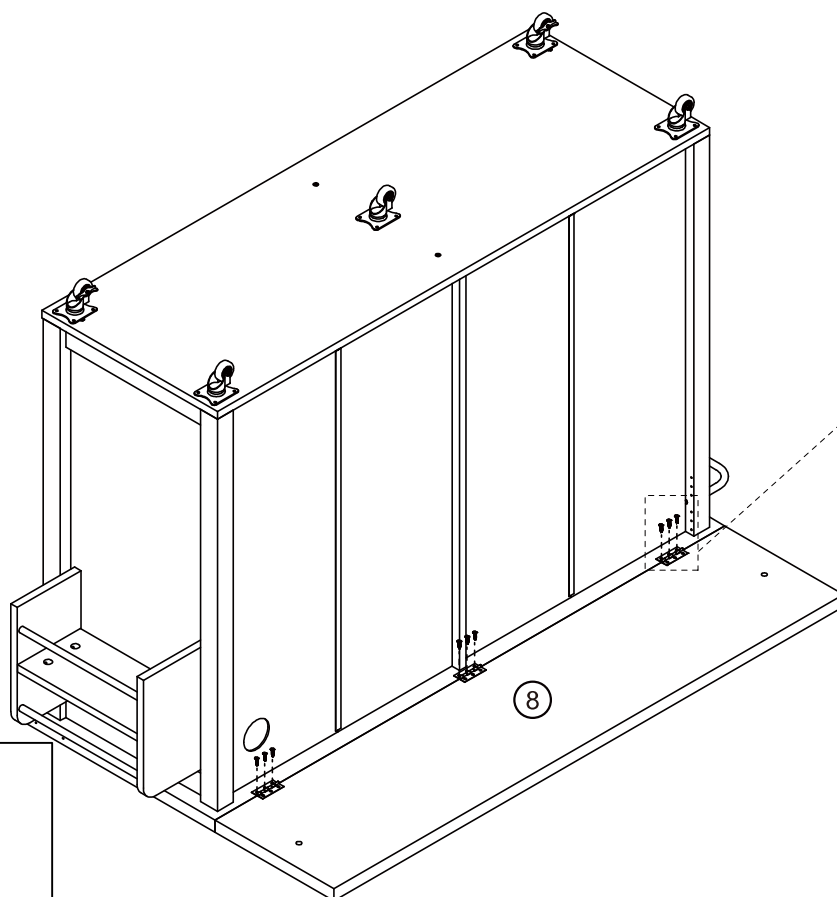


(R)



3.5*12mm Screw x 9

Assembly Instructions

Step 15

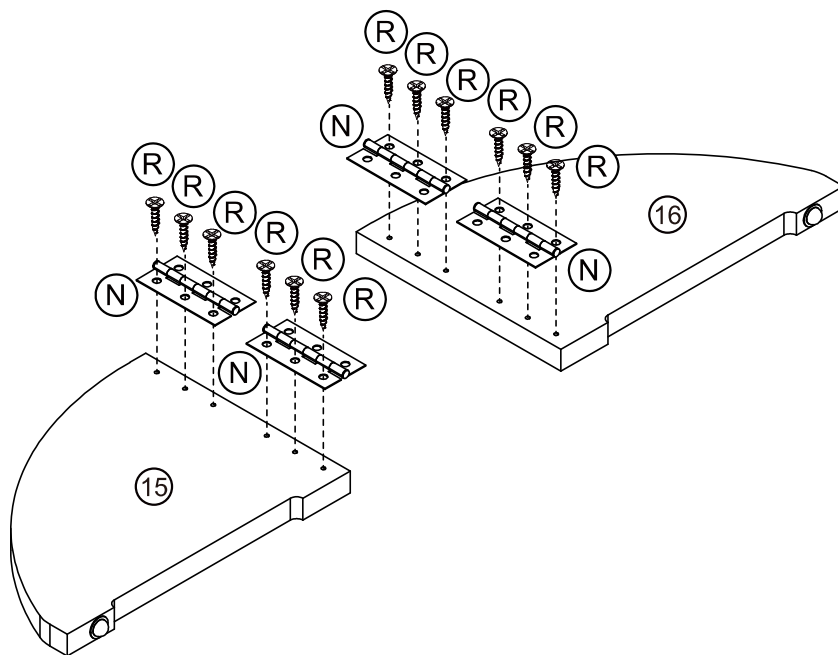


(R)





3.5*12mm Screw x 12

(N)



hinge x 4

Step 16

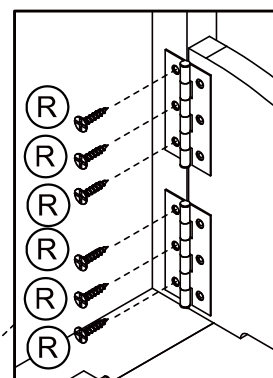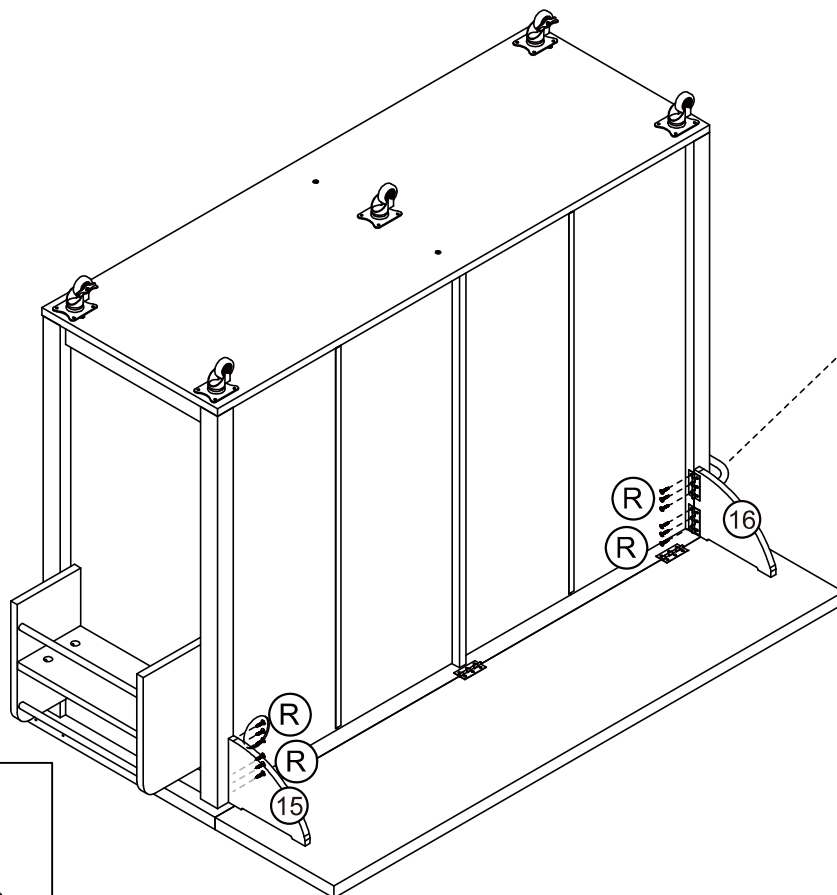




(R)



3.5*12mm Screw x 12



Assembly Instructions

Step 17

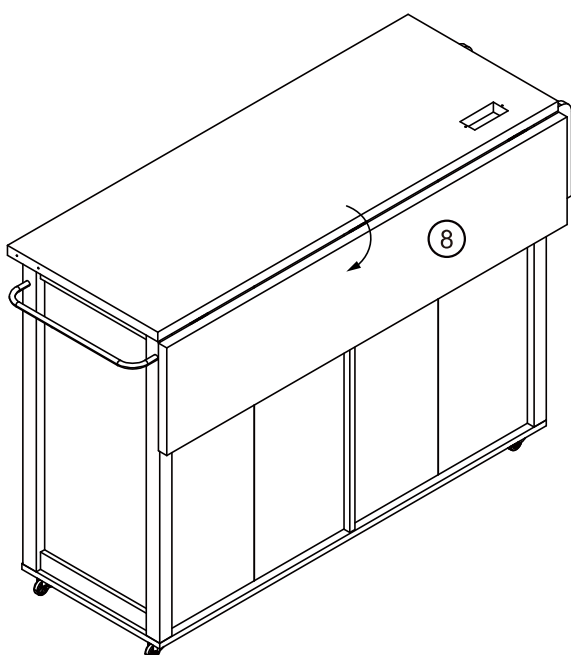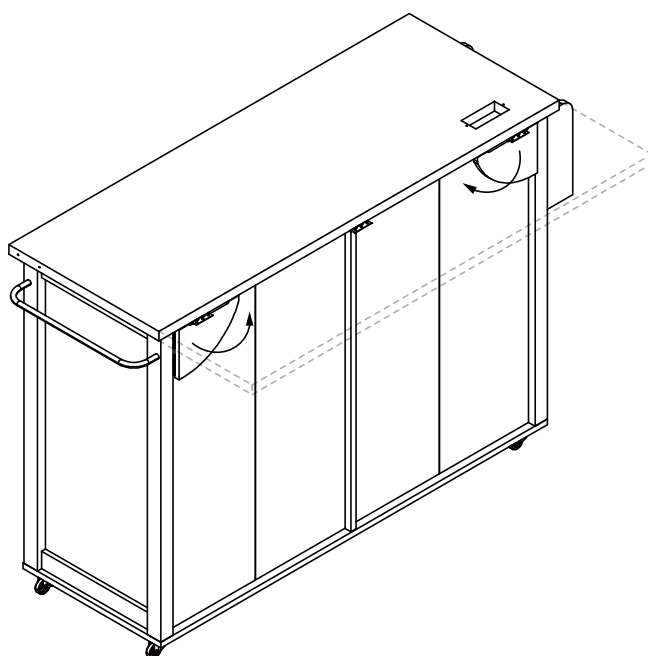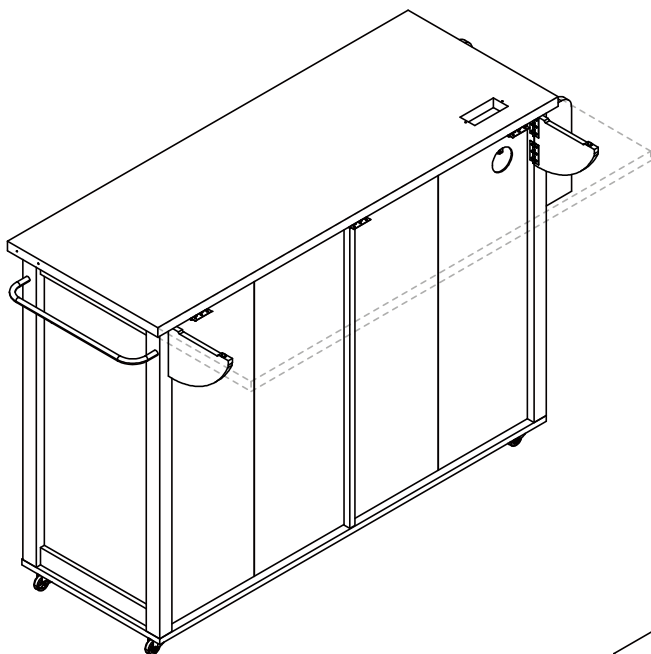


Assembly Instructions

Step 18

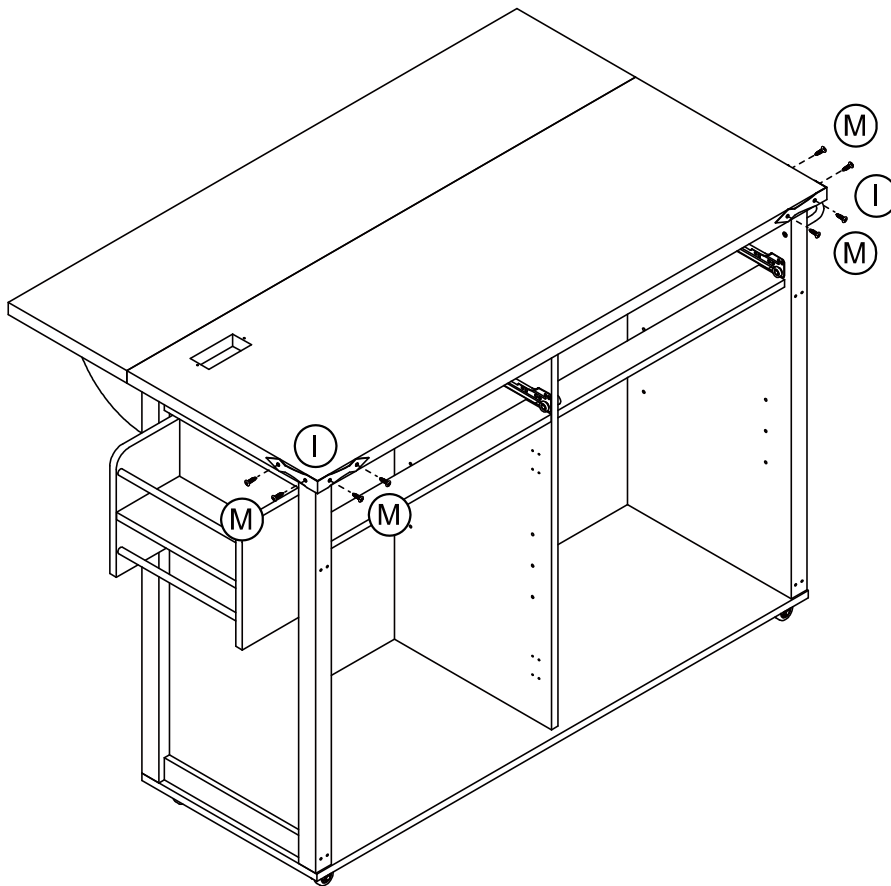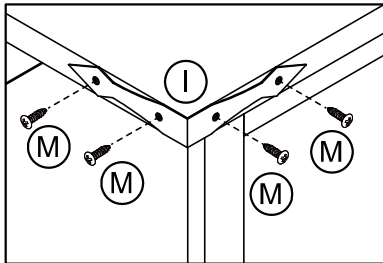

I




100*100*22mm x 2

M



4*14mm Screw x 8

Step 19

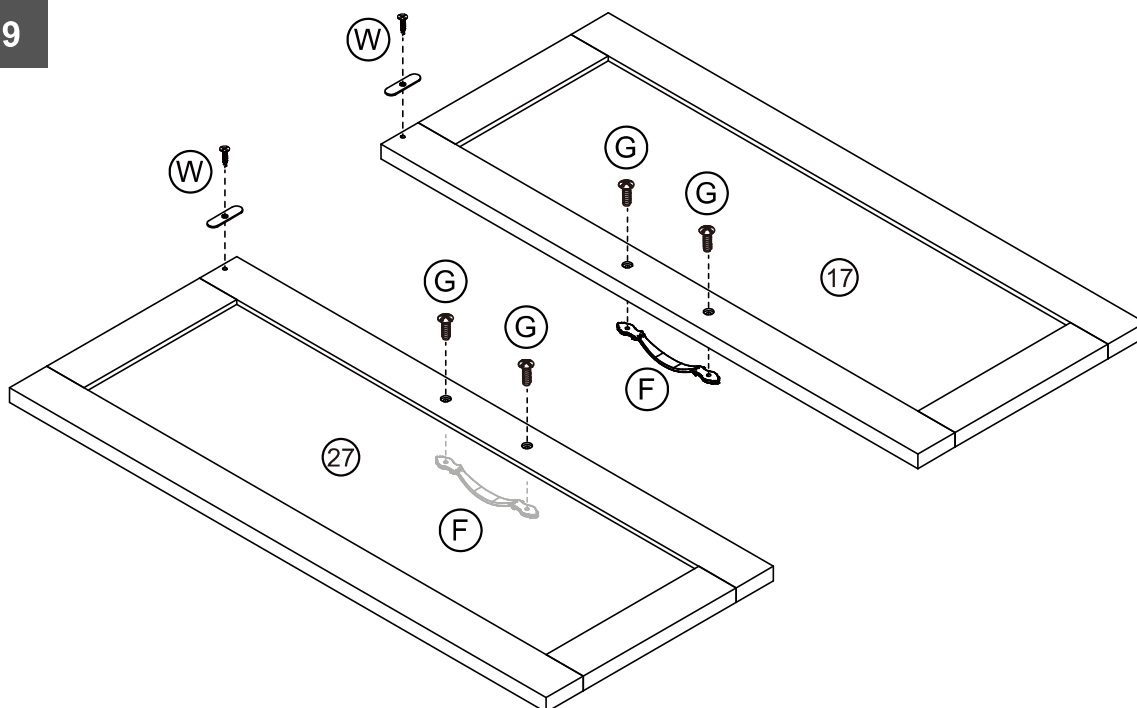

F



Hold hands x 2

G



4*18mm Screw x 4


W



Suction sheet x 2

Assembly Instructions

Step 20

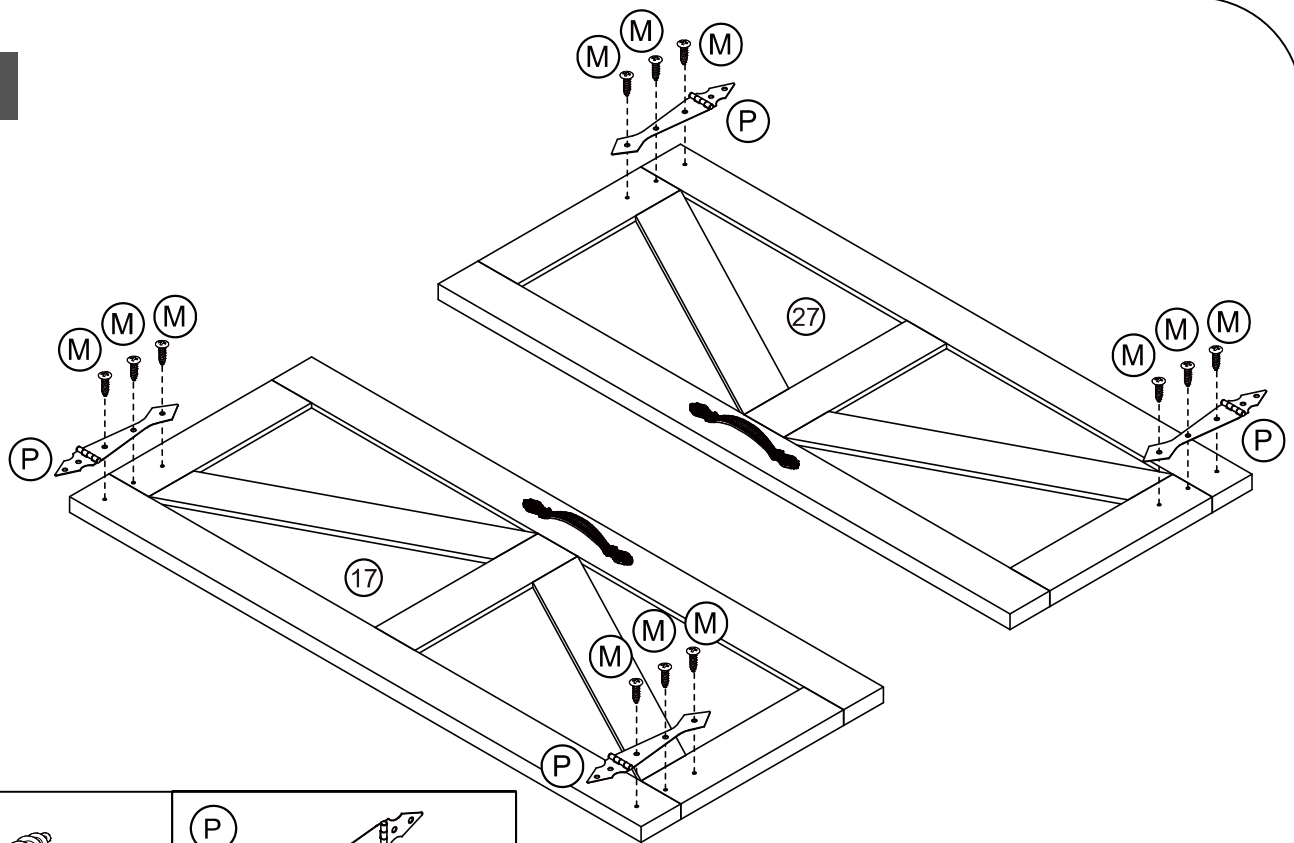


(M)




4*14mm Screw x 12

(P)




hinge x 4

Step 21

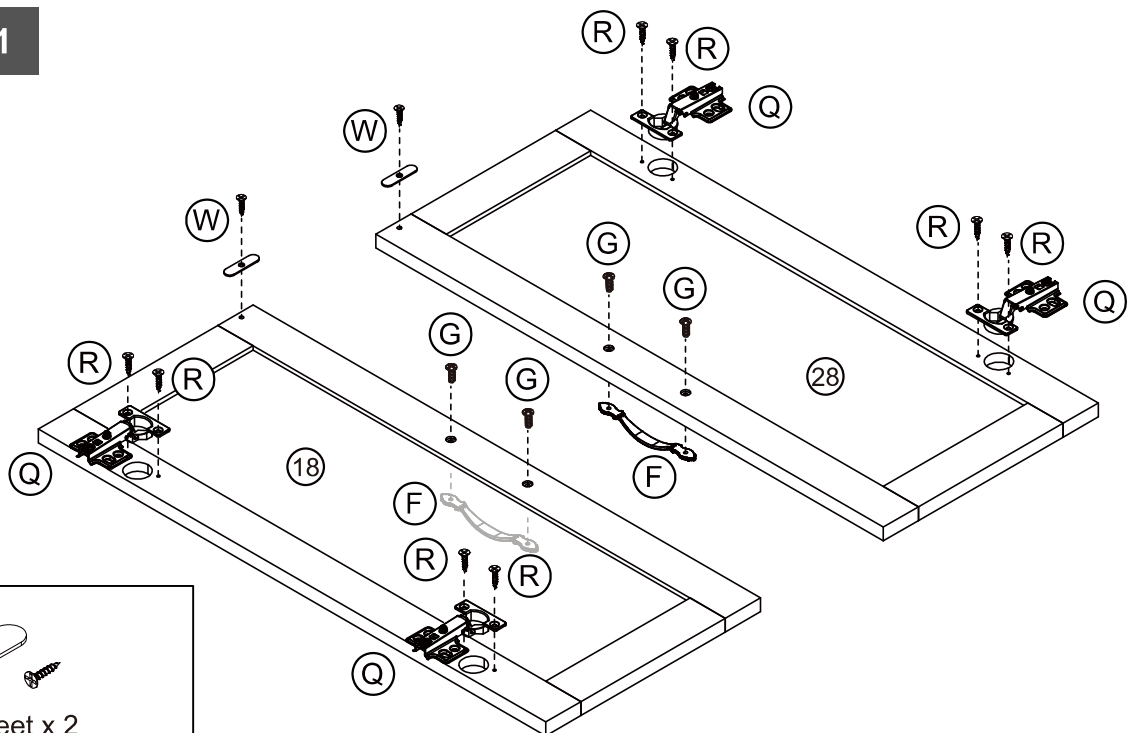

(W)




Suction sheet x 2

(F)



Hold hands x 2

(Q)



26mm x 4

(R)



3.5*12mm Screw x 8


(G)



4*18mm Screw x 4

Assembly Instructions

Step 22


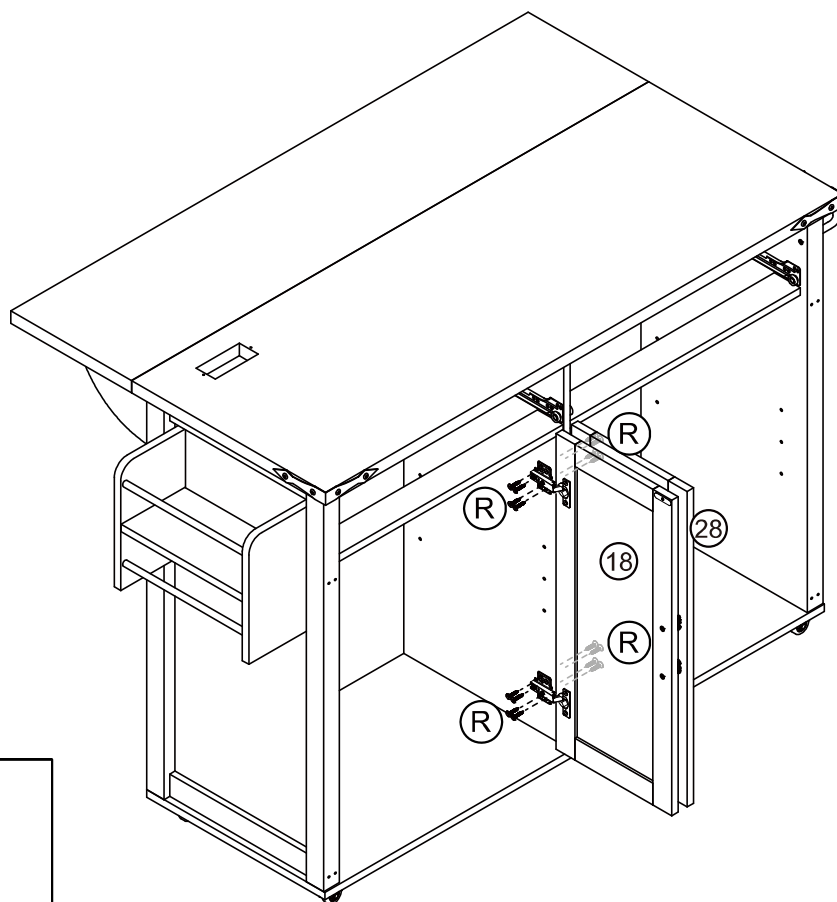


(R)



3.5*12mm Screw x 16

Step 23

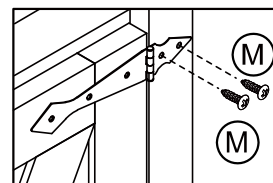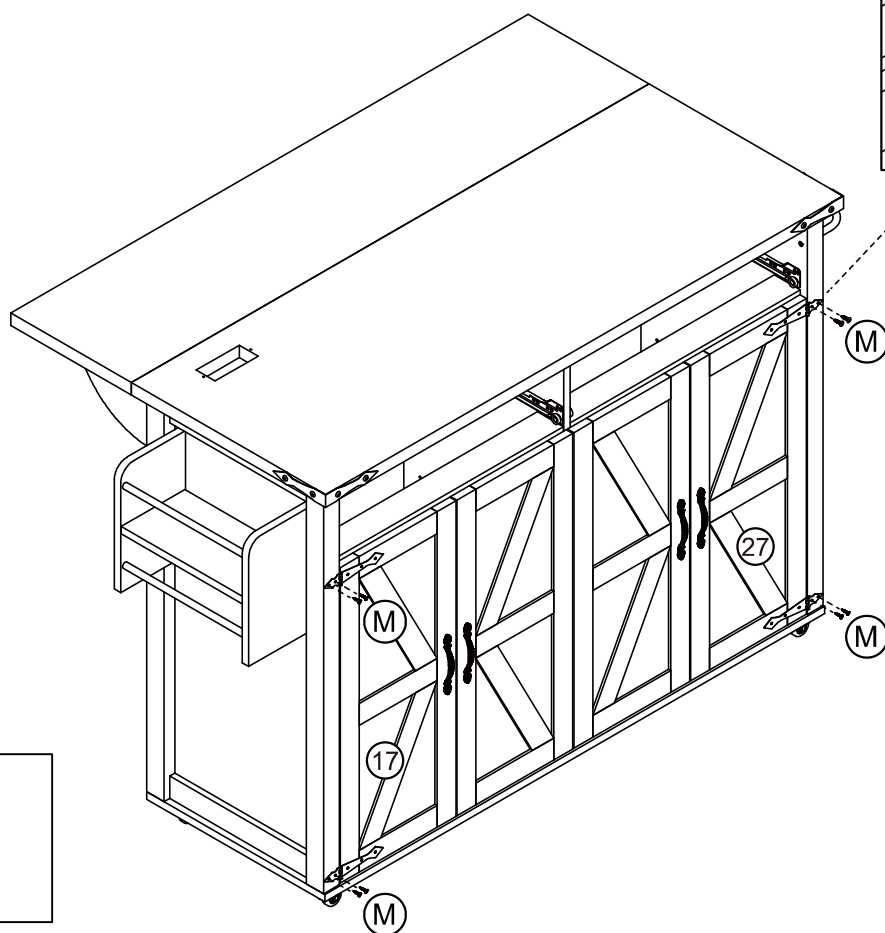


(M)




4*14mm Screw x 8

Assembly Instructions

Step 24

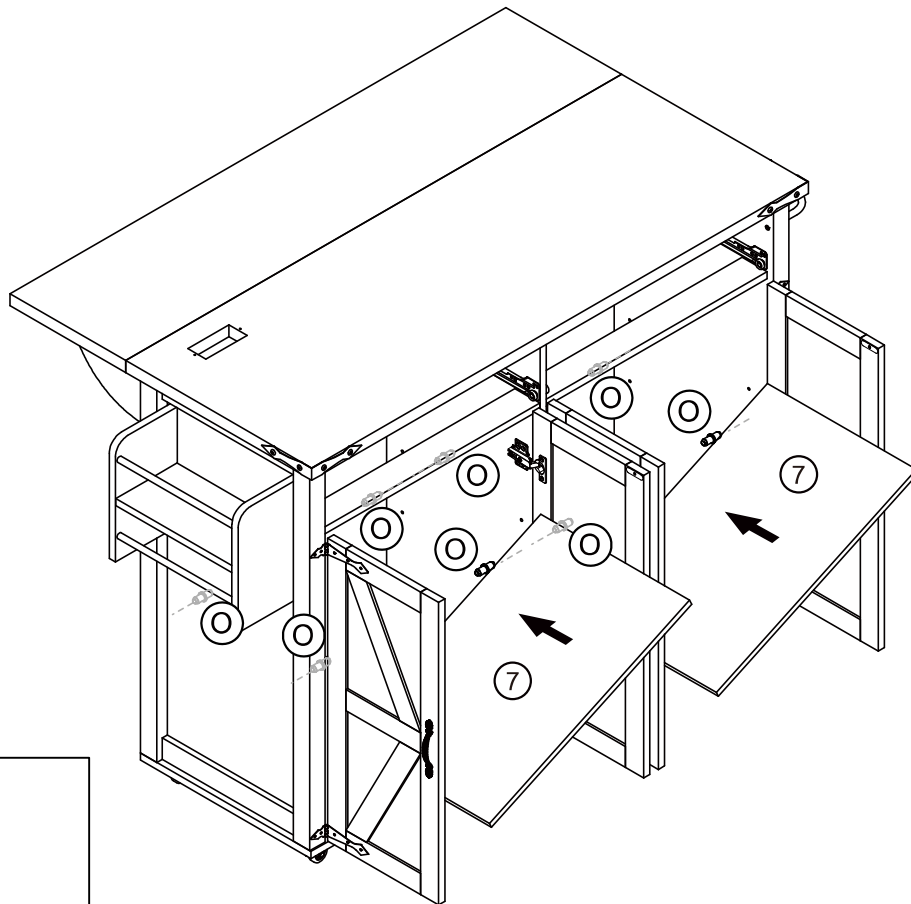


O



Pivot x 8

Step 25

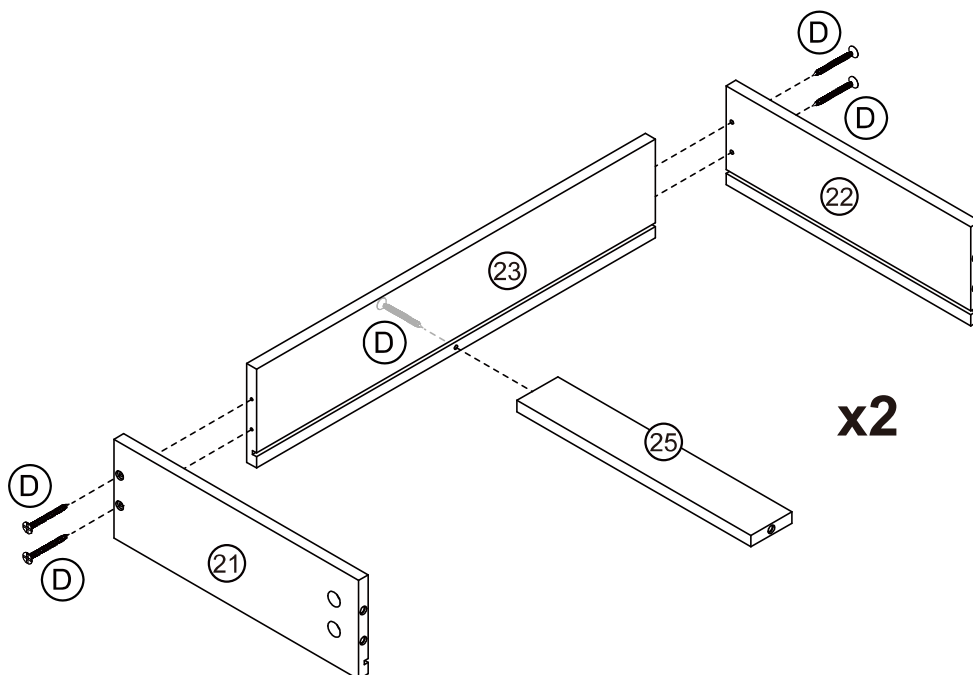


D




4*35mm Screw x 10

Assembly Instructions


Step 26

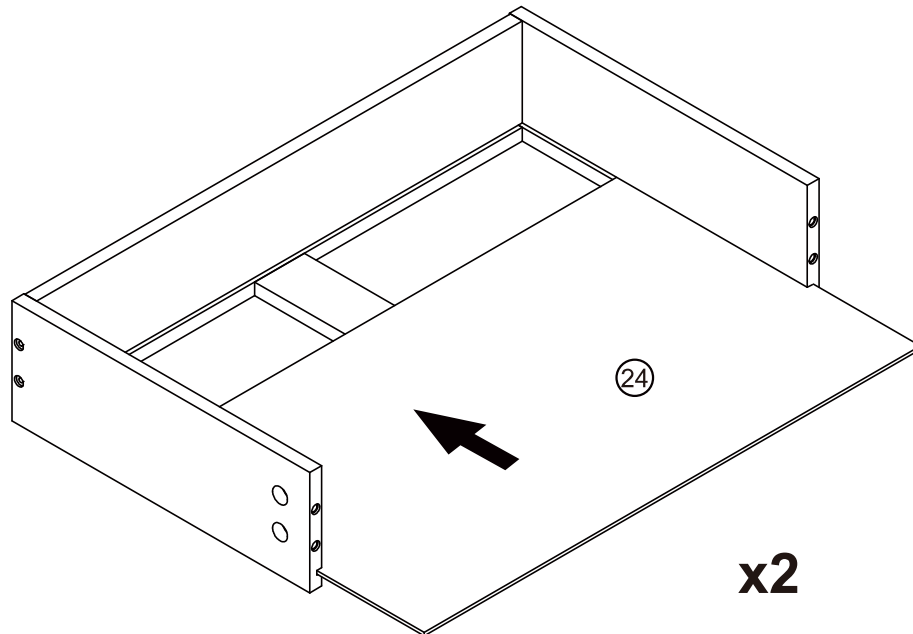

Step 27

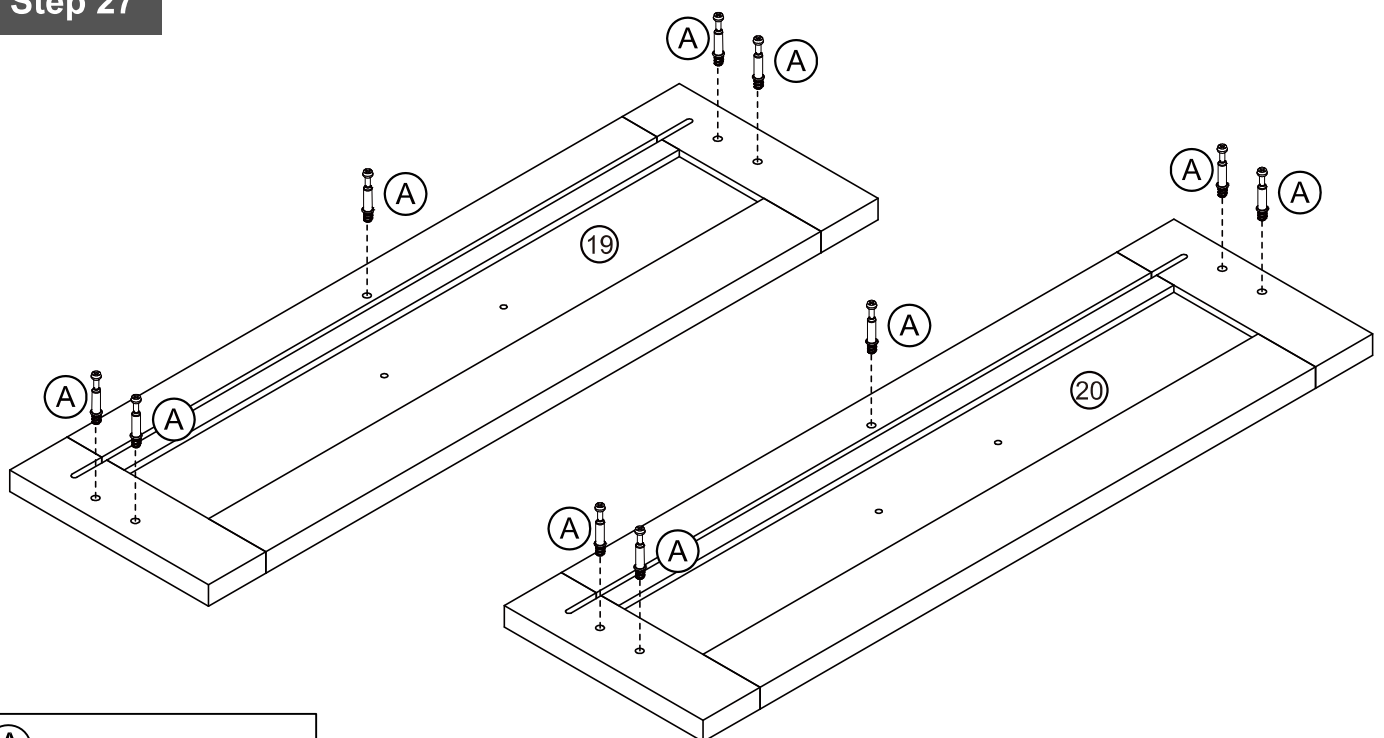


A



Cam Bolt x 10

Assembly Instructions

Step 28

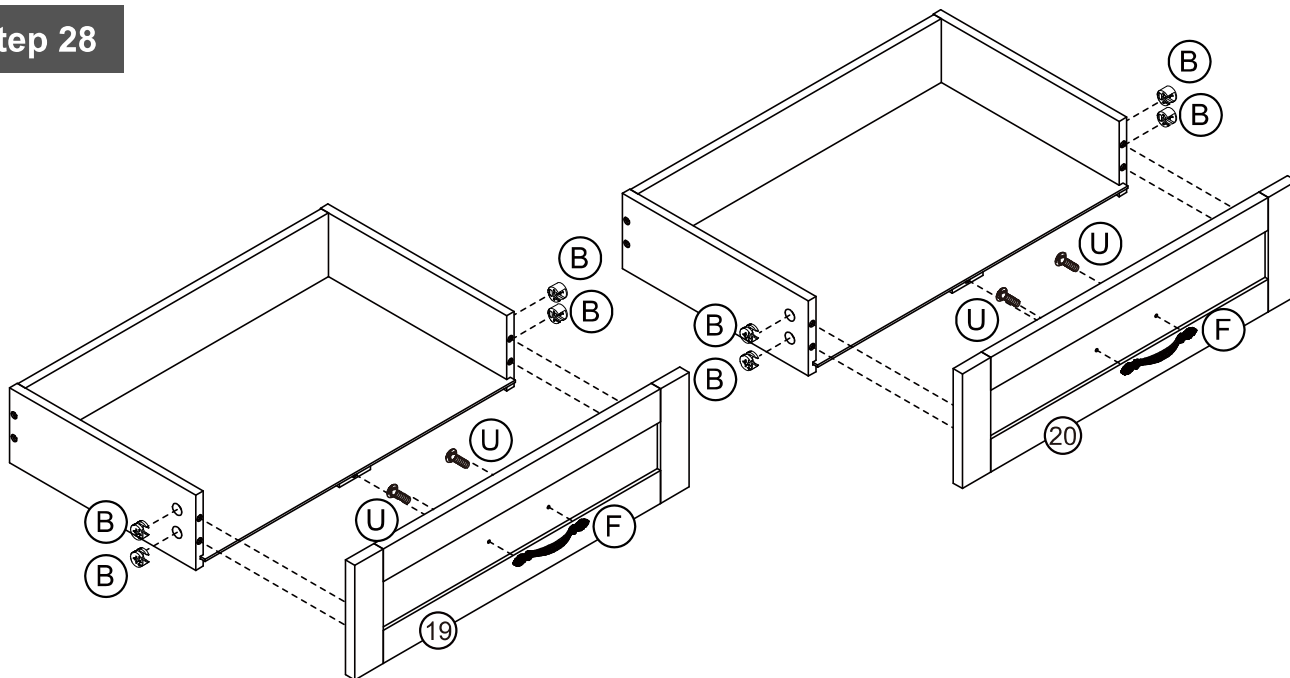

(B)



Cam lock x 8

(U)




4*8mm Screw x 4

(F)



Hold hands x 2

Step 29

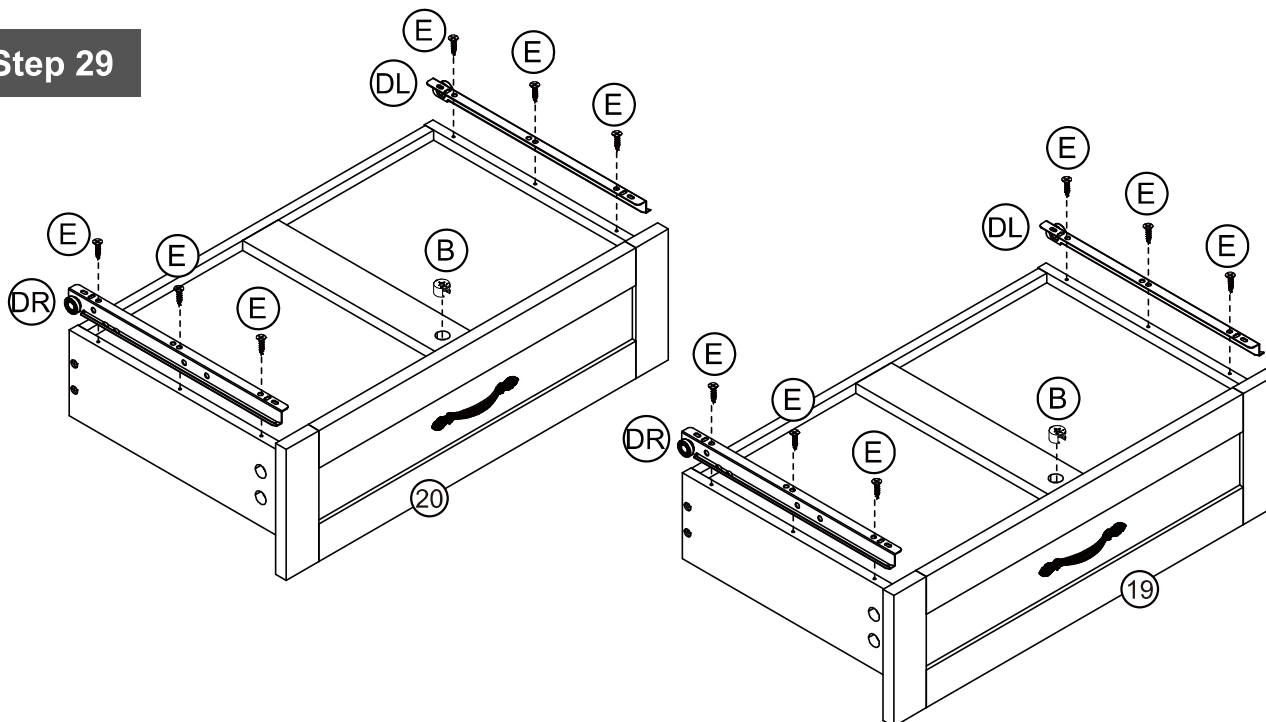


(E)




3*12mm Screw x 12

(DR)



Runner 300mm x 2

(DL)



Runner 300mm x 2


(B)





Cam lock x 2

Assembly Instructions

Step 30

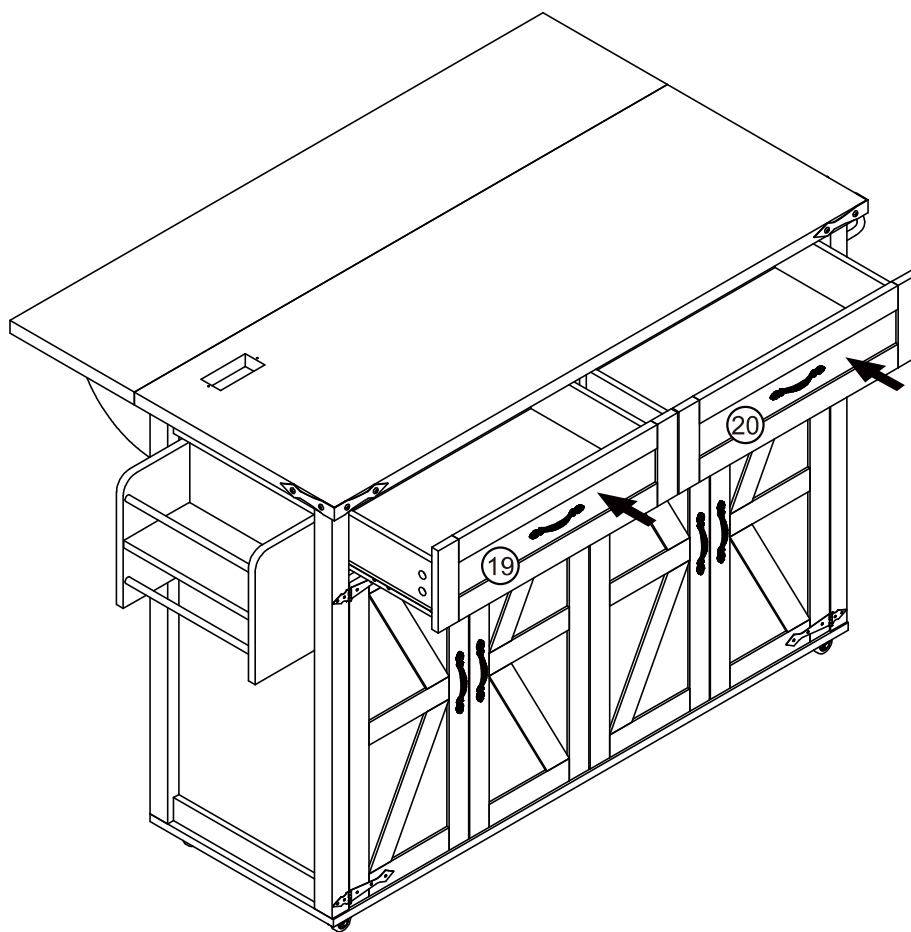

Step 31

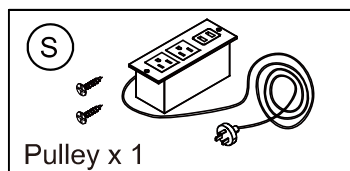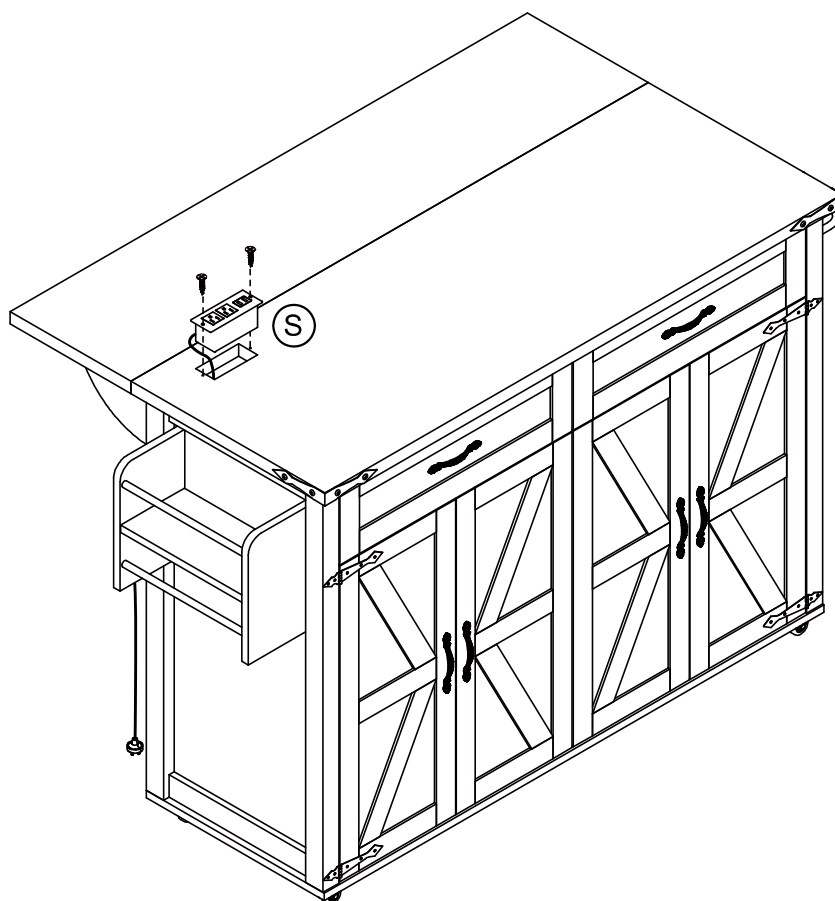

Assembly Instructions

Step 32

