

Assembly Instructions

Storage Bench

Important safety instructions:

- Thanks for your purchasing this product, please read carefully instruction before assembly.

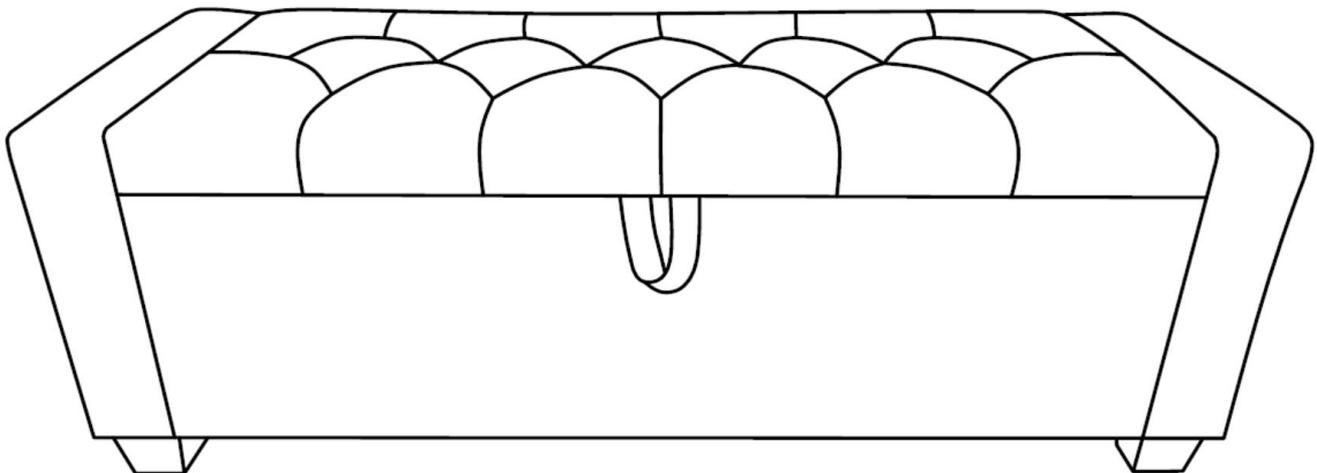
- For your safety and ease, assembly by two or more adults is recommended.

Keep instructions for future use.













Pre-assembly:

- Do not discard any content until assembly is complete to avoid accident tally discarding parts or hardware.


- Take out all parts and hardware from box and place them on a clean, soft and smooth surface.



Parts List

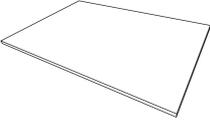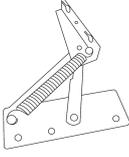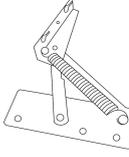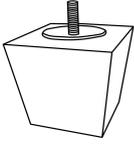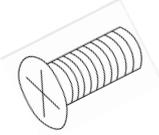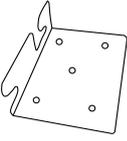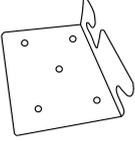
| | | | |
|--|--|---|--|
| Ax1  | Bx1  | Cx2  | Dx1  |
| LEFT ARM(Labeled 'LEFT') | RIGHT ARM(Labeled 'RIGHT') | SIDE PANEL | BENCH TOP |
| Ex2  | Fx1  | Gx1  | Hx8  |
| BASEPLATE | LEFT HINGE (Labeled 'LEFT') | RIGHT HINGE (Labeled 'RIGHT') | Bolts M8*30mm(Already assembled on Left and Right Arms) |
| Ix4  | Jx8  | Kx12  | Lx8  |
| Leg with Washer | Bolts M6*20mm | Bolts M6*20mm | Screws 30mm |
| Mx1  | Nx2  | Ox1  | |
| Left L-shaped Hanger | Right L-shaped Hanger | ALLEN WRENCH | |

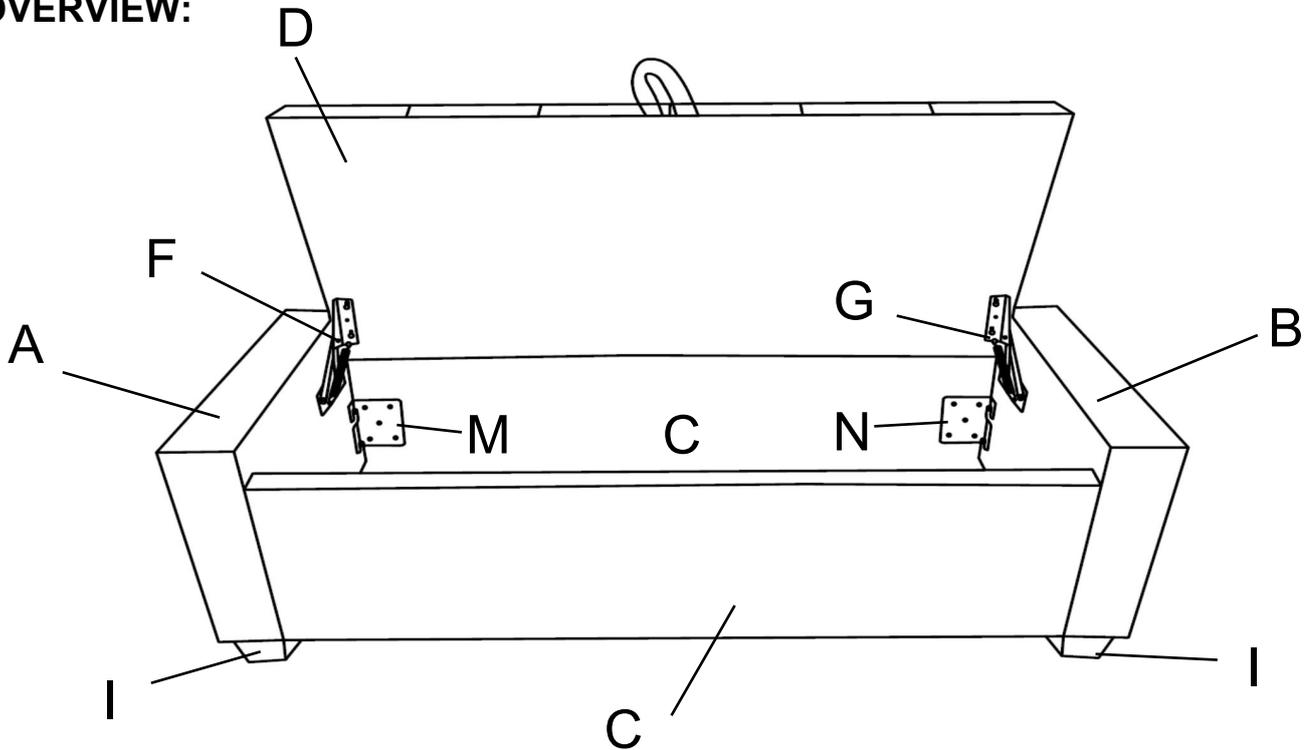OVERVIEW:





Assembly Steps:

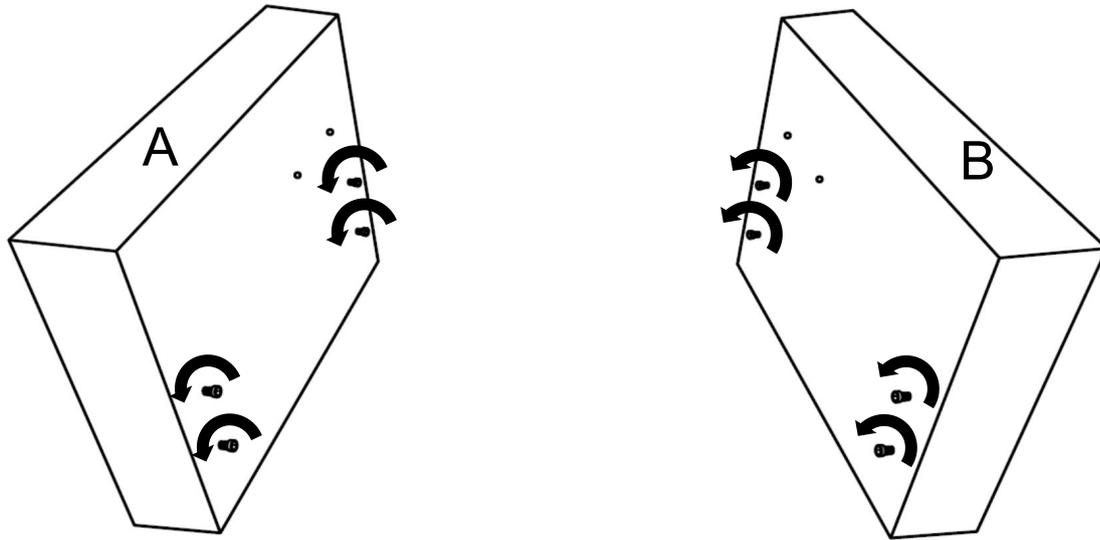
Step 1: Rotate counterclockwise the **Bolt(H)** assembled on **Left Arm(A)** and **Right Arm(B)** of about 10mm out with **Allen Wrench(O)** if necessary.



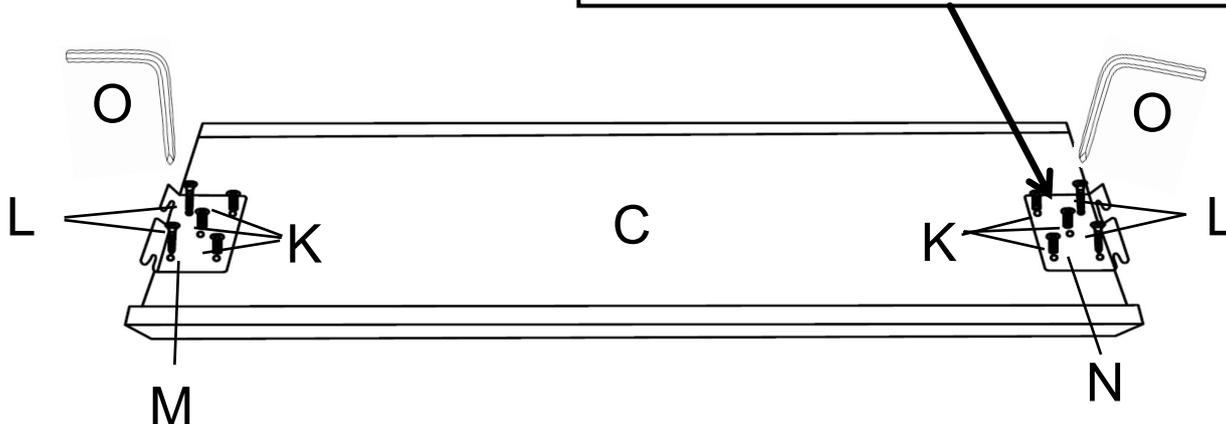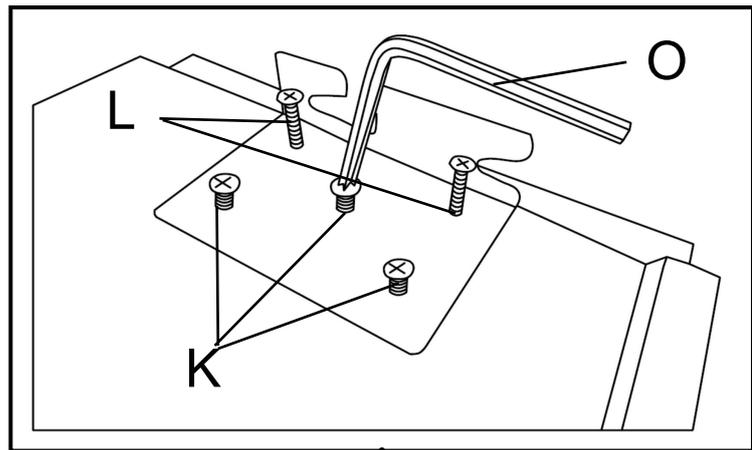
Step 2: Attach the **Left Hingers(M)** and **Right Hingers (N)** to the **Side Panel(C)** with **Bolt(K)** and **Screw(L)** at the right position like picture shows



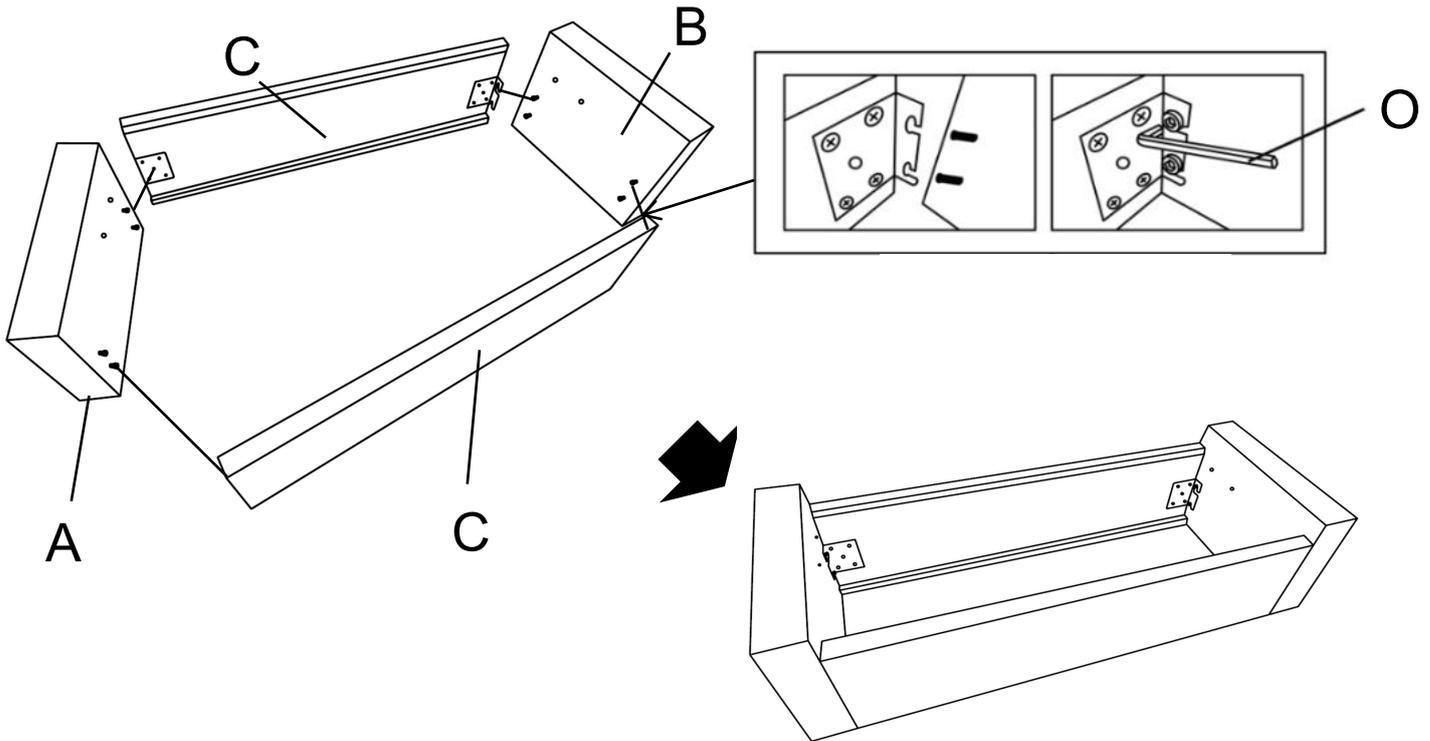
Step 3: Connect the **Side Panel(C)** to the **Left Arm(A)** and **Right Arm(B)** together and then secured with **Allen wrench(O)**



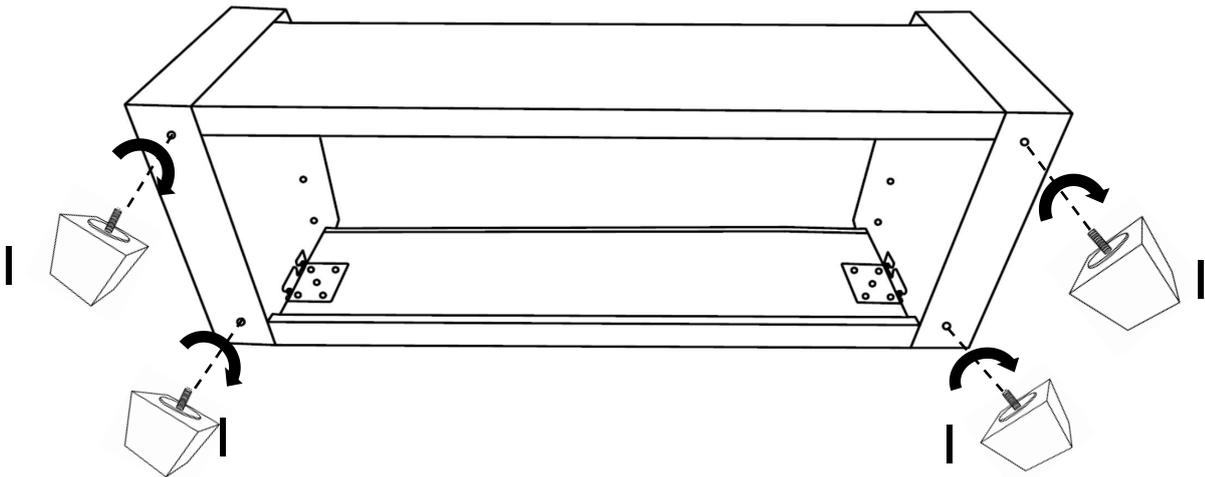
Step 4: Screw the **Leg(I)** on the Ottoman Body



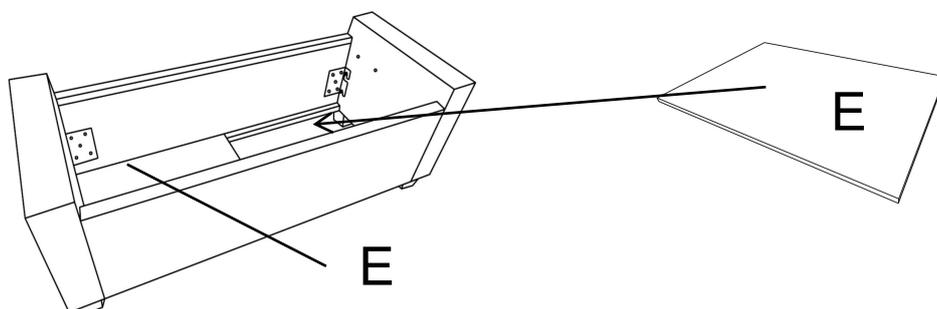
Step 5: First put one piece of **Baseplate(E)** into the Bench and move it to the left then put another into the Bench and move it to the Right



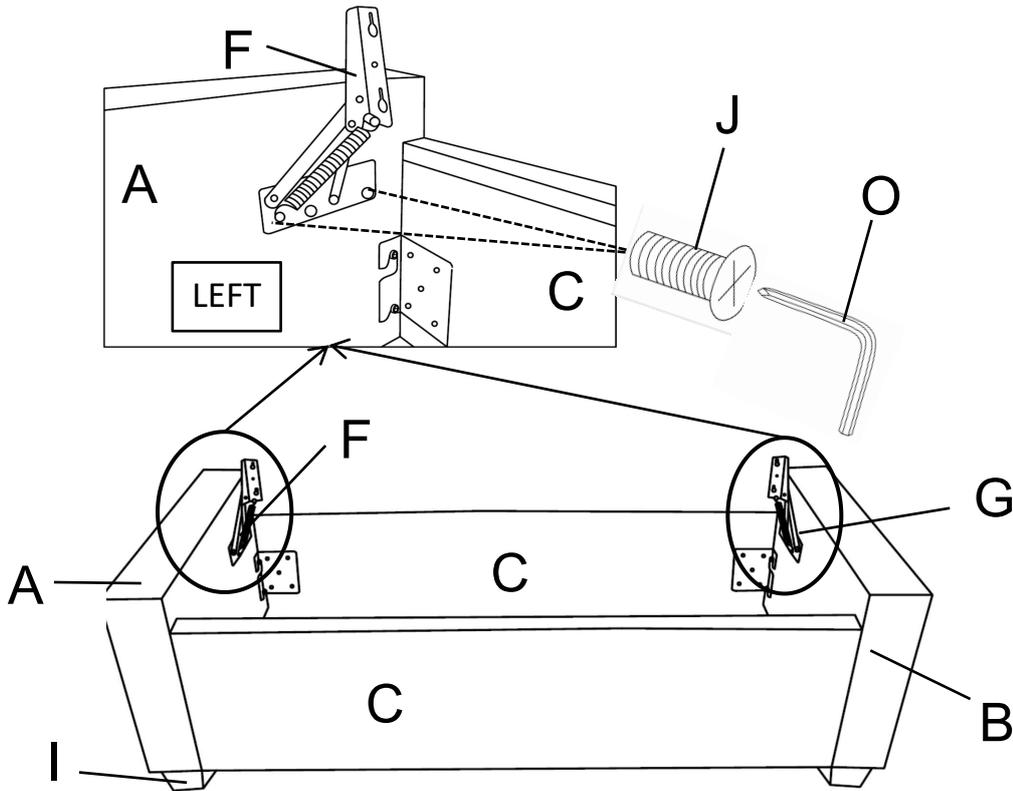Step 6: Connect the **Left Hinge(F)** to the **Left Arm(A)** and **Right Hinge(G)** to the **Right Arm(B)** with **Bolt(J)** and **Allen Wrench(O)**.



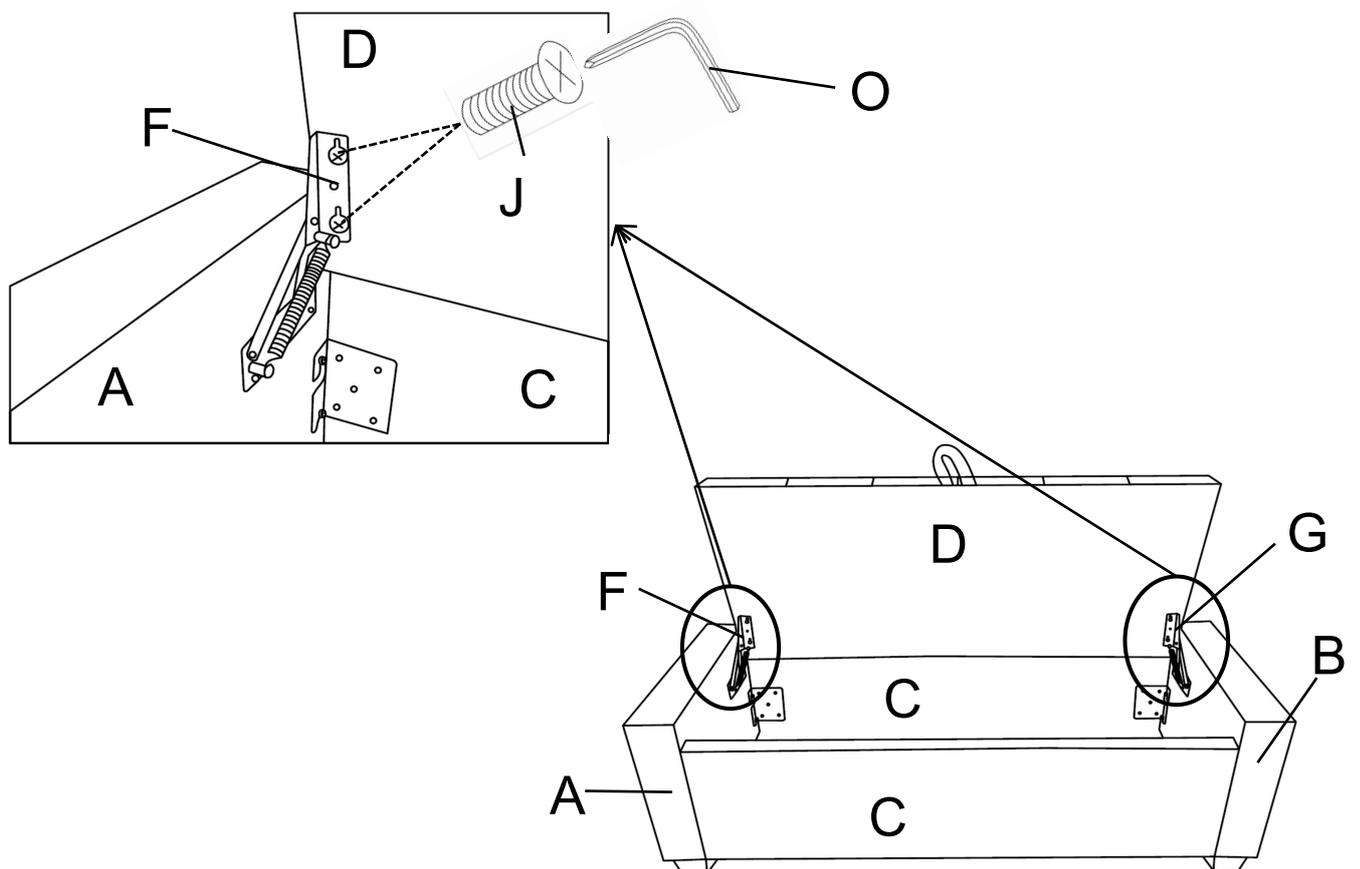Step 7: Put the **Bench Top(D)** on the Ottoman body as shows and connect the **Left Hinge(F)** and the **Right Hinge(G)** to the Bench Top with **Bolt(J)** and **Allen Wrench(O)**



Step 8: Your Storage Bench has been assembled complete, **Enjoy It!**

