


ASSEMBLY INSTRUCTION

MODEL : BDC0928/ (Stool/Barstool)

FURNITURE

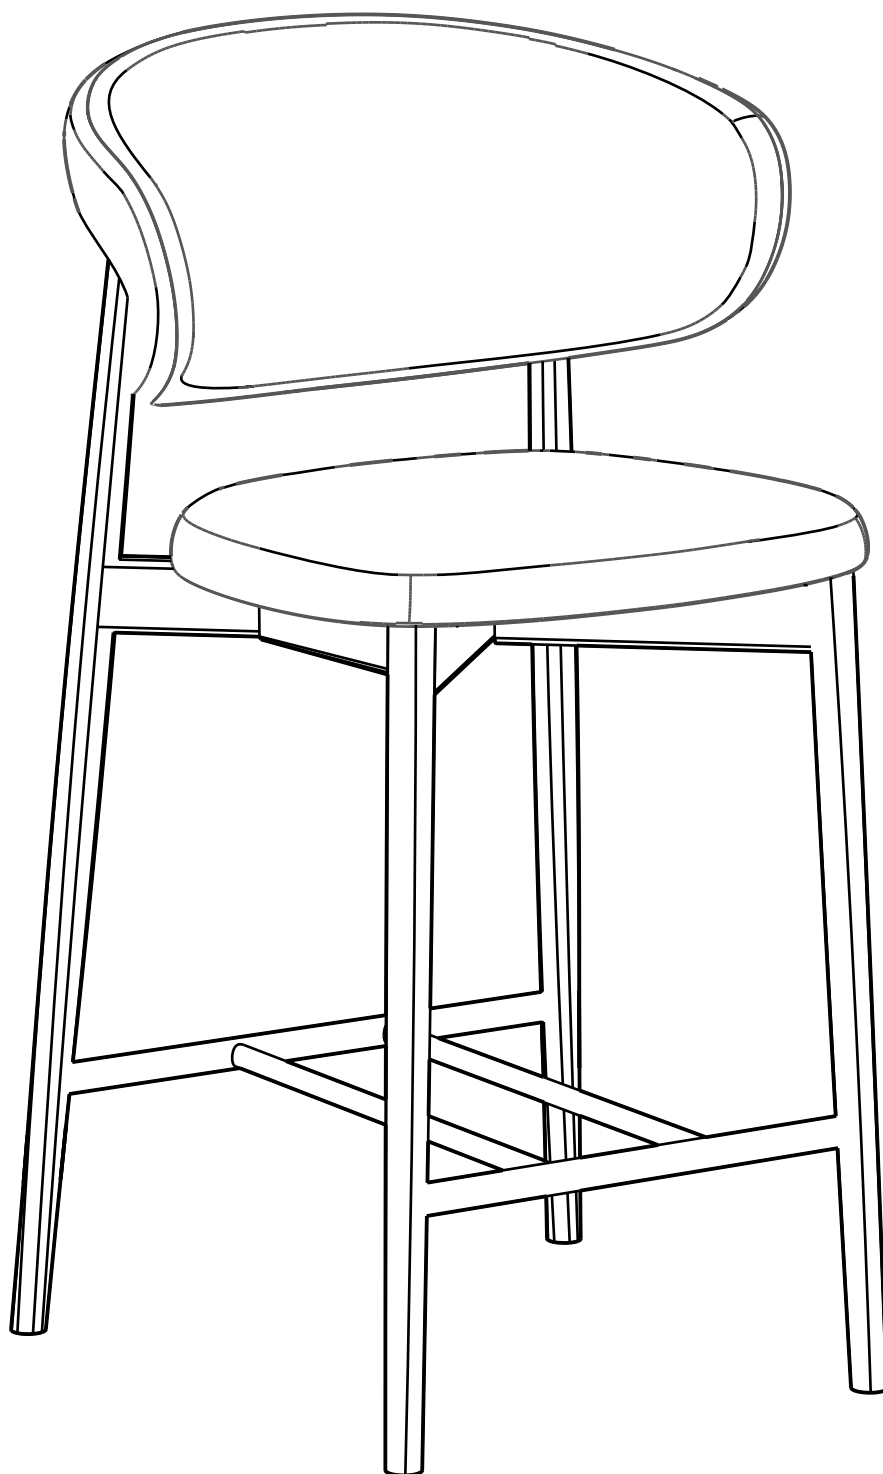

PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Before Installation

Important-Please read these instructions fully before starting the assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.






- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.

Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.



HARDWARE LIST

I  M6*55MM 2 PCS	C  Bolt:M6*35mm 16PCS	D  Plastic lid:16mm 4 PCS
F  Foot pin pads:M6*20 4 PCS	k  ALLEN KEY (M6 x100MM) 1 PCS	H  2 PCS

PART LIST

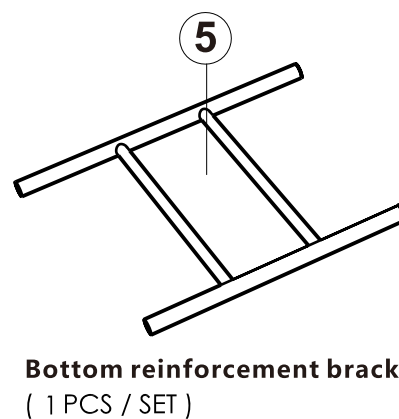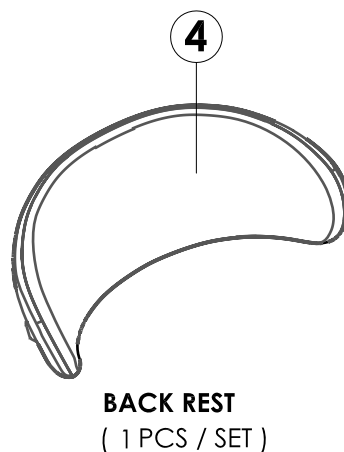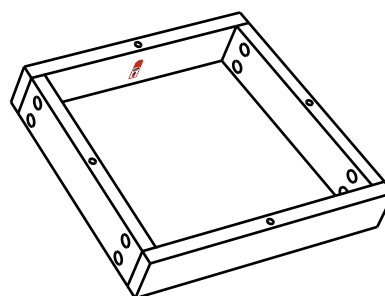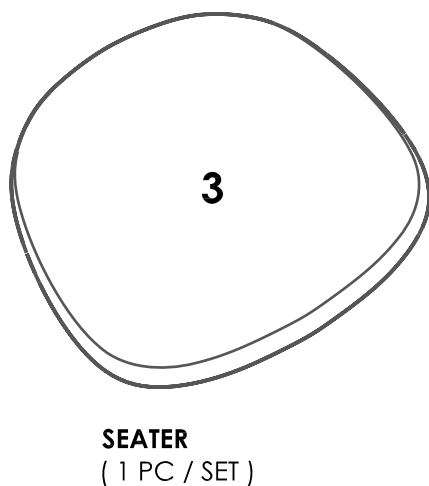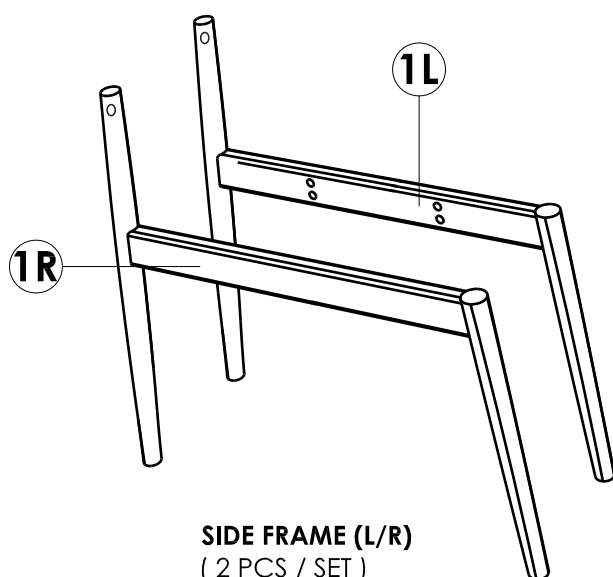


Note: The side of the bottom plate frame with the arrow sticker shall face upward (as shown in the figure below).

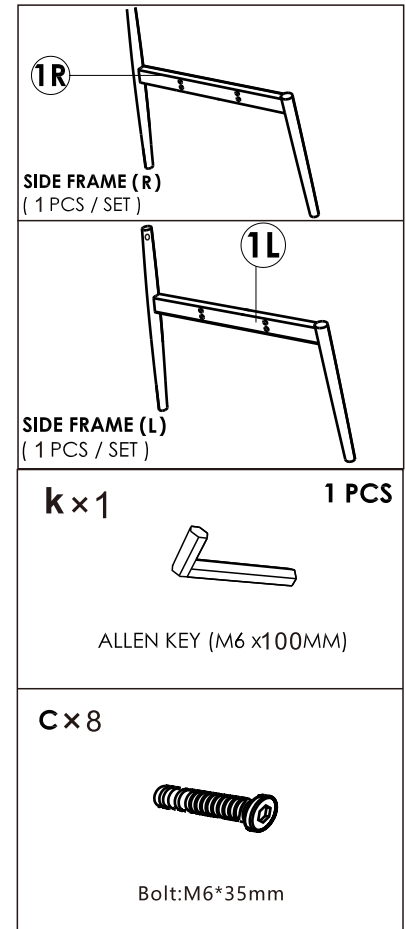
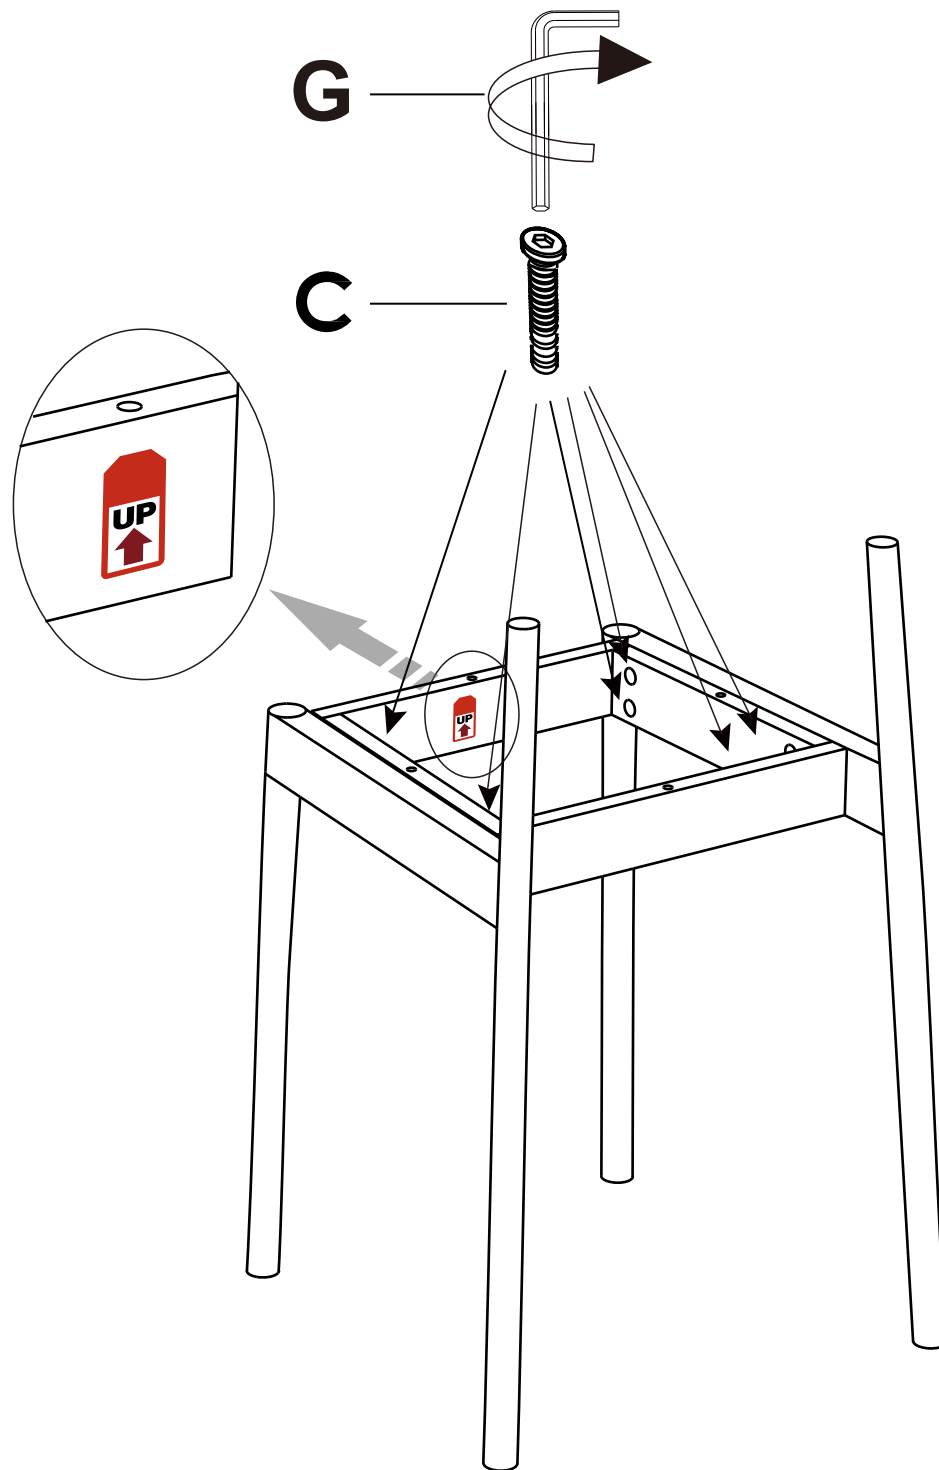


Note: Tighten the screws halfway before completing step 2 , and fully tighten them after finishing step 2 .

STEP 1

Attach side frame(L/R) to bottom plate frame by using (C*8)


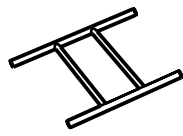
5  1 PCS Bottom reinforcement bracket (1 PCS / SET)	C  4 PCS Bolt:M6*35mm	D  4 PCS Plastic lid:16mm
--	--	--

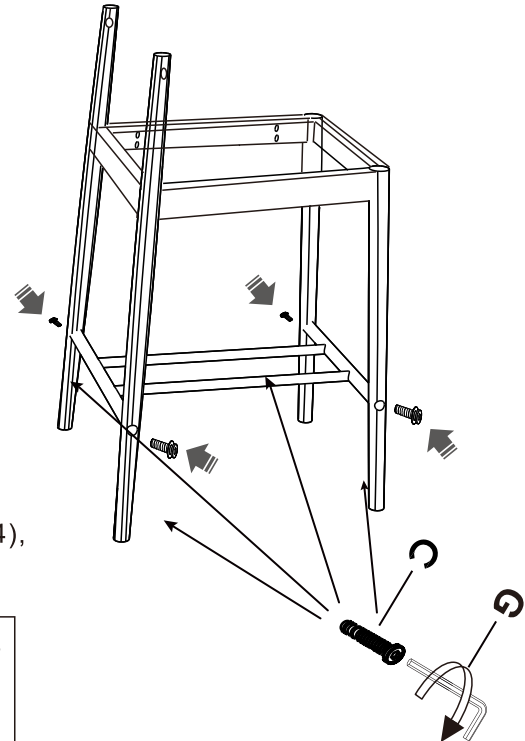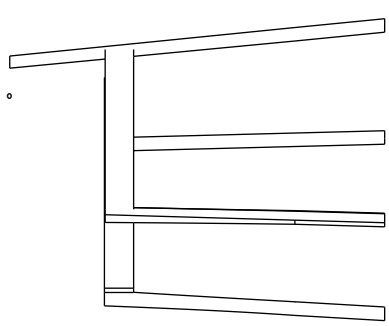

STEP 2

Attach bottom reinforcement bracket to side frame(L/R) by using (C*4), Then cover it with D*4

k x 1  1 PCS ALLEN KEY (M6 x100MM)	I  2 PCS M6*55MM	H  2 PCS
---	---	--

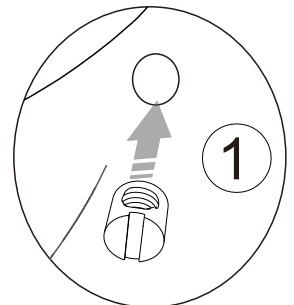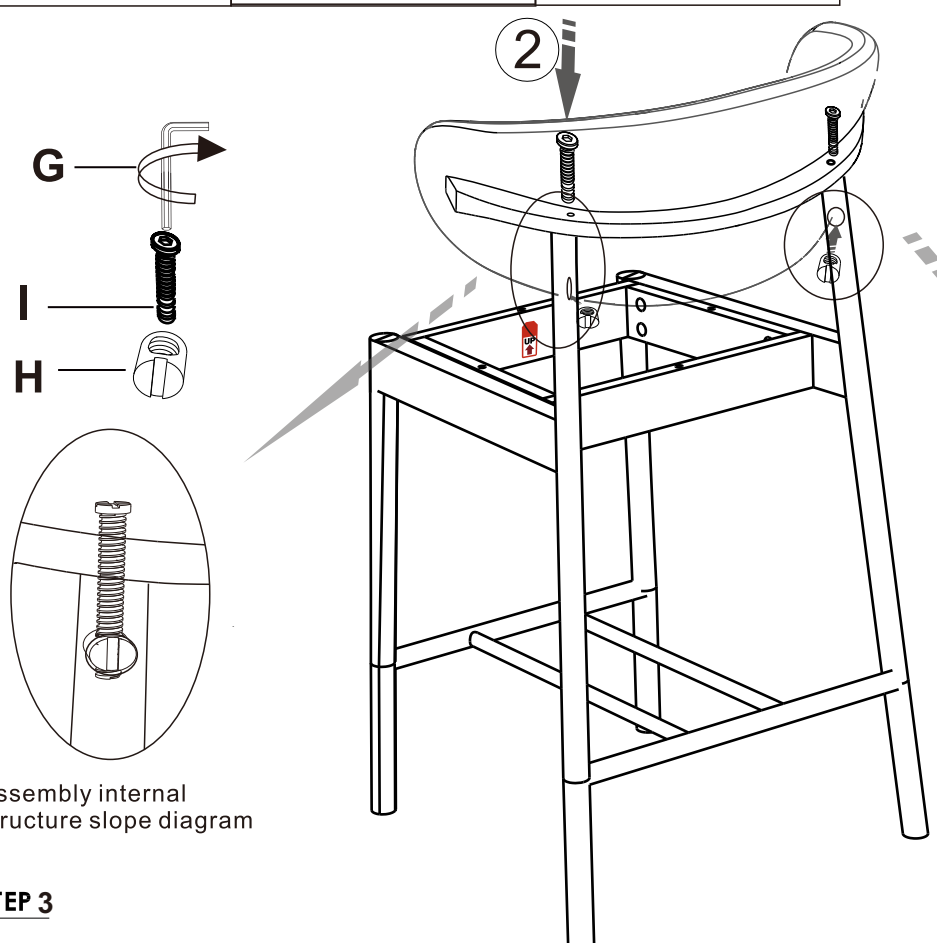


flat slot facing upward

Assembly internal structure slope diagram

STEP 3

- ① Put the screw(H*2)with the flat slot facing upward into the hole of the side frame(L/R).
- ② Attach back rest to side frame(L/R)
- ③ Use screws(I*2) to fix the backrest to the side frame(L/R).

k × 1


ALLEN KEY (M6 x100MM)

1 PCS**C****4 PCS**

M6*55MM

Note:


1 The small end of the seat board faces the backrest. Do not place it in the wrong direction, otherwise the sitting position will be too small.

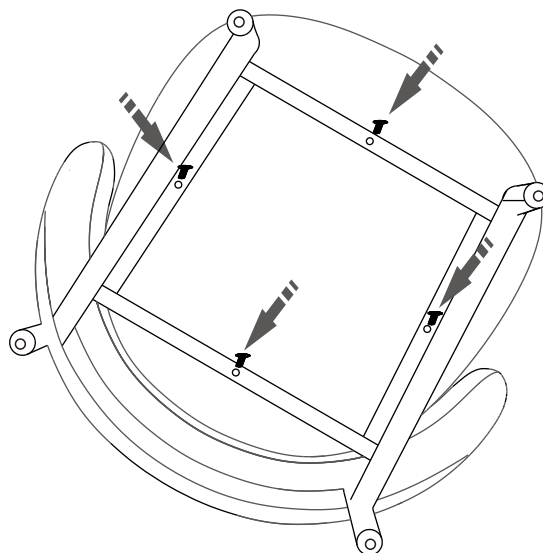**STEP 4**

Attach seater to bottom plate frame by using(C*4)

F**4 PCS**

Foot pin pads:M6*20

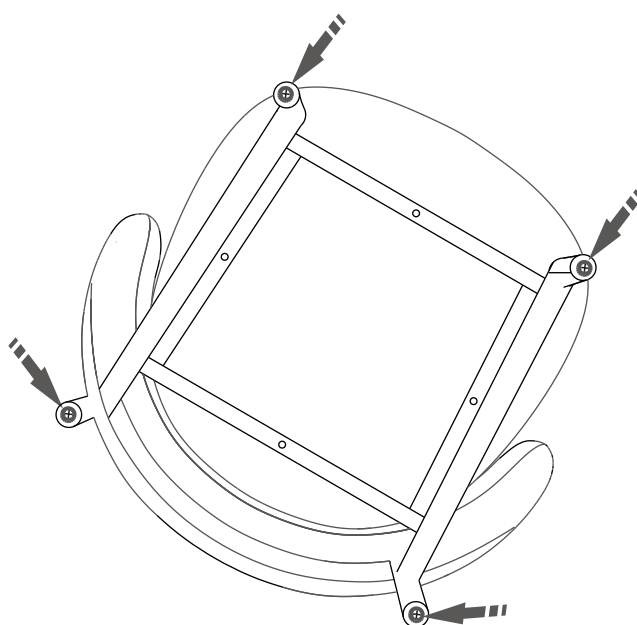**STEP 5**

Attach foot pin pads to side frame(L/R) by using (F*4),tighten it up by using a cross head screw driver