


TRIM & MOLDING PROFILES

SMARTCORE trims and moldings are designed to coordinate effortlessly with your SMARTCORE floor. Each piece is 94" long and features a waterproof core wrapped in vinyl.

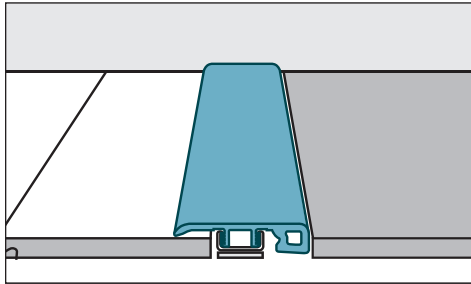


BABY THRESHOLD

Used for transitioning from a hard surface floor (SMARTCORE) to a thicker floor such as high pile carpet. It can also be used to transition between flooring and doorway thresholds, and/or around hearths and sliding glass doors.

INSTALLATION INSTRUCTIONS:

Measure and cut to fit. Affix **Baby Threshold** using adhesive, being sure to follow adhesive manufacturer's instructions completely.

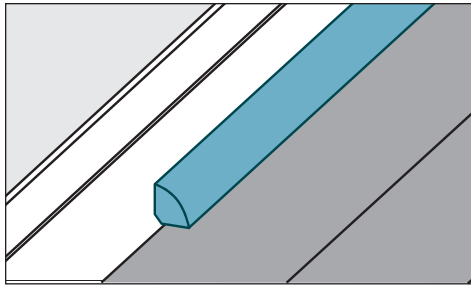


QUARTER ROUND

Used to accent the transition from the baseboards to floor surface.

INSTALLATION INSTRUCTIONS:

Measure and cut to fit. Affix **Quarter Round** using glue, molding tape or nails. When using adhesive, be sure to follow manufacturer's instructions completely.

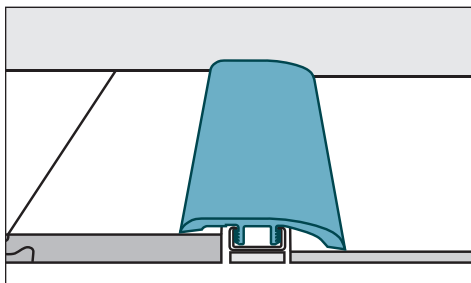


REDUCER

Used to transition from a hard surface floor (SMARTCORE) to a floor with a lower height (ceramic tile, low pile carpet).

INSTALLATION INSTRUCTIONS:

Cut **Reducer** and track to same desired length. Secure track to floor with glue, molding tape or nails and press or tap **Reducer** into track to desired depth using rubber mallet.

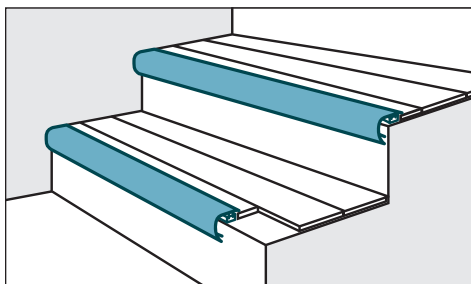


STAIRNOSE

Used to provide the finishing touch to the front stair edge when installing SMARTCORE on stairs.

INSTALLATION INSTRUCTIONS:

Measure and cut to fit. Affix **Stairnose** using adhesive, being sure to follow adhesive manufacturer's instructions completely.

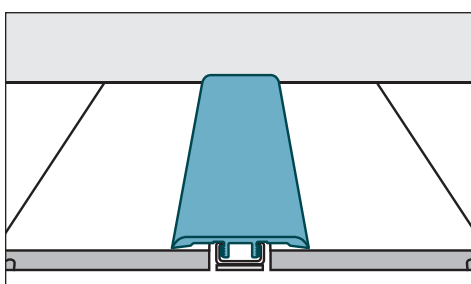


T-MOLDING

Used in doorways to join two adjacent floors that are close to the same height.

INSTALLATION INSTRUCTIONS:

Cut **T-Molding** and track to same desired length. Secure track to floor with glue, molding tape or nails and press or tap **T-Molding** into track to desired depth using rubber mallet.

TRIM INSTRUCTIONS & DETAILS

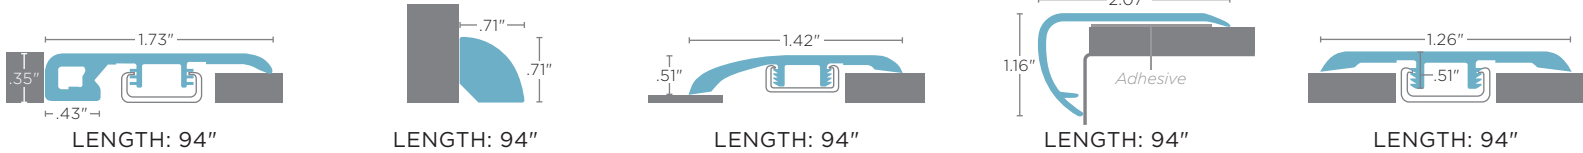

COLOR	PRODUCT #	BABY THRESHOLD		QUARTER ROUND		REDUCER		STAIRNOSE		T-MOLDING	
		SOE #	MODEL #	SOE #	MODEL #	STOCK/SOE #	MODEL #	SOE #	MODEL #	STOCK/SOE #	MODEL #
Baldwin Oak	1344175	1524902	LMTSC00560	1524887	LMQSC00560	1361873	01C6300560	1361884	01C8800560	1361862	02C5500560
Barren Oak	1329194	1524896	LMTSC00554	1524881	LMQSC00554	1361869	01C6300554	1361880	01C8800554	1361858	02C5500554
Carrolton Walnut	1344176	1524903	LMTSC00561	1524888	LMQSC00561	1361874	01C6300561	1361885	01C8800561	1361863	02C5500561
Chatham Stone	1344179	1524906	LMTSC00564	1524891	LMQSC00564	1361877	01C6300564	1361888	01C8800564	1361866	02C5500564
Clayton Hickory	1344173	1524900	LMTSC00558	1524885	LMQSC00558	1361871	01C6300558	1361882	01C8800558	1361860	02C5500558
Coweta Oak	1329189	1524898	LMTSC00556	1524883	LMQSC00556	1361851	01C6300556	1361855	01C8800556	1361847	02C5500556
Lanier Hickory	1329191	1524895	LMTSC00553	1524880	LMQSC00553	1361849	01C6300553	1361853	01C8800553	1361845	02C5500553
Linden Pine	1329193	1524894	LMTSC00552	1524879	LMQSC00552	1361868	01C6300552	1361879	01C8800552	1361857	02C5500552
Madison Walnut	1344174	1524901	LMTSC00559	1524886	LMQSC00559	1361872	01C6300559	1361883	01C8800559	1361861	02C5500559
Monroe Oak	1329192	1524892	LMTSC00550	1524877	LMQSC00550	1361867	01C6300550	1361878	01C8800550	1361856	02C5500550
Putnam Oak	1344177	1524904	LMTSC00562	1524889	LMQSC00562	1361875	01C6300562	1361886	01C8800562	1361864	02C5500562
Shady Pine	1329195	1524899	LMTSC00557	1524884	LMQSC00557	1361870	01C6300557	1361881	01C8800557	1361859	02C5500557
Sumter Stone	1344178	1524905	LMTSC00563	1524890	LMQSC00563	1361876	01C6300563	1361887	01C8800563	1361865	02C5500563
Talbot Oak	1329190	1524893	LMTSC00551	1524878	LMQSC00551	1361848	01C6300551	1361852	01C8800551	1361844	02C5500551
Tipton Oak	1329188	1524897	LMTSC00555	1524882	LMQSC00555	1361850	01C6300555	1361854	01C8800555	1361846	02C5500555