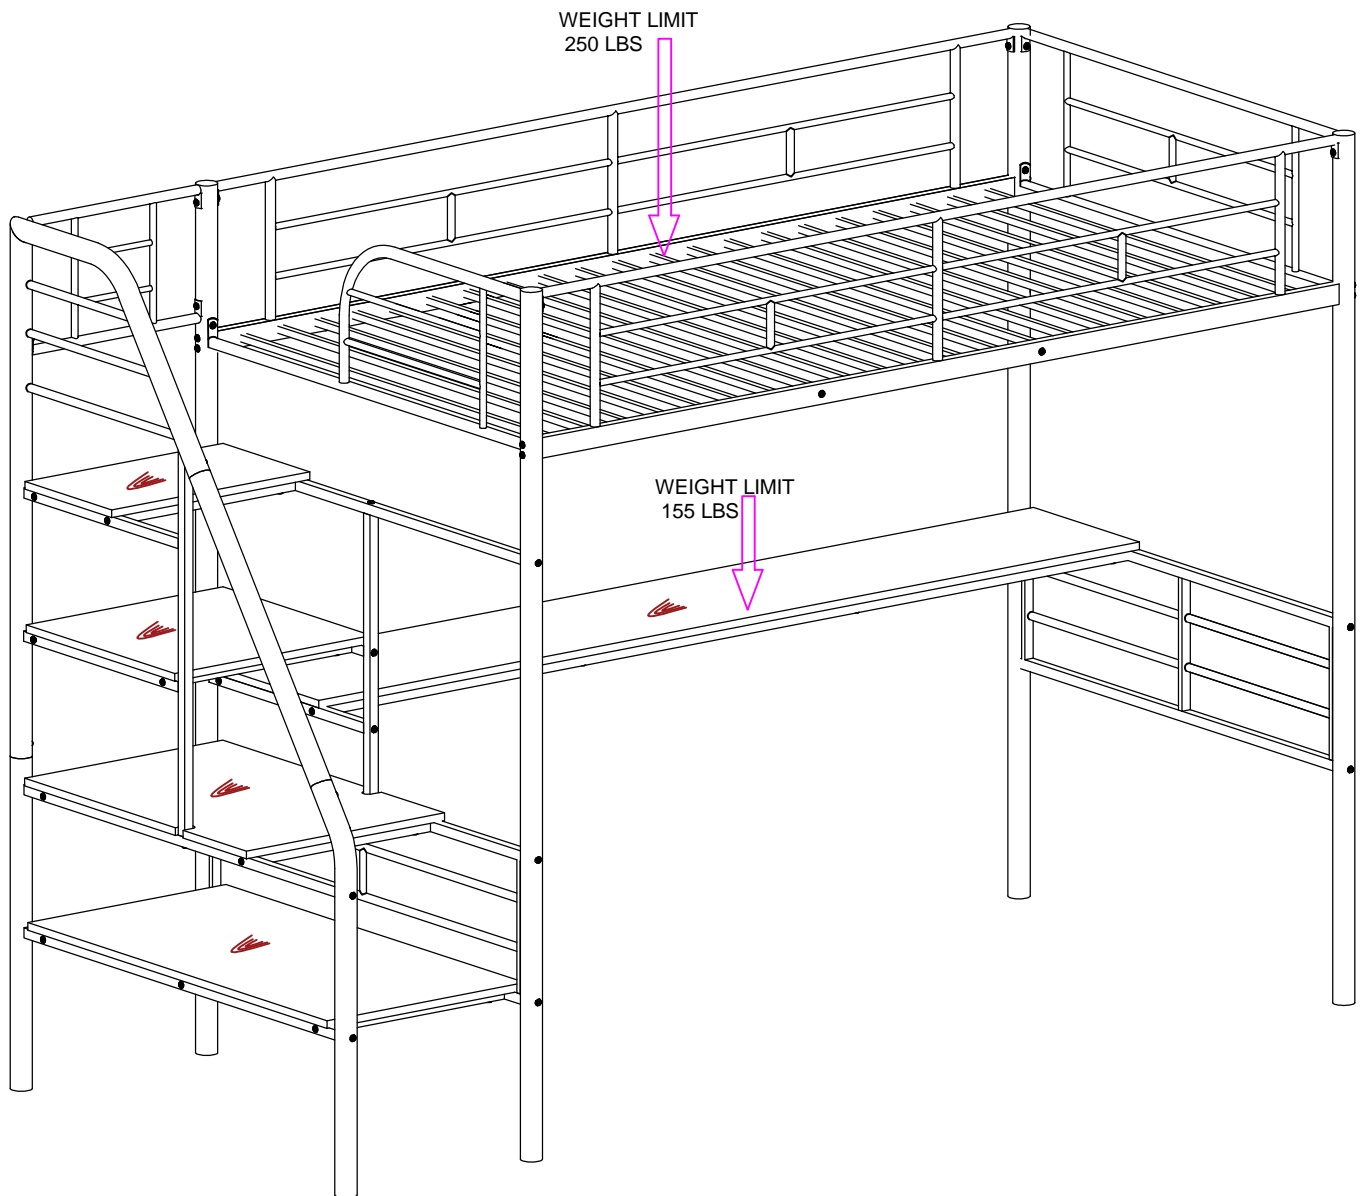


LOFT BED
ASSEMBLY INSTRUCTIONS
MF285811&MF285812



If you have any questions, please feel free to
contact us.
Email: service@qualfurn.net

SAFETY WARNINGS AND GENERAL NOTES :

1. Follow the information on the warnings on the bunk bed end structure and on the carton. Do not remove the warning label from the bed.
2. Always use the recommended size mattress on mattress support, or both, to help prevent the likelihood of entrapment or falls.
3. Do not allow children under 6 years of age to use the upper bunk.
4. Periodically check and ensure the guardrail, ladder and other components are in their proper position, free from damage, and all connectors are tight.
5. Do not allow horseplay on or under beds.
6. Always prohibit jumping on the bed.
7. Prohibit more than one person on upper bunk.
8. Always use the ladder for entering and leaving the upper bunk.
9. Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.
10. Use of a night-tight may provide added safety precaution for a child using the upper bunk.
11. Always use guardrails on both long sides of the upper bunk.
12. If the bunk bed will be placed next to a wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.
- The use of water or sleep flotation mattresses is prohibited.
13. **STRANGULATION HAZARD**-Never attach or hang items to any part of the bunk bed that are not designed for use with the bed.
14. Keep these instructions for future reference.
15. We recommend assembling your bunk bed on the shipping carton to protect your floor or carpet.
16. Be certain all staples are out of the box before beginning assembly on the shipping carton.
17. **USE ONLY MATTRESSES WHICH ARE AS THE TABLE BELOW ON UPPER AND ON LOWER BUNKS.**

Up bed (bunk bed and tribed included)

Bed type	Length	Width	Thickness
Twin Standard	74" – 75"	38 ½"	6" max

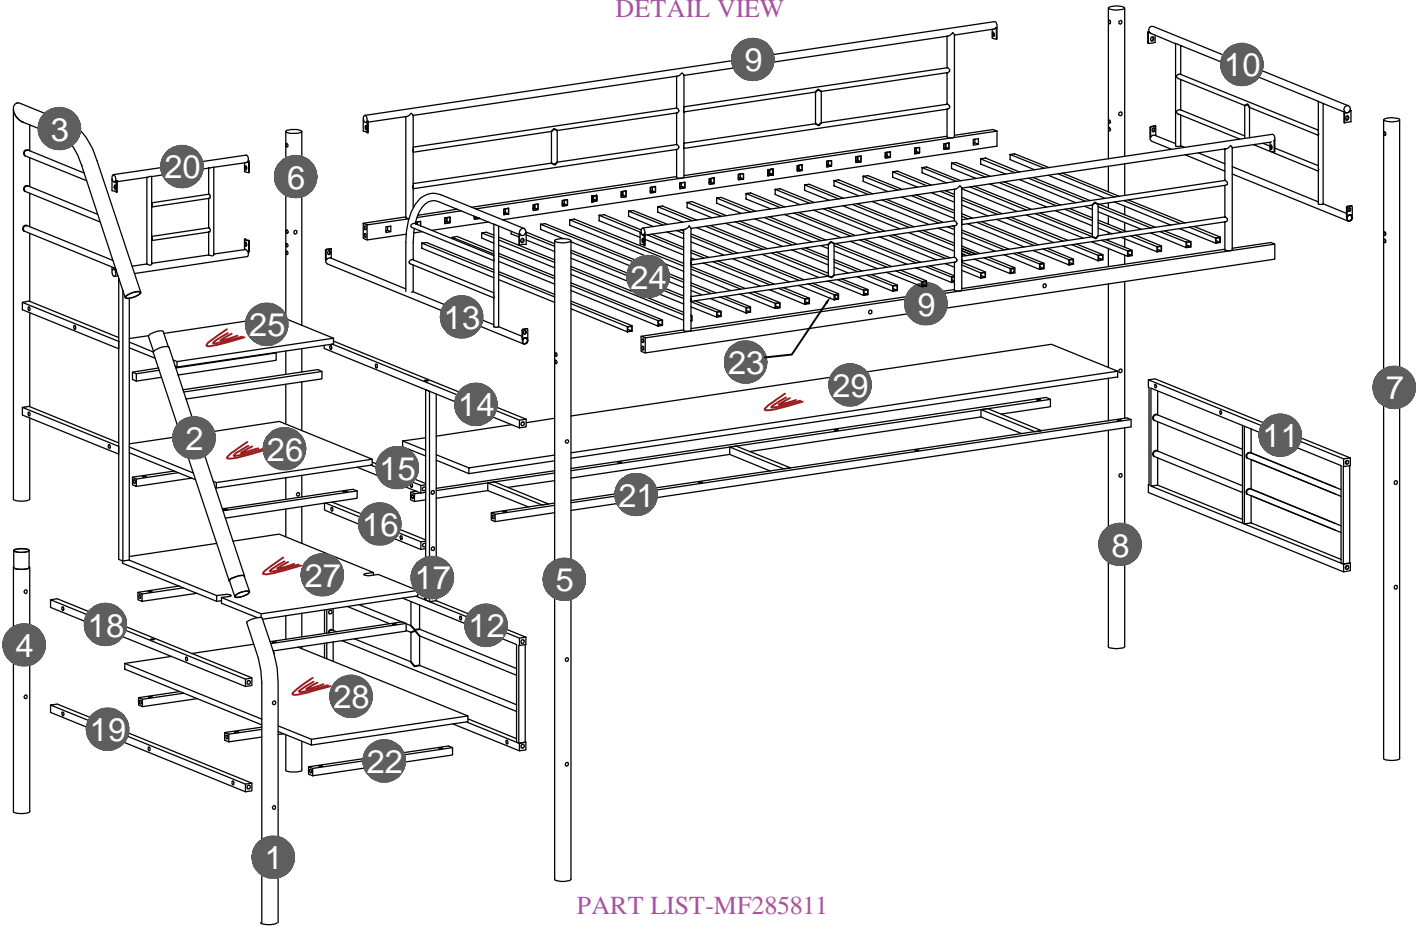
18. **SURFACE OF MATTRESS MUST BE AT LEAST 5" (127MM) BELOW THE UPPER EDGE OF GUARDRAILS.**

19. **Replacement Parts:**

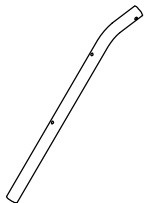
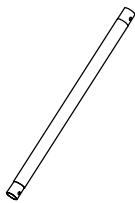

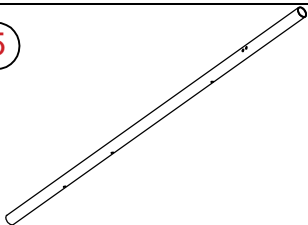
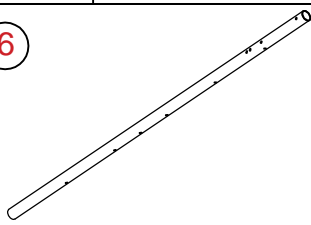
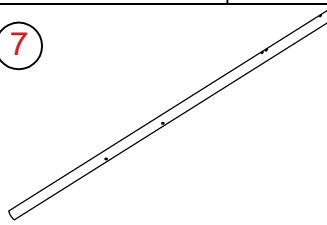
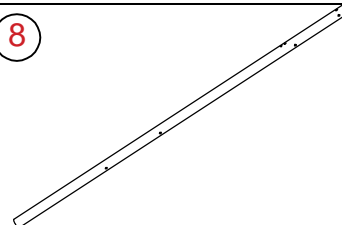
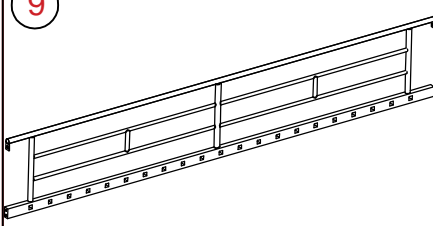
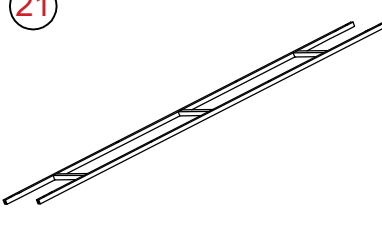
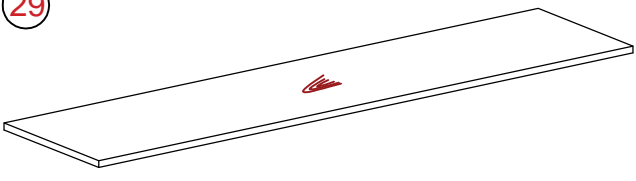
Replacement Parts, including additional guardrails, may be obtained from any of our (GIGACLOUD TECHNOLOGY(USA) INC.) dealers

LOFT BED
ASSEMBLY INSTRUCTIONS
MF285811&MF285812

DETAIL VIEW


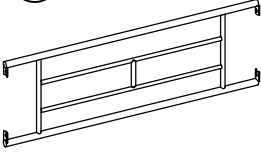
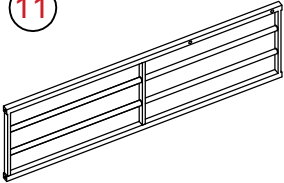
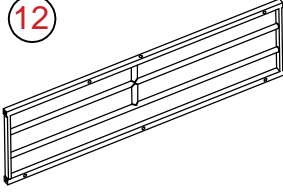
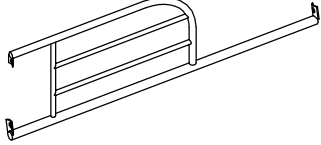
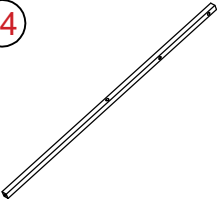
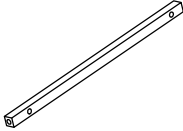
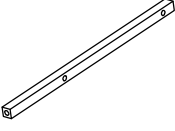

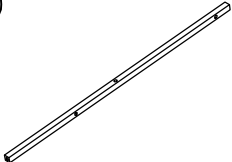
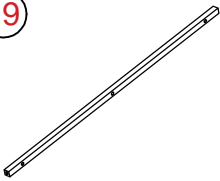
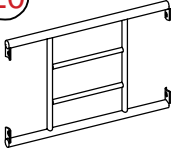

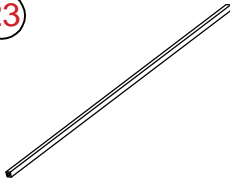
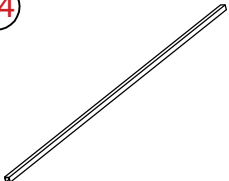






PART LIST-MF285811









<div>1</div> 	<div>2</div> 	<div>4</div> 	
vertical bar - 1pc	vertical bar - 1pc	vertical bar - 1pc	
<div>5</div> 	<div>6</div> 	<div>7</div> 	<div>8</div> 
vertical bar - 1pc	vertical bar - 1pc	vertical bar - 1pc	vertical bar - 1pc
<div>9</div> 	<div>21</div> 	<div>29</div> 	
guard bar - 2pcs	frame table - 1pc	wooden table panel - 1pc	

LOFT BED
ASSEMBLY INSTRUCTIONS
MF285811&MF285812

PART LIST-MF285812

				
hand rail - 1pc	headboard - 1pc	headboard - 1pc	footboard - 1pc	footboard - 1pc
				
horizontal bar - 1pc	horizontal bar - 1pc	horizontal bar - 1pc	vertical bar - 1pc	horizontal bar - 1pc
				
horizontal bar - 1pc	guard handrail - 1pc	horizontal bar - 9pcs	slat - 2pcs	slat - 19pcs
				
wooden shelf panel-1pc	wooden shelf panel-1pc	wooden shelf panel-1pc	wooden shelf panel-1pc	

HARDWARE LIST - MF285811

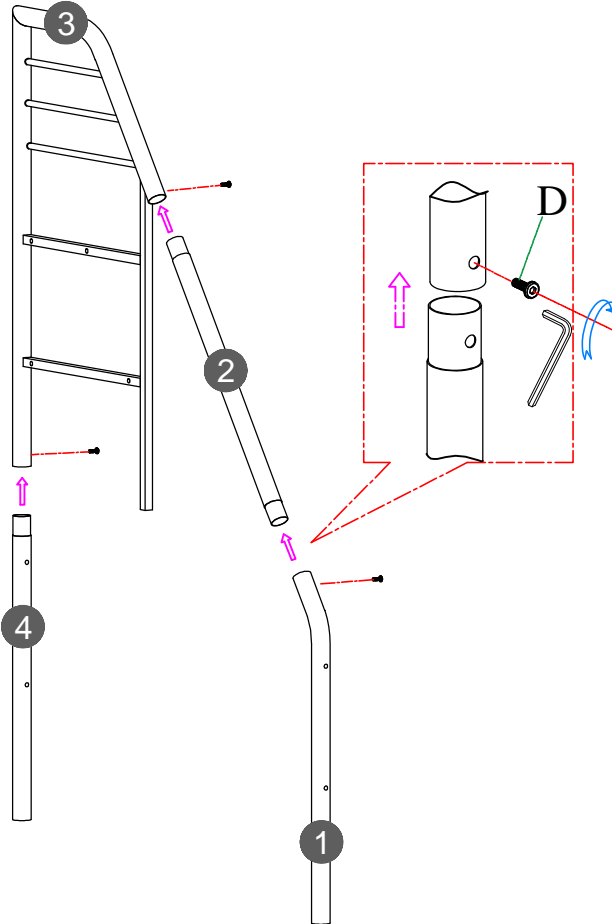
 1/4"*60mm Bolts - 24pcs	 1/4"*35mm Bolts - 27pcs	 1/4"*28mm Bolts - 26pcs	 1/4"*15mm Bolts - 22pcs
 Ø42x10mm Pipe plug - 8pcs	 Ø33x10mm Pipe plug - 2pcs	 4*58mm Allen key - 1pc	 Connect Wall 2 set

This set is included 2 boxes if don't receive full 2 boxes please contact our customer service team .

LOFT BED
ASSEMBLY INSTRUCTIONS
MF285811&MF285812

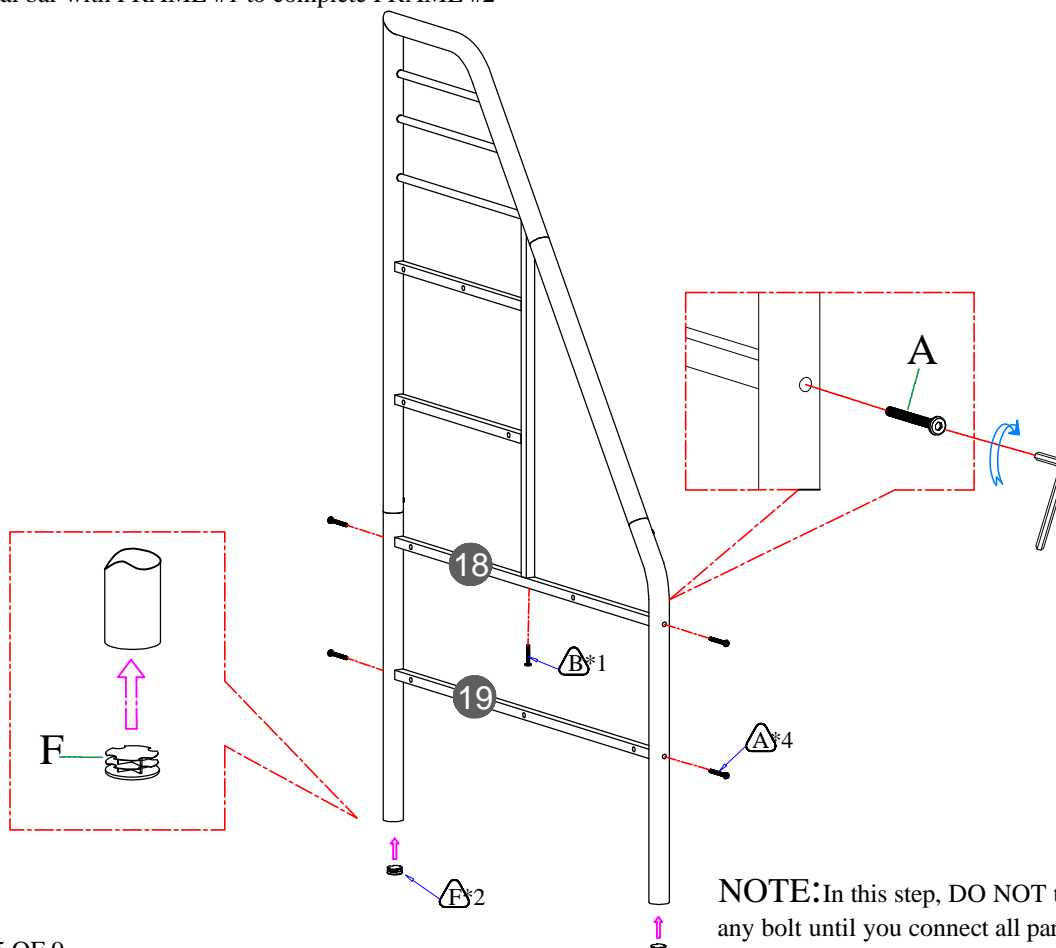
STEP 1:Following below illustration Assembly FRAME #1.

Using hardware #D connect #1, #2, #4 vertical bar with #3 hard rail to complete FRAME #1



NOTE:In this step, DO NOT tighten any bolt until you connect all part together

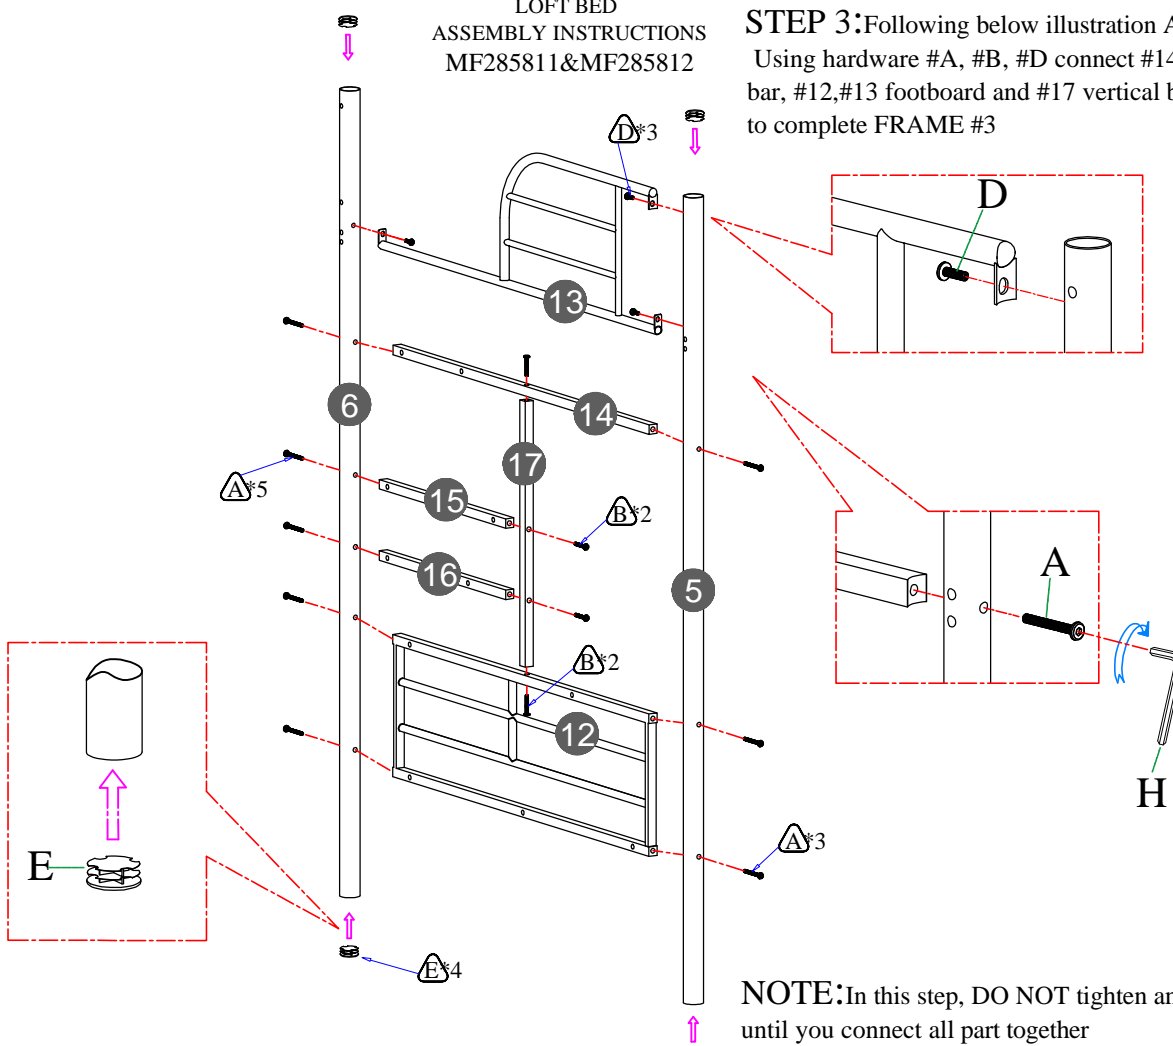
STEP 2:Following below illustration Assembly FRAME #2. Using hardware #A, #B connect #18, #19 horizontal bar with FRAME #1 to complete FRAME #2



NOTE:In this step, DO NOT tighten any bolt until you connect all part together

LOFT BED
ASSEMBLY INSTRUCTIONS
MF285811&MF285812

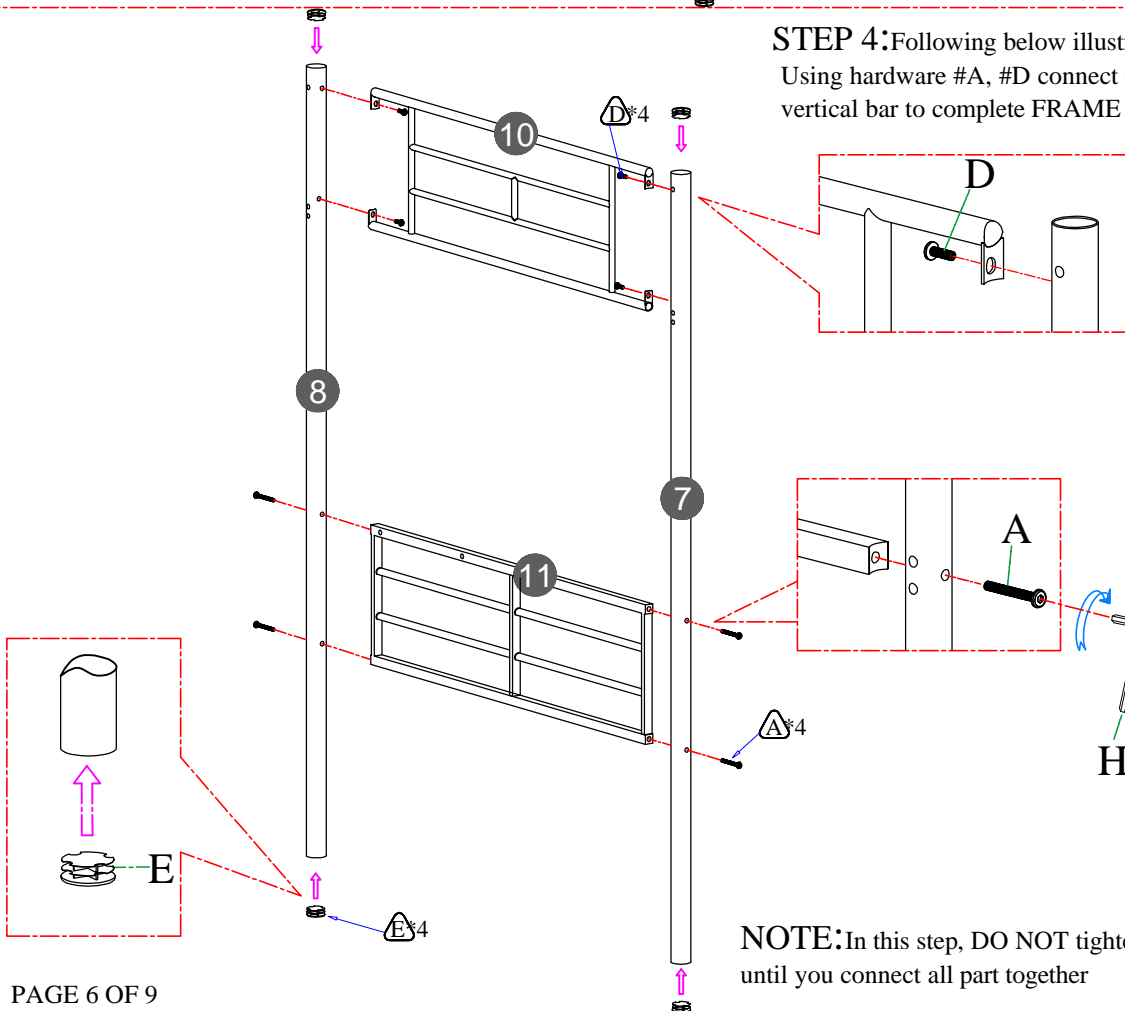
STEP 3:Following below illustration Assembly FRAME #3.
Using hardware #A, #B, #D connect #14, #15, #16 horizontal bar, #12,#13 footboard and #17 vertical bar with #5,#6 vertical bar to complete FRAME #3



E	
	Ø42x10mm - 4pcs
A	
	1/4"*60mm - 8pcs
B	
	1/4"*35mm - 4pcs
D	
	1/4"*15mm - 3pcs
H	

NOTE:In this step, DO NOT tighten any bolt until you connect all part together

STEP 4:Following below illustration Assembly FRAME #4.
Using hardware #A, #D connect #10,#11 headboard with #7, #8 vertical bar to complete FRAME #4

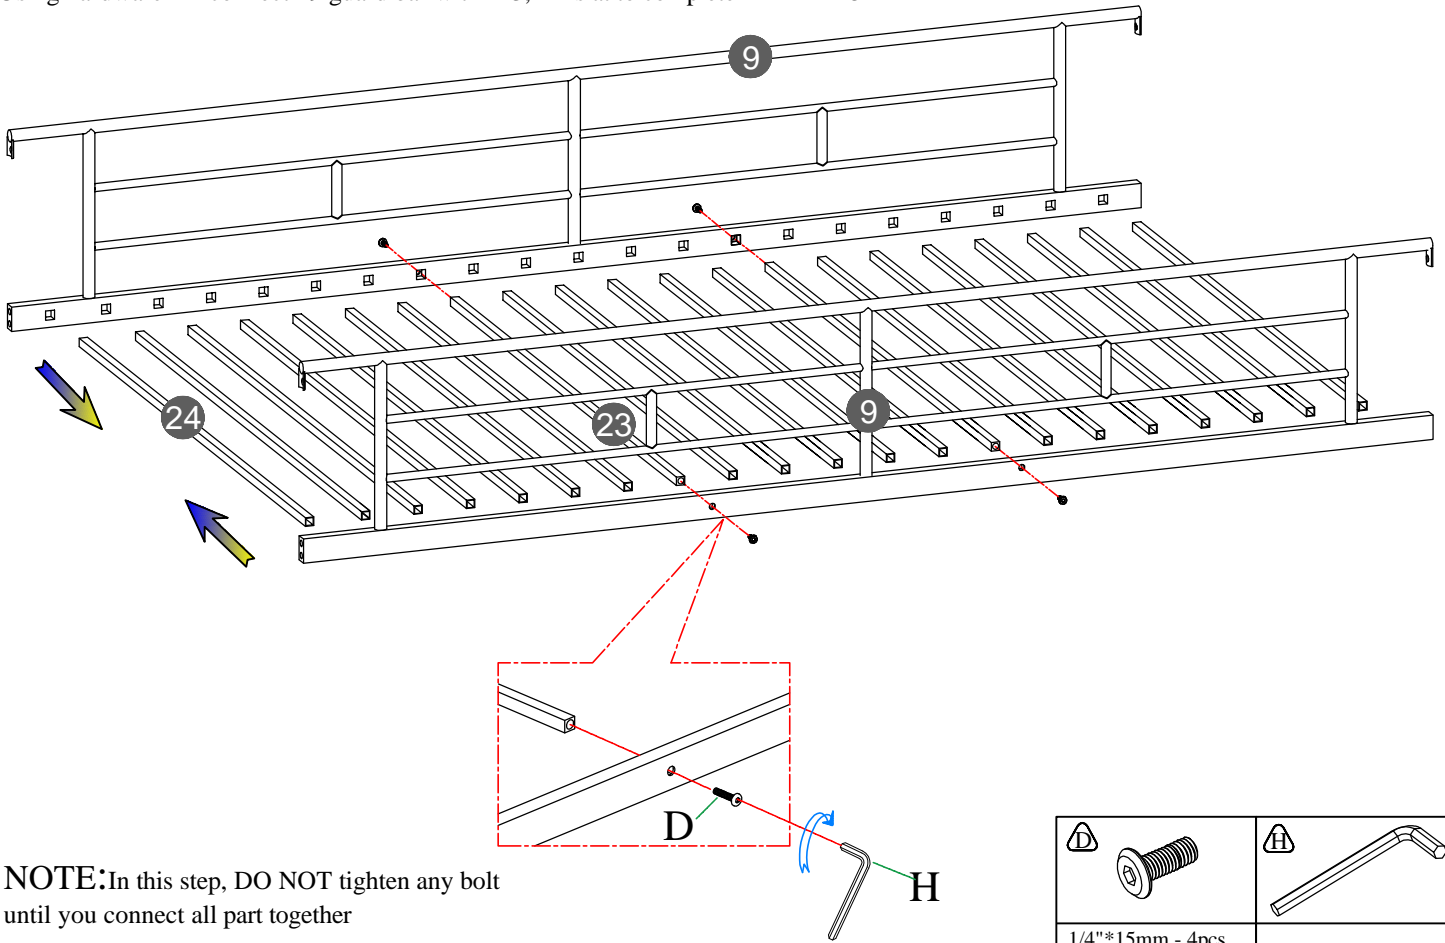


E	
	Ø42x10mm - 4pcs
A	
	1/4"*60mm - 4pcs
D	
	1/4"*15mm - 4pcs
H	

NOTE:In this step, DO NOT tighten any bolt until you connect all part together

STEP 5:Following below illustration Assembly FRAME #5.

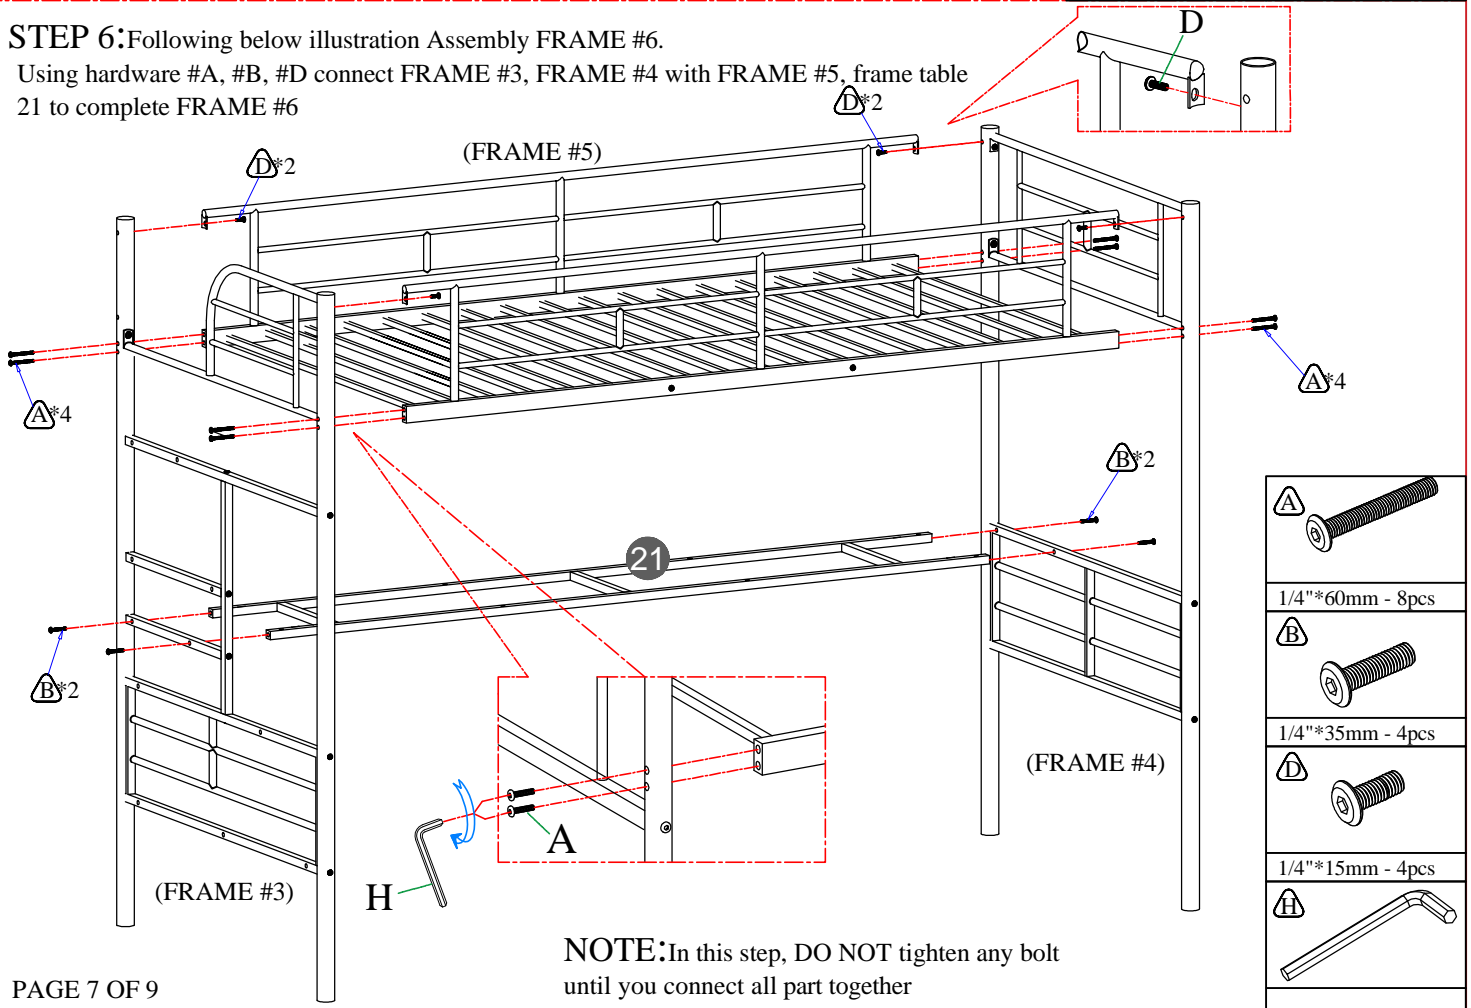
Using hardware #D connect #9 guard bar with #23,#24 slat to complete FRAME #5



NOTE:In this step, DO NOT tighten any bolt until you connect all part together

STEP 6:Following below illustration Assembly FRAME #6.

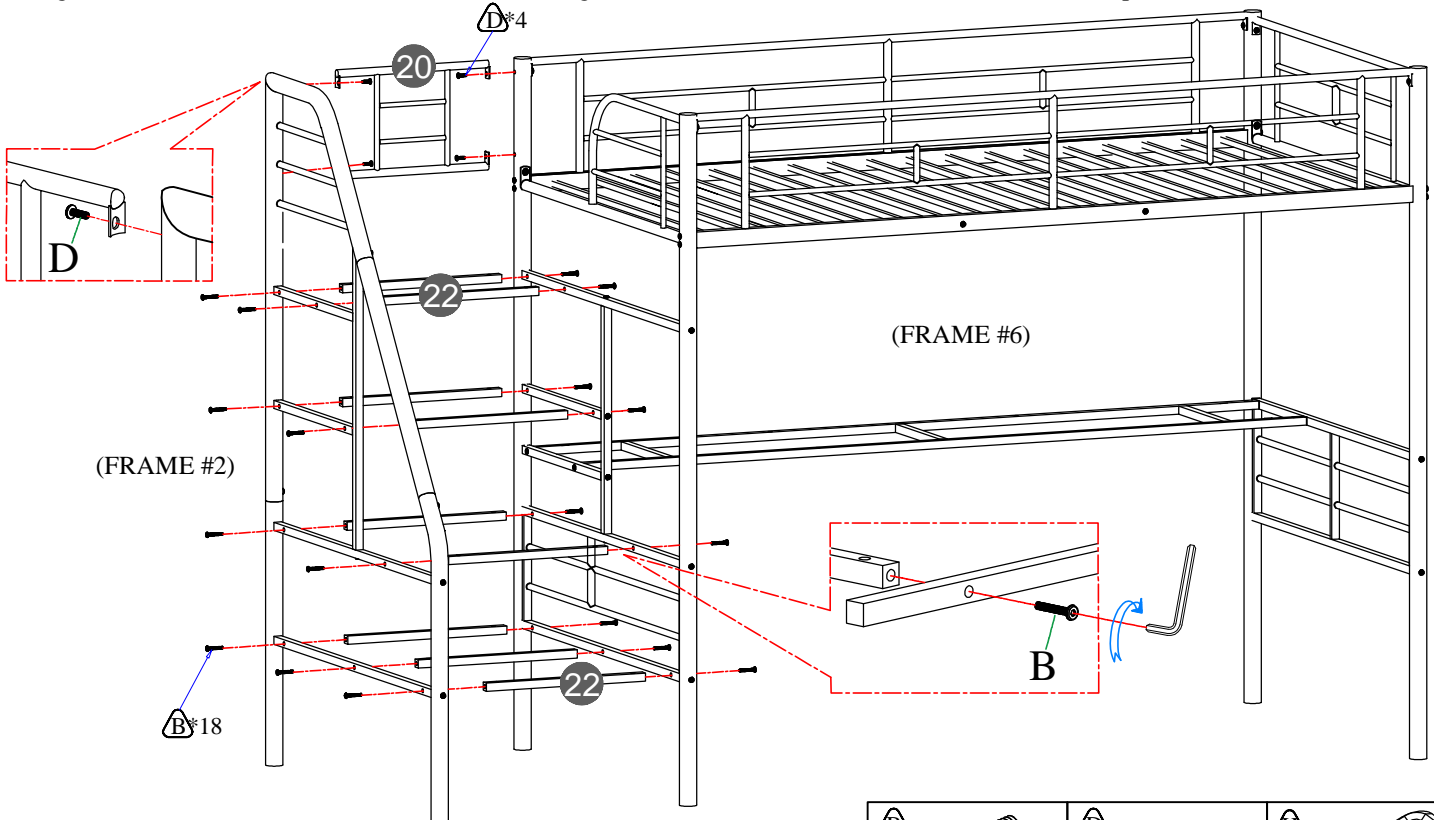
Using hardware #A, #B, #D connect FRAME #3, FRAME #4 with FRAME #5, frame table 21 to complete FRAME #6






NOTE:In this step, DO NOT tighten any bolt until you connect all part together

STEP 7:Following below illustration Assembly FRAME #7.

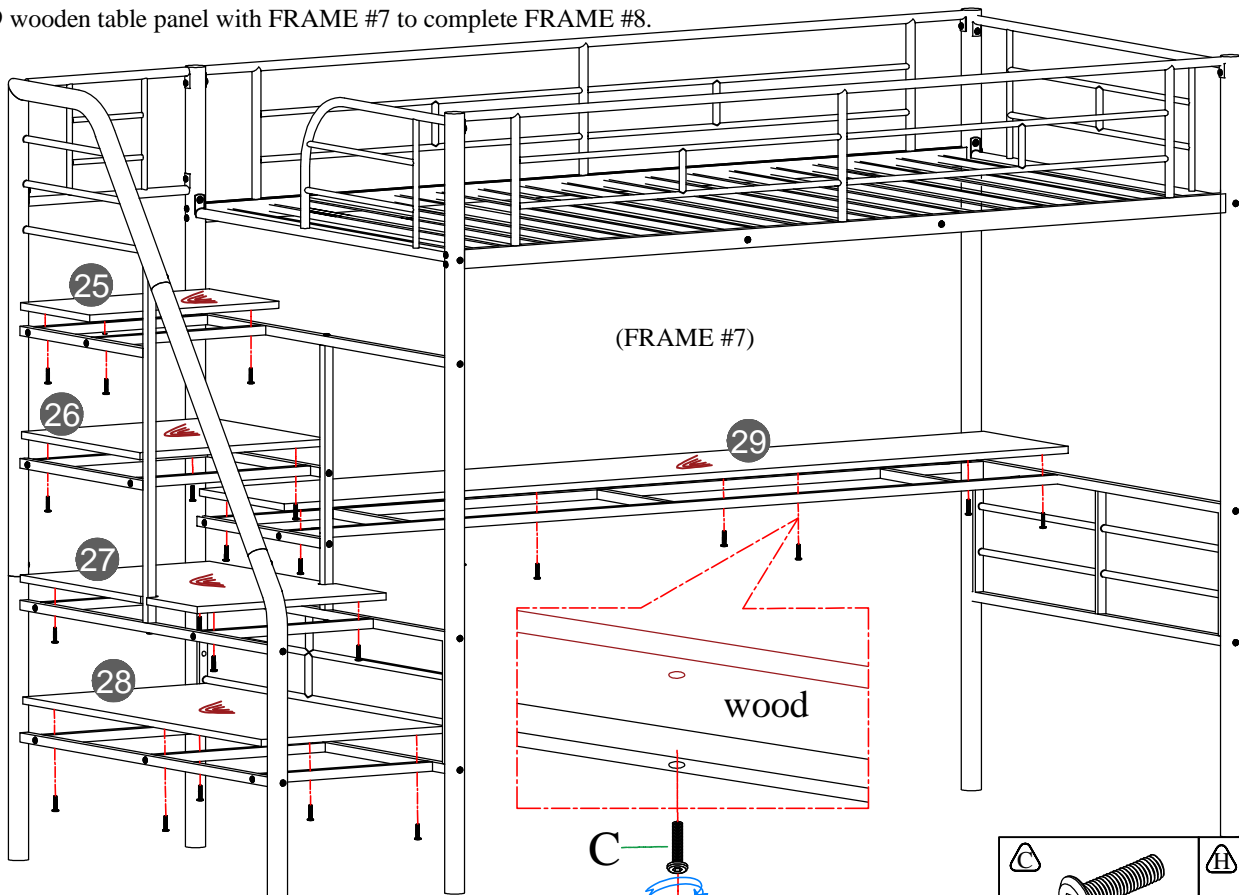
Using hardware #B,#D connect #22 horizontal bar,#20 guard handrail with FRAME #2, FRAME #6 to complete FRAME #7.



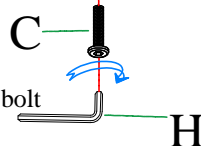
NOTE:In this step, DO NOT tighten any bolt until you connect all part together



		
1/4"*35mm - 18pcs	1/4"*15mm - 4pcs	

STEP 8:Following below illustration Assembly FRAME #8. Using hardware #C connect #25,#26,#27,#28 wooden shelf panel and #29 wooden table panel with FRAME #7 to complete FRAME #8.



NOTE:In this step, DO NOT tighten any bolt until you connect all part together



	
1/4"*28mm - 26pcs	

LOFT BED
ASSEMBLY INSTRUCTIONS
MF285811&MF285812

STEP 9 :

Following below illustration Assembly Frame # 9.Using hardware #I connect Frame #8 with Wall to complete .

COMPLETED LOFT BED

