

# ZIPPITY

*Easy Does It!*


## WOODTEK POOLSIDE ORGANIZER (33" W X 55" L X 41" H)

## ASSEMBLY INSTRUCTIONS ZP19078

**60 MIN**

*Approximate assembly time*

Want to see a video on how to  
assemble this product?  
**Scan the QR code**

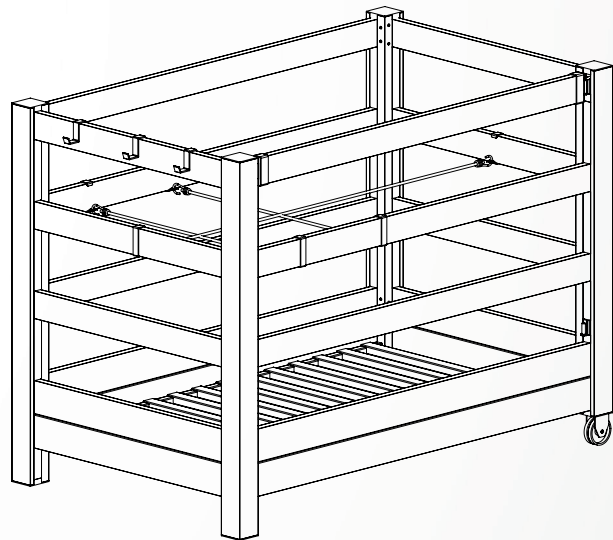

## GENERAL INFORMATION

### MISSING OR DAMAGED PARTS?



➤ **Visit Our Website**  
so we can help you right away!  
**parts.nychbrands.com**

\* You can also reach us via phone or email.

Hours of Operation - **Weekdays 9am-5pm EST**

To better help you, ➤ Your product number (**EC19078**)  
**please have the** ➤ Your affected part letters (**page 4-7**)  
**following** ➤ Your original product box

### NEED ASSEMBLY HELP?


If you are having problems with assembly or installation of this product,  
**please contact at:**

📞 **704-892-5222 / 877-234-6196** ✉ **support@encloscreens.com**

### NEED TO RETURN?


If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, **you will need to initiate the return from the company you originally purchased from.**

## Detailed Product Dimensions & Specifications

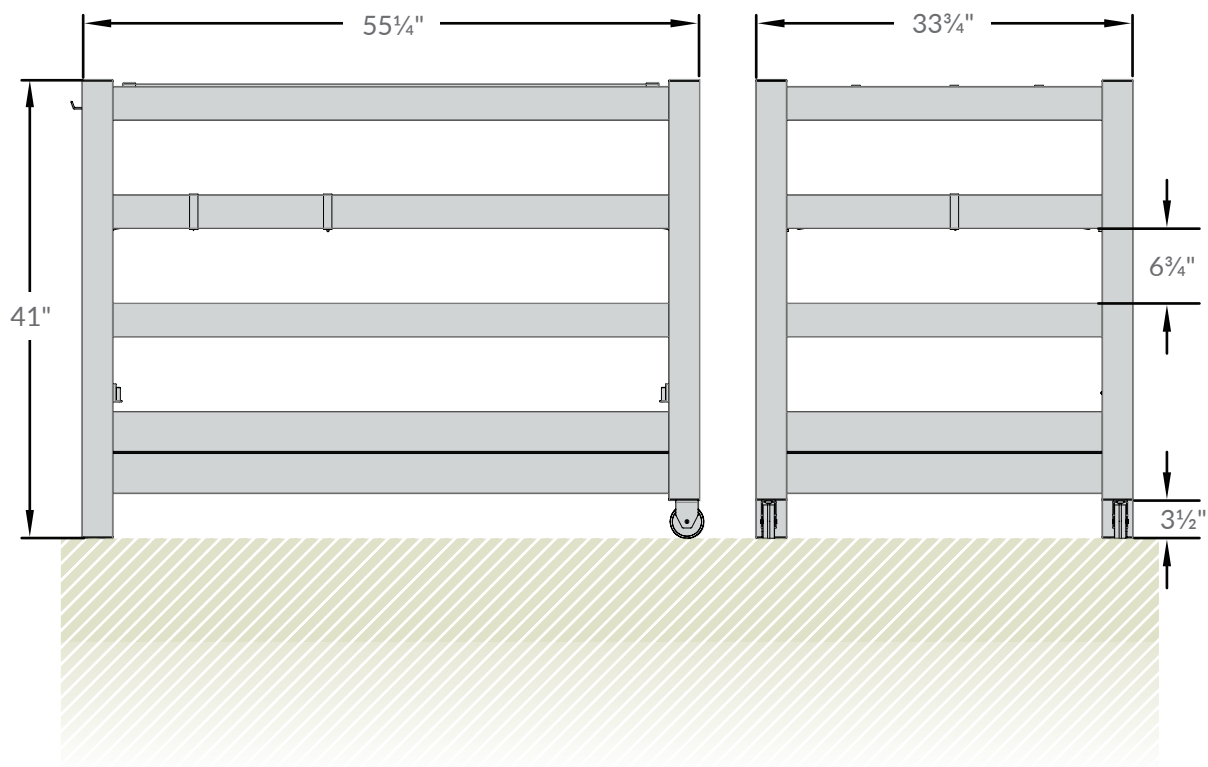


# LAY OUT MATERIALS

► Tools required for a smoother installation experience.

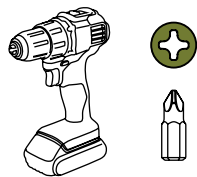



► Drill with Phillips bit

## POSTS

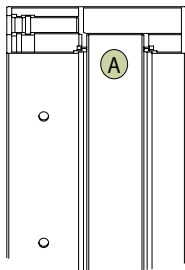


A

Post A (1)  
2 3/4" x 2 3/4" x 41"

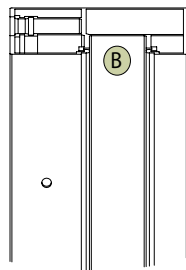


B

Post B (1)  
2 3/4" x 2 3/4" x 41"

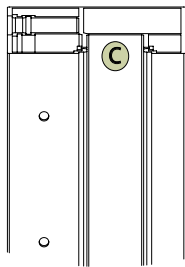

C

Post C (1)  
2 3/4" x 2 3/4" x 41"

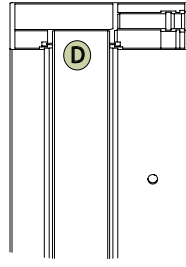


D

Post D (1)  
2 3/4" x 2 3/4" x 41"


# LAY OUT MATERIALS

## WALLS

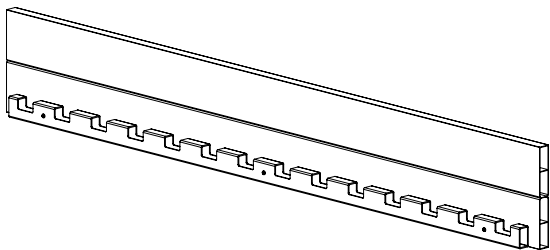


E

**Long Bottom Board (2)**  
1 3/4" x 7 3/8" x 52"

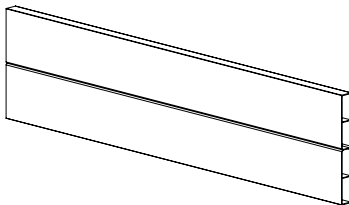


F

**Short Bottom Board (2)**  
7 3/8" x 7 3/8" x 30 1/2"

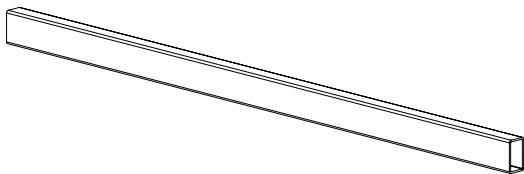


G

**Floor Boards (14)**  
1 1/2" x 7 3/8" x 30 3/4"

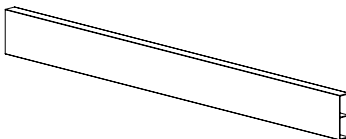


H

**Short Slats (6)**  
3" x 7 3/8" x 30 1/2"

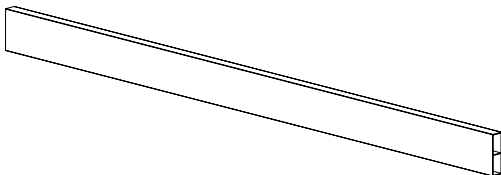

I








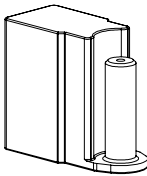


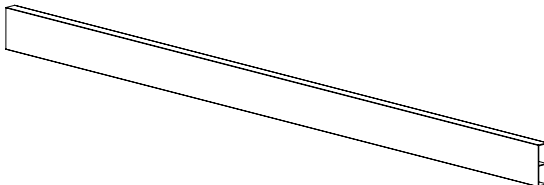
**Long Adjustable Slat (1)**  
3" x 7 3/8" x 47 3/4"



J

**Long Slats (5)**  
3" x 7 3/8" x 52"
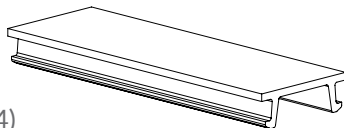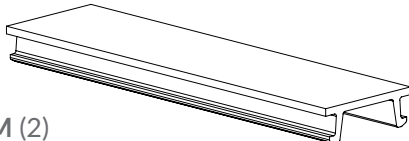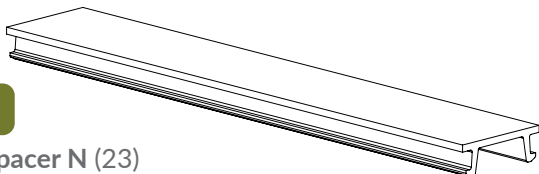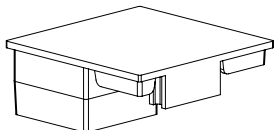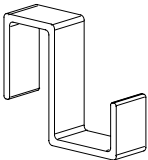
# LAY OUT MATERIALS

SPACERS		
<div>K</div>  <p>Spacer K (4) <math>\frac{7}{8}" \times 1\frac{1}{4}" \times \frac{3}{8}"</math></p>	<div>L</div>  <p>Spacer L (4) <math>3\frac{1}{2}" \times 1\frac{1}{4}" \times \frac{3}{8}"</math></p>	
<div>M</div>  <p>Spacer M (2) <math>4\frac{1}{4}" \times 1\frac{1}{4}" \times \frac{3}{8}"</math></p>	<div>N</div>  <p>Spacer N (23) <math>6\frac{3}{4}" \times 1\frac{1}{4}" \times \frac{3}{8}"</math></p>	
SMALL PARTS		
<div>O</div>  <p>Post Cap (4) <math>2\frac{3}{4}" \times 2\frac{3}{4}" \times 1"</math></p>	<div>P</div>  <p>Towel Hook (3)</p>	<div>Q</div>  <p>Bungee Bracket (6)</p>
<div>R</div>  <p>Rail Hinge (2)</p>	<div>S</div>  <p>Post Hinge (4)</p>	
HARDWARE		
<div>T</div>  <p>Long Bungee (1)</p>	<div>U</div>  <p>Short Bungee (2)</p>	
<div>V</div>  <p>Short Self-Drilling Screws (4) .75"</p>	<div>W</div>  <p>Long Self-Drilling Screws (36) 2.5"</p>	

USE THIS PAGE TO MEASURE YOUR SPACERS.

N

$6\frac{3}{4}" \times 1\frac{1}{4}" \times \frac{3}{8}"$

M

$4\frac{1}{4}" \times 1\frac{1}{4}" \times \frac{3}{8}"$

L



$3\frac{1}{2}" \times 1\frac{1}{4}" \times \frac{3}{8}"$

K

$4\frac{1}{4}" \times 1\frac{1}{4}" \times \frac{3}{8}"$






## ASSEMBLE UNIT

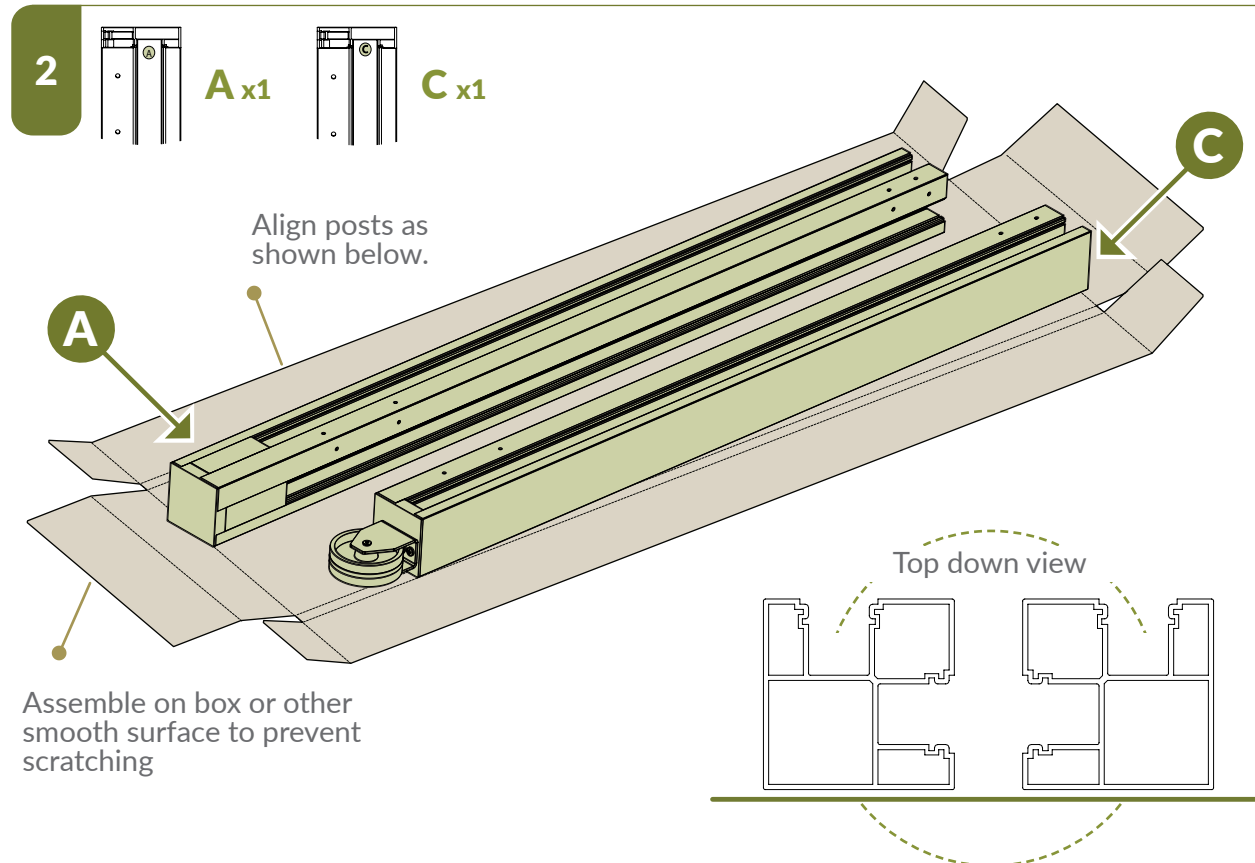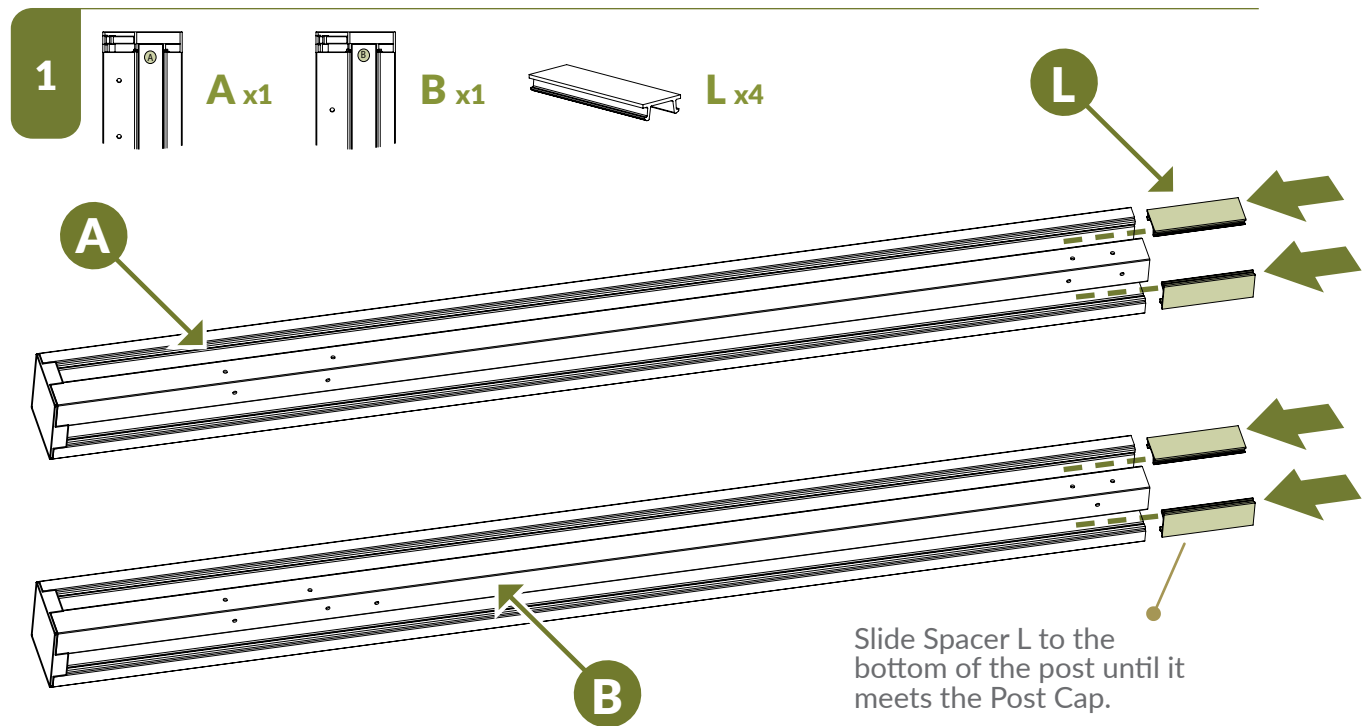




3

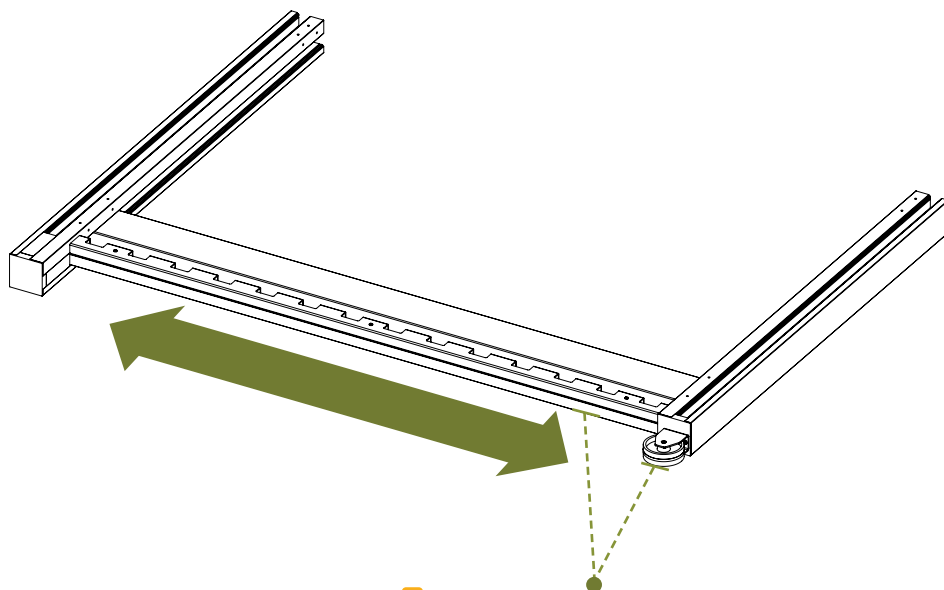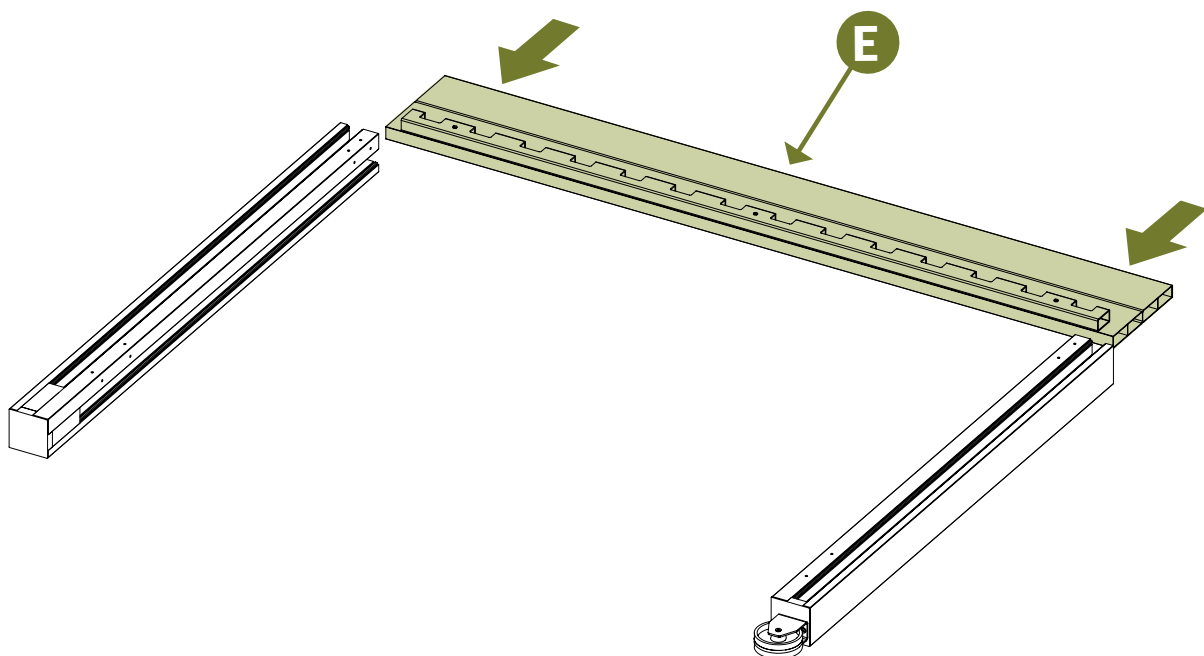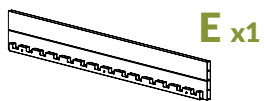

! Ensure that the wheel is inline with the bottom board (E)


4

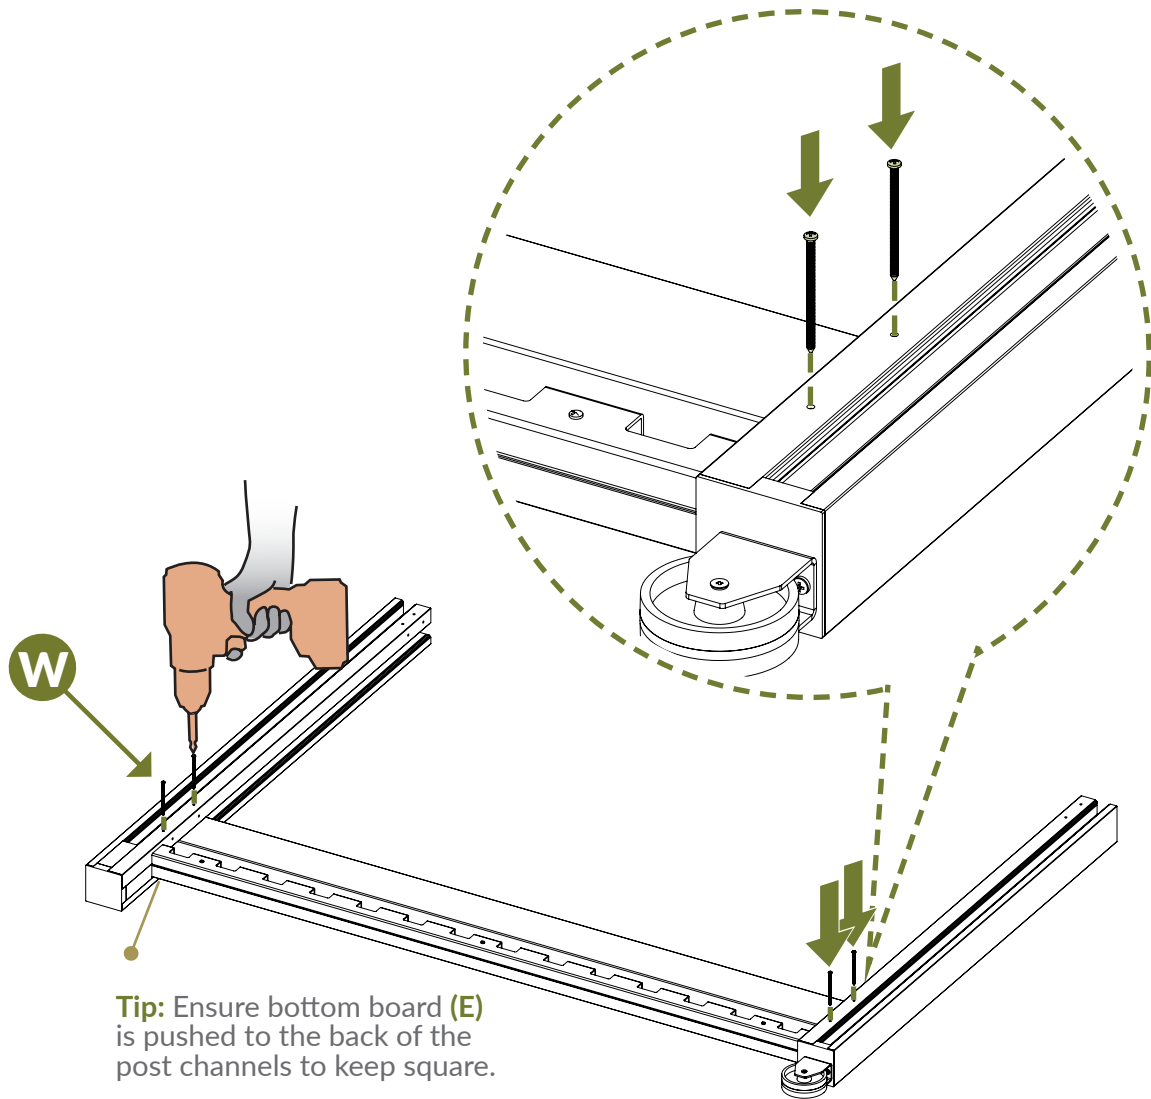**W** x4

**Tip:** Ensure bottom board (E) is pushed to the back of the post channels to keep square.


5

Repeat steps 2-3 for opposite side using

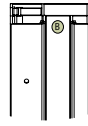


**B x1**

and

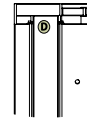

**D x1**

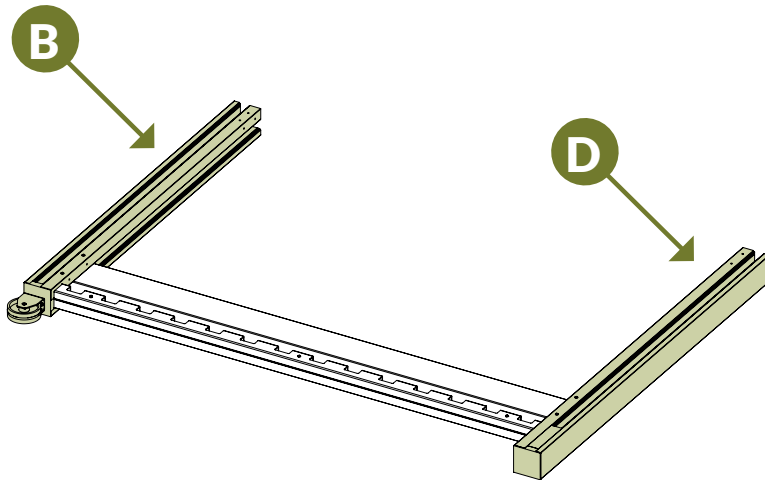


Repeat steps 3-4 to  
create second panel

6




**F x2**

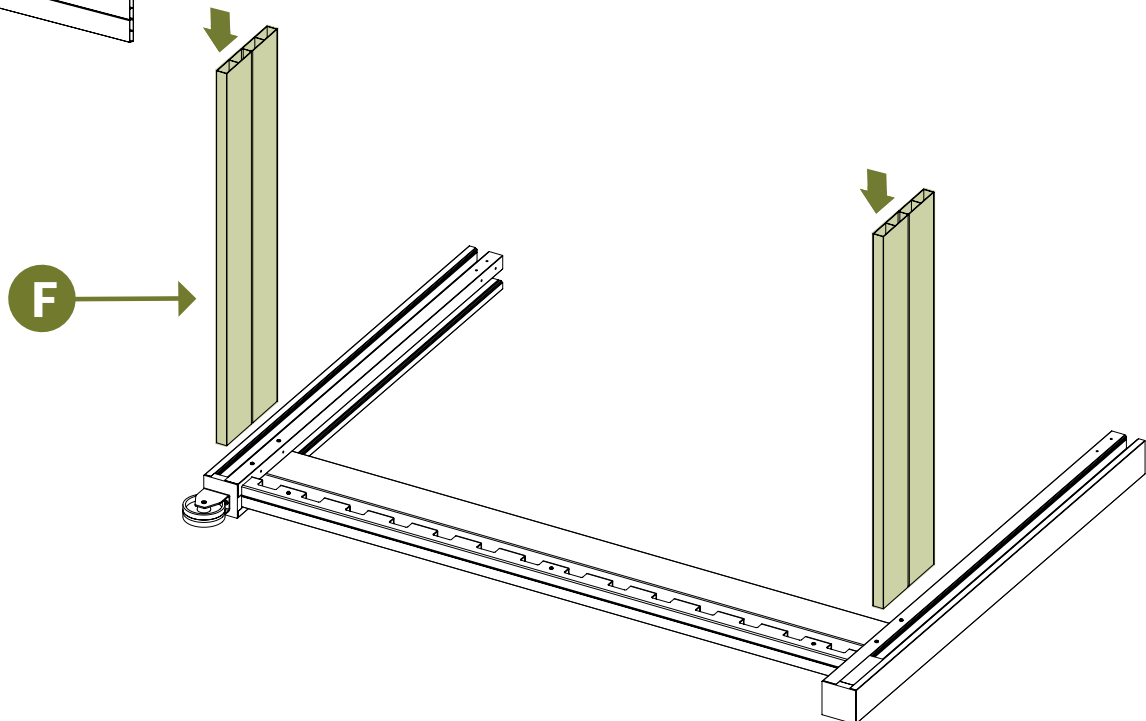


7



W x4

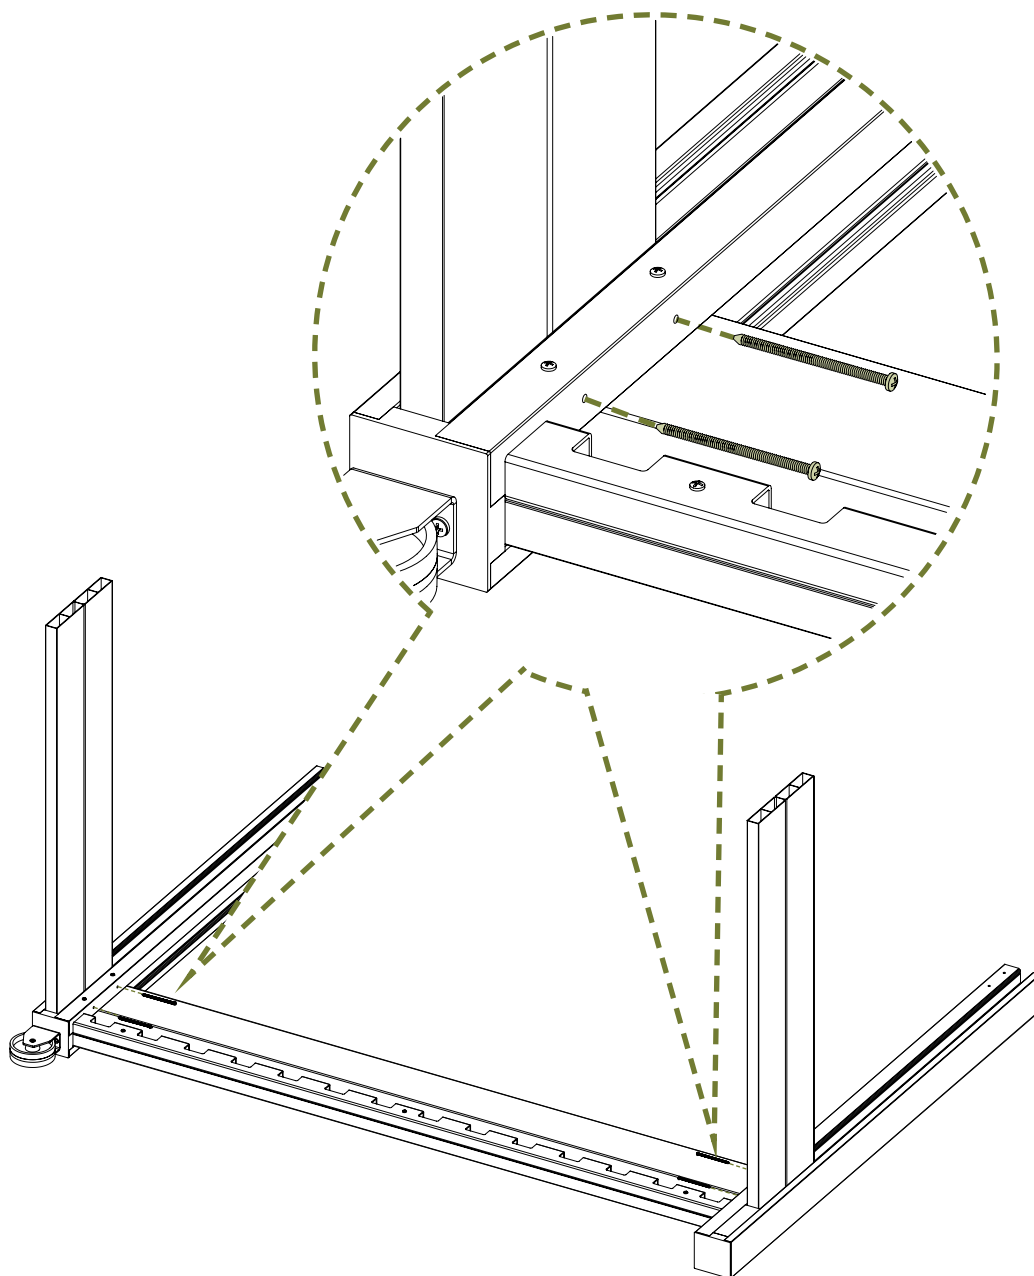


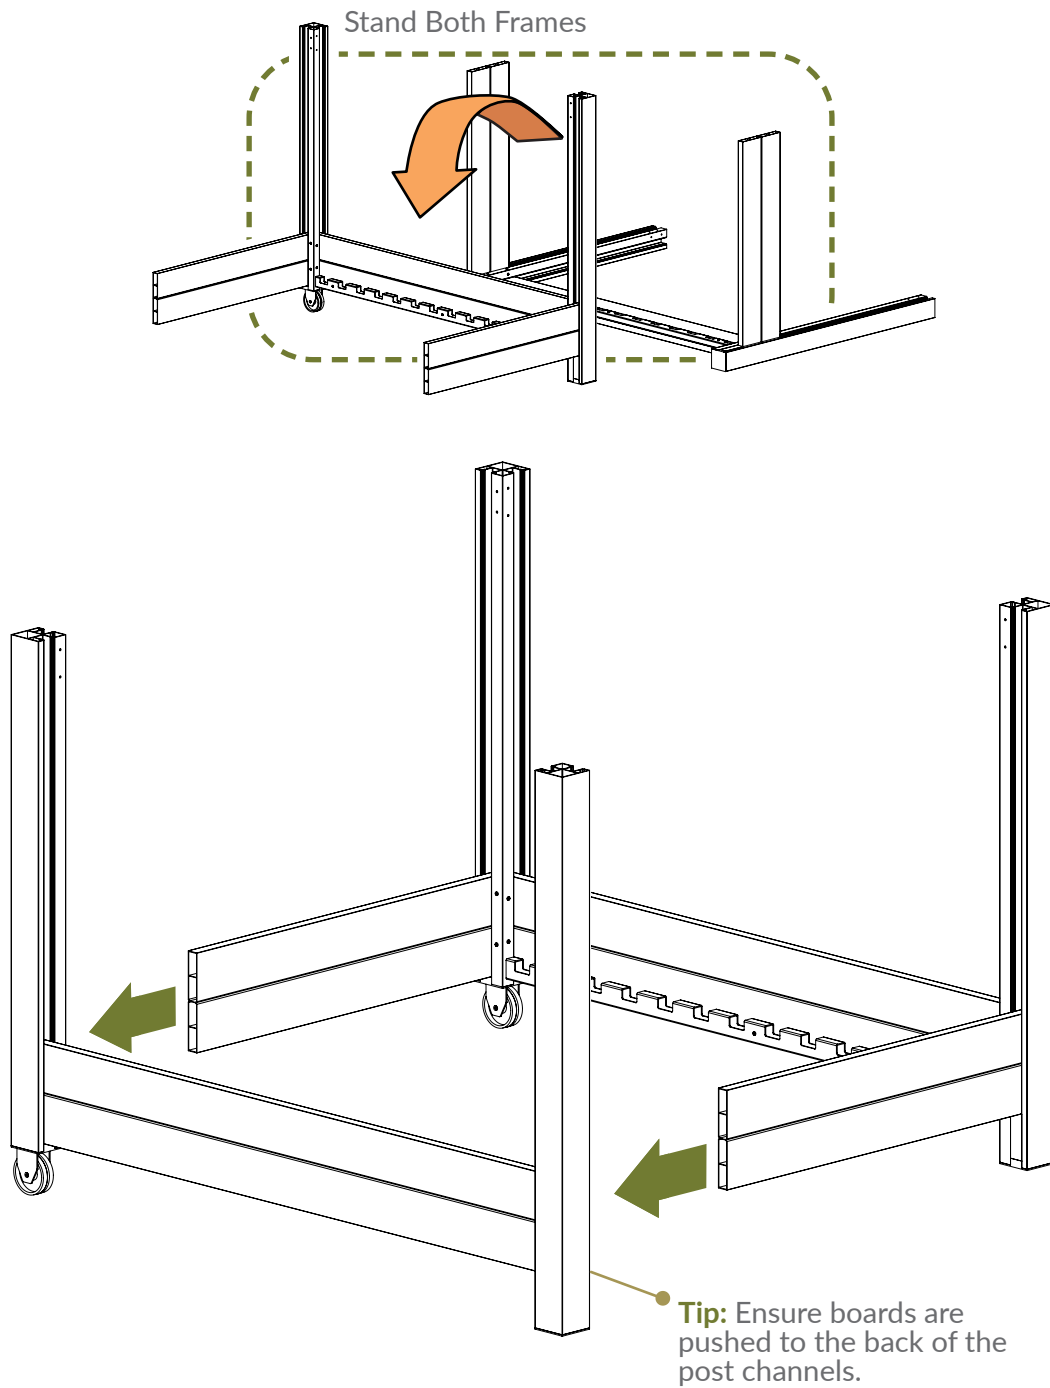

9




W x4

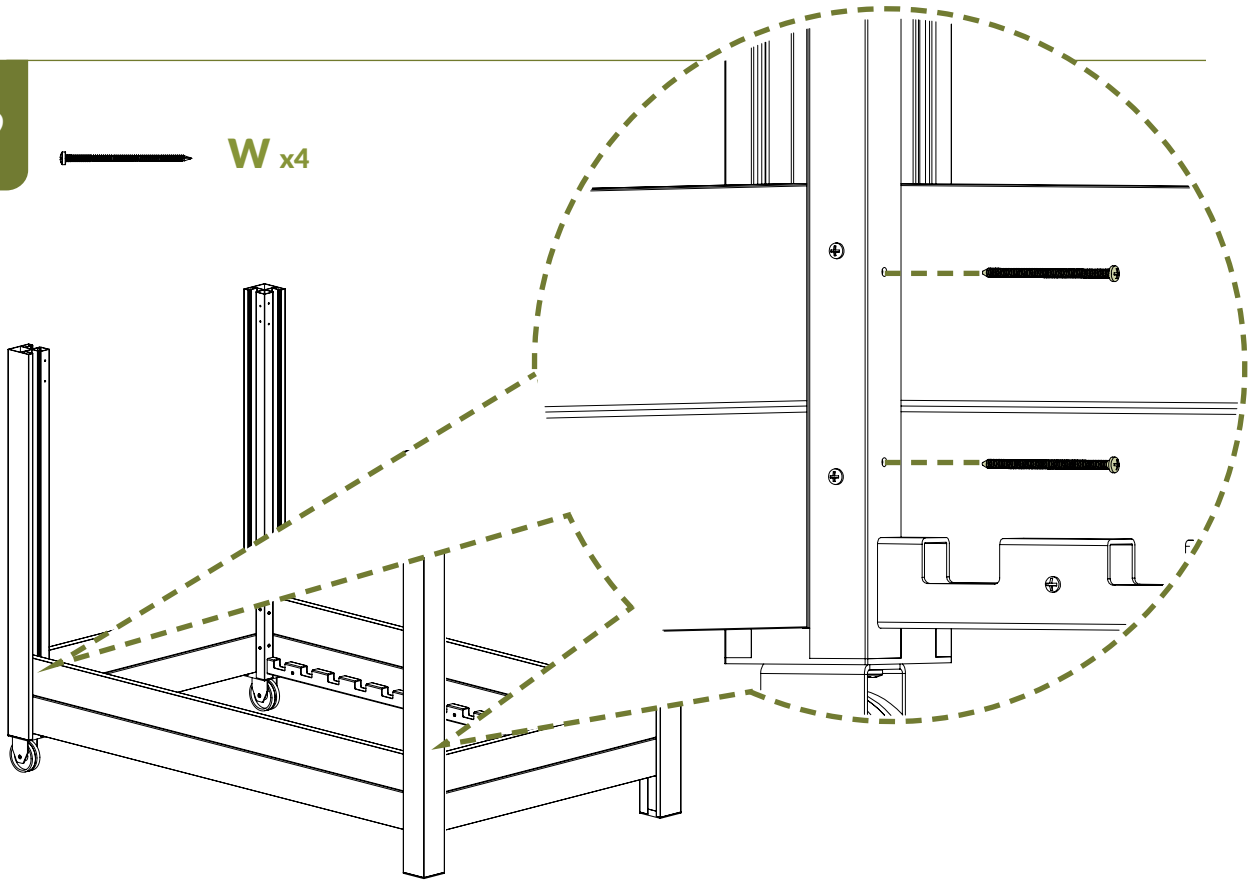

10




G x14

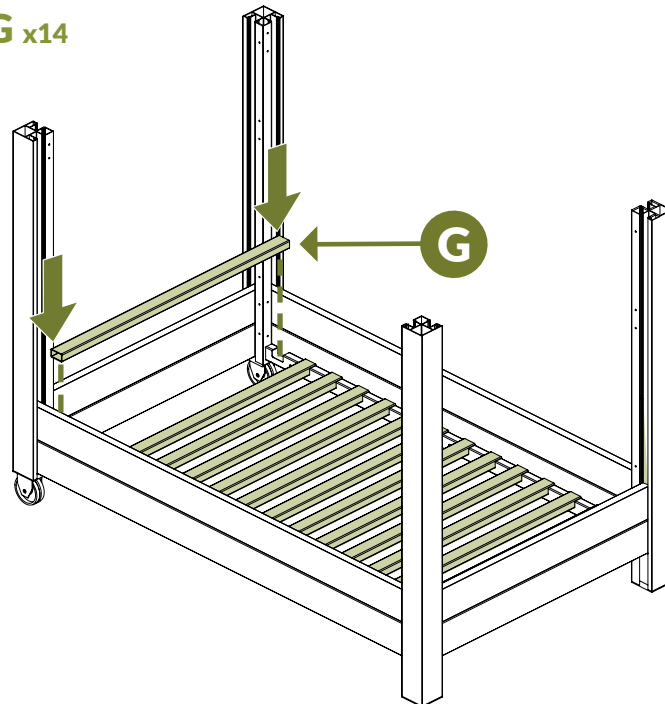


11





N x6

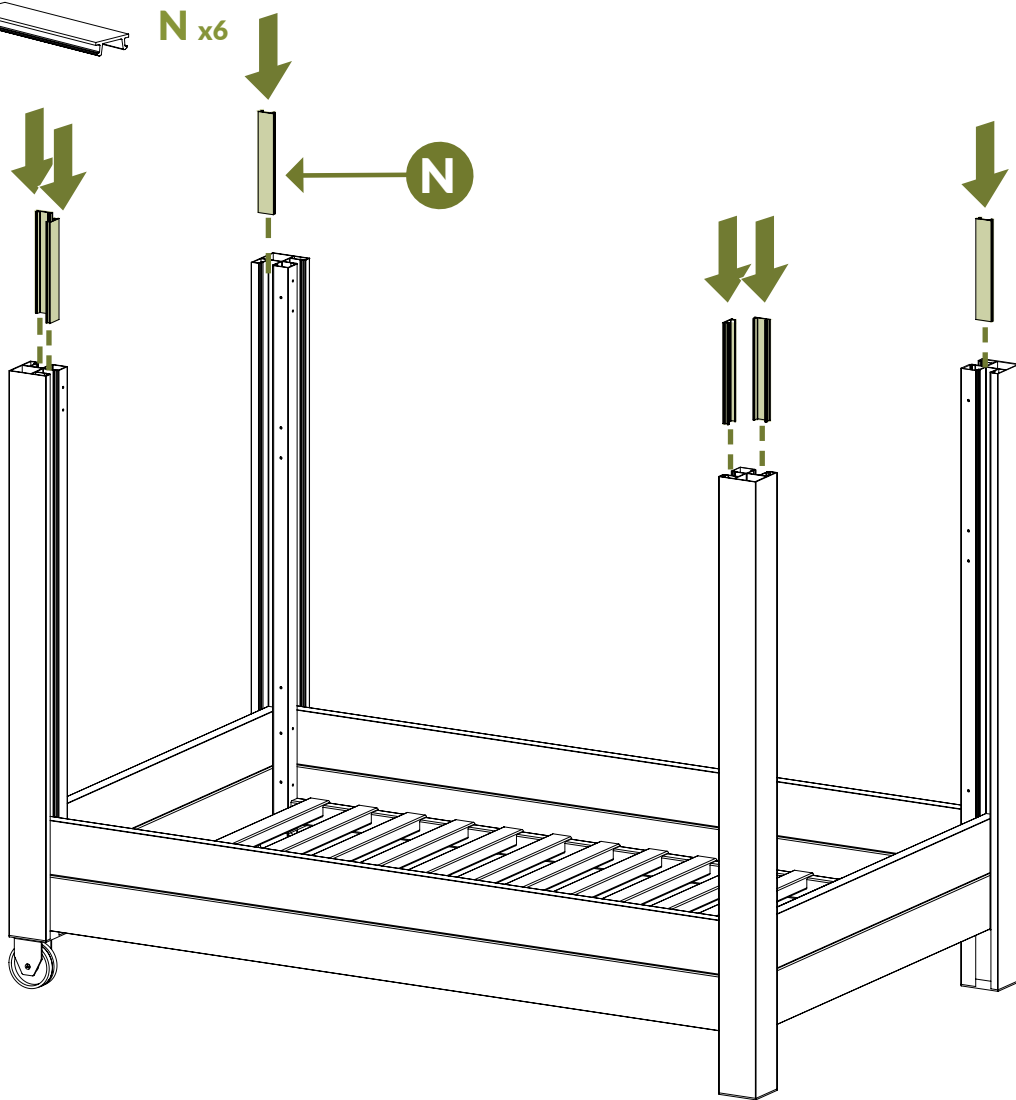

Rotate so that the wheels  
are on your right hand side.

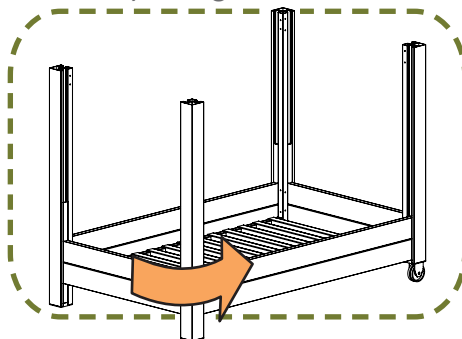


12

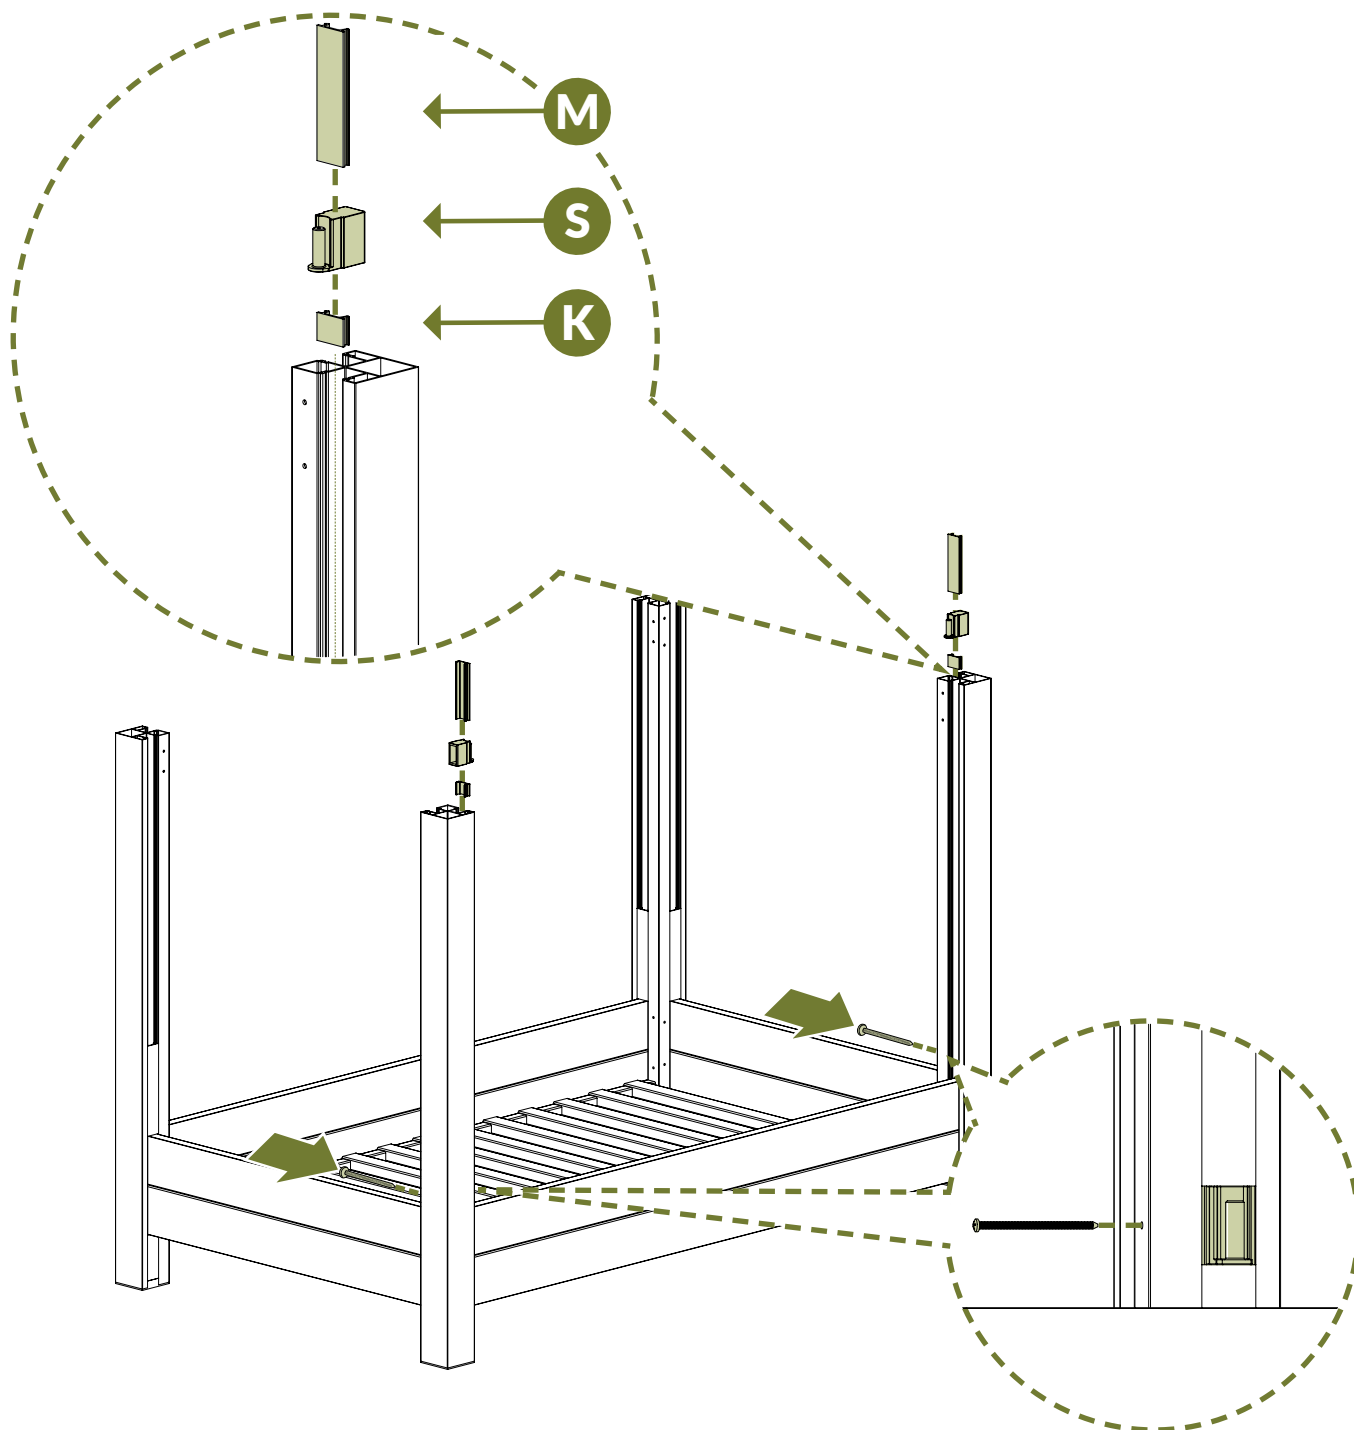





13

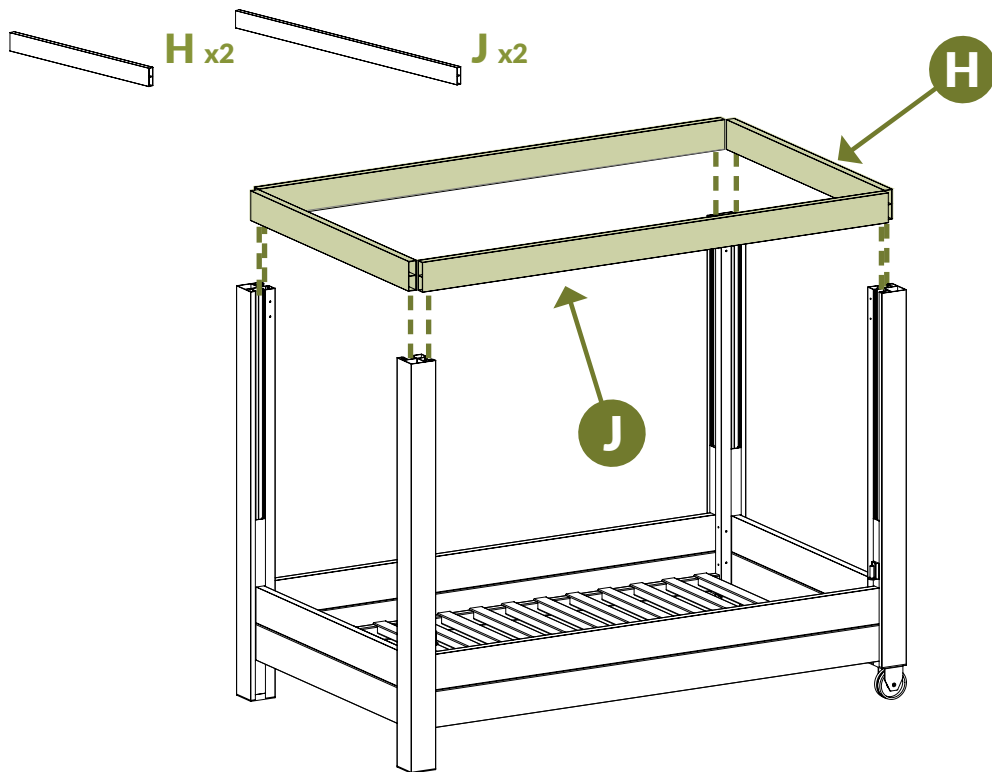

14

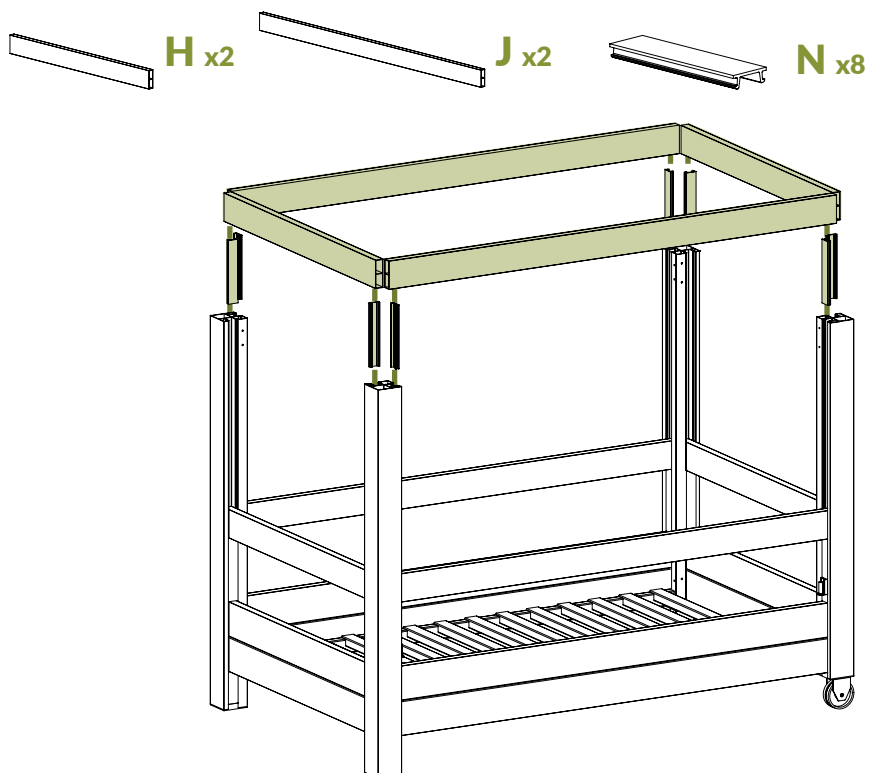

15



**M** x2




**K** x2



**S** x2




**W** x2

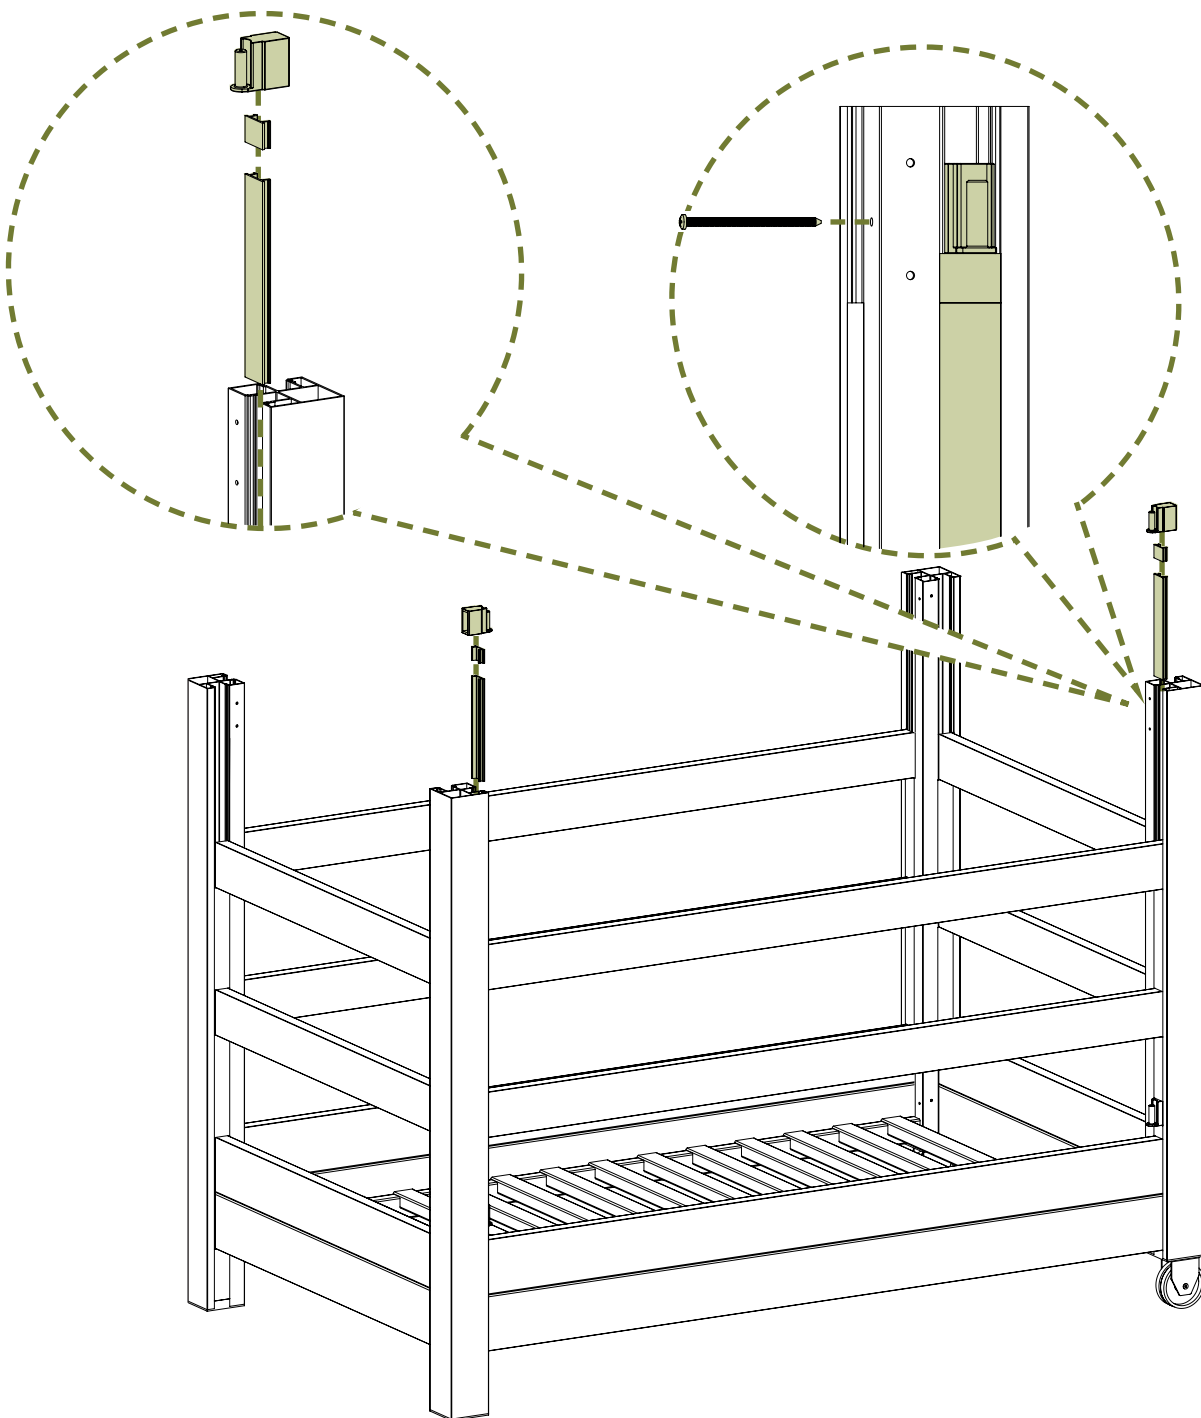



16





N x6

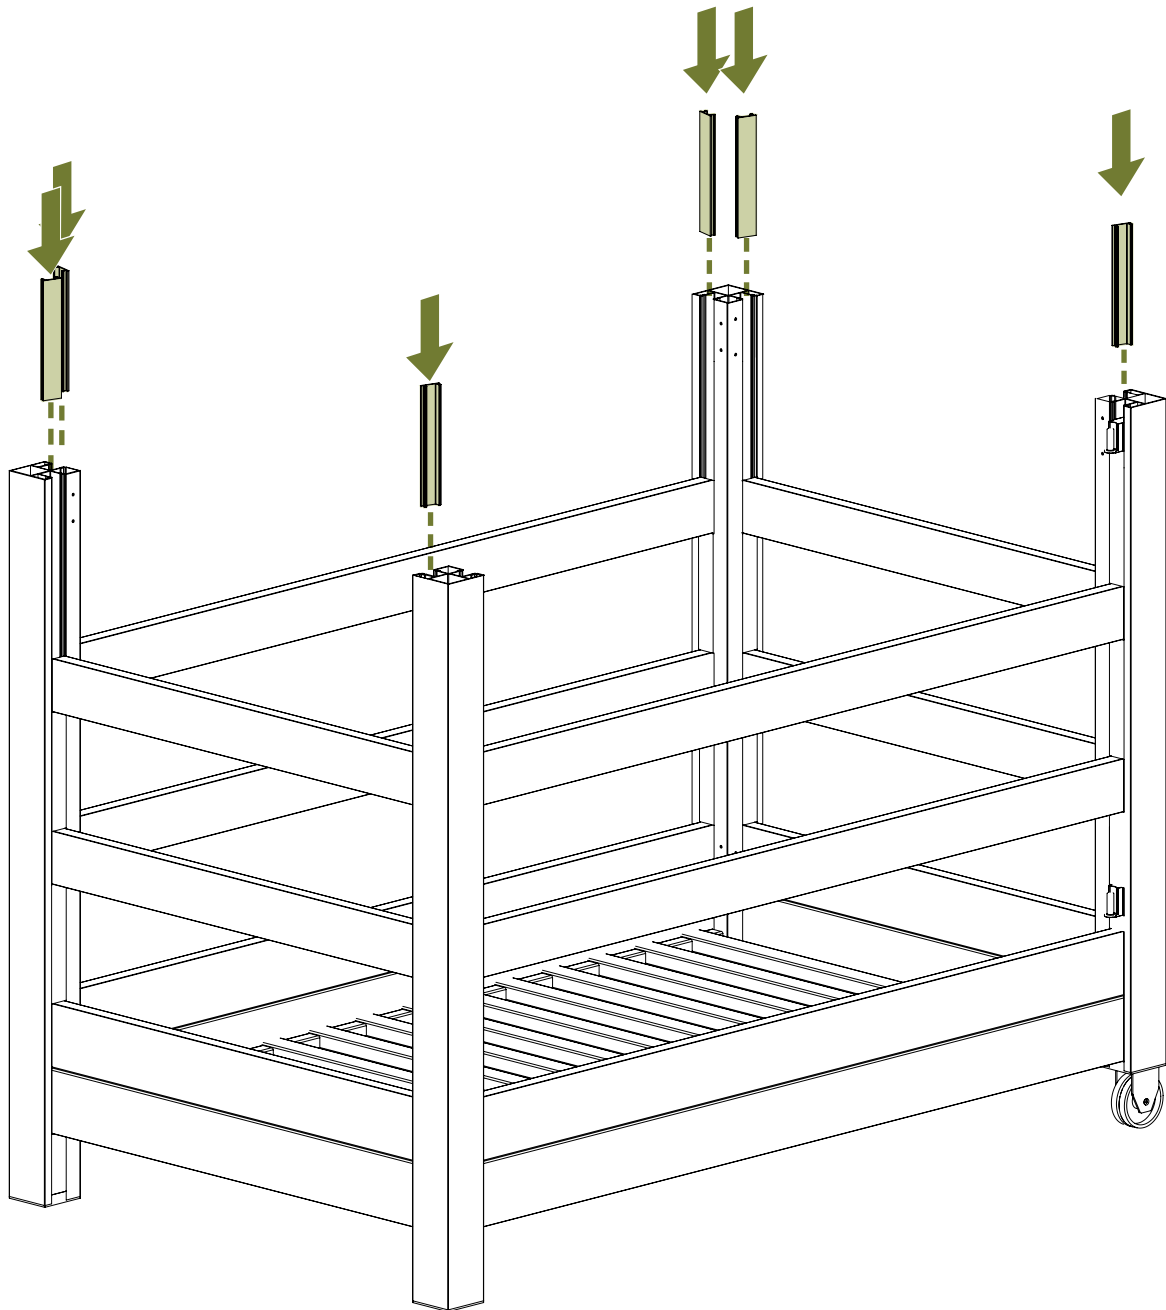

17

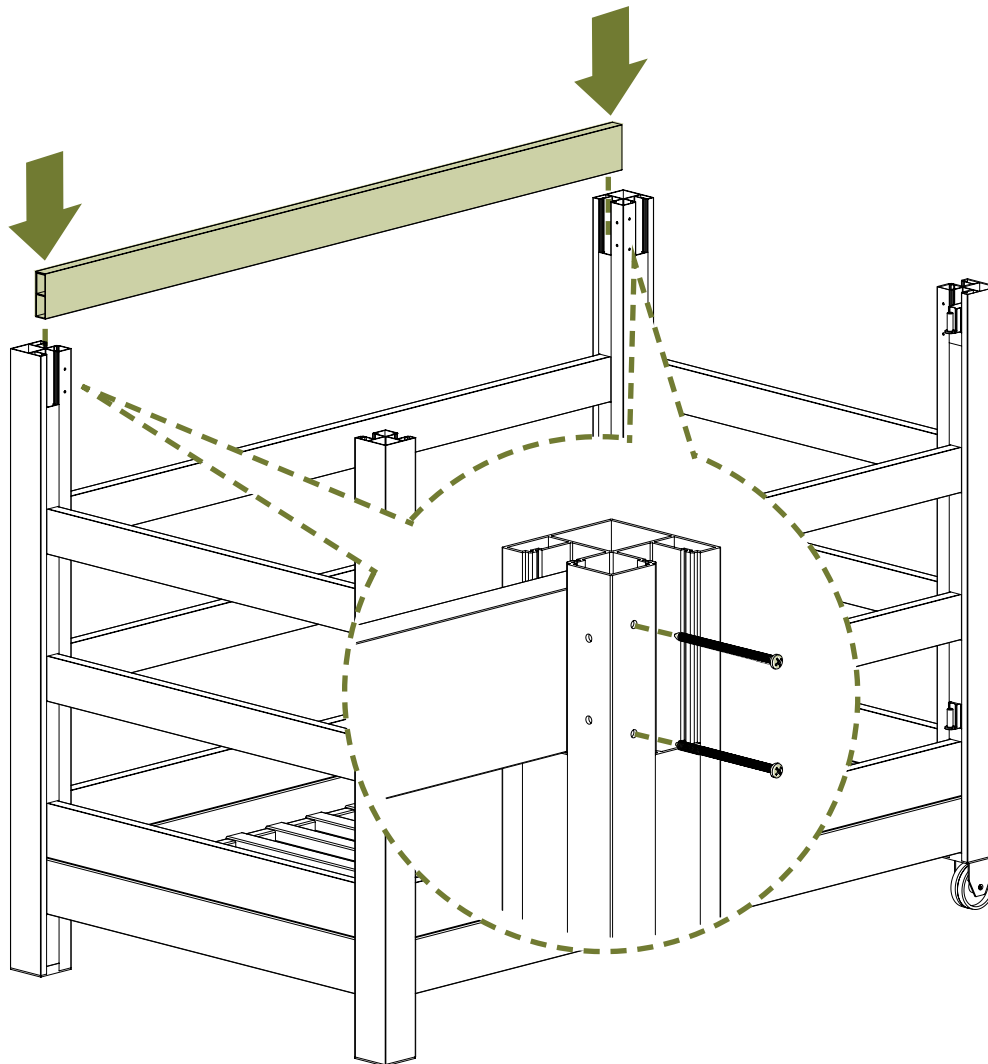


18

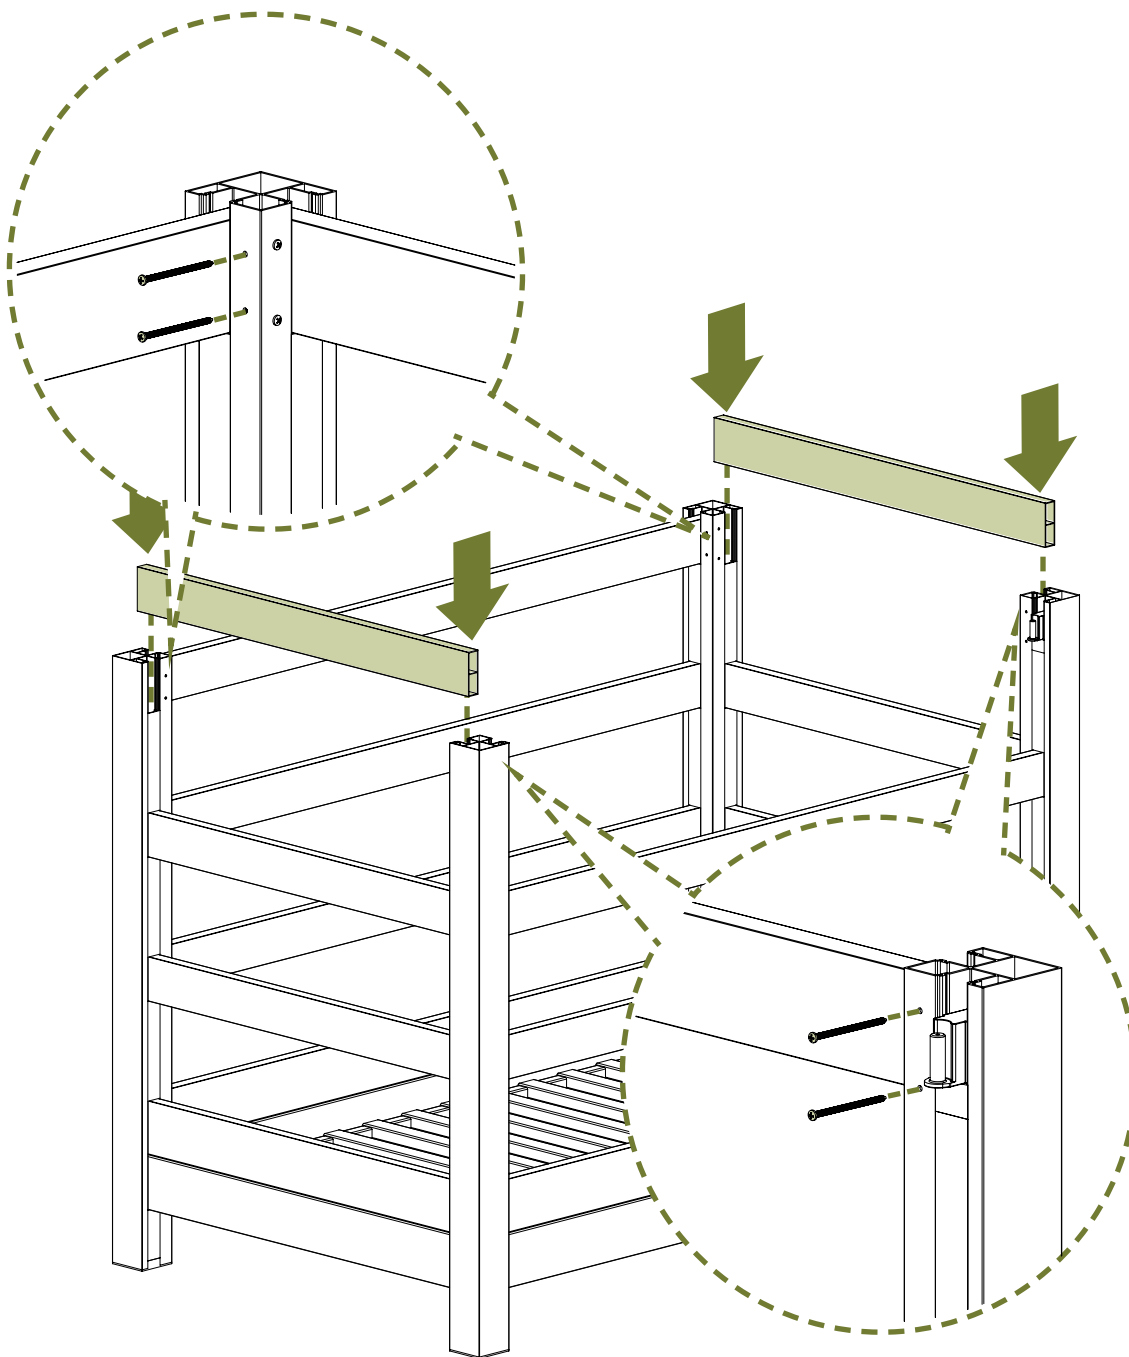


19

 O x4

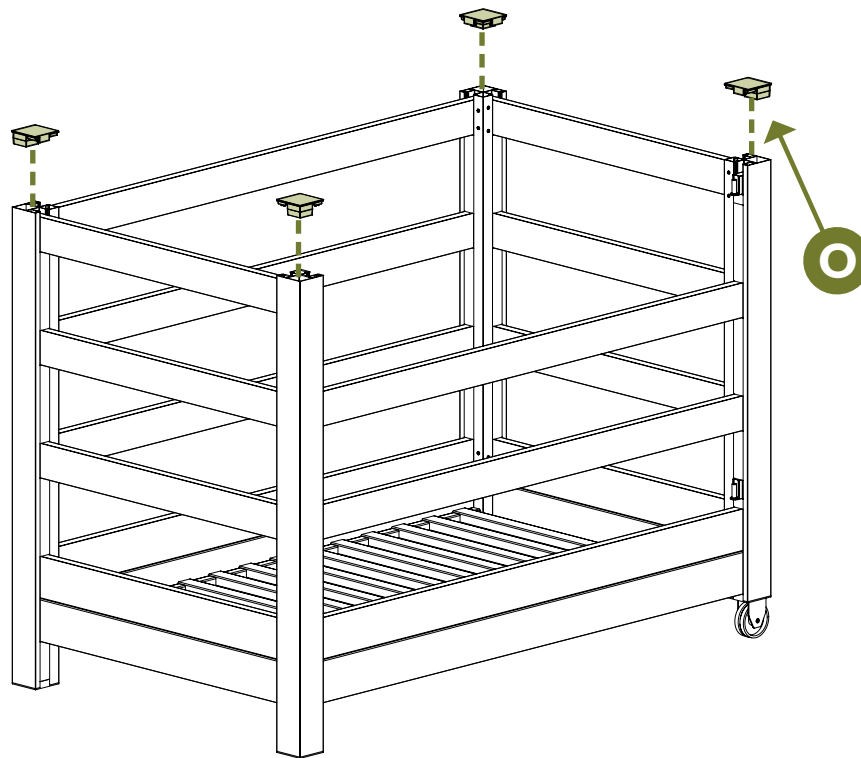

20


 P x3

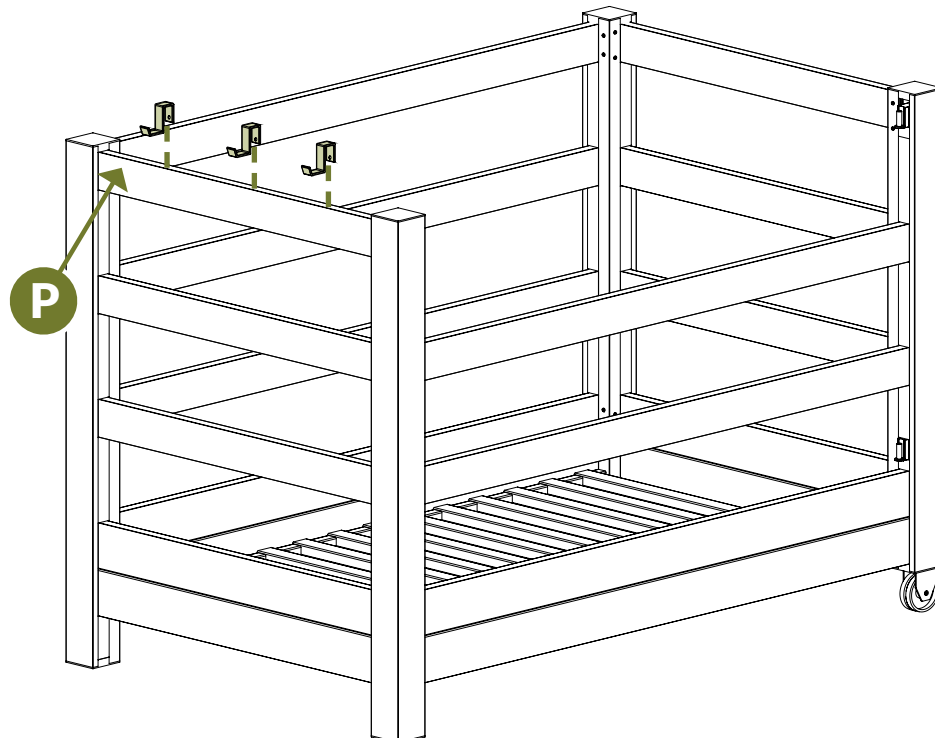


21




Q x6

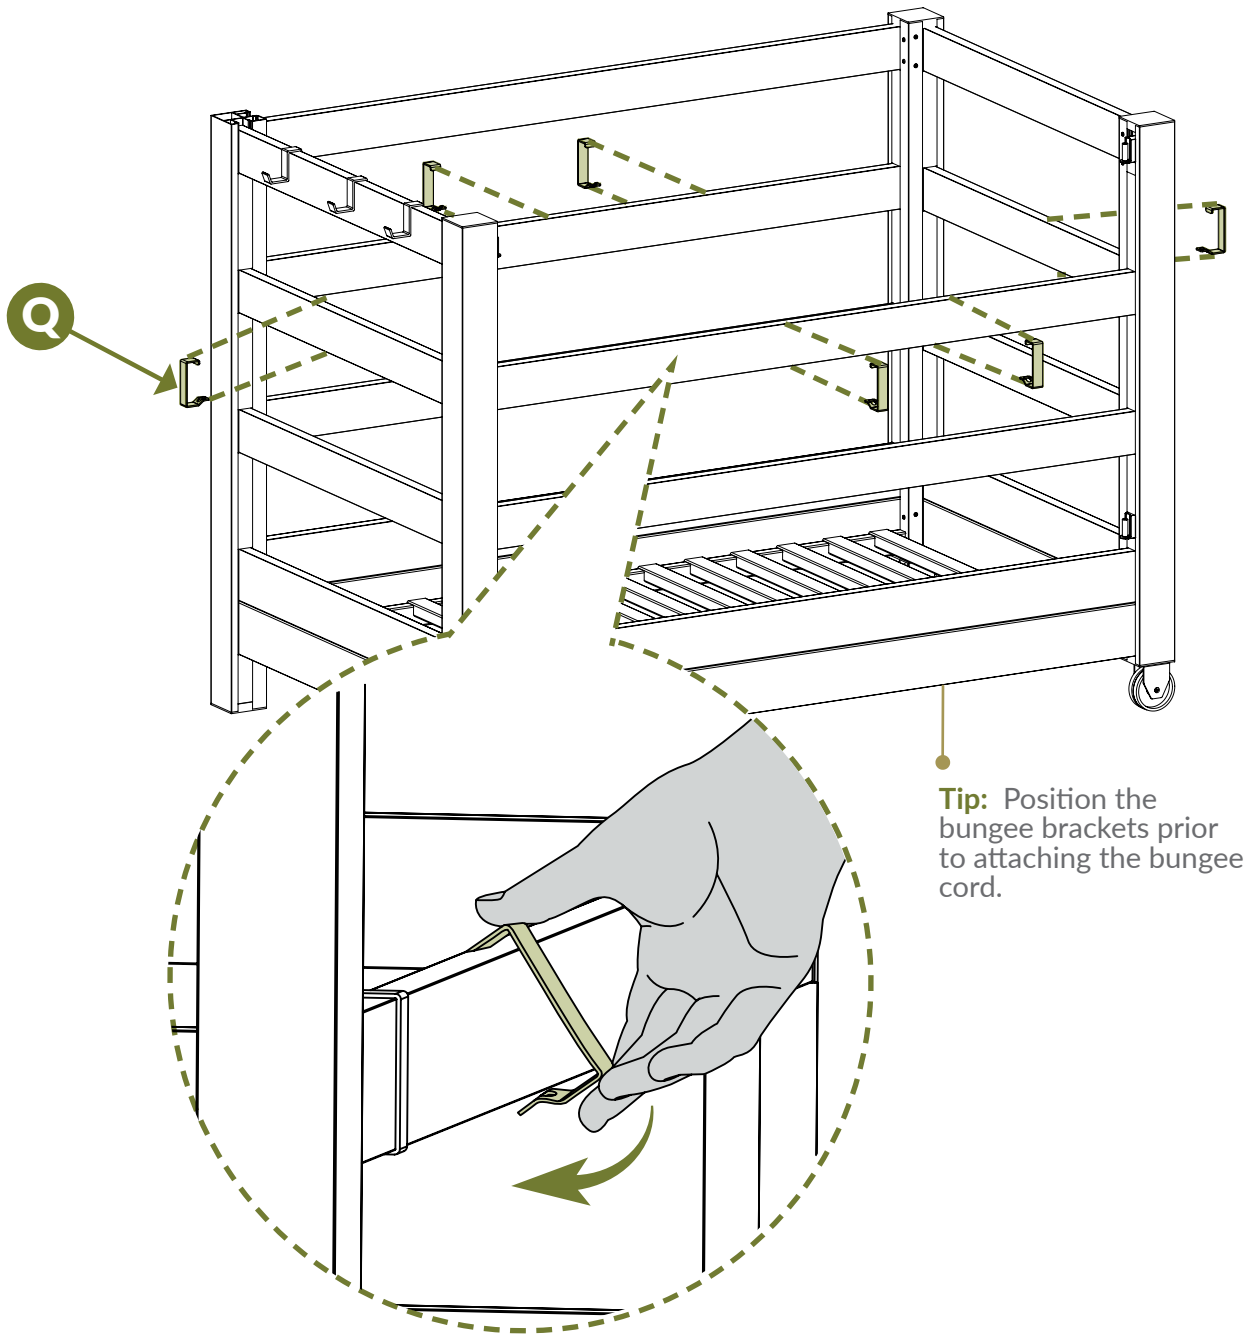

22

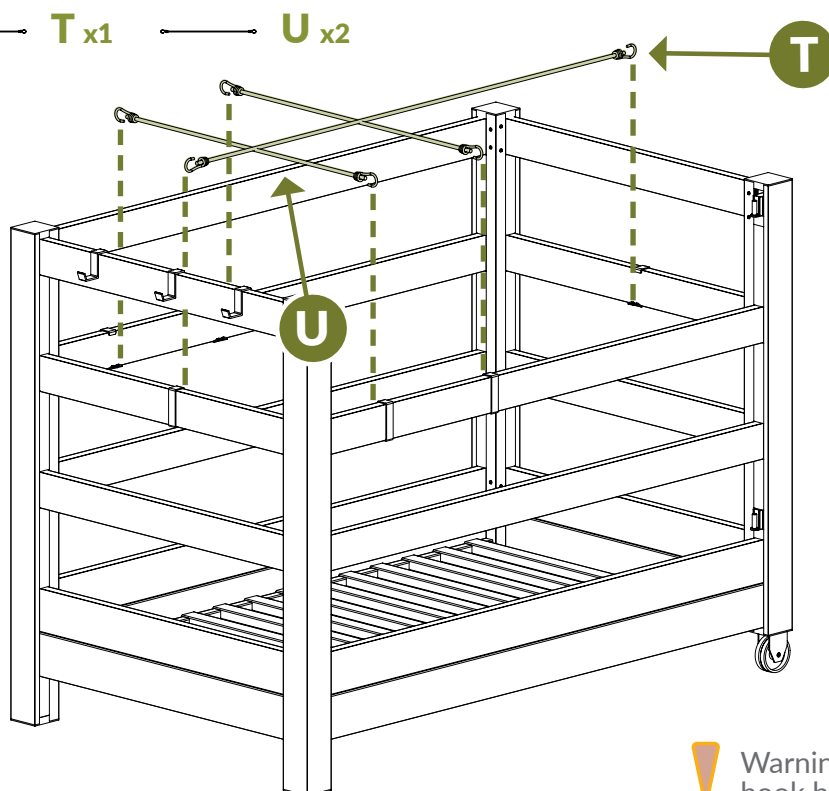


Warning: Do not hook bungee cords from towel hooks.

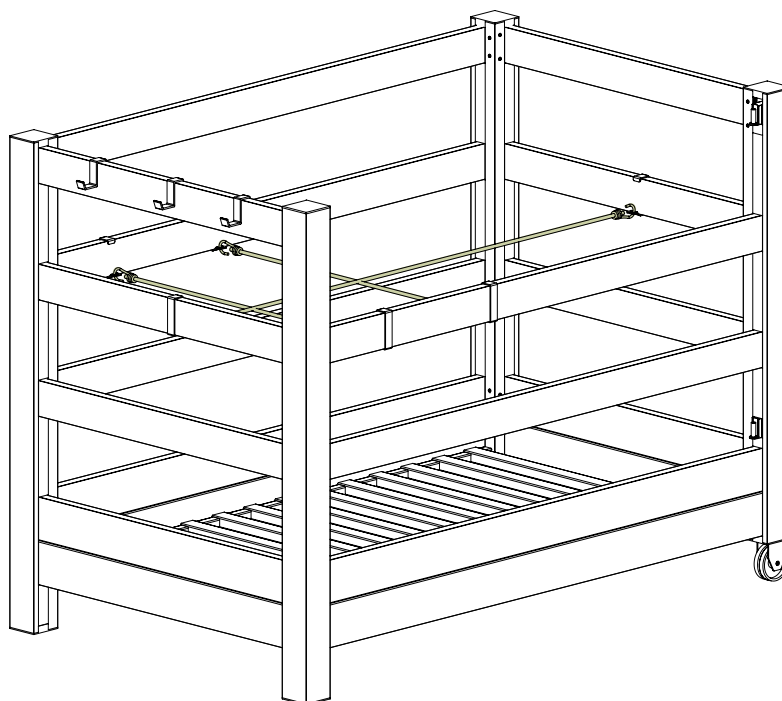




23




I x1







R x2

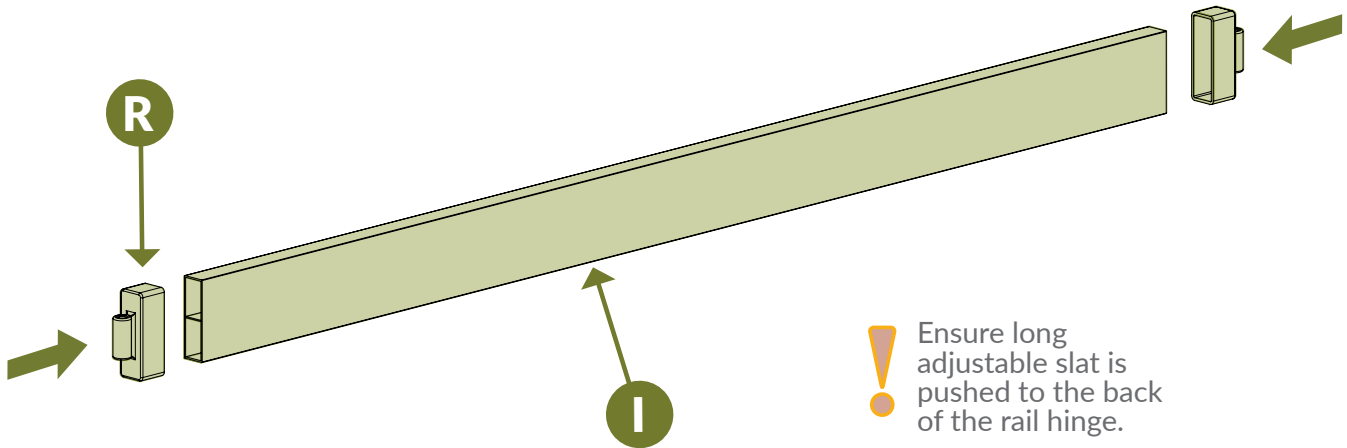

25

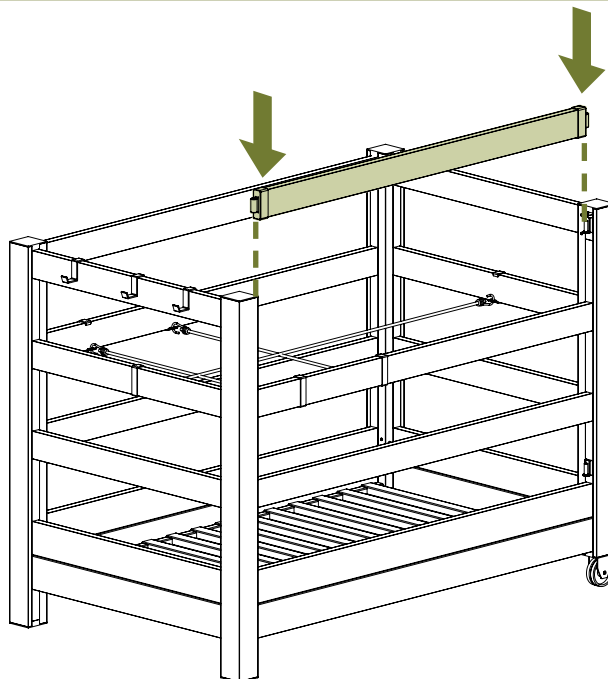

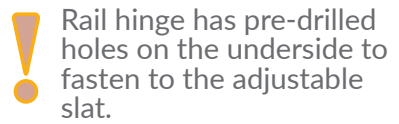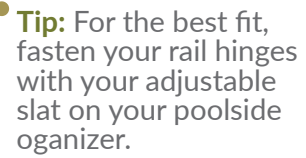 **V** x4

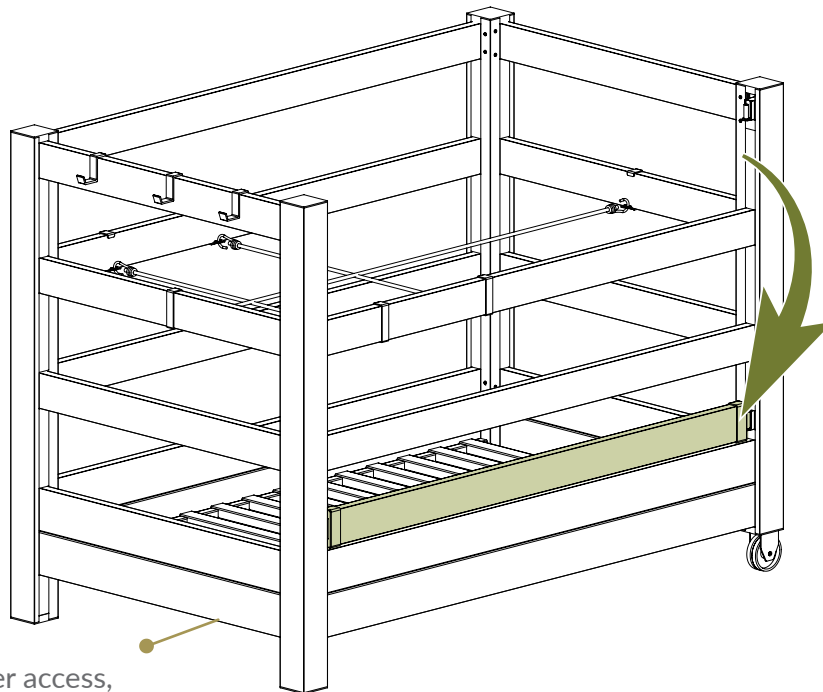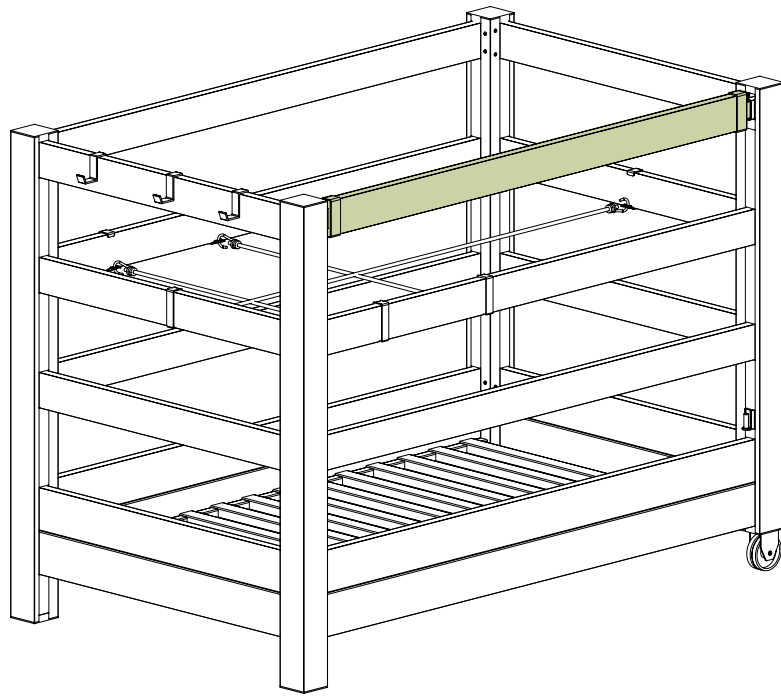

**Tip:** For easier access,  
place the adjustable rail  
in the lower position.



# ZIPPITY

*Easy Does It!*



6935 Reames Rd. Ste. K.  
Charlotte, NC 28216



[support@zippity-outdoor.com](mailto:support@zippity-outdoor.com)

704-892-5222  
877-234-6196



[WWW.ZIPPITY-OUTDOOR.COM](http://WWW.ZIPPITY-OUTDOOR.COM)