For Style 6611C37 Assembly Instruction Sheet #S-6611C37


Tools Required: Plathead scread/ver, Philips scread/ver, plans, wire culturs, who strippers, electrical lapes, safety glasses.


(11) GLNS MAX-38W (Not Induce).

Tepaseden: (41) GLNS MAX-38W (Not Induce).

These instructions are provided for your safety. It is very important you read them completely before installing the ficture. We strongly recommend that a licensed, professional electricism perform the installation. Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electricism if in doubt.

Disconnect fixture from power source before replacing bufbs. Make sure bufbs are given sufficient time to cool before removal

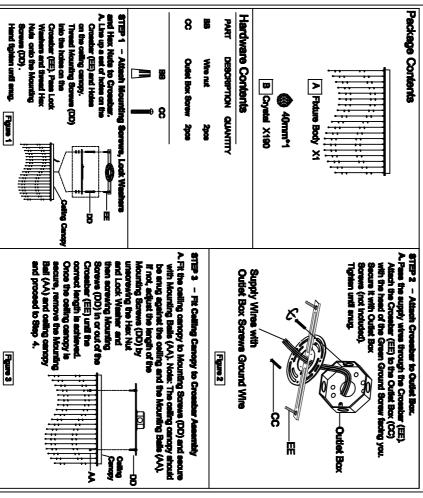

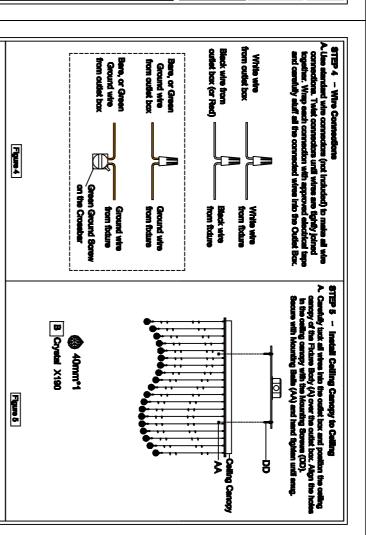

AND NEEDS TO BE REINFORCDE THIS FIXTERE IS VERY HEAVY

WARNING

ACCORDINGLY

THE CRYSTAL BALL INSTALLATION INSTRUCTIONS

