


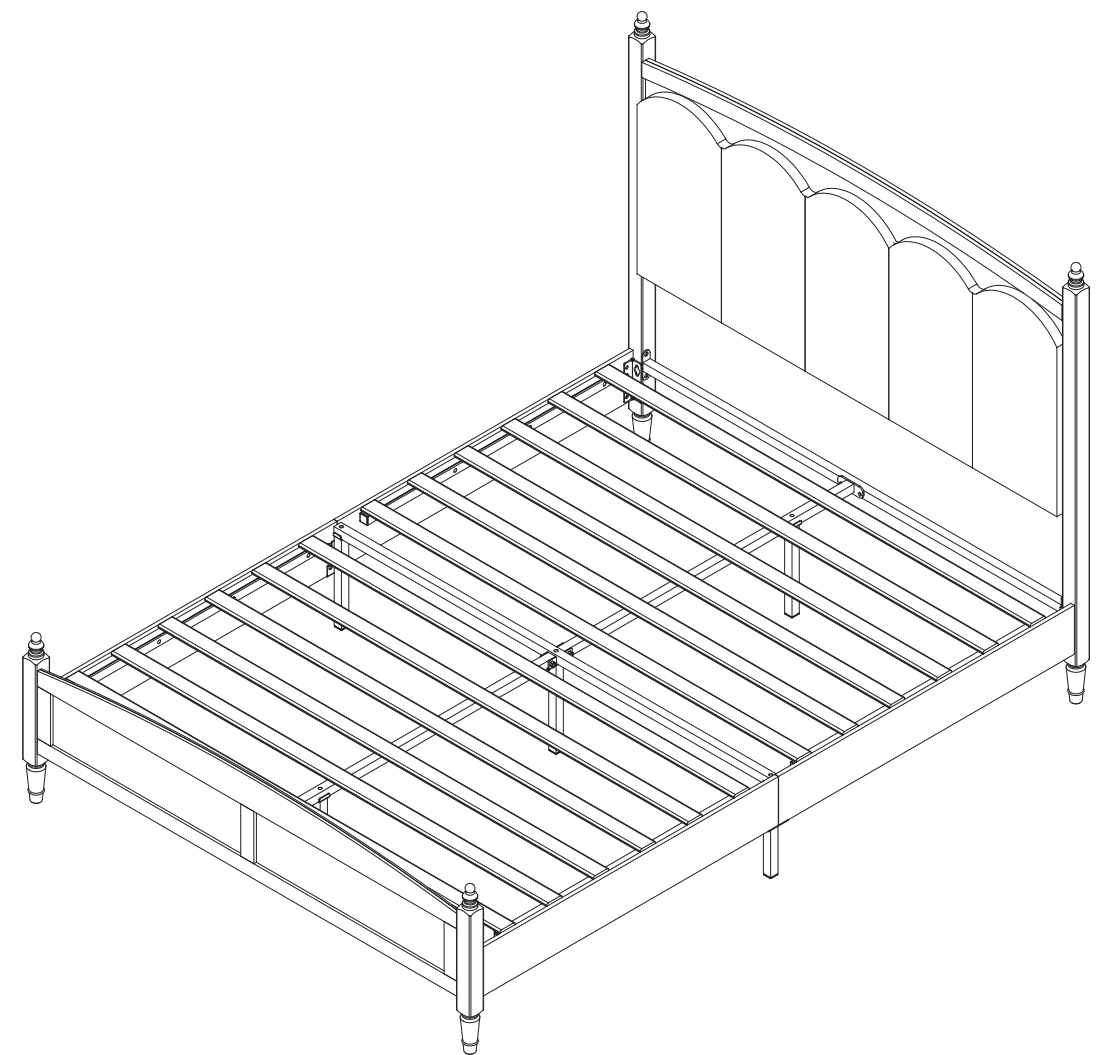

Note: Now you can tighten all the bolts.


Finish

BED FRAME



Thank you for choosing our products, please assemble and use it following the instructions.


Assembly Instruction


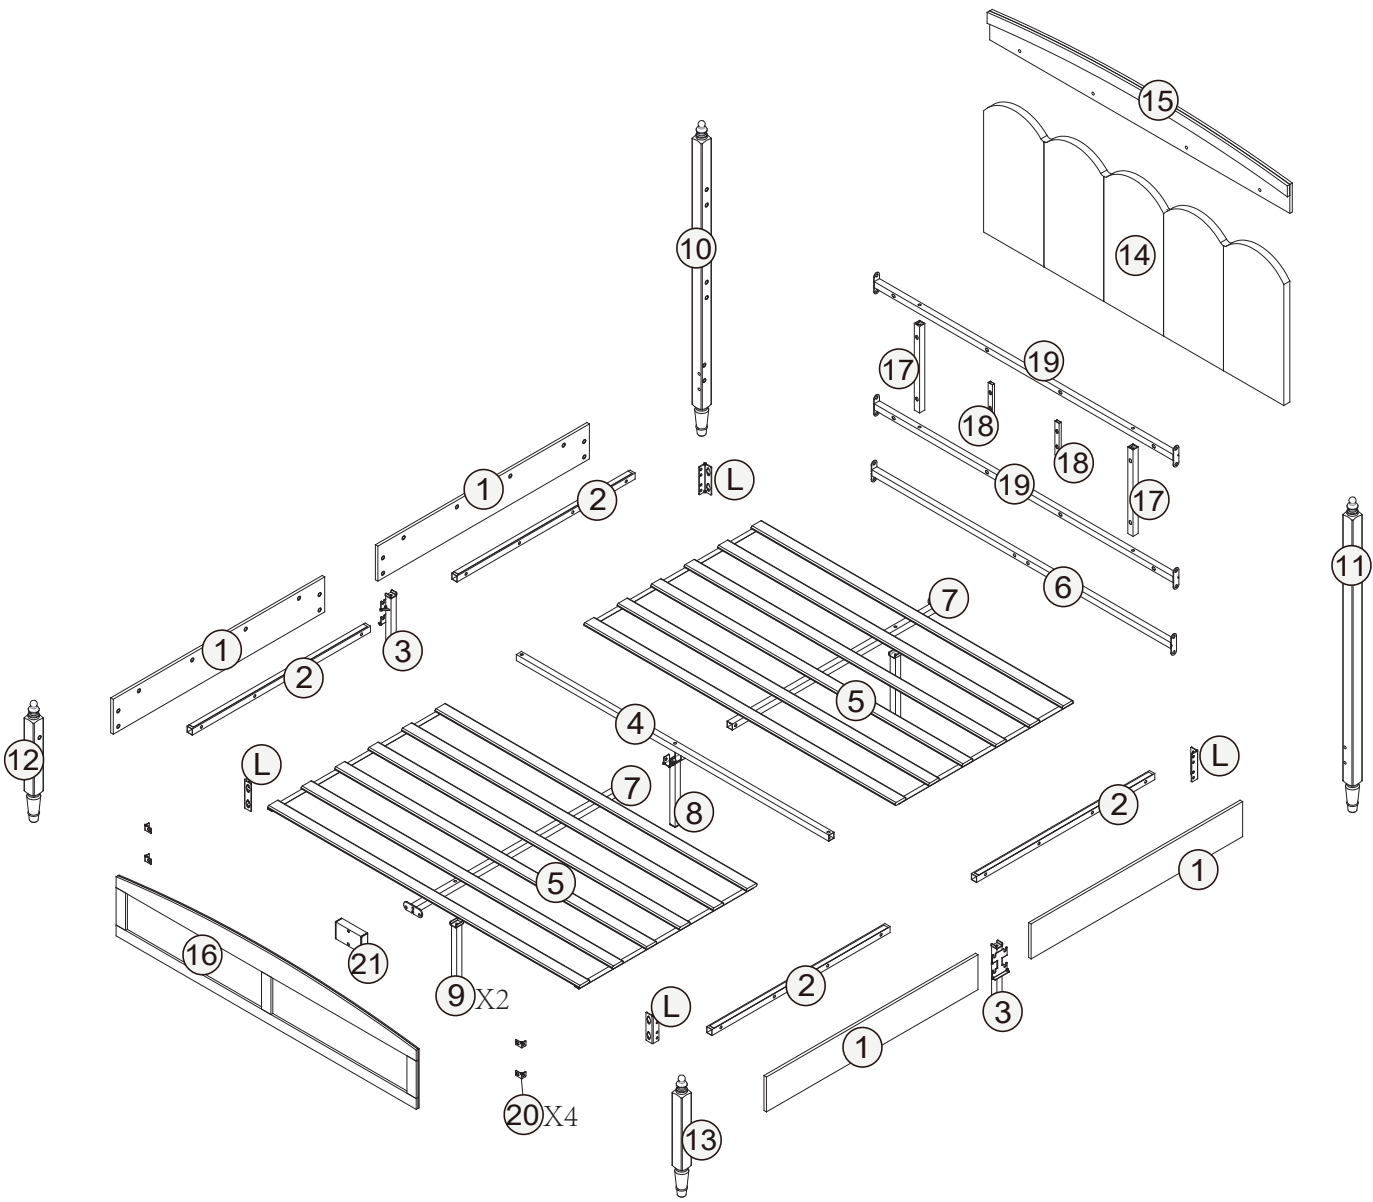


B646-Q/K Important Note


HARDWARE NOTE :
1. Two or more people are required for assembly
2. Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.

13

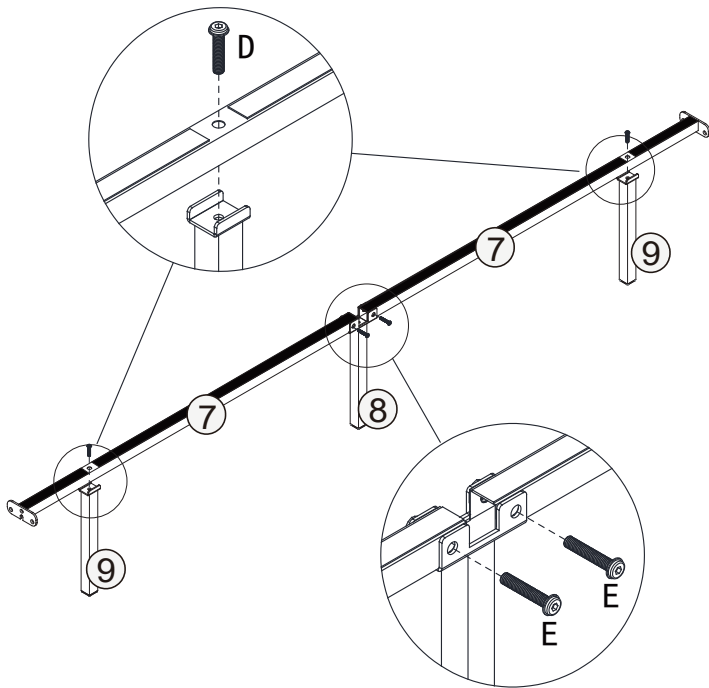


D		2pcs	White Zinc
E		2pcs	


14

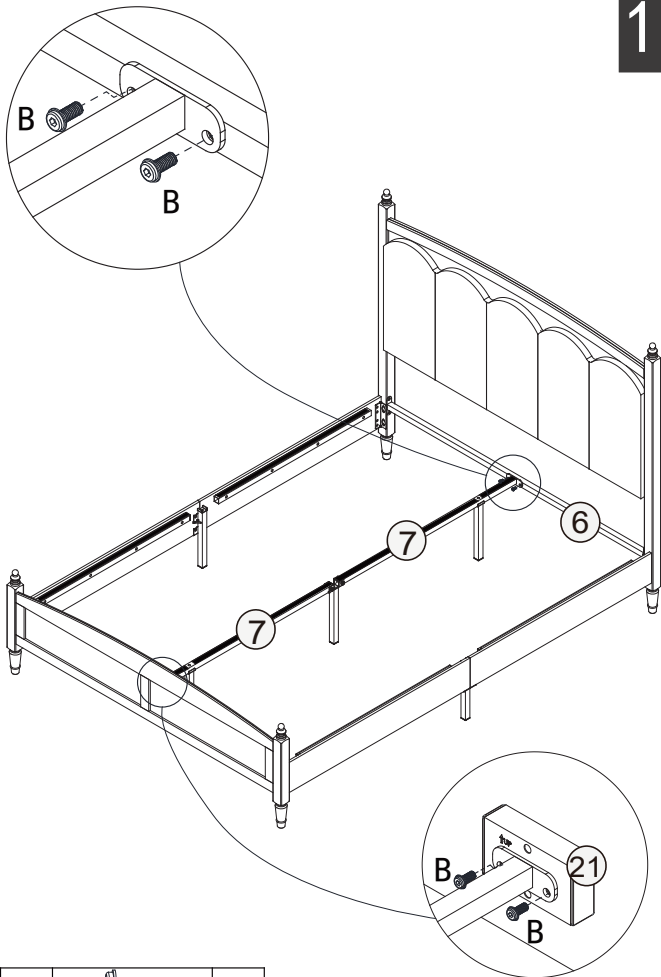


B		4pcs	White Zinc
---	--	------	------------



15

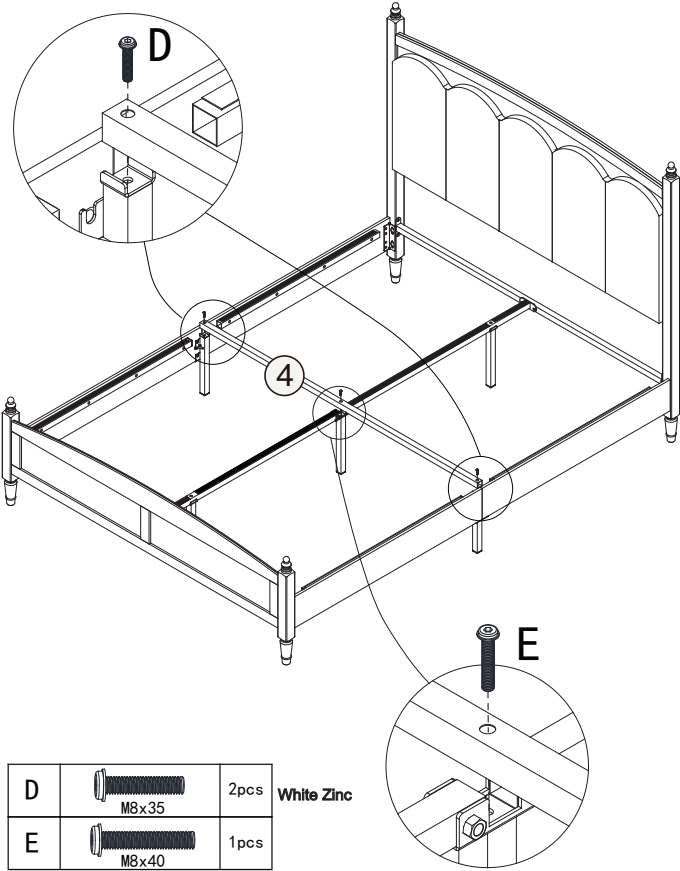







D		2pcs	White Zinc
E		1pcs	

16

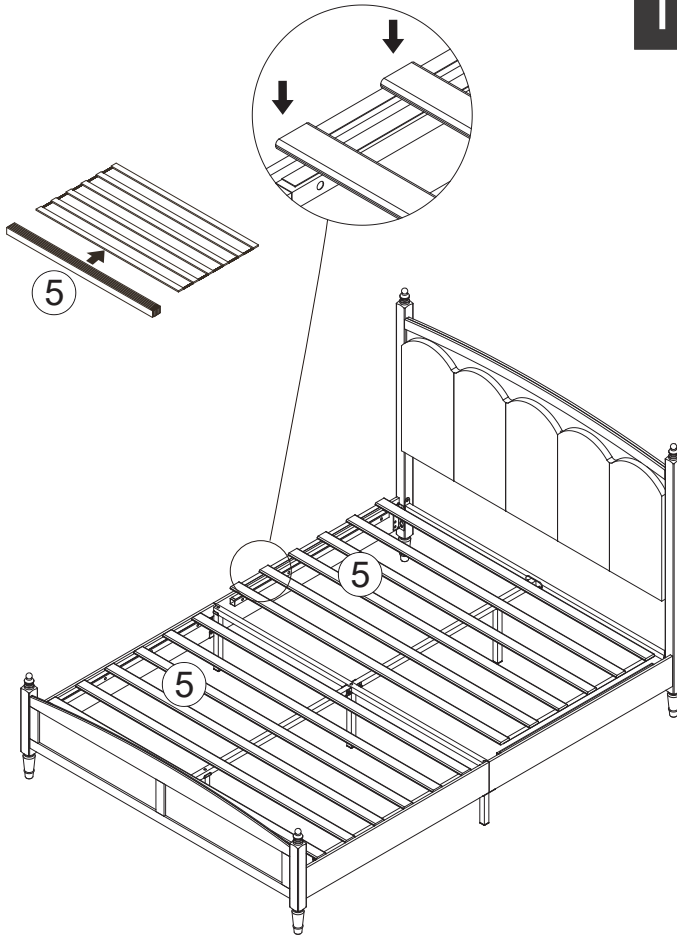


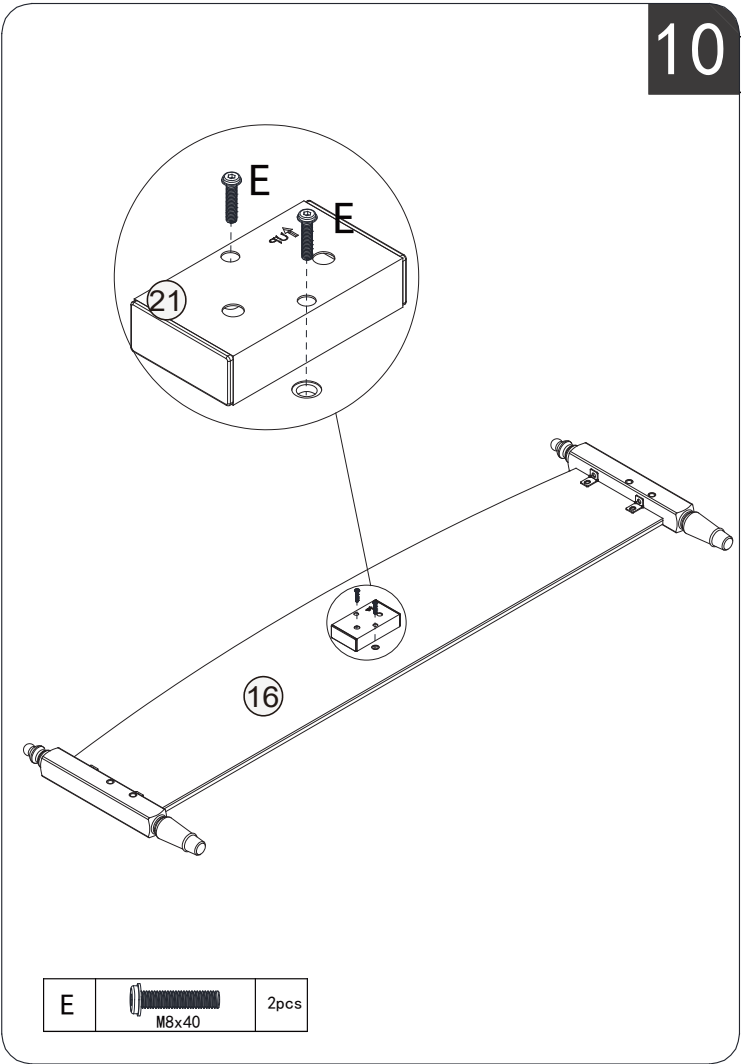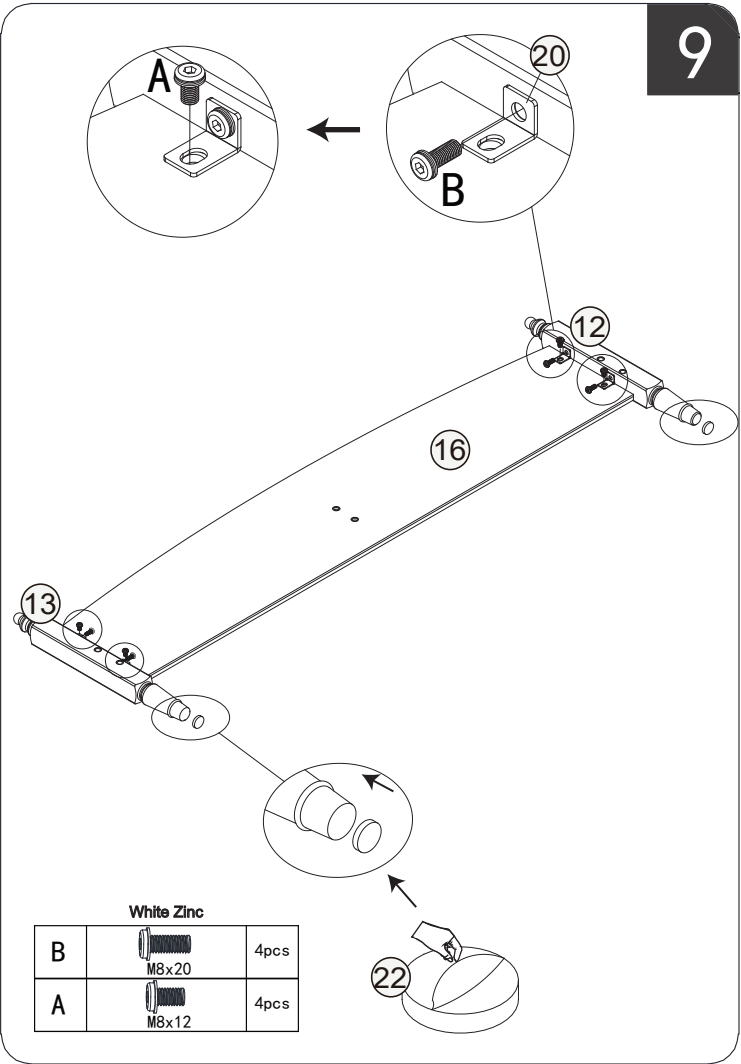

Components

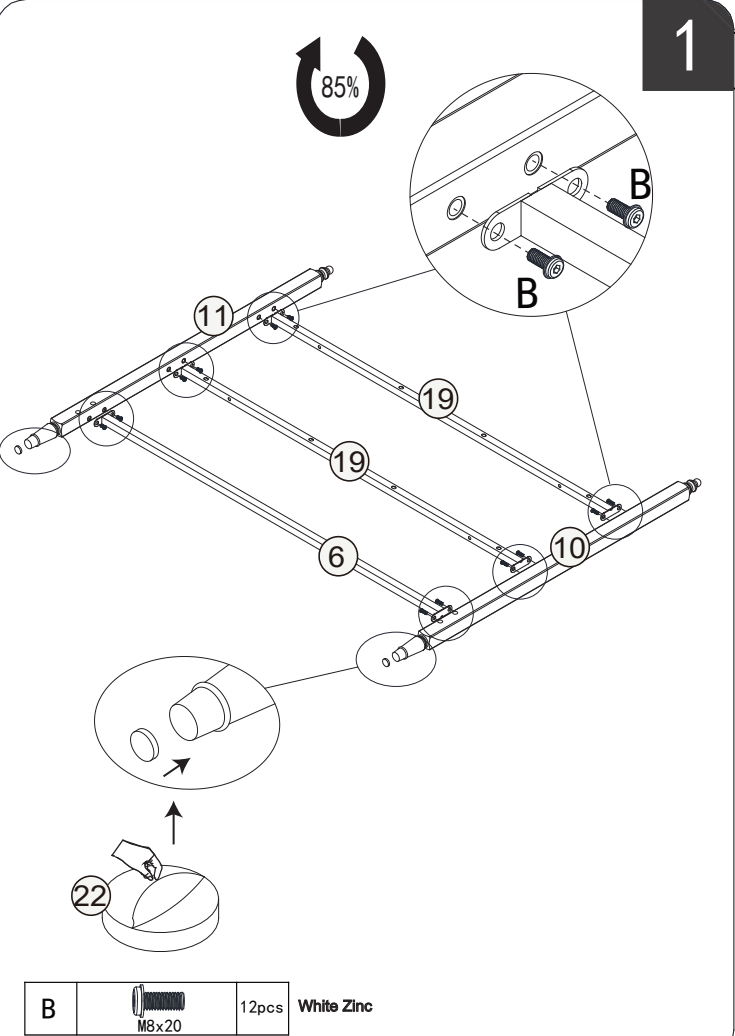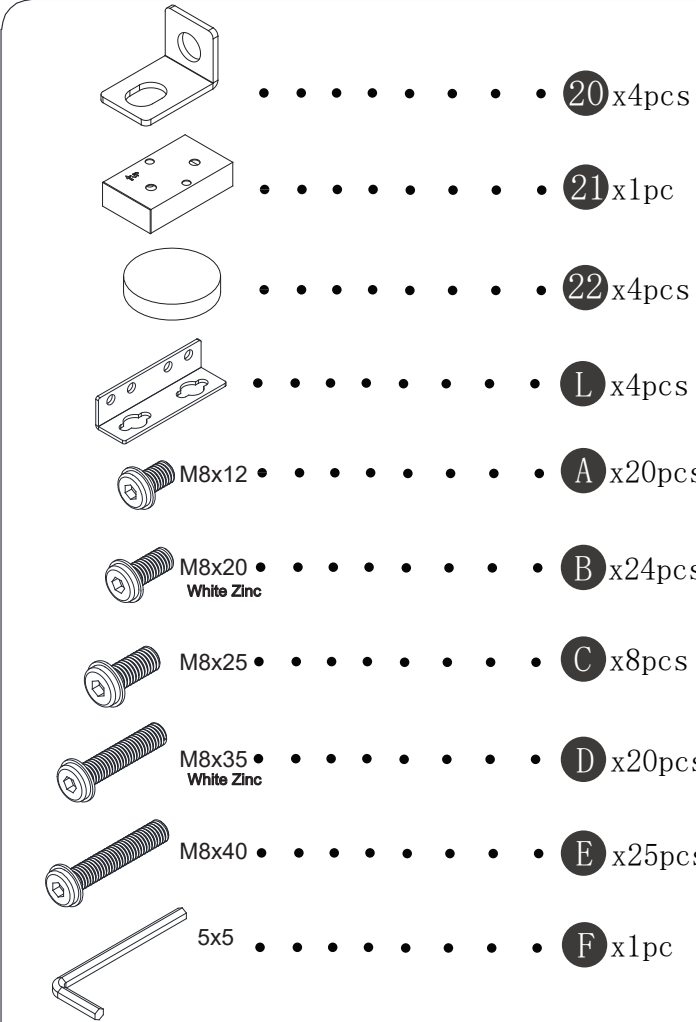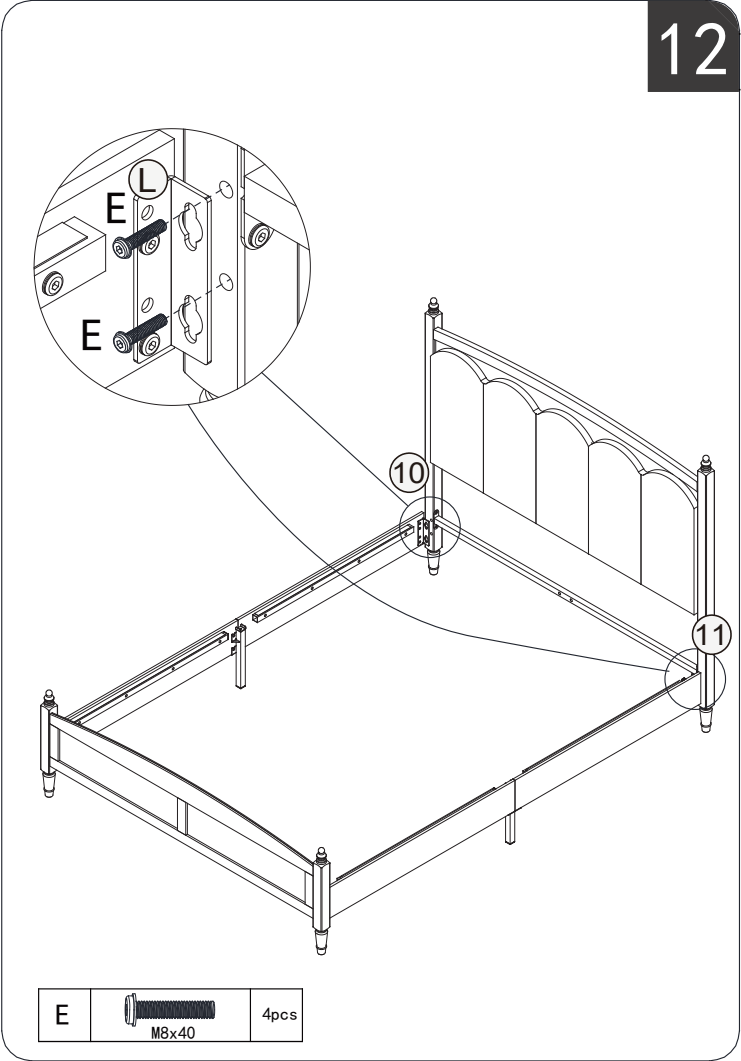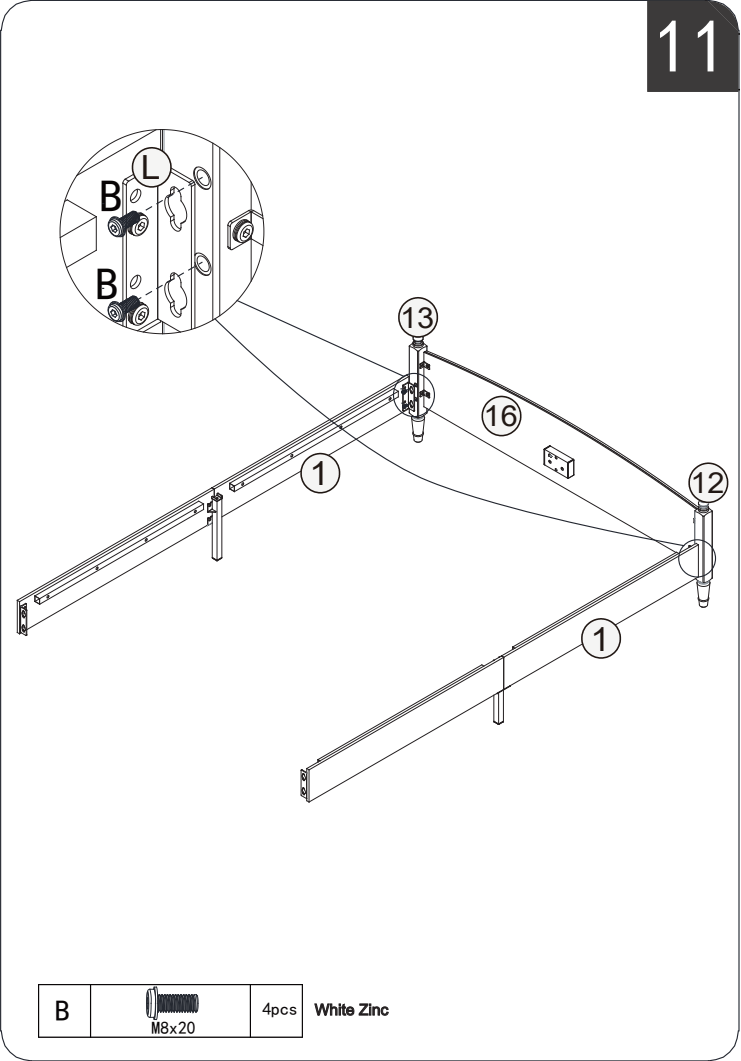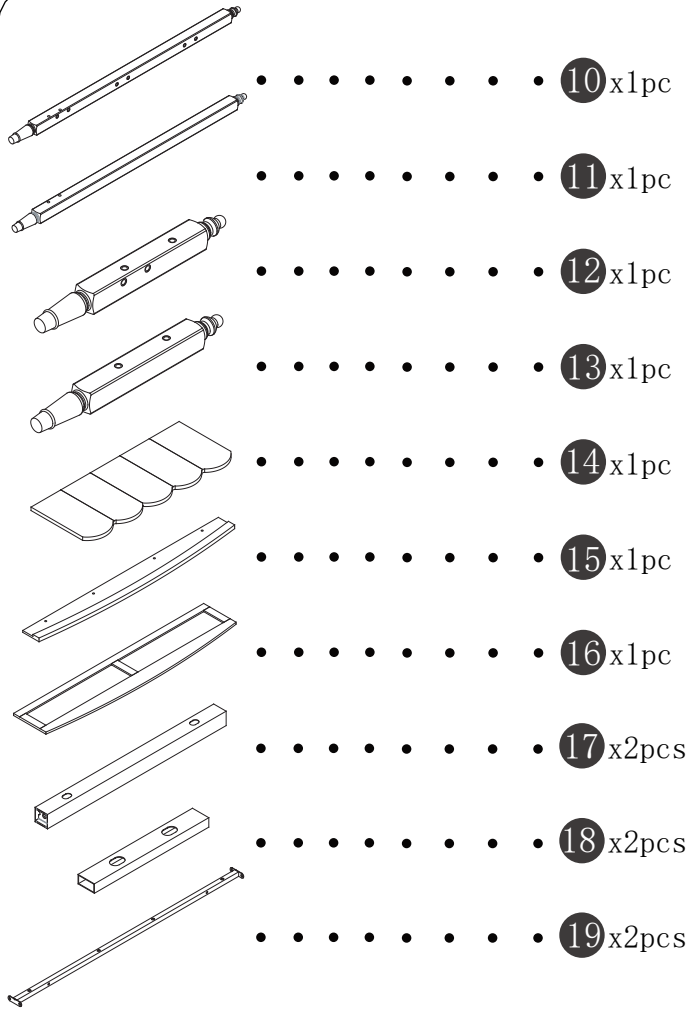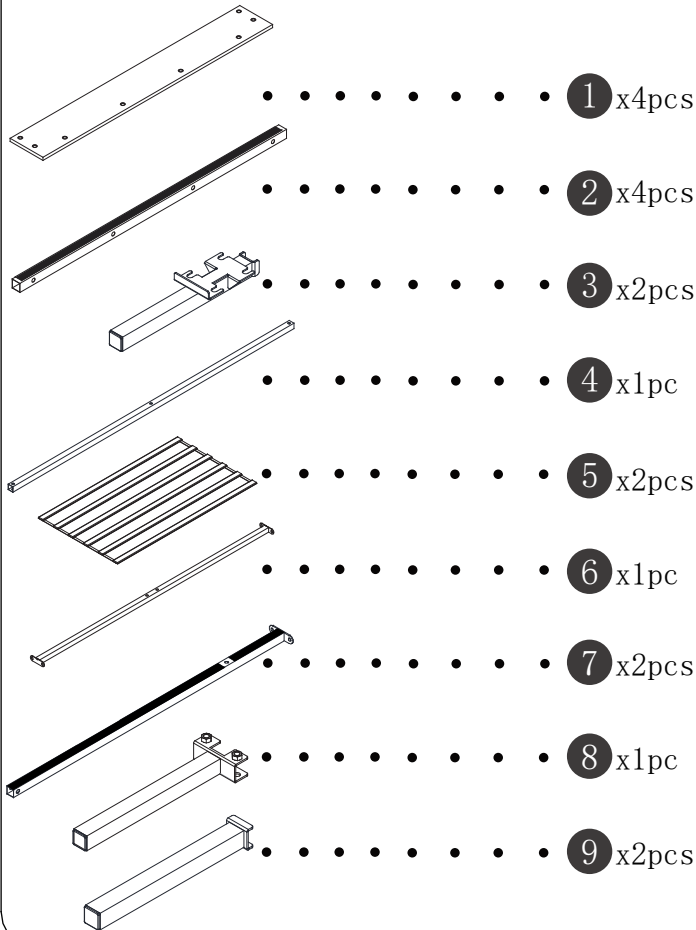


2

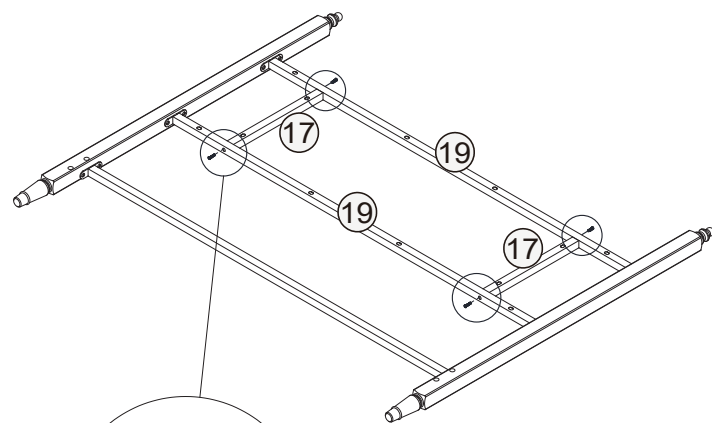


E		M8x40	4pcs
---	---	-------	------

3

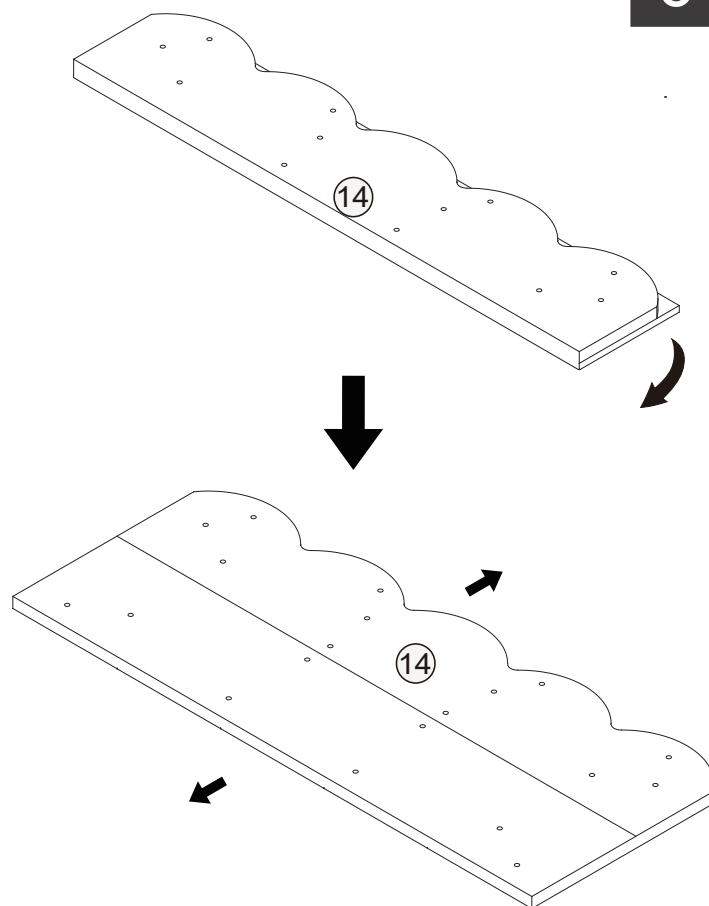


5

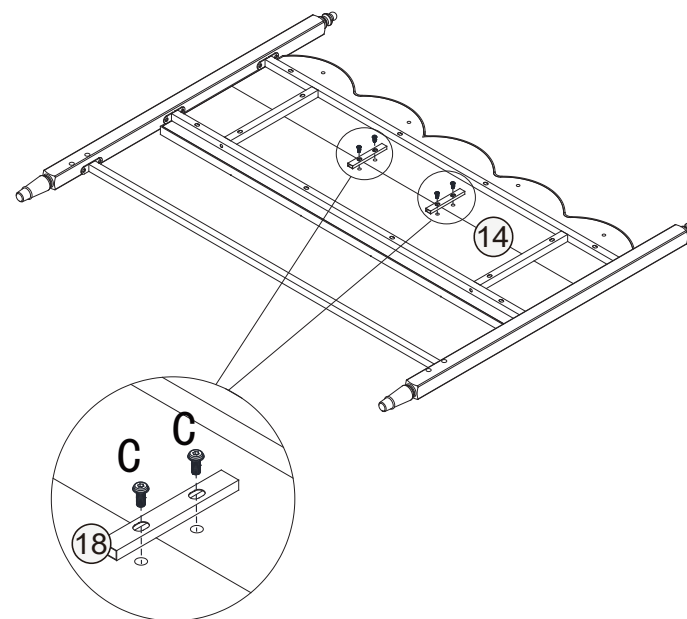


C		M8x25	4pcs
---	---	-------	------

6

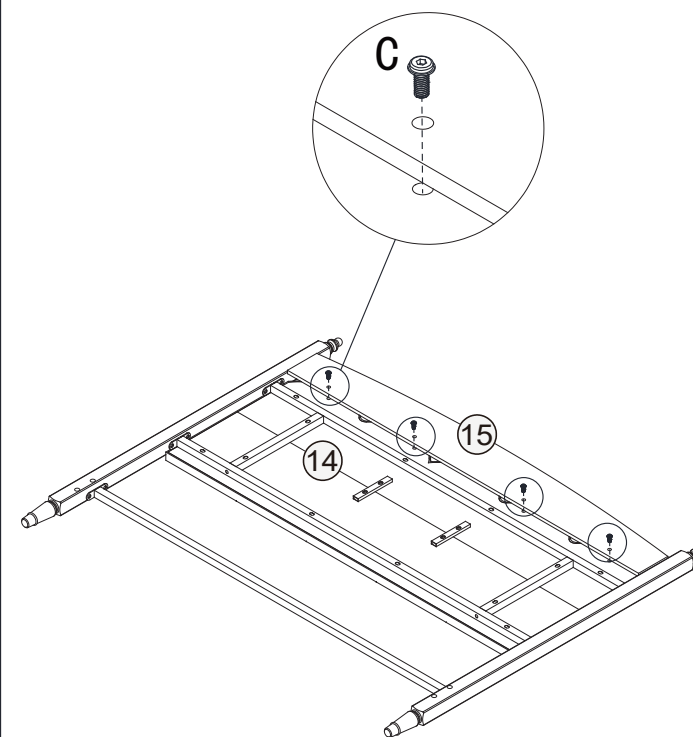

C		M8x25	4pcs
---	--	-------	------


4

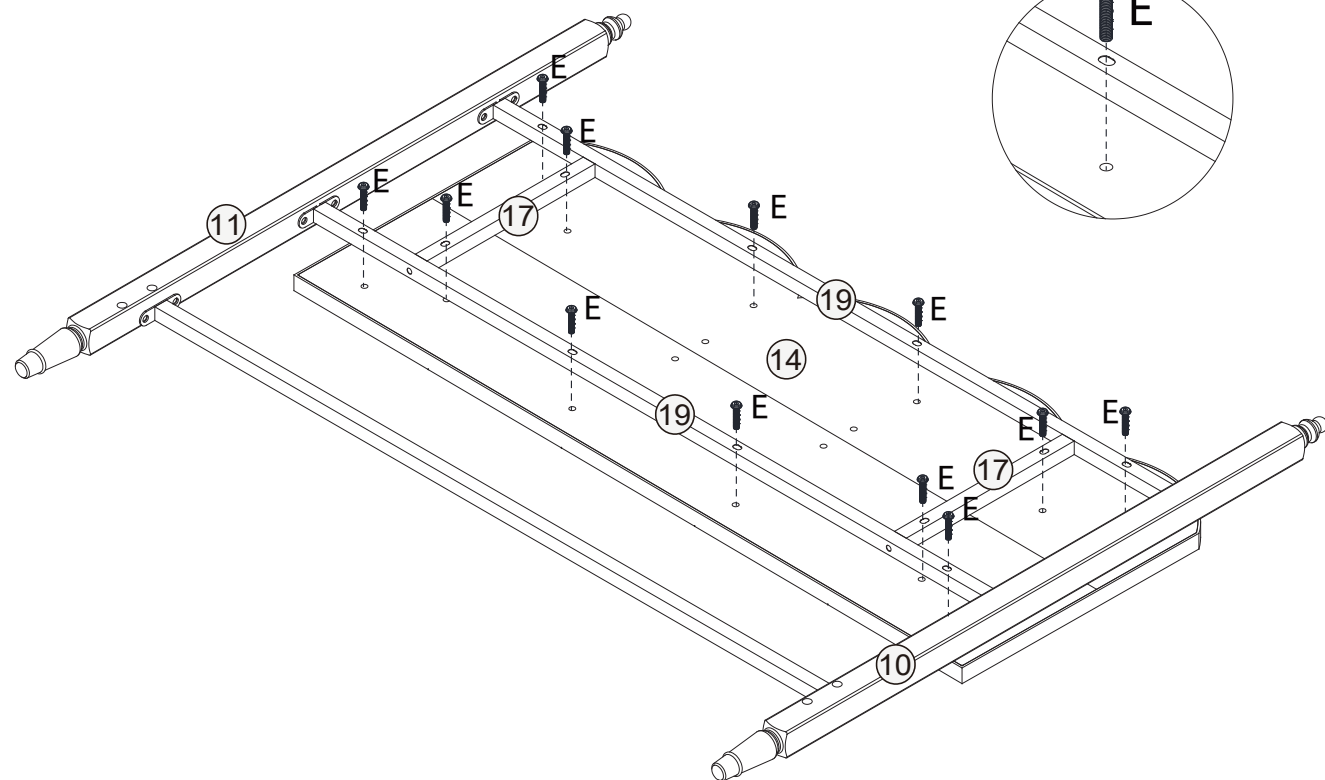

E		M8x40	12pcs
---	---	-------	-------

7


x2

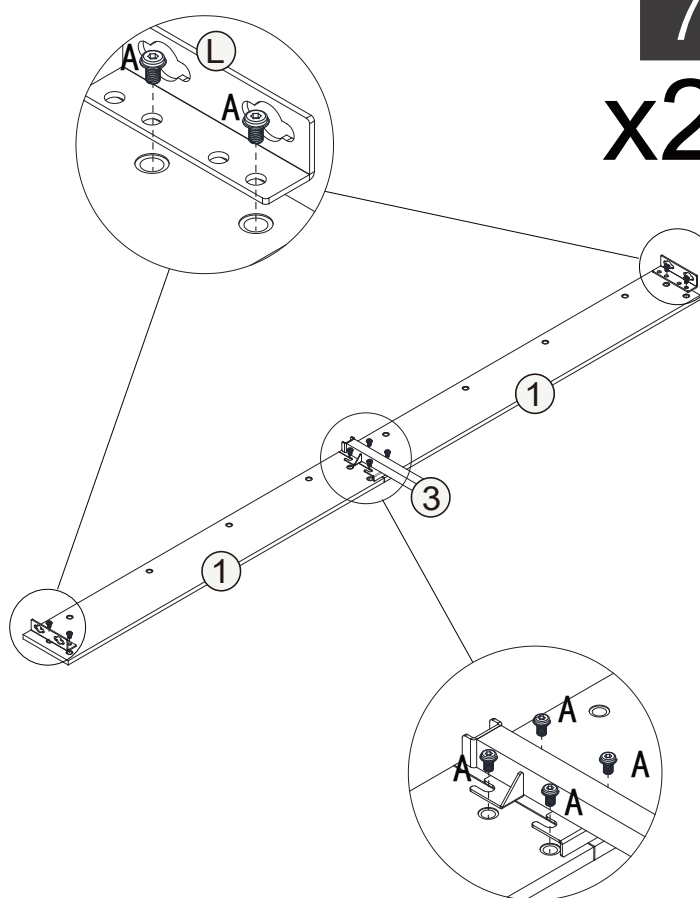

A		M8x12	16pcs
---	---	-------	-------

8

x2

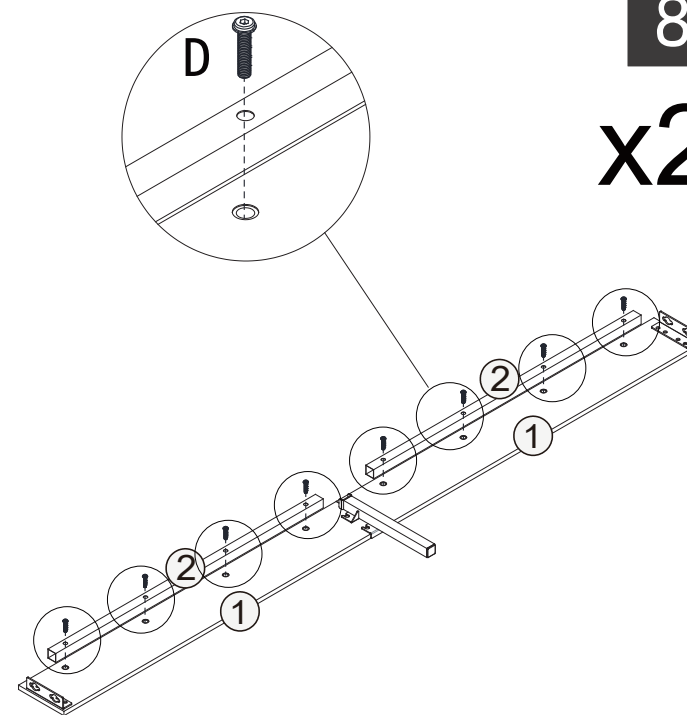

D		M8x35	16pcs	White Zinc
---	---	-------	-------	------------