

ASSEMBLY AND INSTALLATION INSTRUCTIONS

W0138 / W0139

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. READ AND SAVE THESE INSTRUCTIONS.

Hardware Package (included):



Mounting Plate(A)



Mounting Screw (B)



Green Grounding
Screw (C)



Headless screw (D)




Lock Nut (E)



Ball Nut (F)



Wire Nut (G)

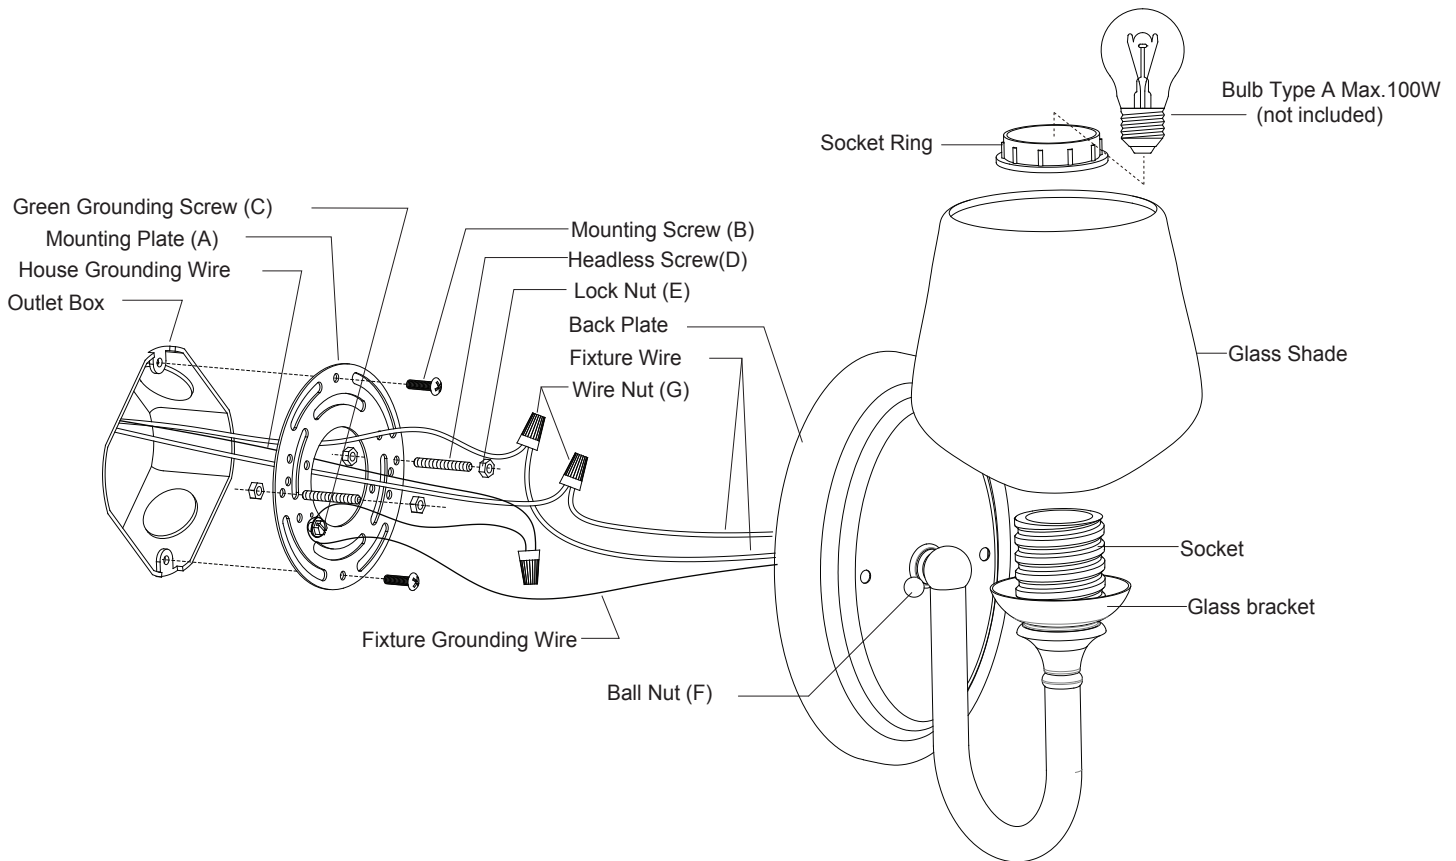

Installation Steps


Turn off the power at fuse or circuit box.

1. Thread two headless screws through the mounting plate, then secure them with four lock nuts (two on each side of the mounting plate). Adjust the length of the headless screws if necessary.
2. Attach the mounting plate to the outlet box by using two mounting screws.
3. Pull out the source wires from the outlet box. Make wire connections using wire nuts as follow:
 - Connect the hot wire (usually black insulation) from the fixture to the black wire from the power source.
 - Connect the neutral wire (usually white insulation) from the fixture to the white wire from the power source.
 - Attach the fixture grounding wire (usually green insulation or bare wire) to the mounting plate with the green grounding screw. Then connect it to the house grounding wire with the wire nut.Carefully put the wires back into the outlet box.


4. Attach the back plate to the mounting plate by inserting the headless screws, then secure it with two ball nuts.
5. Attach the glass shade to the glass bracket, secure it with socket ring.
6. Install bulb (not included). See relamping label at socket area or packaging for maximum allowed wattage.

Turn on the power at fuse or circuit box.


The following parts are available for re-order if damaged or missing.




Mounting Plate(A)




Mounting Screw (B)




Green Grounding Screw (C)




Headless screw (D)




Lock Nut (E)



Ball Nut (F)




Wire Nut (G)

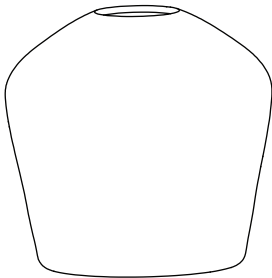

Glass Shade 9684FO

Mounting Hardware
 5247MM for W0138
 5248MM for W0139

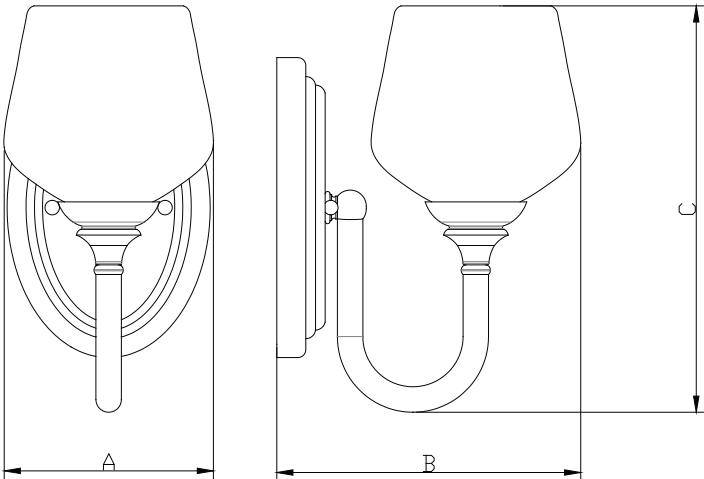

- A: 5-1/8"
- B: 7-3/8"
- C: 9"