

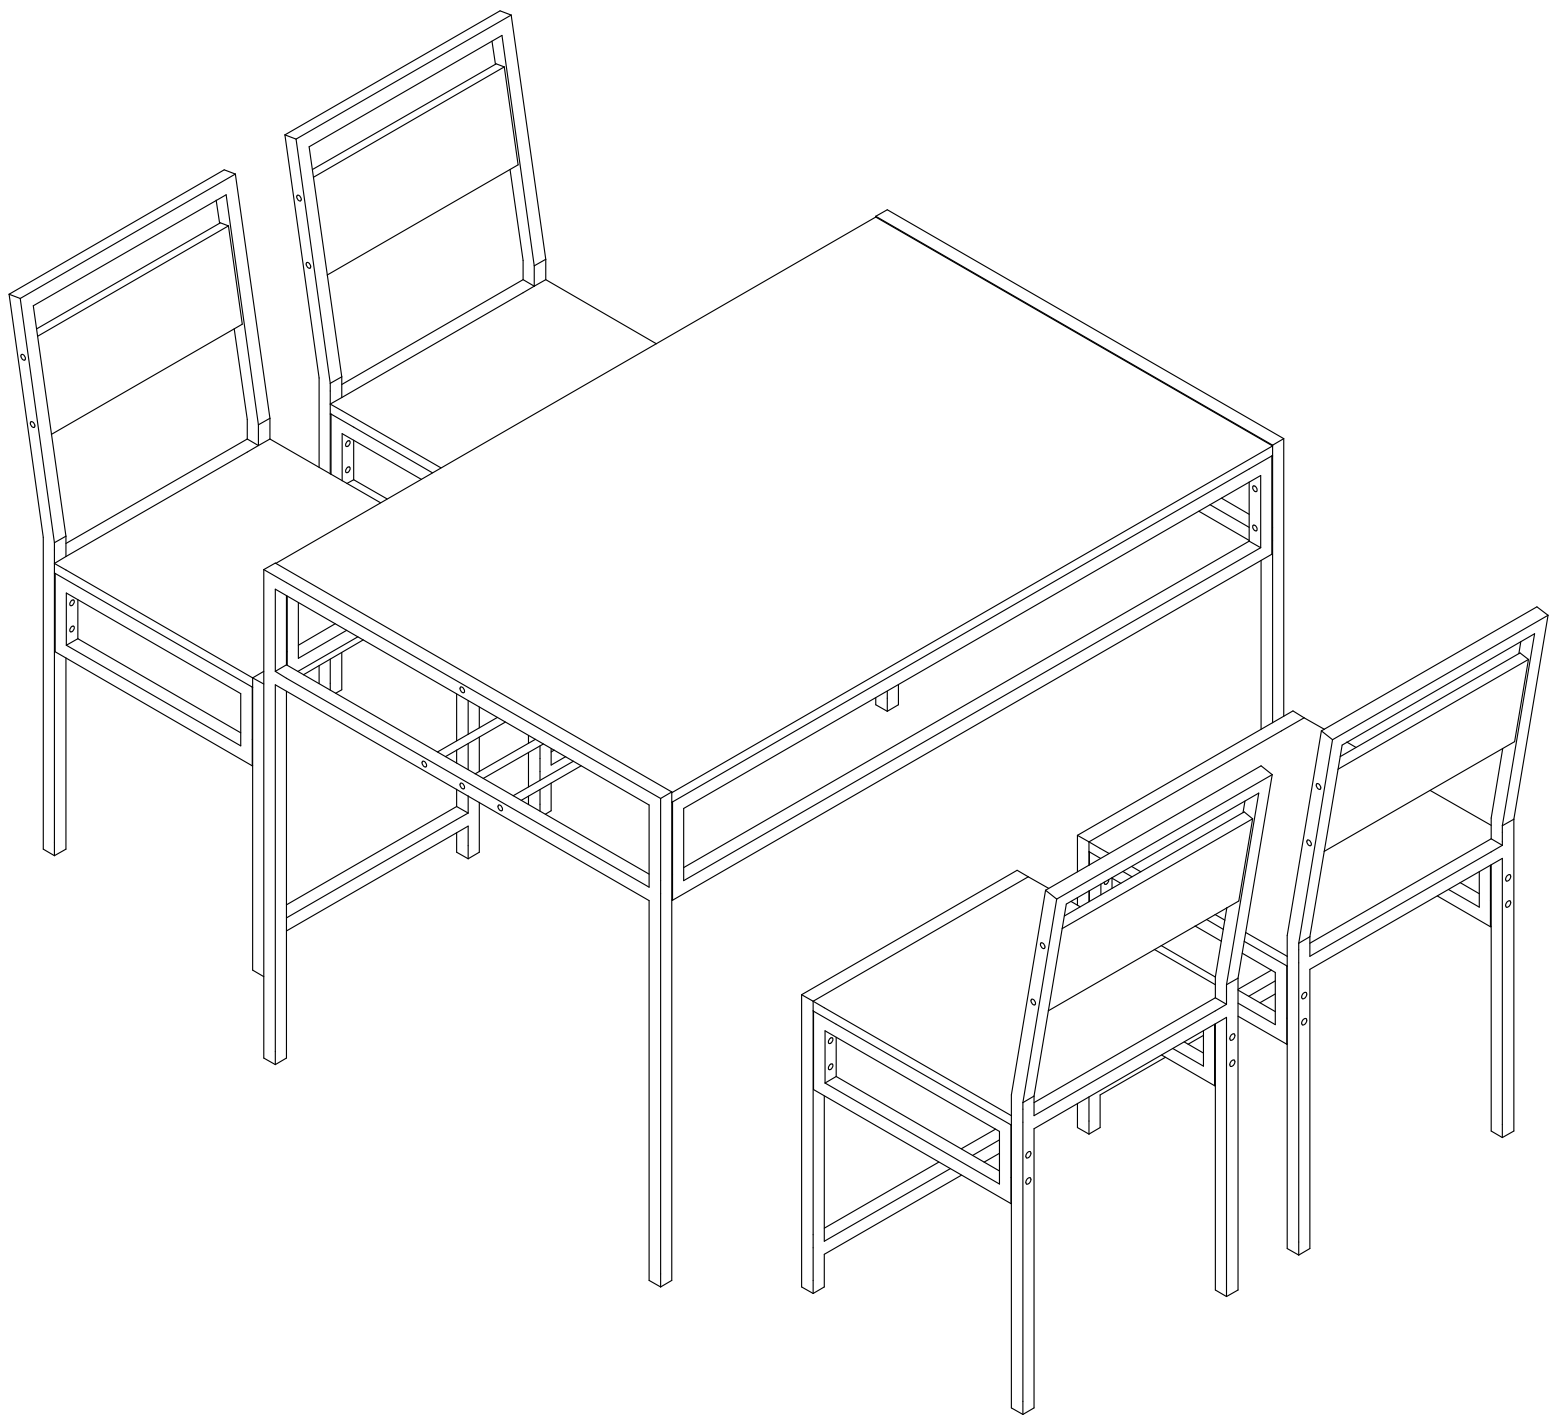
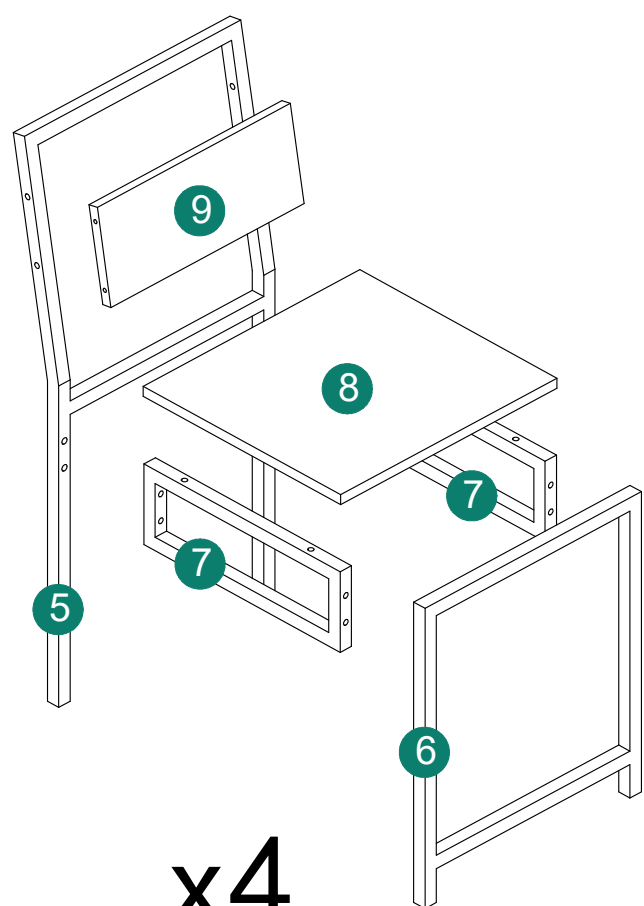
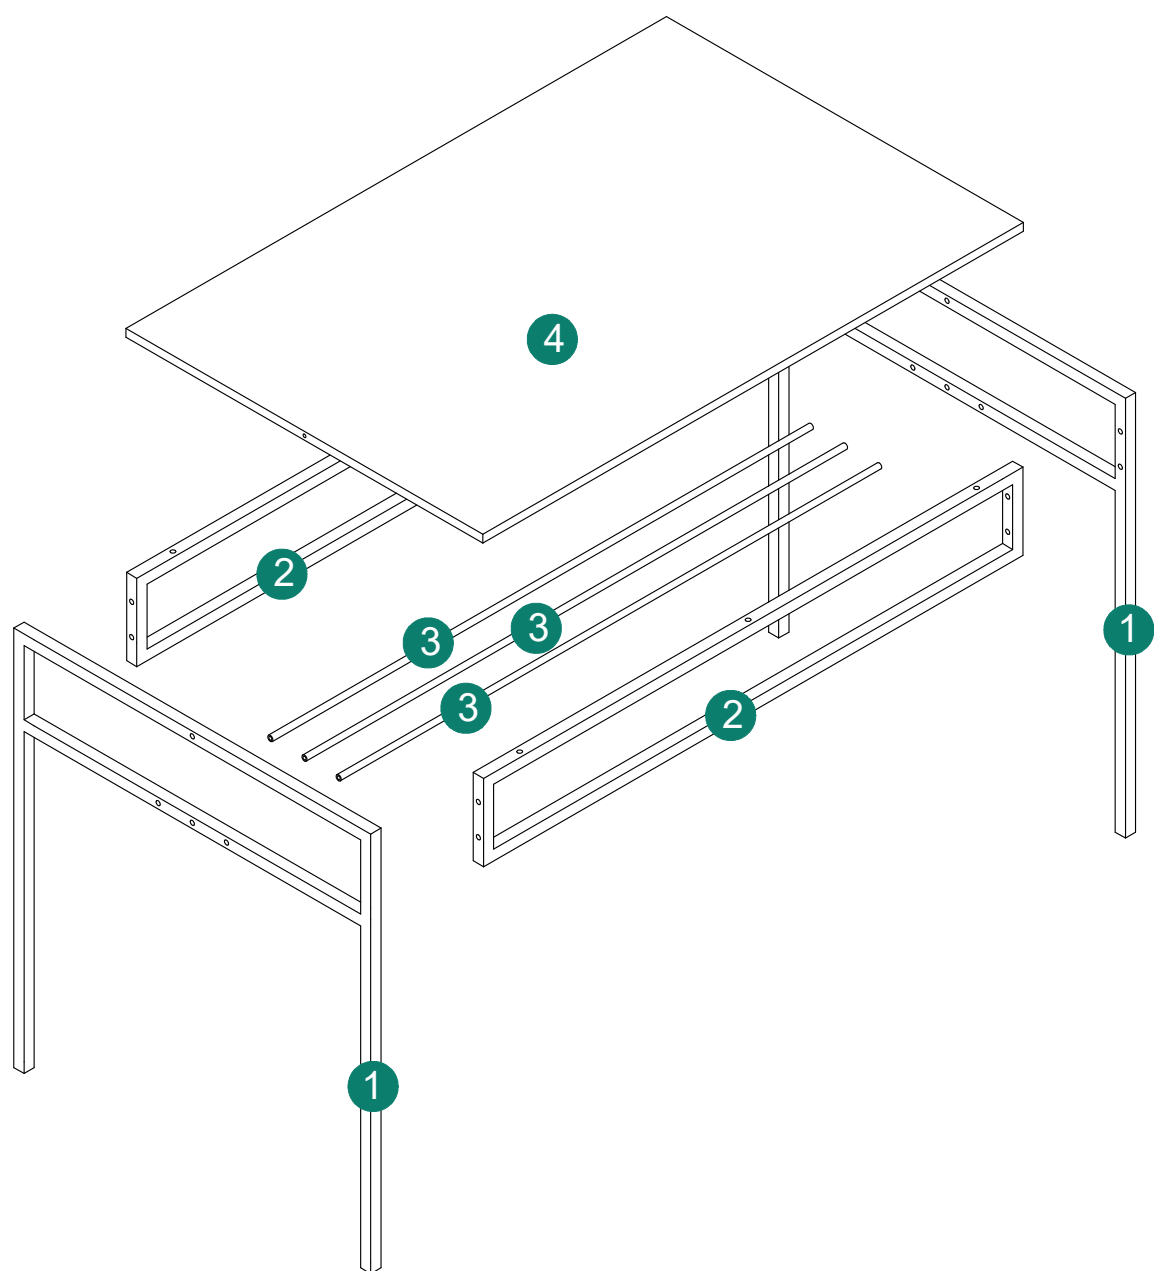
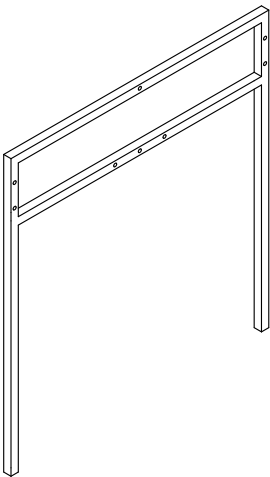
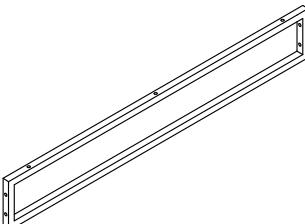
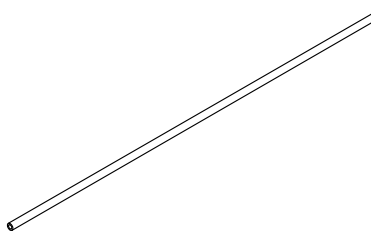
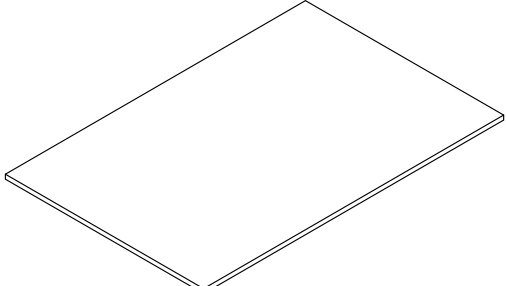
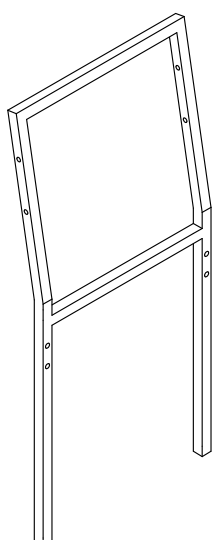
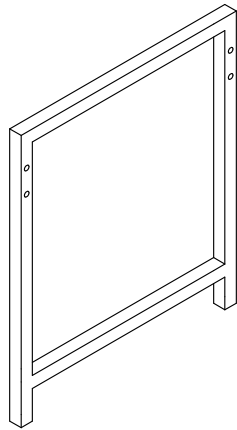
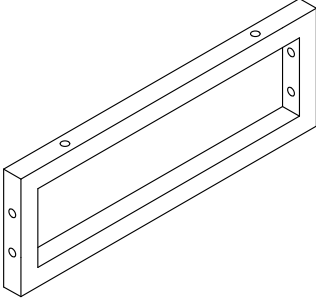
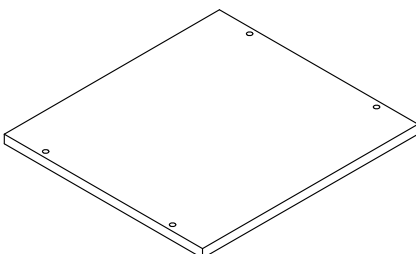
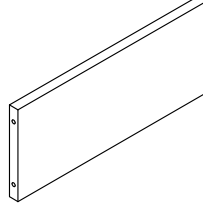
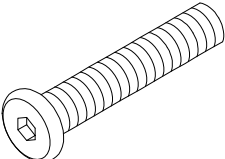


ASSEMBLY INSTRUCTION


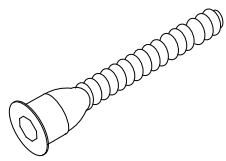


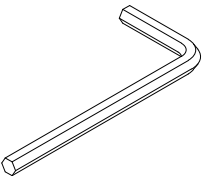


x4

1  2PCS	2  2PCS	3  3PCS
4  1PCS	5  4PCS	6  4PCS
7  8PCS	8  4PCS	9  4PCS
A  M6*30mm 68+3PCS	B  M7*48mm 18+1PCS	 4mm



1

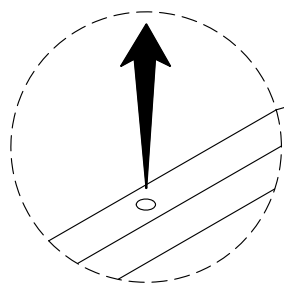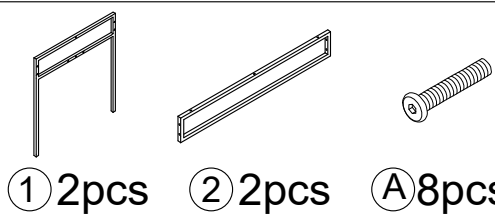


Please note that these holes are oriented upwards.

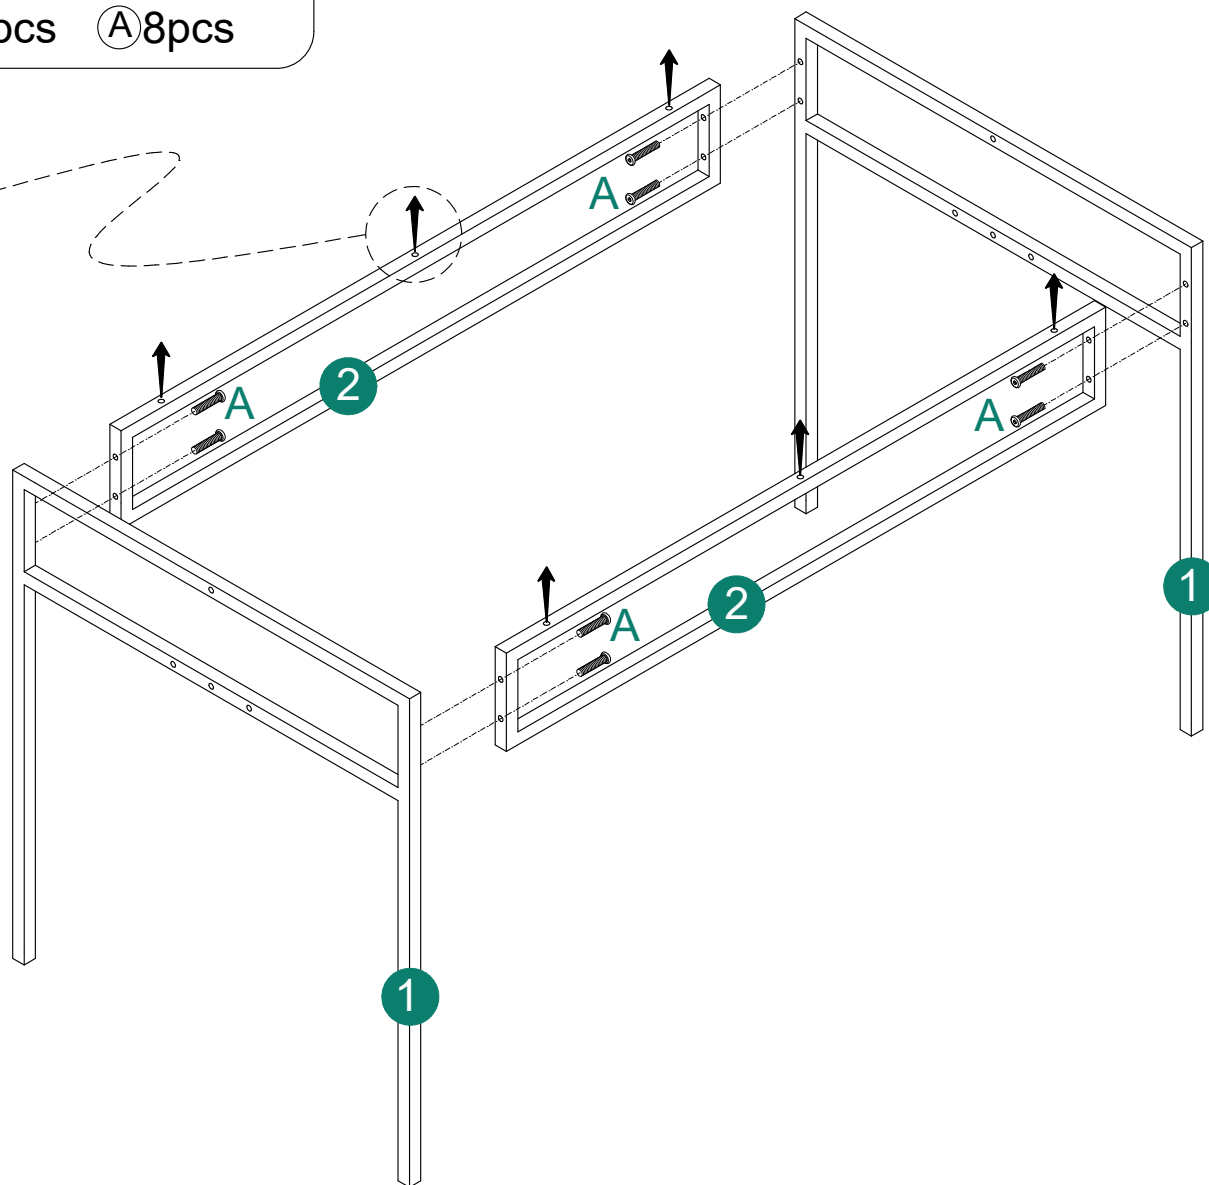

2

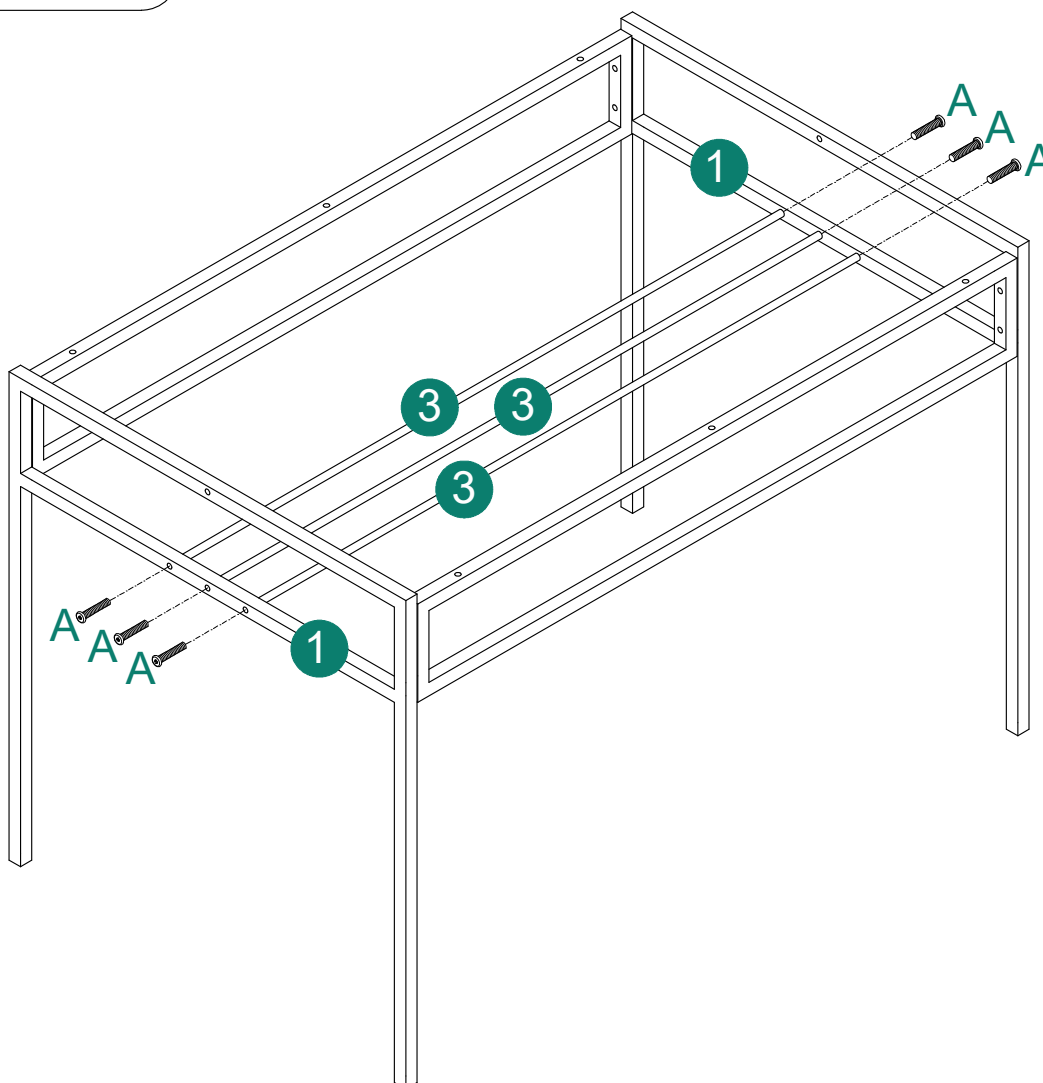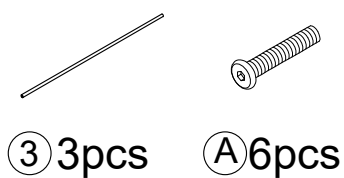


3




④ 1pcs




Ⓐ 6pcs


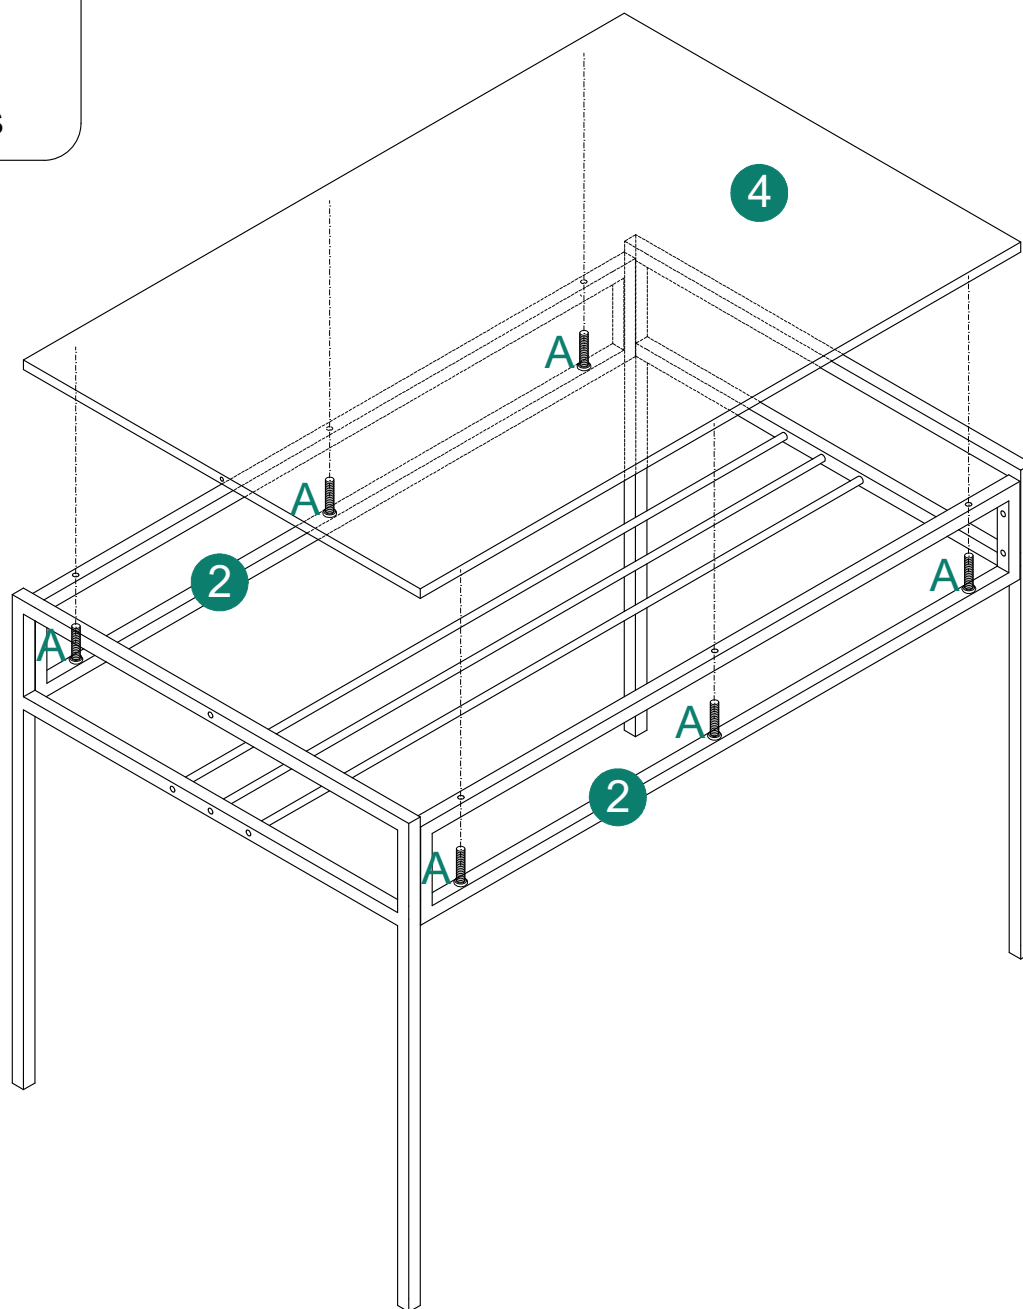


4




Ⓑ 2pcs

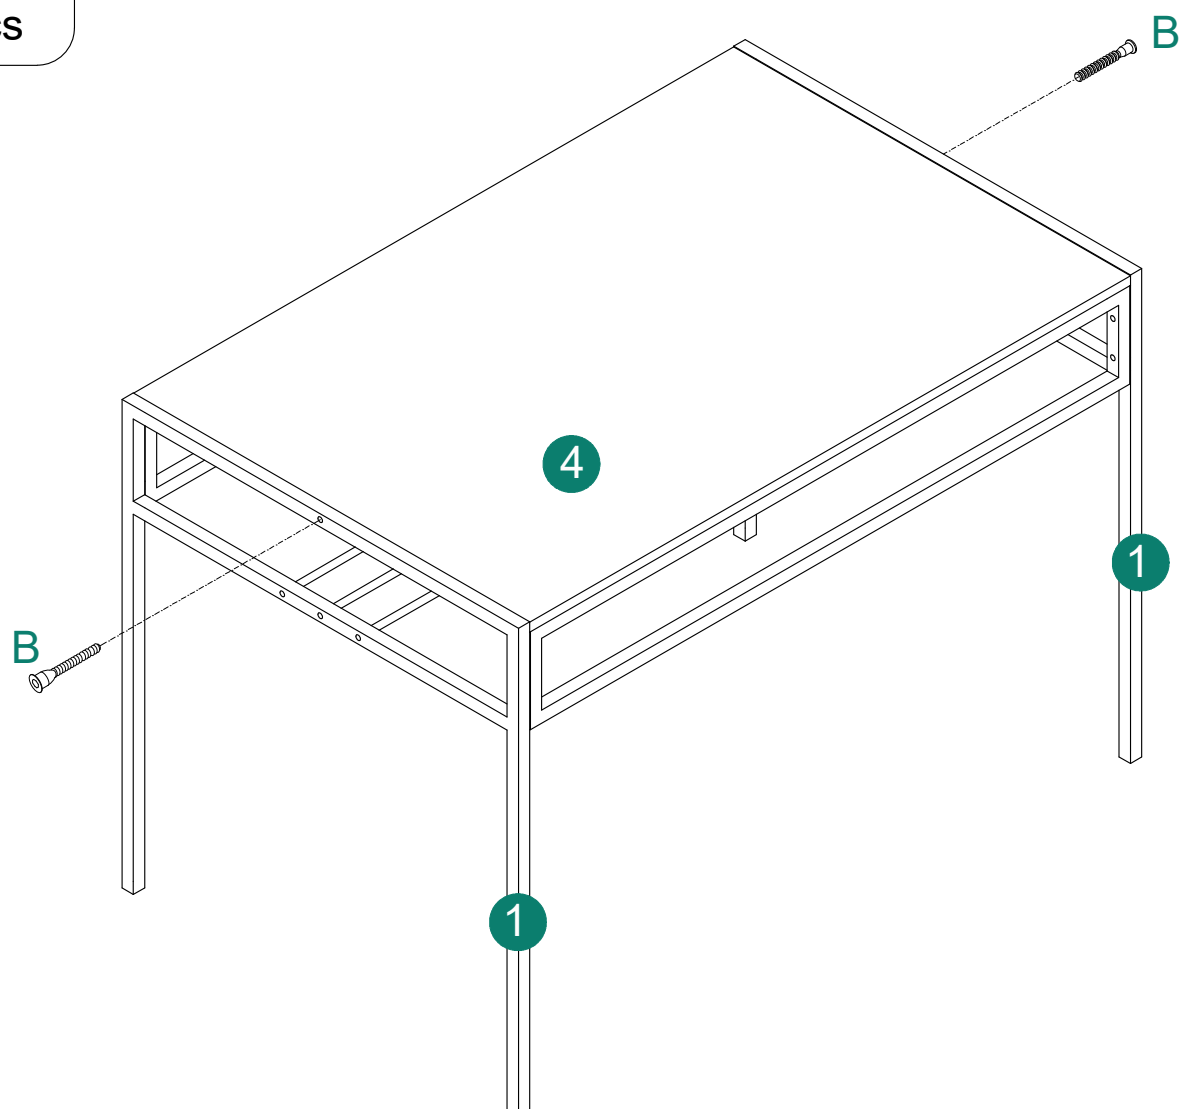


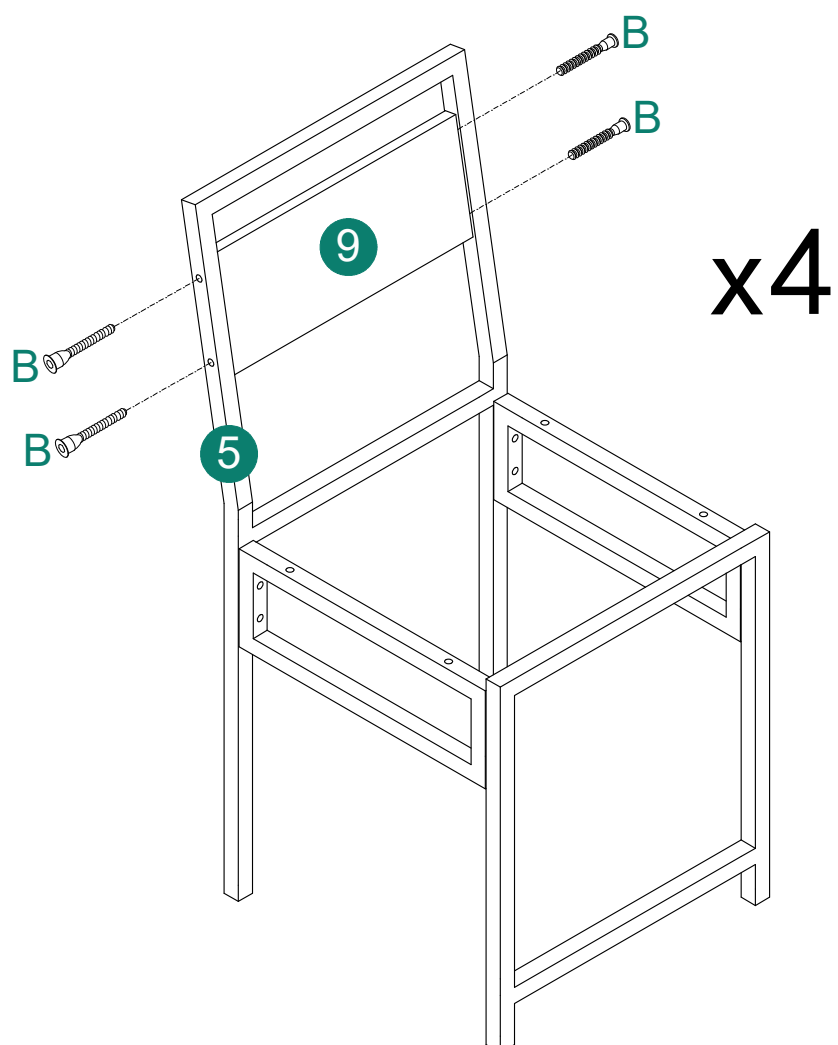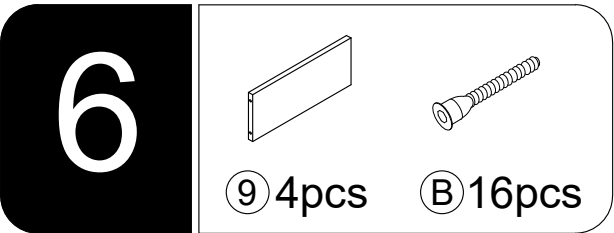


7




⑧ 4pcs



Ⓐ 16pcs

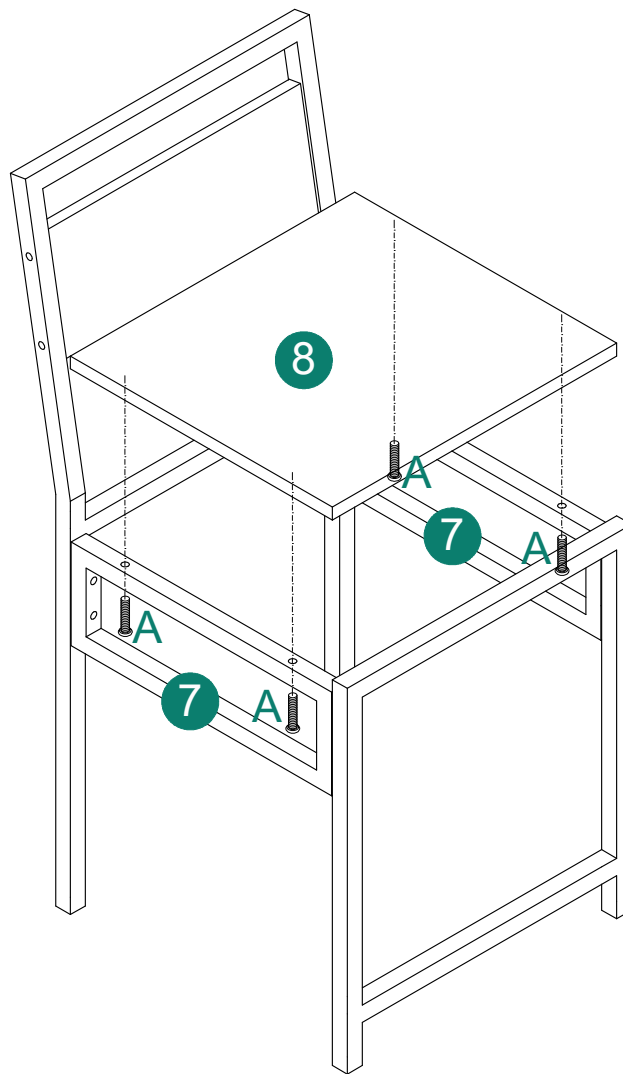

x4

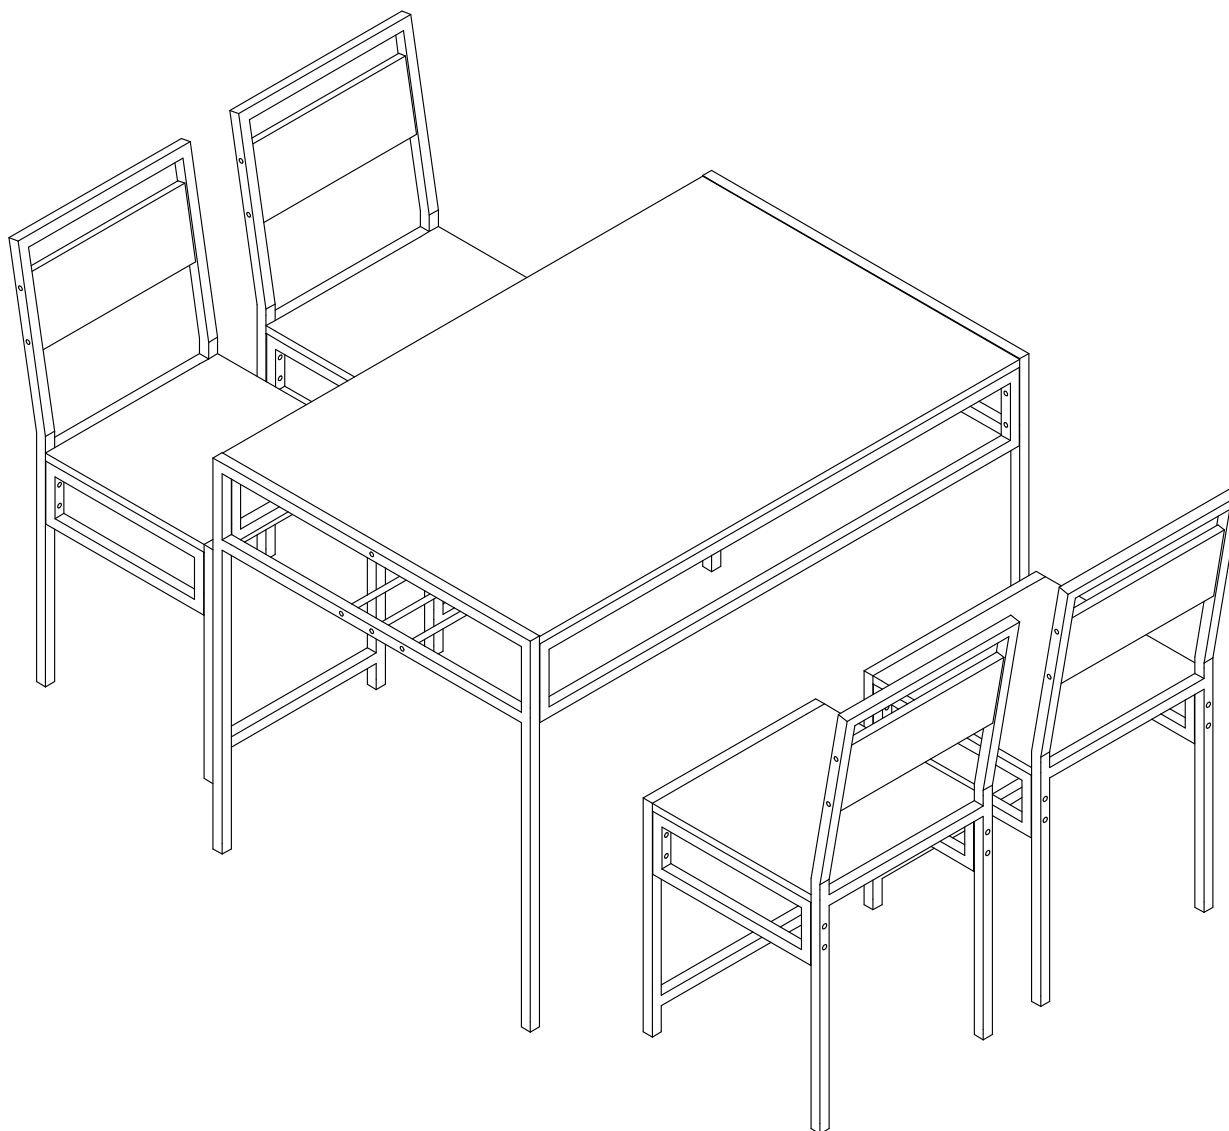

Installation Completed