


UNDER PENALTY OF LAW THIS TAG NOT TO BE REMOVED EXCEPT BY THE CONSUMER		NOTICE THIS ARTICLE MEETS THE FLAMMABILITY REQUIREMENTS OF CALIFORNIA BUREAU OF HOUSEHOLD GOODS AND SERVICES TECHNICAL BULLETIN 117- 2013. CARE SHOULD BE EXERCISED NEAR OPEN FLAME OR WITH BURNING CIGARETTES.
ALL NEW MATERIAL CONSISTING OF POLYURETHANE FOAM PAD 100%		
REGISTRY NO. UT 7062(IN)		<p>The upholstery materials in this product:</p> <p><u> X </u> contain added flame retardant chemicals contain NO added flame retardant chemicals</p> <p>The State of California has updated the flammability standard and determined that the fire safety requirements for this product can be met without adding flame retardant chemicals. The state has identified many flame retardant chemicals as being known to, or strongly suspected of, adversely impacting human health or development.</p>
CERTIFICATION IS MADE BY THE MANUFACTURER THAT THE MATERIALS IN THIS ARTICLE ARE DESCRIBED IN ACCORDANCE WITH LAW.		
MADE FOR: GIGACLOUD TECHNOLOGY(USA)INC 4388 SHIRLEY AVENUE EL MONTE, CA 91731		
DATE OF DELIVERY: <u>07/2024</u> MADE IN VIETNAM		
Complies with U.S. CPSC requirements for upholstered furniture flammability.		

ASSEMBLY INSTRUCTIONS


DINING TALBE

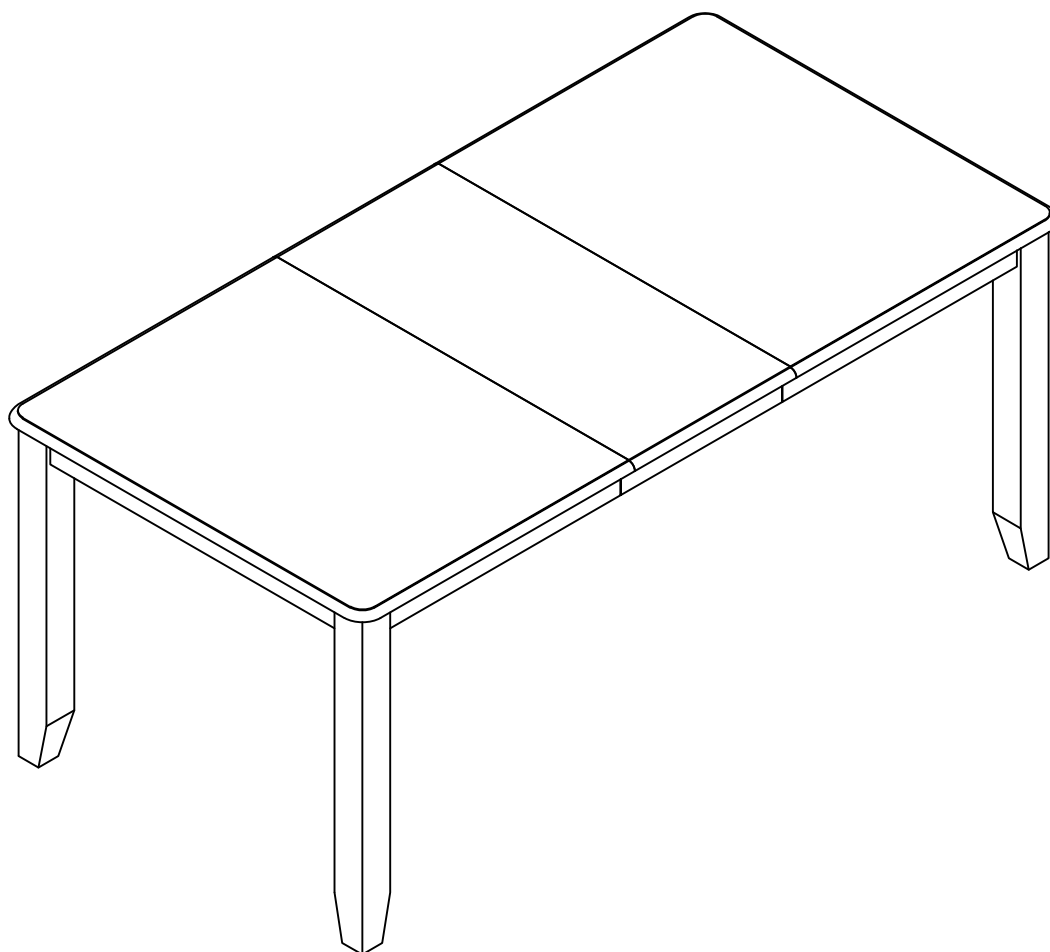




WF295546

IMPORTANT NOTE :

- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN , KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE TABLE IS FULLY SET-UP

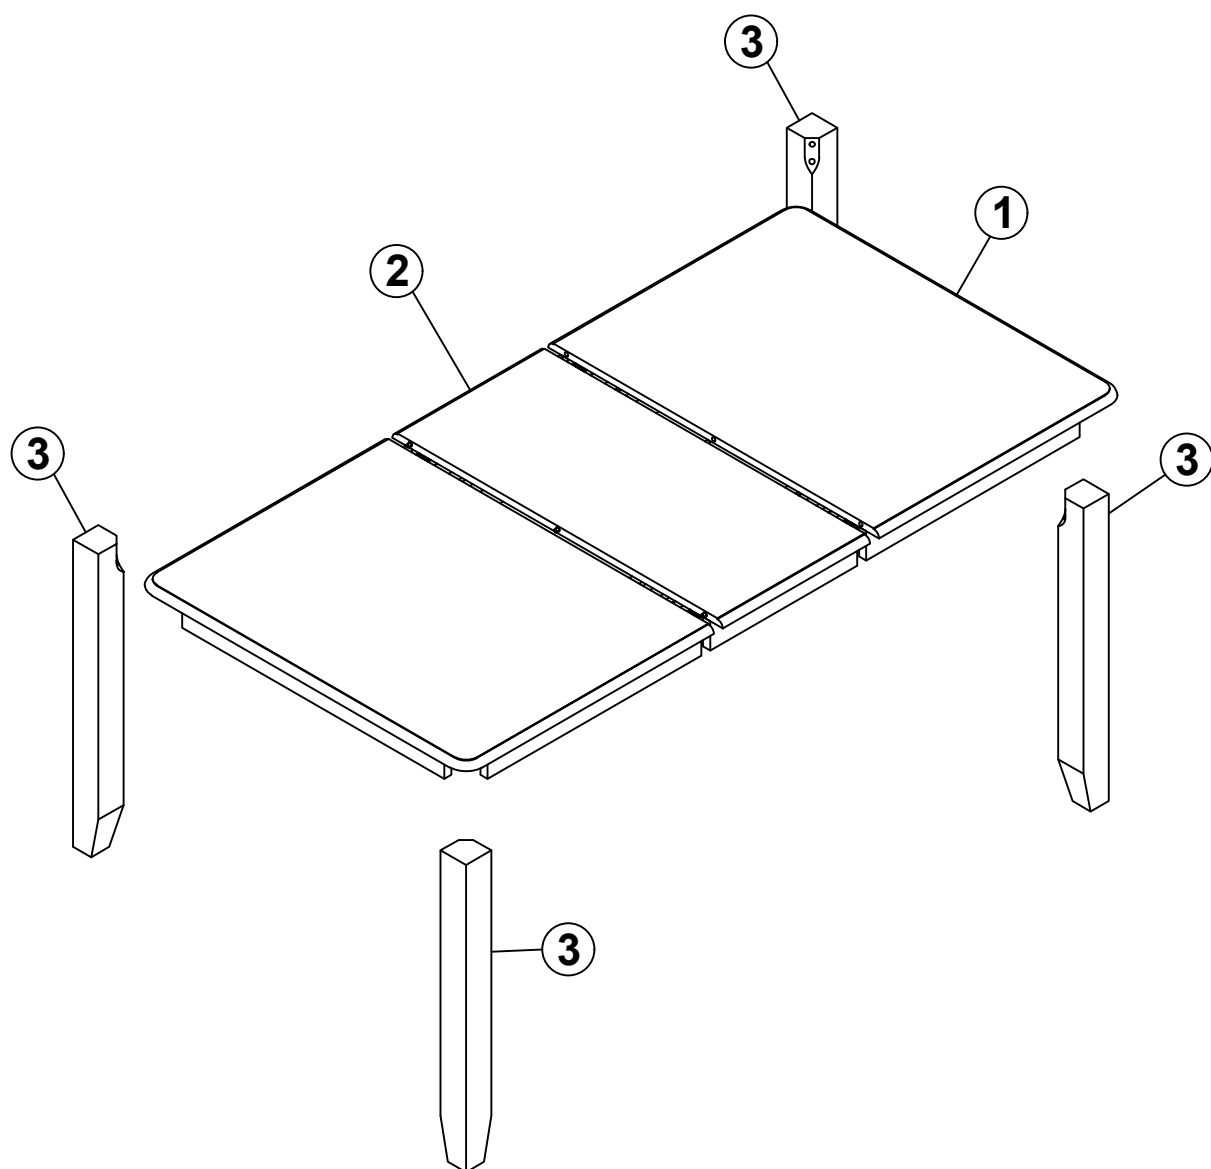

PART LIST
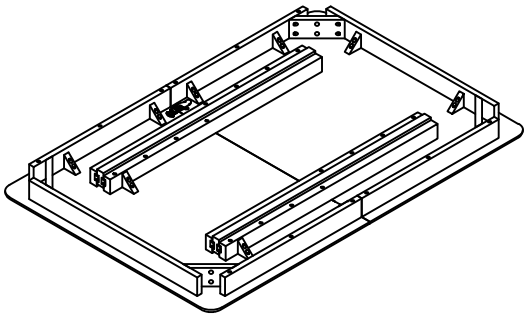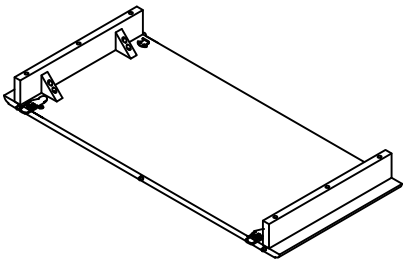
<p>①</p> 	<p>②</p>  <p>TOP MIDDLE TABLE (1pc)</p>
<p>TOP TABLE (1pc)</p>	<p>③</p>  <p>LEGS TABLE (4pcs)</p>

HARDWARE LIST

A



Ø5/16" x 70mm

BOLT (8pcs)

C



Ø5/16" x 13mm

SPRING WASHER (8pcs)

B



Ø5/16" x 19mm

FLAT WASHER (8pcs)


D



4mm

ALLENKEY (1pc)

Step 1

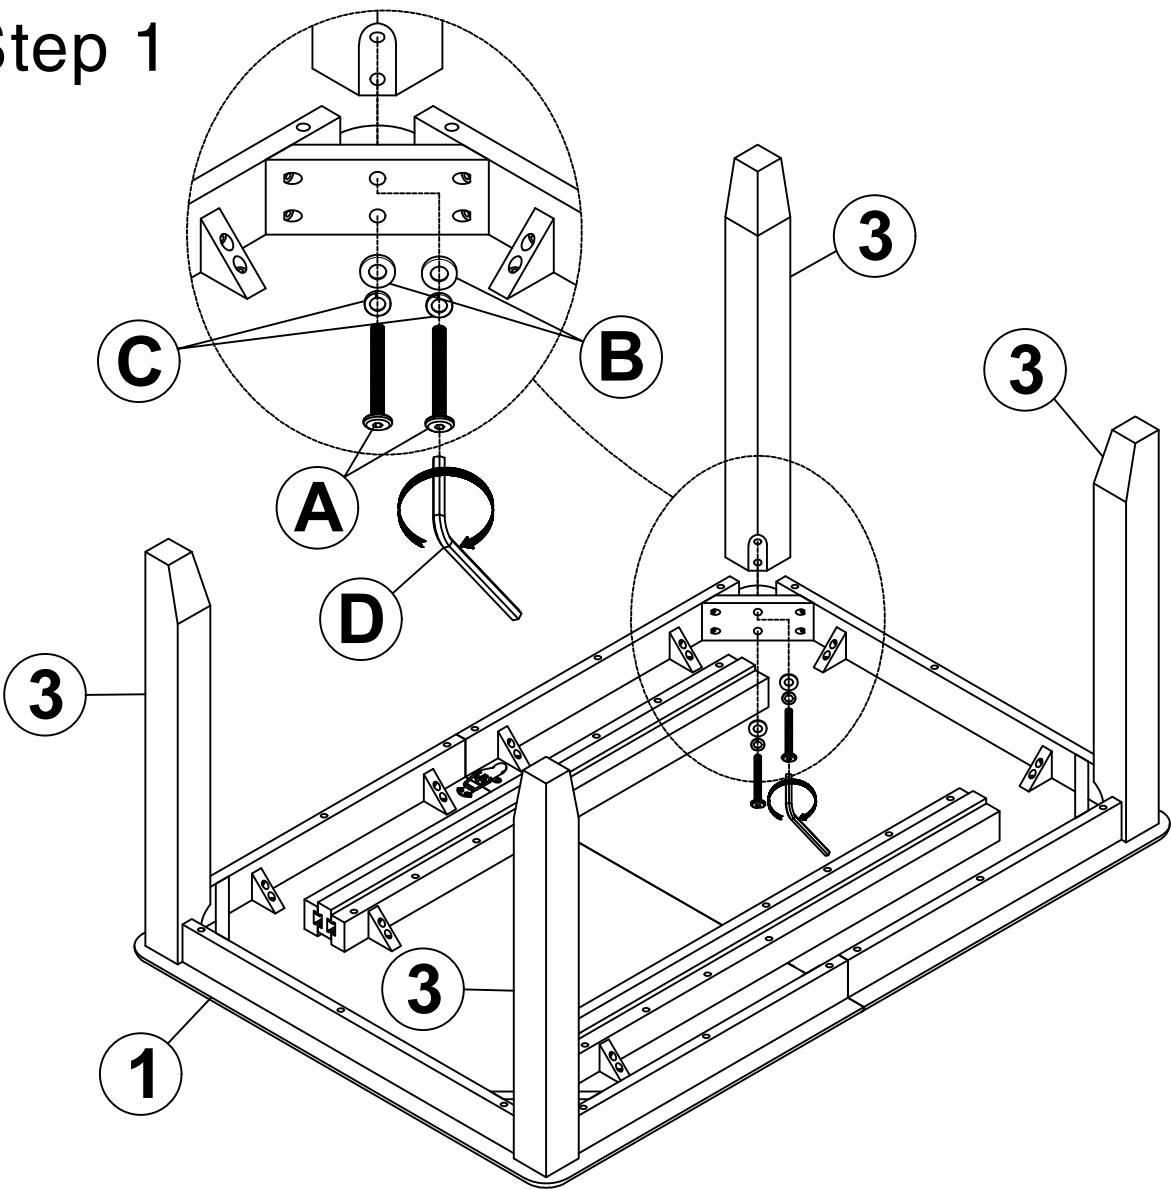


A	5/16x70		8PCS	C	5/16x13		8PCS
B	5/16x19		8PCS	D	4x58		1PC


ASSEMBLY INSTRUCTIONS

Step 2

Unlock

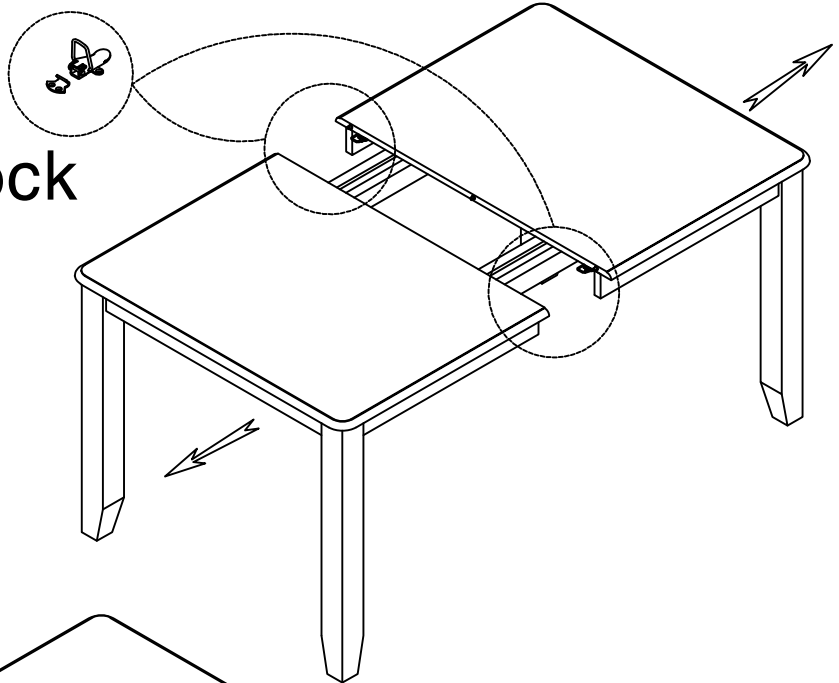


Step 3

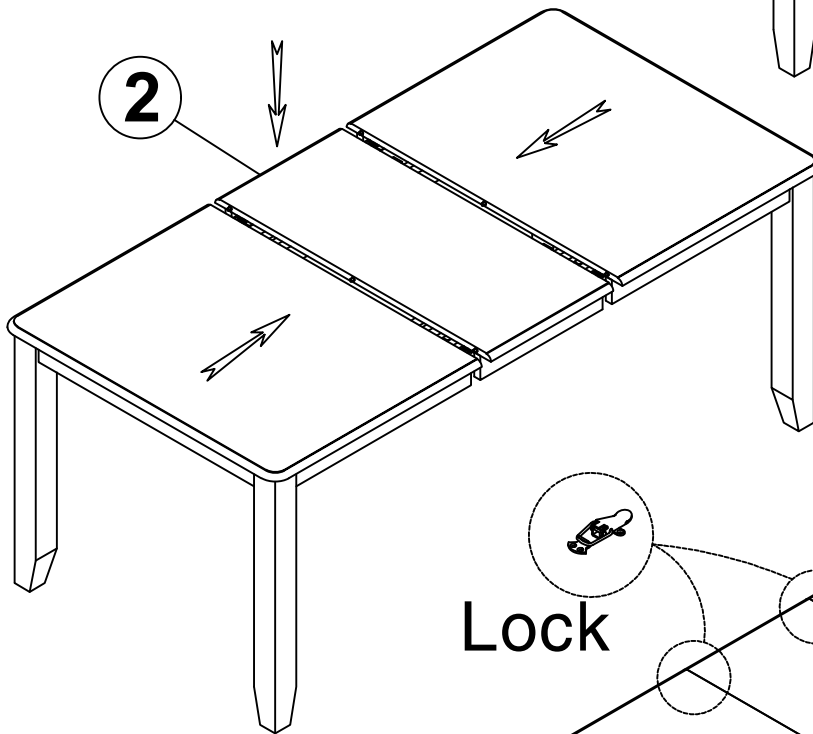

Step 4


Lock

Lock

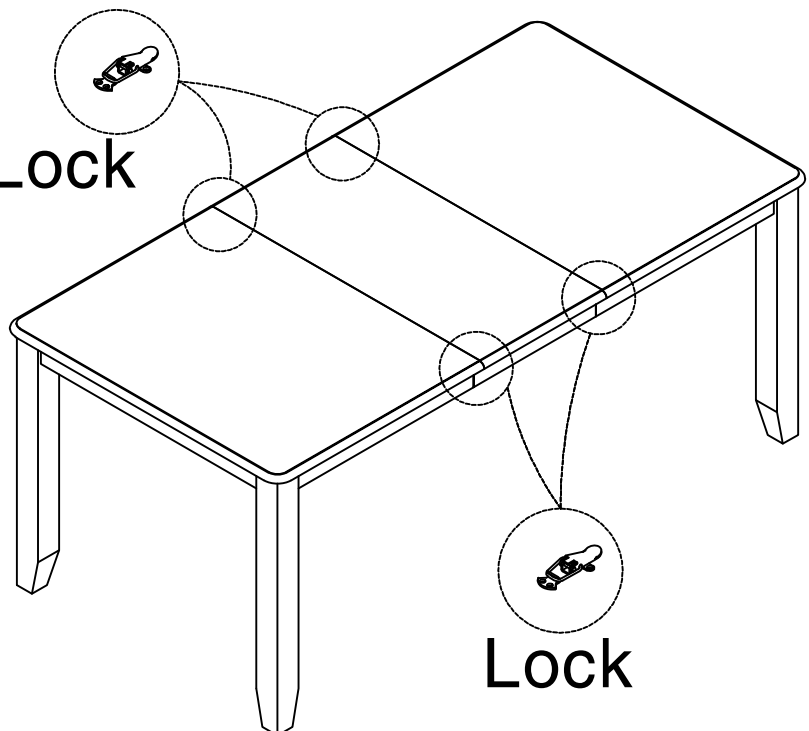

ASSEMBLY INSTRUCTIONS


DINING CHAIR

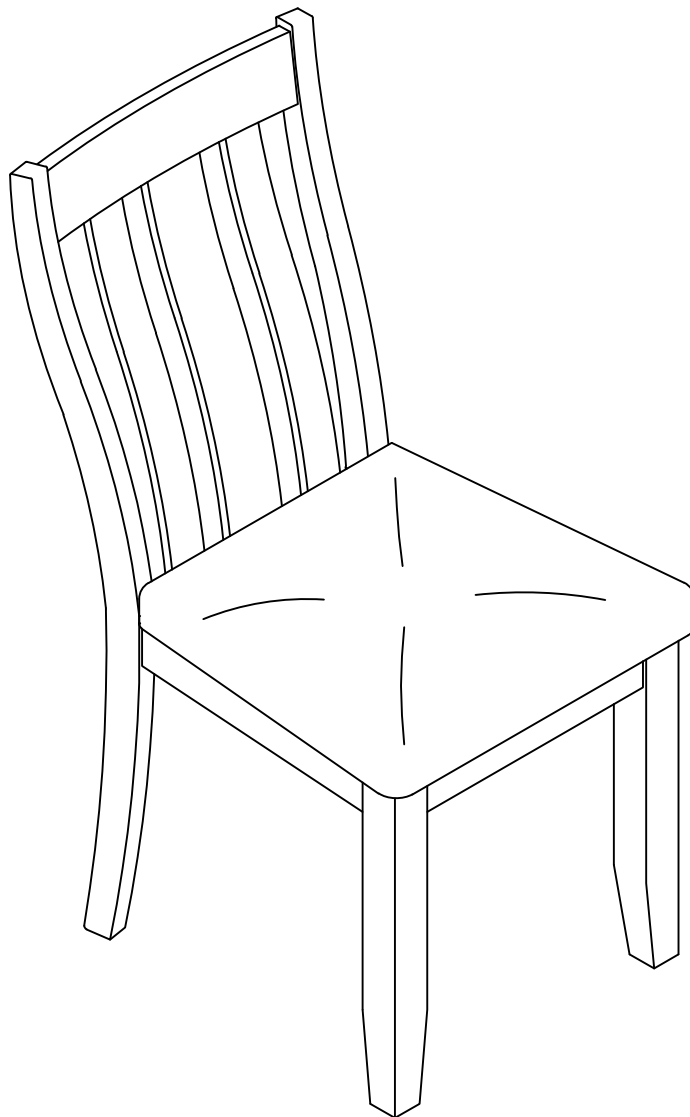






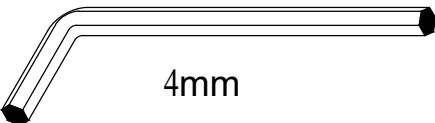

WF295547 / WF295548

IMPORTANT NOTE :




- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN , KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE CHAIR IS FULLY SET-UP

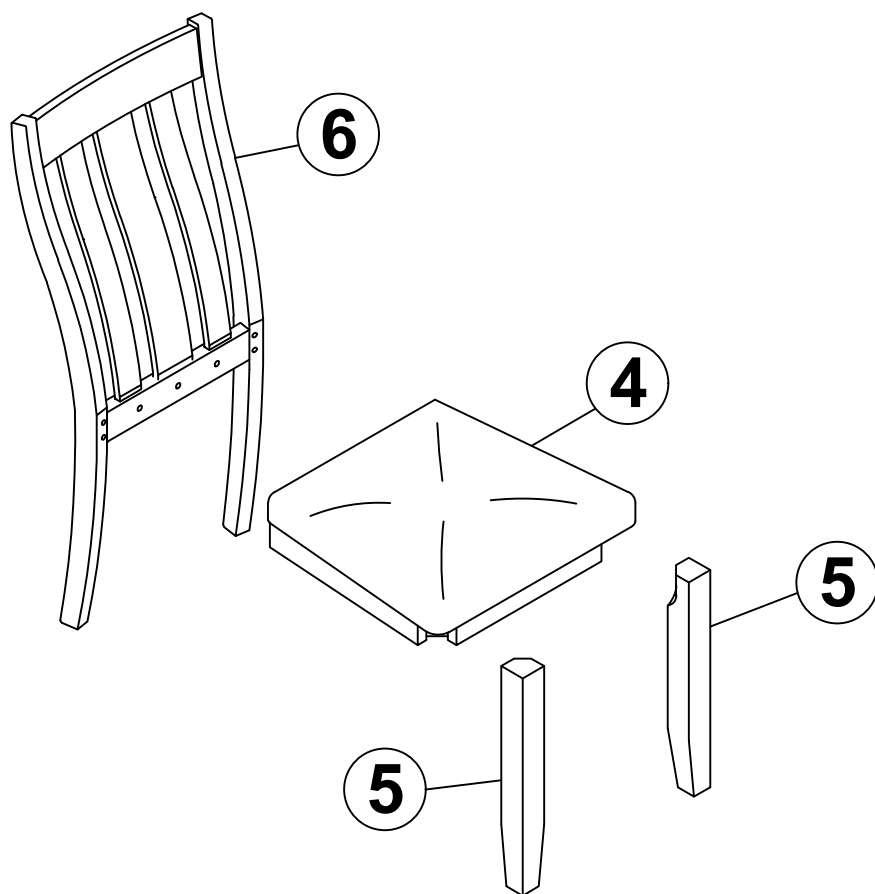


Hardware List For One Chair





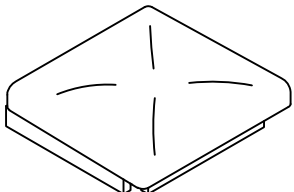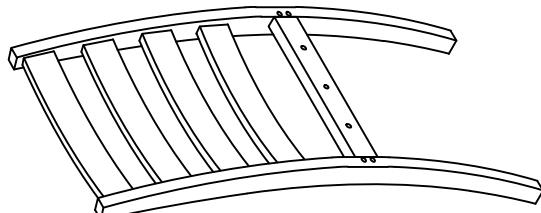

(H)  Ø1/4" x 75mm BOLT (4pcs)	(E)  Ø1/4" x 19mm FLAT WASHER (10pcs)
(K)  Ø1/4" x 55mm BOLT (4pcs)	(F)  Ø10 x 30mm WOODEN PEGS (1pc)
(L)  Ø1/4" x 35mm BOLT (2pcs)	(D)  4mm ALLENKEY (1pc)
(M)  Ø1/4" x 13mm SPRING WASHER (10pcs)	

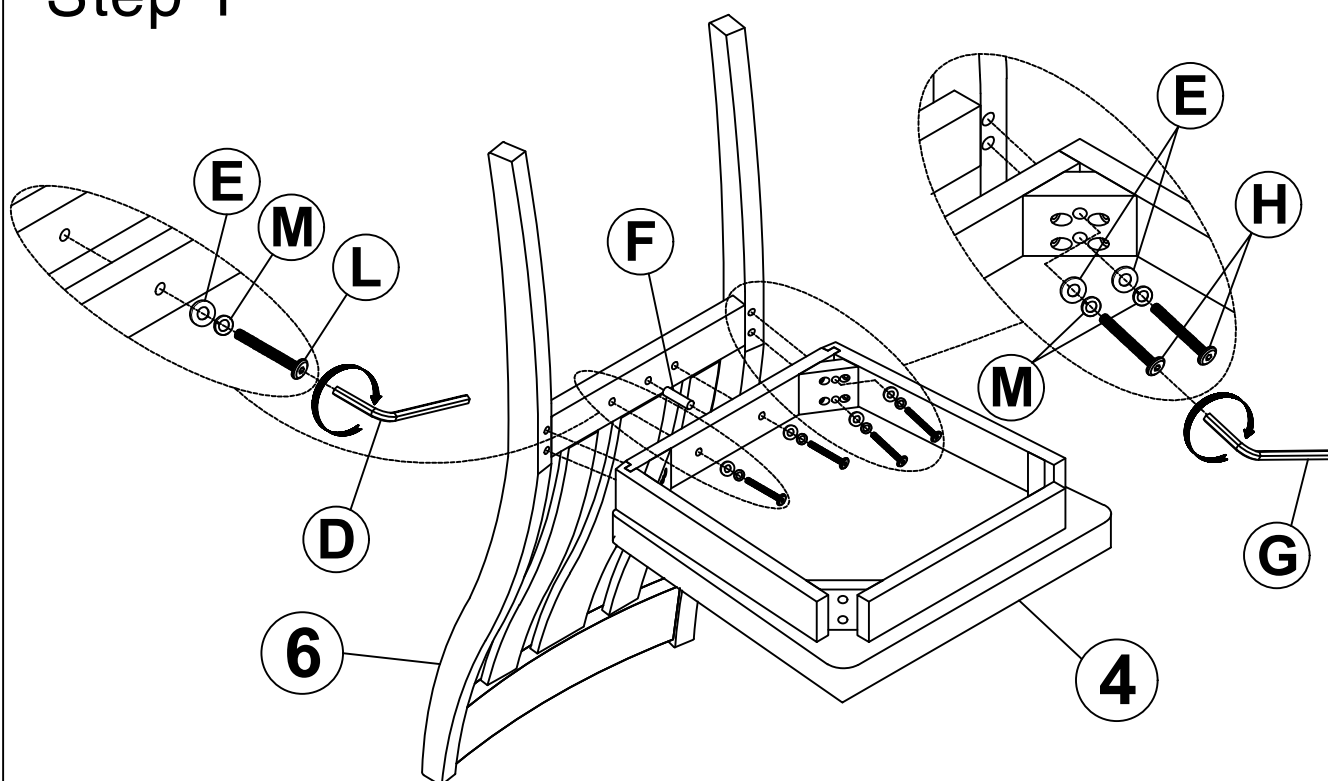Part List For One Chair


4 	6 
SEAT FRAME (1pc)	
5 	
LEGS CHAIR (2pcs)	BACK FRAME (1pc)





Step 1

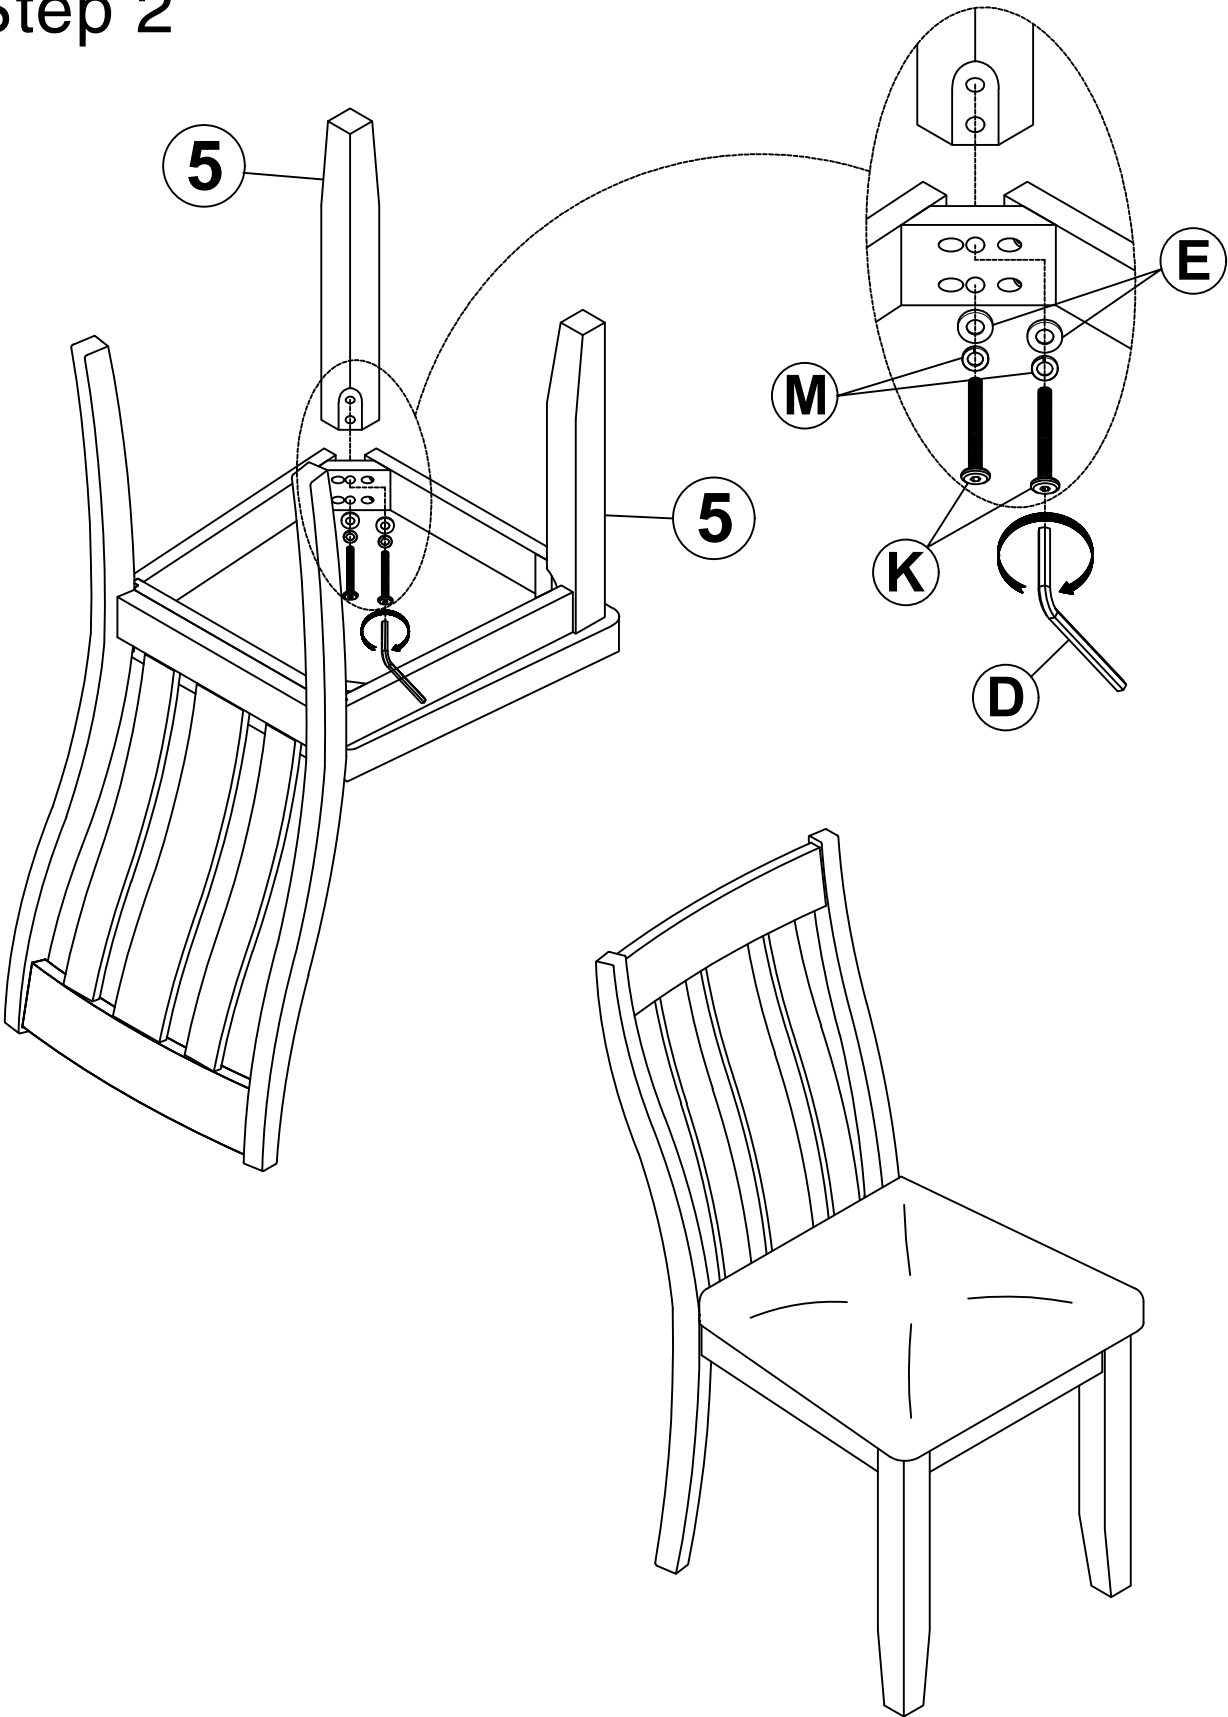

F	Ø10x30		1PC	M	Ø1/4"x13		6PCS
H	1/4"x75		4PCS	E	Ø1/4"x19		6PCS
L	1/4"x35		2PCS	D	4x58		1PC

Step 2



K	1/4"x55		4PCS	E	Ø1/4"x19		4PCS
M	Ø1/4"x13		4PCS	D	4x58		1PC