


ANZZI®

ITEM: SD-AZ10-01**(SD-AZ8074-01**)
ANZZI GLASS SHOWER DOOR
INSTALLATION & OPERATION MANUAL

V2.3
03/12/2025

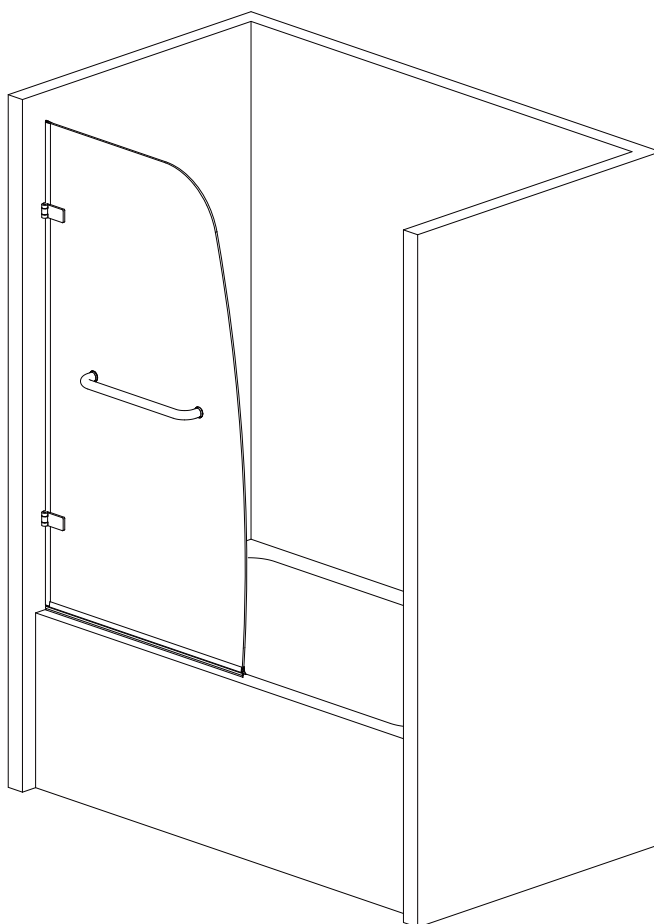

DON'T WAIT! REGISTER NOW!

Register your product within 90 days to ensure it is recognized as a purchase and covered under warranty.

Register online at <https://anzzi.com/pages/register> or scan the QR code on PG. 2.



PRODUCT REGISTRATION*


IMPORTANT: Warranty will not be recognized unless product is registered.

Register online at <https://anzzi.com/pages/register> or Scan the QR code below.

Registering your product maximizes your warranty benefits and ensures prompt service and support.

1

USE YOUR PHONE CAMERA
TO SCAN THE QR CODE

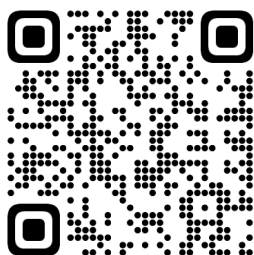

2

FILL IN A QUICK
REGISTRATION FORM

Thank you for your purchase!

Registering your products ensures you maximize your warranty benefits and receive prompt service and support.

Name*

Email*

City*

Order #*

Installer Name

...

Model Purchased*


Installer Phone Number

Customer Age Range

Submit

3

CLICK SUBMIT AND
ENJOY PEACE OF MIND

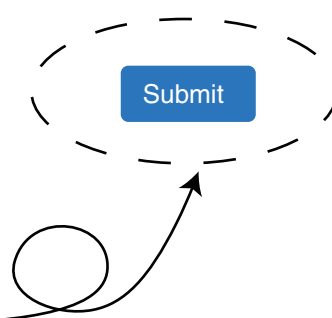

Need help? For technical support call **305-614-4070** or visit us at www.ANZZI.com




STOP!

READ BEFORE YOU PROCEED!
TO KEEP GLASS FROM BREAKING, MAKE SURE:

- 1. Two people are used to install. This is a requirement due to the weight of the door.**
- 2. Glass corner protectors remain on during installation.**
- 3. Glass protective seals are mounted to the door before opening/closing.**

WARNING

PROTECTIVE EQUIPMENT MUST BE WORN WHEN HANDLING GLASS



INSTALLATION GUIDE

BEFORE YOU BEGIN

- Please check the product for damage and missing parts immediately upon delivery. Damage reported later will not be covered by our warranty. Please handle the product with care. Avoid any impact to the sides and edges of the glass.
- Consult your local building codes before installation.
- To reduce the risk of breakage, keep corner protectors on glass while installing.
- If this unit is being installed in new construction, please install all required plumbing and drainage before installing the shower. Use a licensed plumber/contractor (if required by local code) for all plumbing installations.
- Before beginning installation, make sure all surfaces are level, solid and will support the total weight of the unit. Also, make sure the walls are at right angles. Irregular installation surface level, radius corners, or improper angle of side walls will result in serious problems for your installation. Please note that some adjustments and drilling might be necessary during the installation process.
- Please protect all primary surfaces of the product during installation. Never set your glass down directly onto a tile floor. Leave corner protectors in place until necessary to remove them. Always use wood or cardboard to protect the bottom edge and corners of the glass before and during installation.



WARNING

- This unit must be installed upon a finished threshold and against finished walls.
- Take care to avoid hidden pipes or electrical cables when drilling holes in walls.
- This product is heavy and requires two people to install it.
- When cutting or drilling metal components or handling glass, wear protective eye wear, gloves, and closed-toe shoes to reduce the risk of personal injury.
- Failure to follow instructions when installing this product may result in personal injury, property damage, or product failure and may void the warranty.

INSTALLATION GUIDE

BEFORE YOU BEGIN




ATTENTION

- Surface of the tub deck must be level for better sealing.
- This model requires a minimum 1" (25.4mm) flat level tub deck for sealing.

Tools Required




- This product is heavy and requires two people to install.

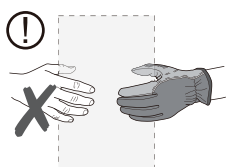


- Use cut-resistant, non-slip gloves to reduce the risk of personal injury and to hold the glass firmly.




Level




Tape Measure

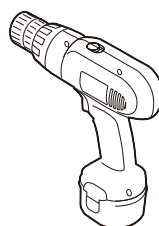

Drill



5/16"
(8mm)
Drill Bit

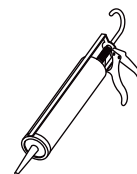

100%
Silicone
Sealant




Pencil



Rubber
Mallet



Safety
Glasses



Stud Finder



Tin Snip



This product is heavy and requires two people to install.






WARNING

To prevent damage to glass and potential injury, make sure to follow the instructions on page 1.

PARTS

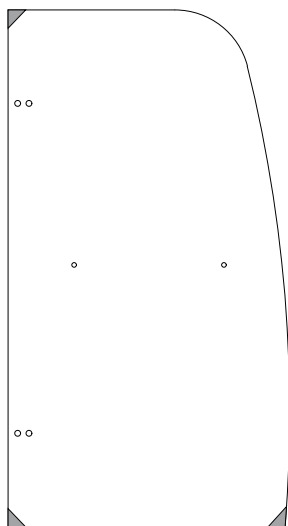

[01]X1




[05]X1



[04]X1




[06]X1



[02]X2



[07]X4



[03]X4
ST5X40



[08]X1




[09]X1



WARNING

To prevent damage to glass and potential injury, make sure to follow the instructions on page 1.


ASSEMBLY

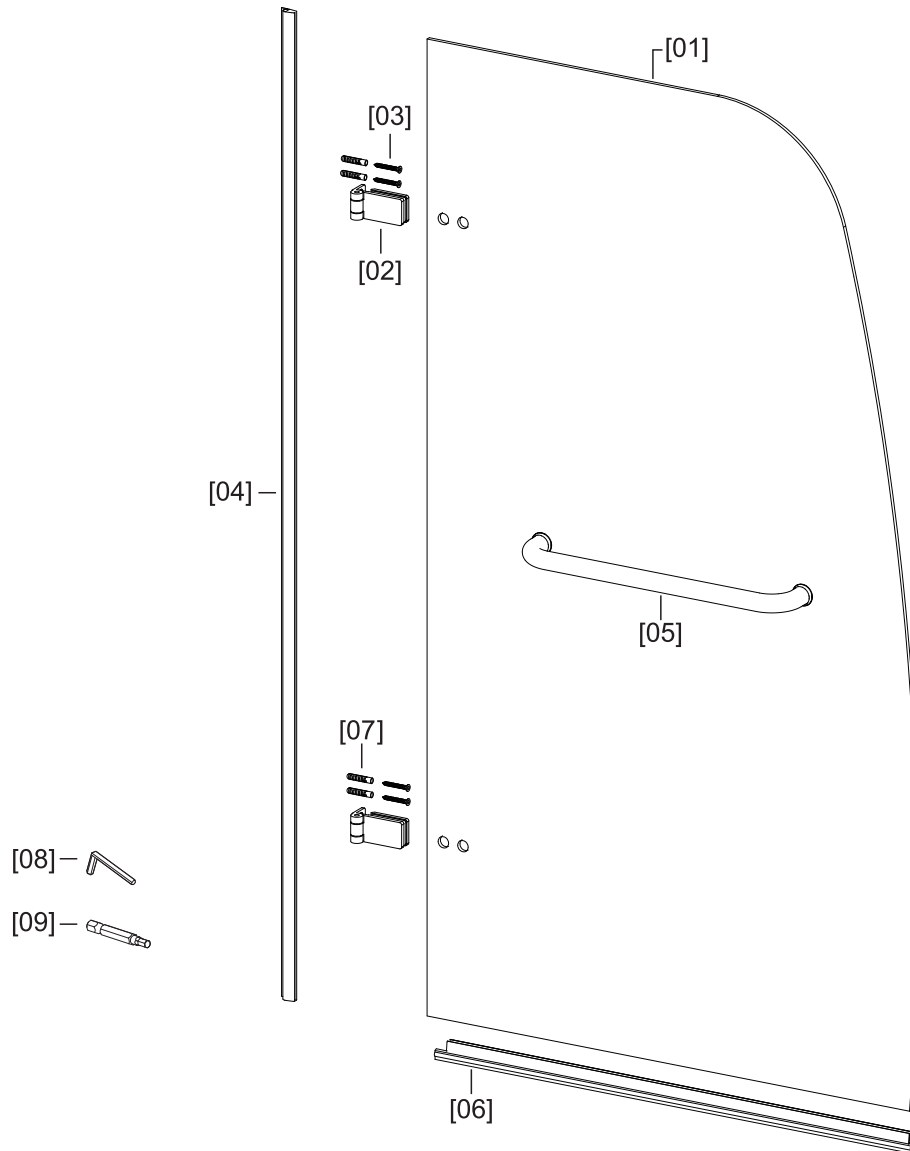

Part	Description	Qty.	Part	Description	Qty.
[01]	Door	1	[06]	Water Sealing Strip	1
[02]	Hinge	2	[07]	Anchors	4
[03]	Screw ST5X40	4	[08]	Allen Key	1
[04]	Side Water Sealing Strip	1	[09]	Hexagonal Wind Bit	1
[05]	Handle	1			

SD-AZ10-01**(SD-AZ8074-01**)

30"x55"

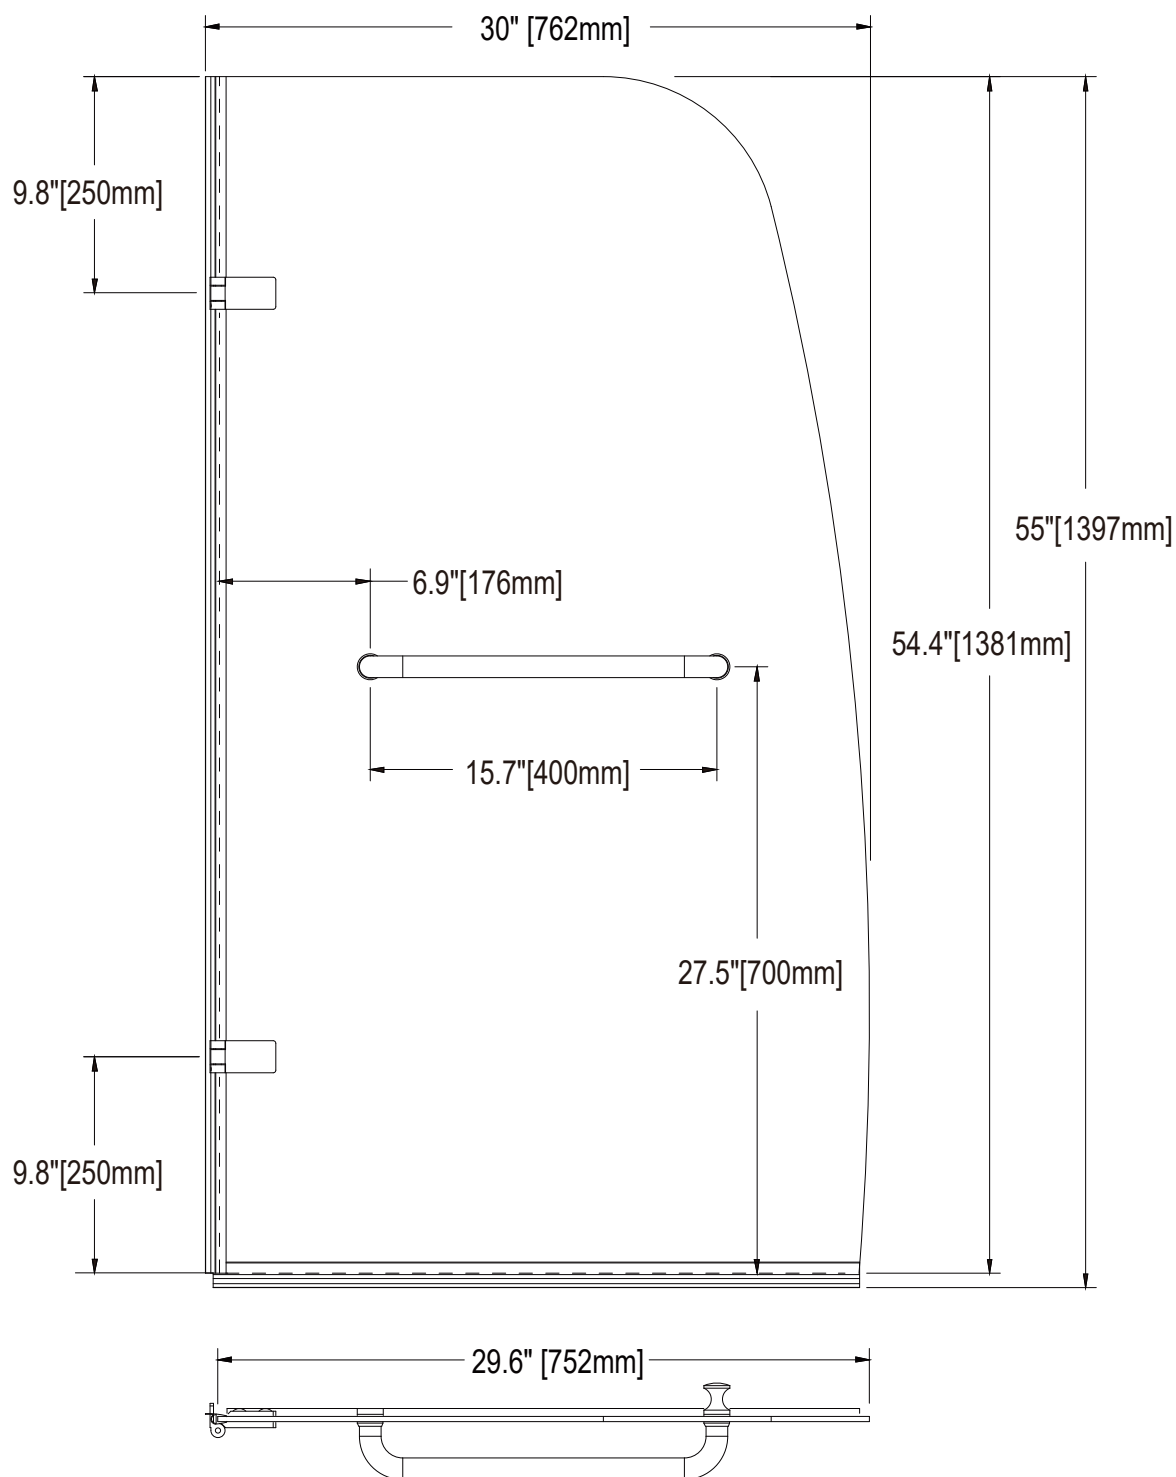



ATTENTION



- To avoid personal injury or property damage, identify components and read all instructions before installing.
- This model requires a minimum 1" (25.4mm) of tub deck space for installation.

INSTALLATION INSTRUCTIONS

Step 1

1. This manual shows left side installation. For right side installation, transpose all instructions.
2. Cut the **Flange** of the **Side Water Sealing Strip [04]** as figure shows for left side installation. (Fig 1.1)
3. Cut the **Flange** of the **Side Water Sealing Strip [04]** as figure shows for right side installation. (Fig 1.3)

Note: Do not cut the Cylindrical Surface when cutting the Flange. (Fig 1.2)

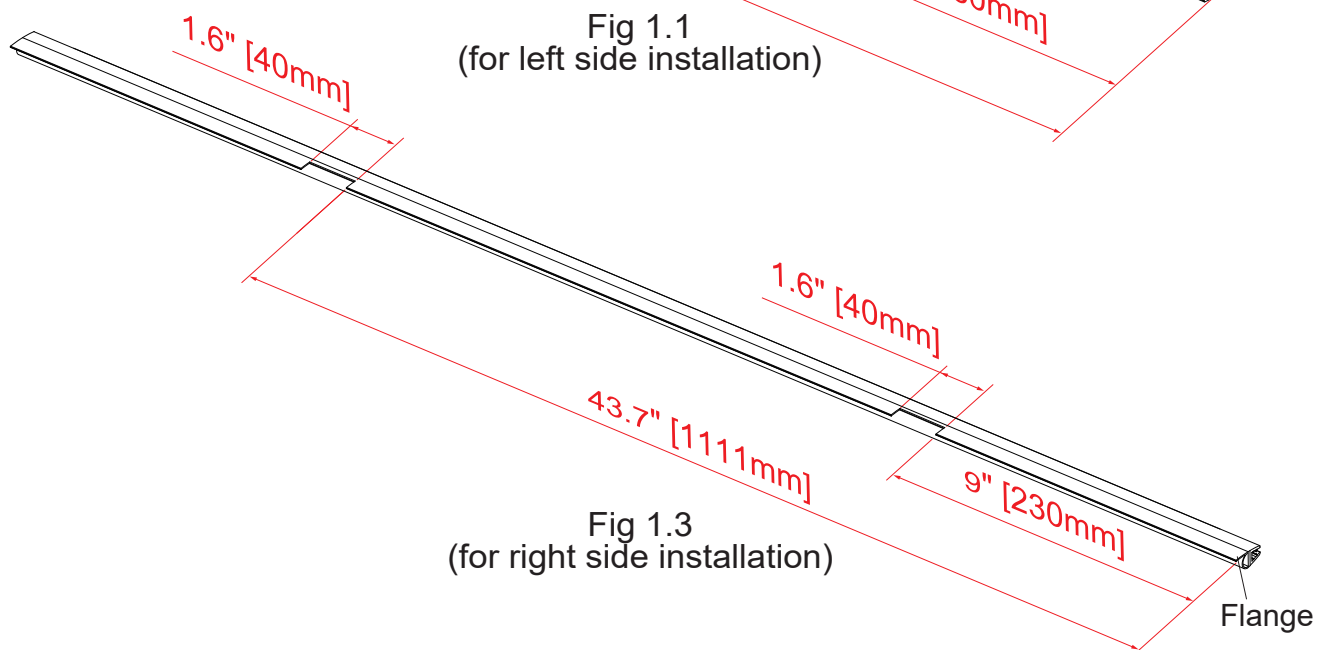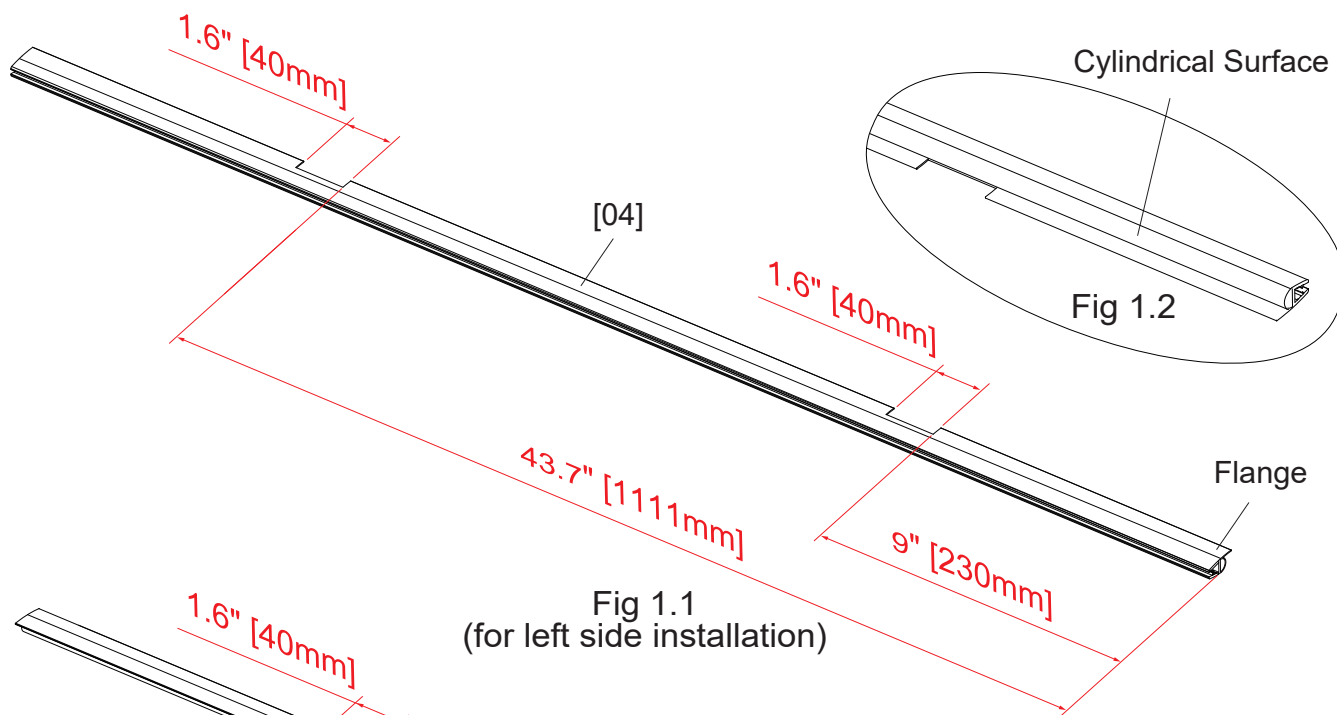



WARNING

To prevent damage to glass and potential injury, make sure to follow the instructions on page 1.

Step 2

1. Lay down the **Door [01]** with blanket or foam under it. (Fig 2.1)
2. Carefully remove the **Corner Protectors** from **Door [01]**. Attach the **Side Water Sealing Strip [04]** to the **Door [01]** as the figure shows. (Fig 2.1)

Note:

- a. Make sure the Flange of **Side Water Sealing Strip [04]** face inside of shower room.
The bottom of **Side Water Sealing Strip [04]** should be aligned with the bottom of **Door [01]**. (Fig 2.2)

3. Install the **Hinge [02]** to the **Door [01]** as the figure shows. (Fig 2.1)

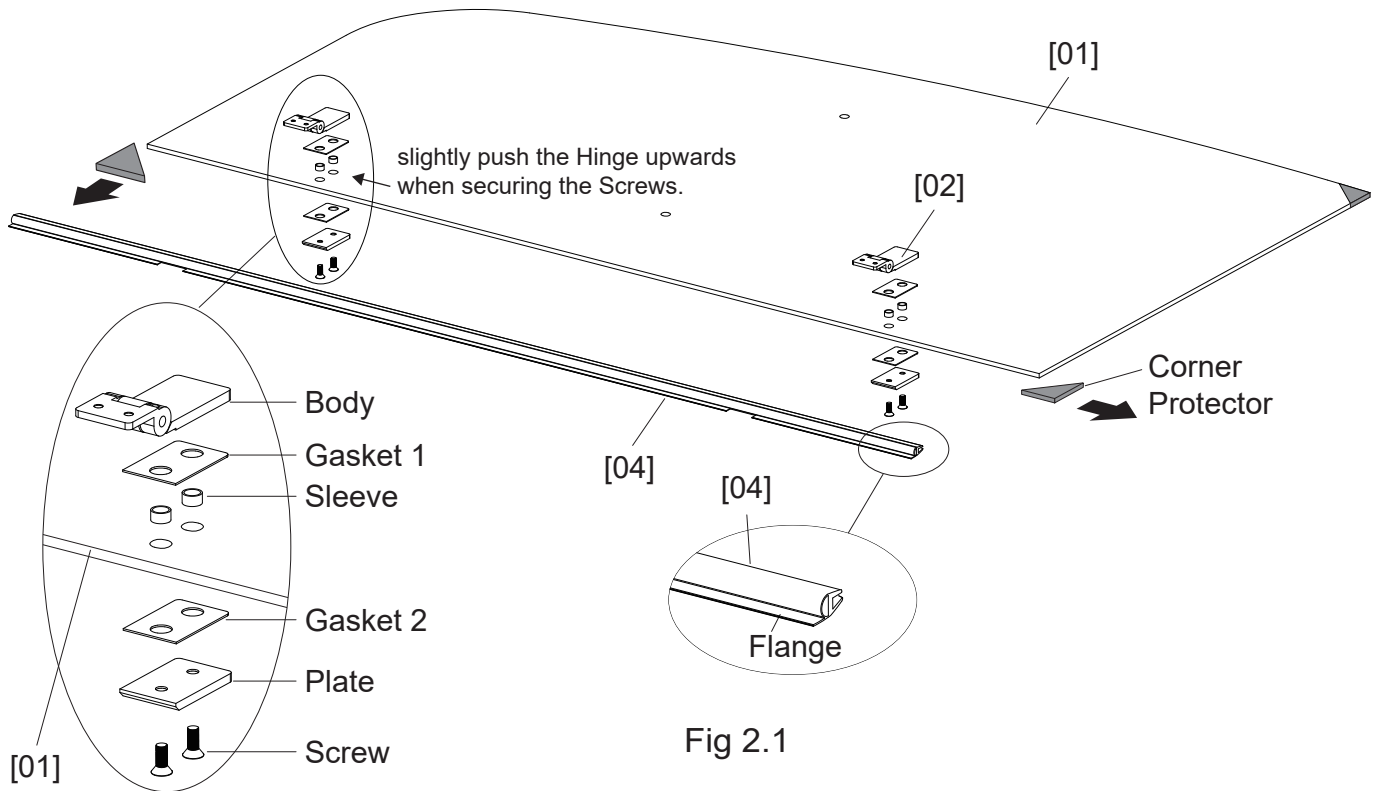


Fig 2.1

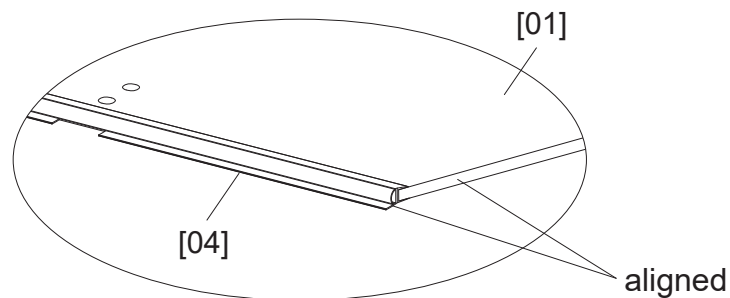


Fig 2.2




WARNING

To prevent damage to glass and potential injury, make sure to follow the instructions on page 1.

Step 3

1. This shower door must be mounted to a stud. Minimum tub deck space is required.
IMPORTANT: Using a stud finder, ensure the wall intended to hold the door has a stud at the installation point. If there is no stud in the shown area, we recommend employing a qualified contractor to install one. (Fig 3.1)
2. Place a Timber with **0.6" [15mm]** between the **Door [01]** and the tub. Using a level, position the **Door [01]** on the tub deck and against the wall, in line with your threshold/tub deck. This unit requires 1" of flat tub space for installation. (Fig 3.1)
3. Mark the drill hole locations on the wall through the holes of the **Hinge[02]**. (Fig 3.2)
4. Lay down the **Door [01]** with blanket or foam under it again.

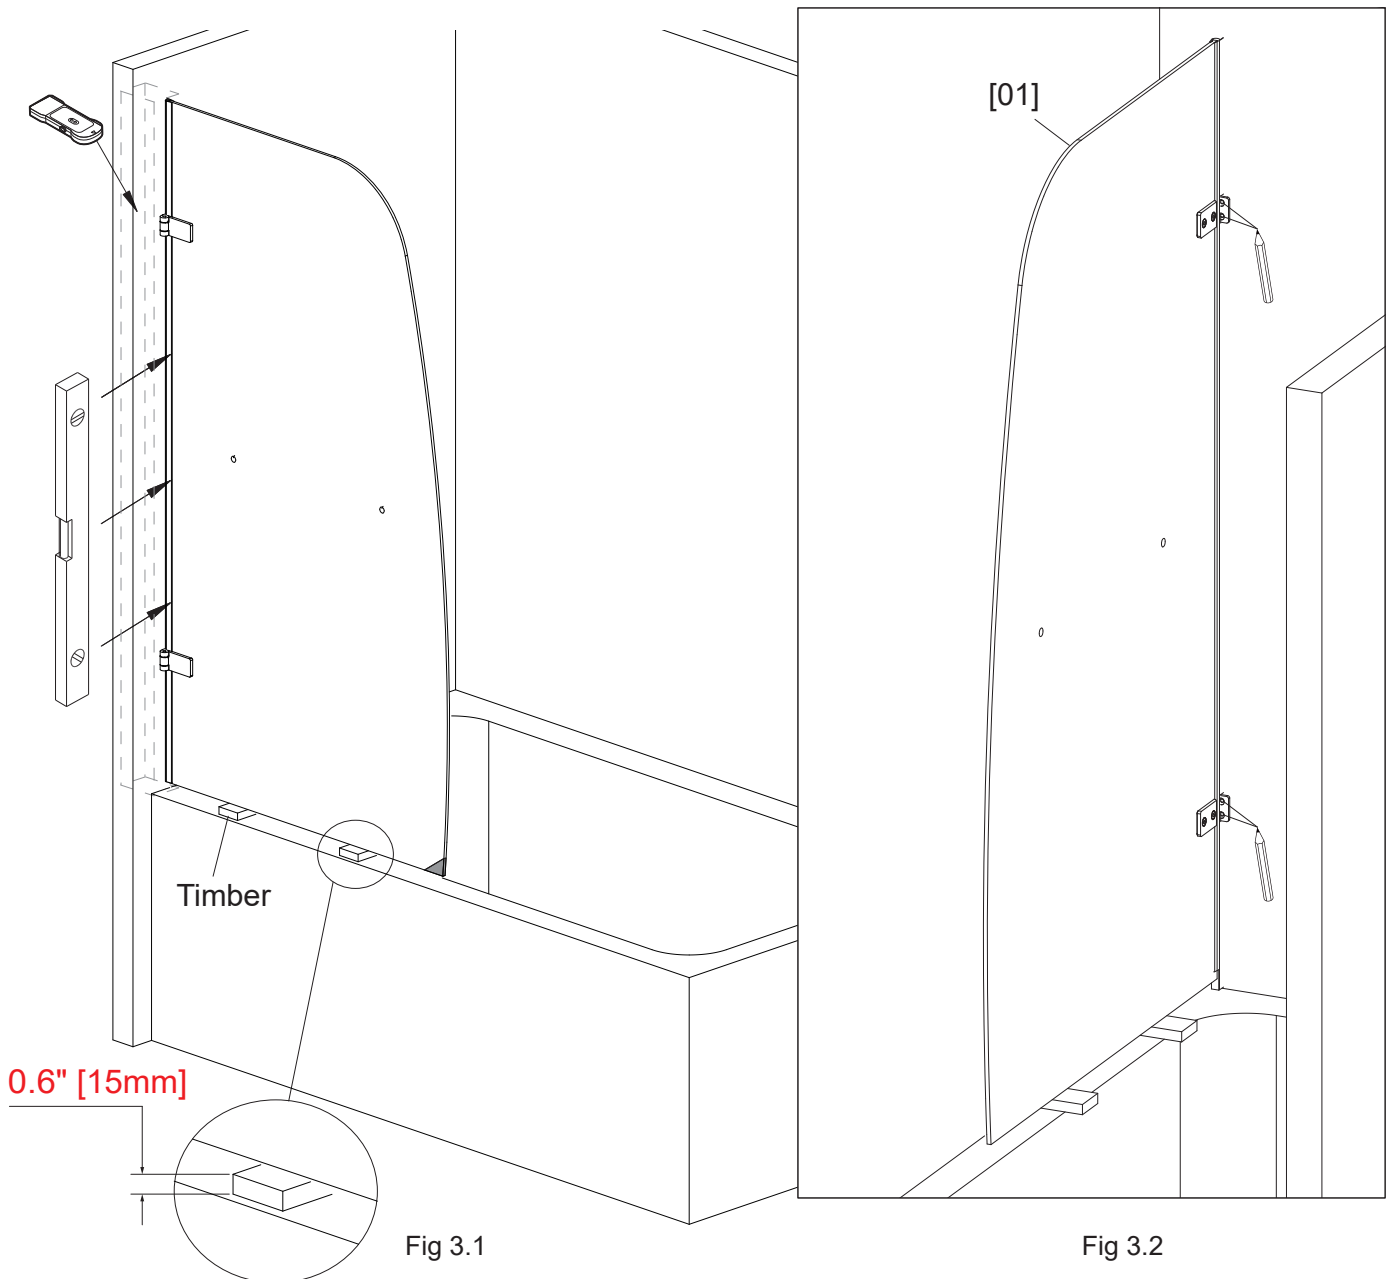



WARNING

To prevent damage to glass and potential injury, make sure to follow the instructions on page 1.

Step 4

1. Drill a **5/16"** hole at each marked location. (Fig 4.2)
2. Insert the **Anchors [07]**. (Fig 4.3)
3. Apply some Silicone Sealant at the surface of **Hinge [02]** face to the wall, then lift and hold the **Door [01]**. Secure with **Screw ST5X40 [03]**. (Fig 4.4)
4. Carefully remove the **Corner Protectors** from **Door [01]**. Attach the **Water Sealing Strip [06]** to the **Door [01]**. Make sure the gap between the cut end of **Water Sealing Strip [06]** and the wall is 0.04"(1mm) when the **Door [01]** is in close position. (Fig 4.1)
5. If the **Water Sealing Strip [06]** and **Side Water Sealing Strip [04]** is longer than the glass after installation, cut it to correct length. (Fig 4.1)

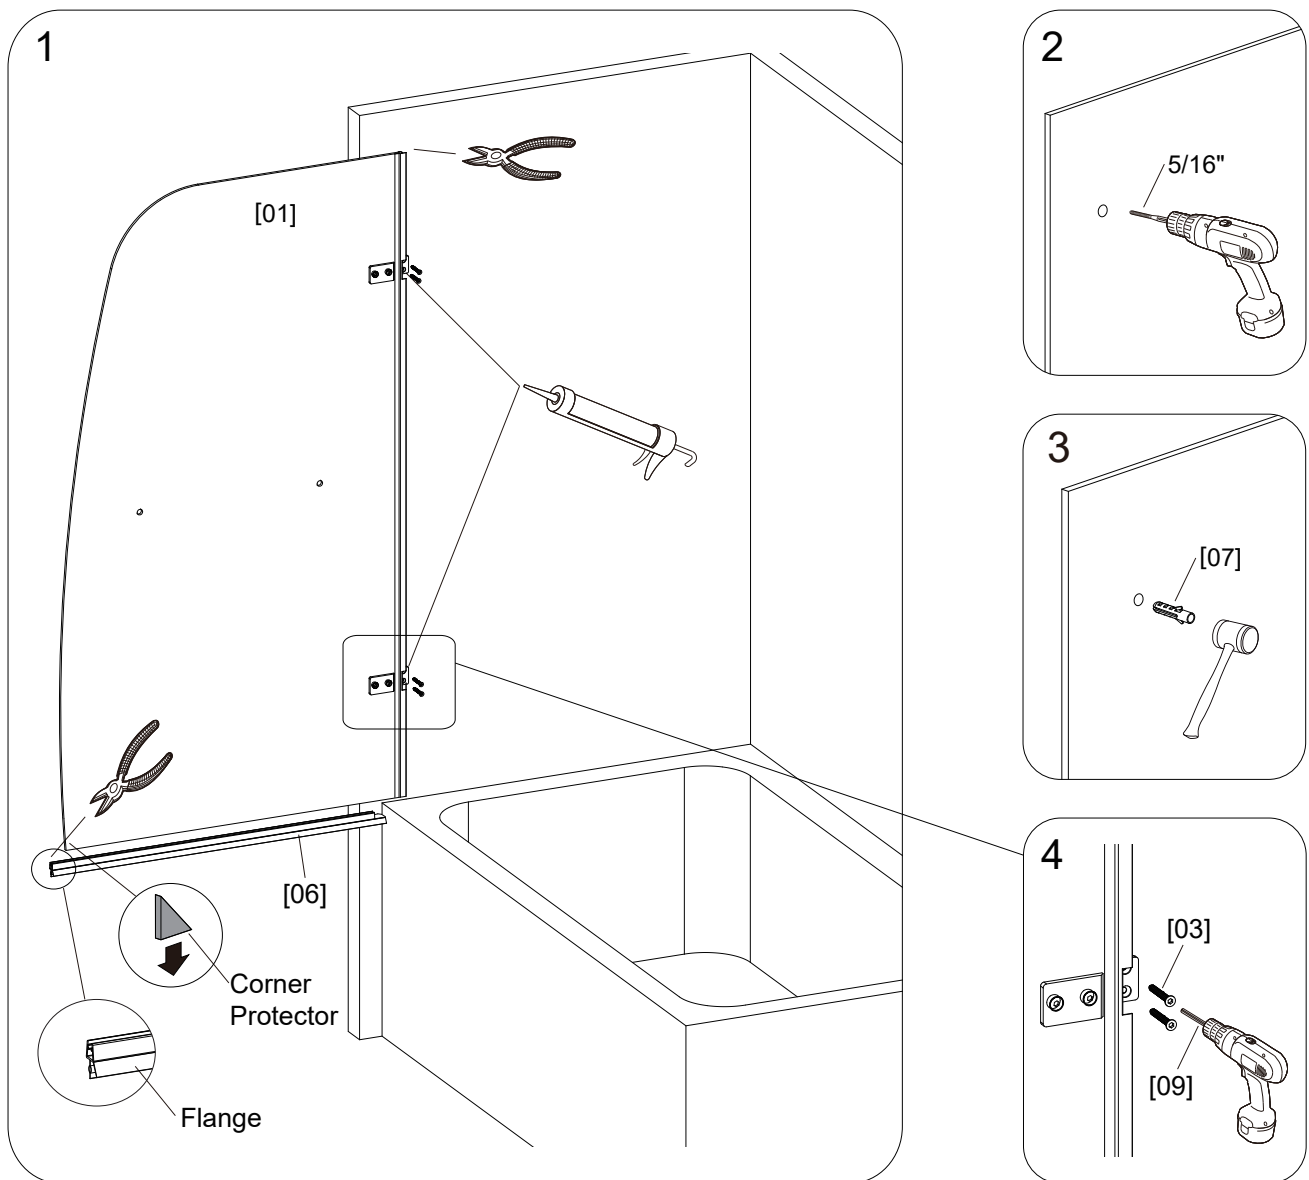


Fig 4

Step 5

1. Disassemble the **Handle [05]** and install to the **Door [01]**. Install **Handle, Flanges** and two **Gaskets** from the front of **Door [05]**. Install another two **Gaskets, Lever**, and **Knob** from the back of **Door [05]** and secure to finish the installation. (Fig 5)

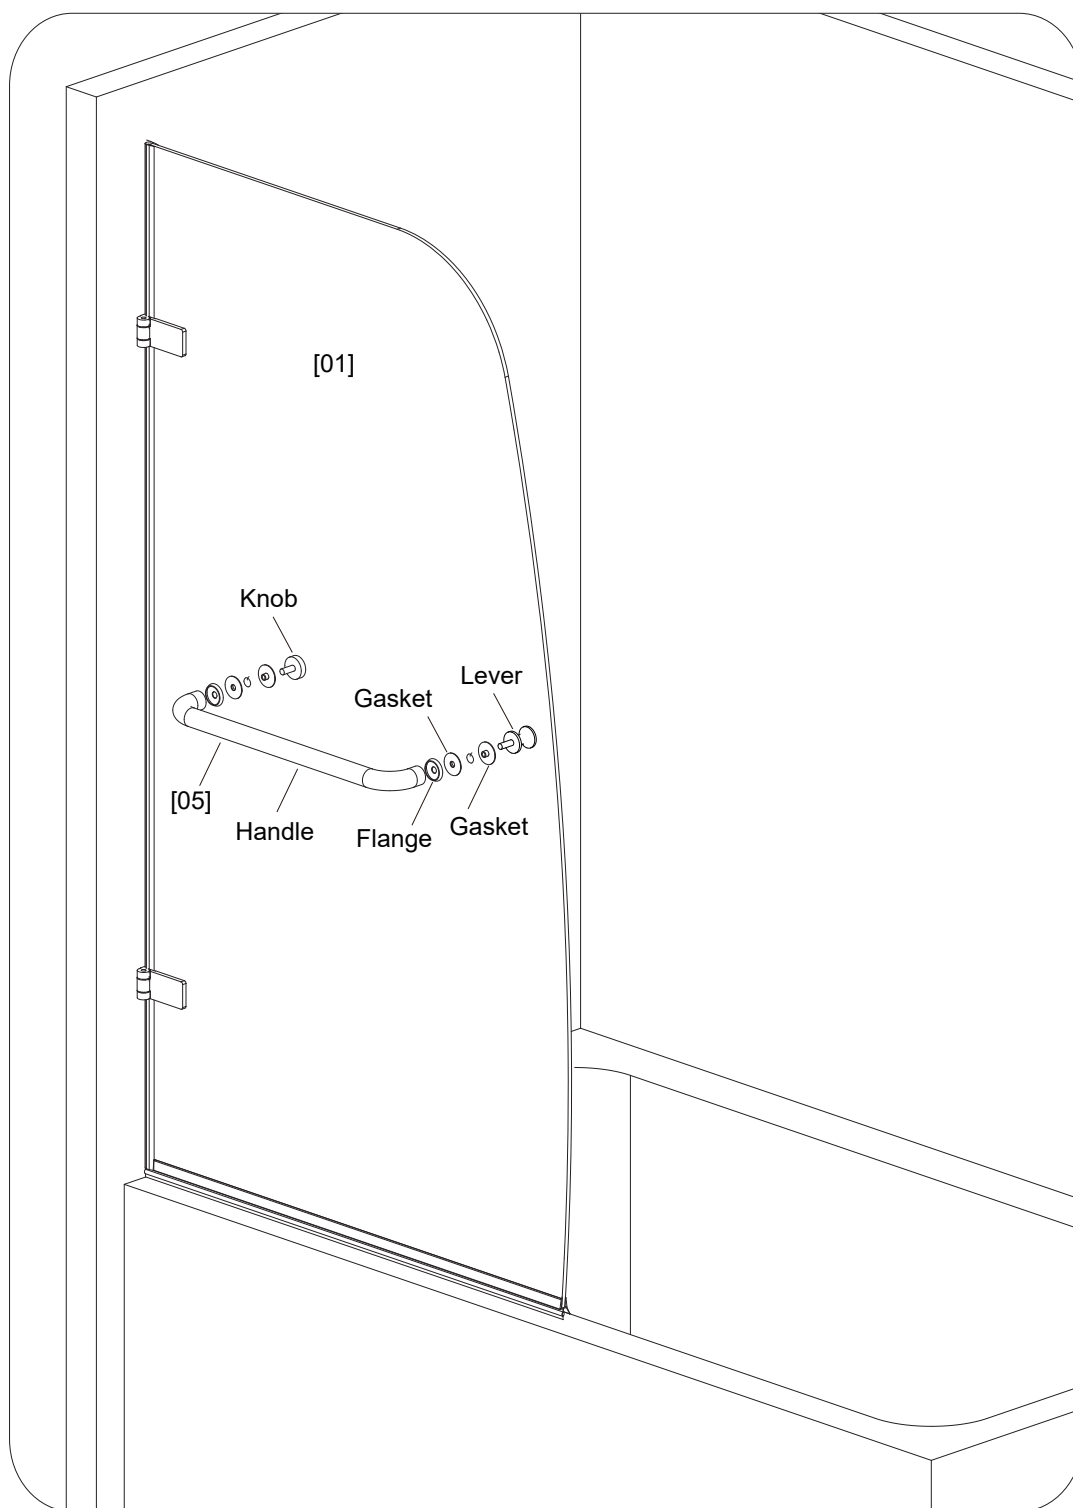


Fig 5

Care & Maintenance

TUBS and BACK WALLS: Wipe them off after each use with a soft cloth. To clean the acrylic surface, use non-abrasive sprays or cream based cleaners. Avoid the use of aerosol spray cleaners. Never use abrasive cleansers, metal brushes, or scrapers, as they can scratch or dull the surface.

GLASS: Wipe off the glass after each use with either a soft cloth or a squeegee to prevent soap buildup and water spots (hard water can etch the surface of the glass over time if left to dry). To avoid damaging the surface, never use abrasive cleaners or cleaning products that contain scouring agents. Likewise, never use bristle brushes or abrasive sponges that can scratch the surface.

HARDWARE: To ensure a long-lasting finish, wipe off the metal parts after using with a soft cloth. Do not use abrasive cleaners or cleaning products containing ammonia, bleach, or acid. If accidentally used, rinse the surface as soon as possible to prevent damage to the finish (peeling or corrosion). After cleaning the polished finishes, rinse thoroughly and wipe dry with a soft cloth. Clean stainless steel surfaces at least once a week. When applying stainless steel cleaner or polish to stainless steel hardware, work with (not across) the grain. Never use an abrasive sponge or cloth, steel wool, or wire brush, which may permanently scratch the surfaces.

NOTE: Regularly inspect the glass and all hardware for misalignment, proper attachment, and damage. Contact ANZZI with any questions or concerns.

