
ASSEMBLY INSTRUCTIONS


ITEM NO.WF300211

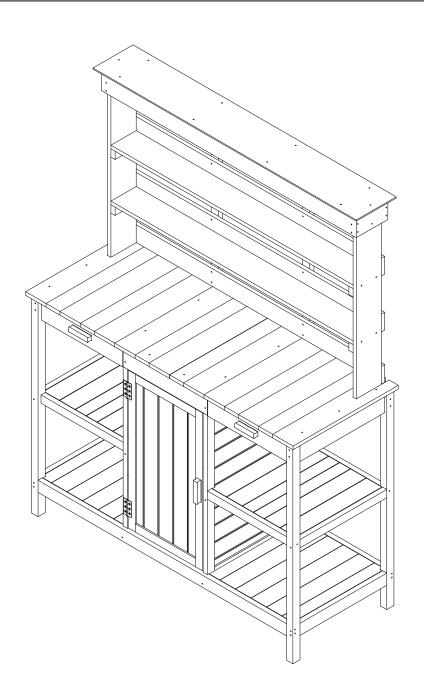


IMPORTANT NOTE:


- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THIS ITEM IS FULLY SET-UP.

Detail View

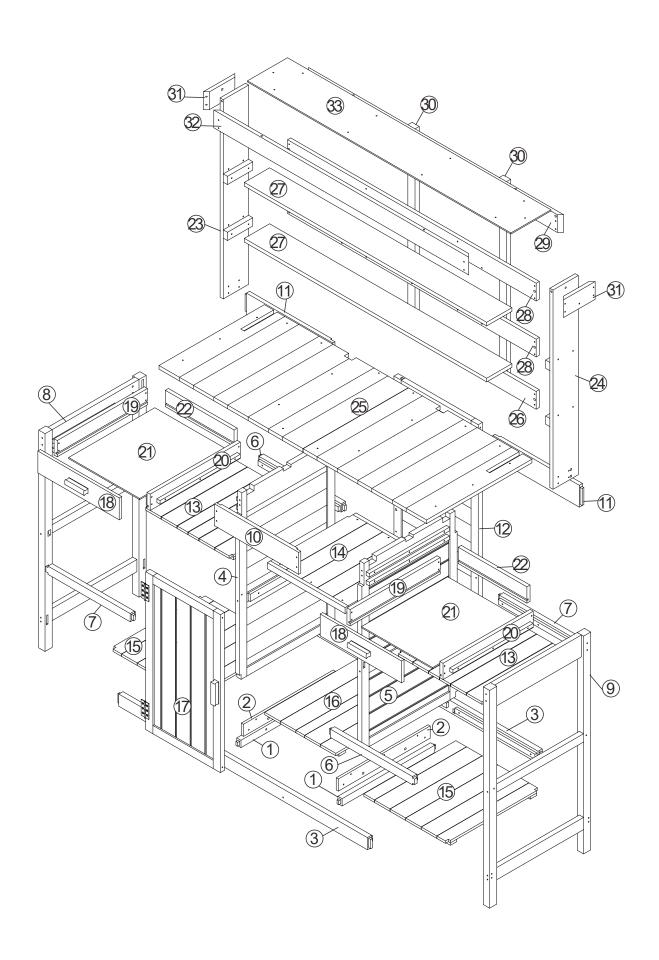

Hardware List(WF300211)

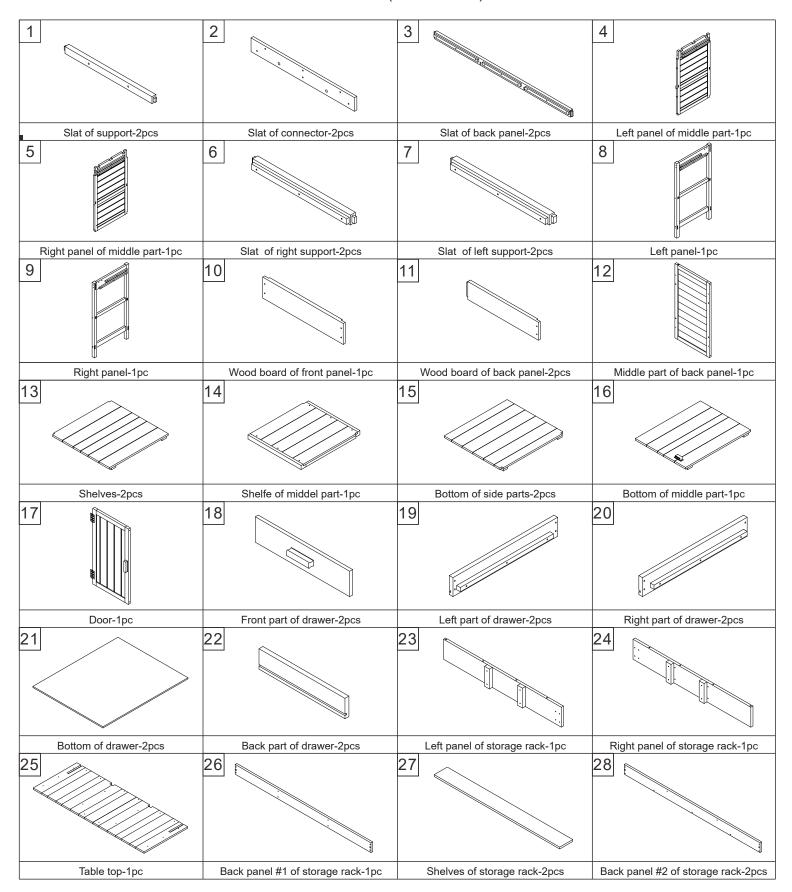

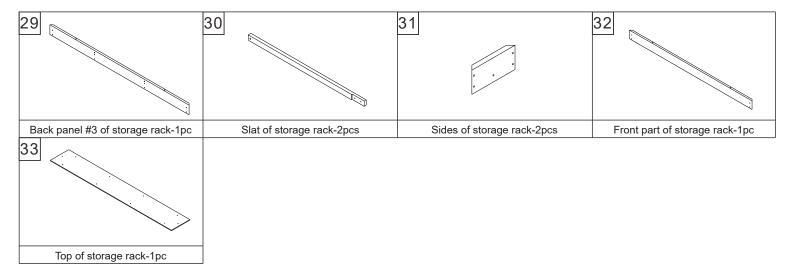

Hardware List

Α	()	В	(<u>)</u>	С	()::::::::::::::::::::::::::::::::::::	D	(i)
	3.5×50		3.5×40		3.0×30		3.5×25
	Ph zinc screws-16+1pcs		Ph zinc screws-12+1pcs		Ph zinc screws-96+1pcs		Ph zinc screws-26+1pcs
Е	@=====================================	G	3.0×16	Н			
Ph zinc screws-10+1pcs			Ph zinc screws-6+1pcs	Wood dowel-30pcs			Anti-topple over sets-2pcs





PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWERTOOLS!

