


IMPORTANT INSTRUCTIONS AND OPERATING MANUAL

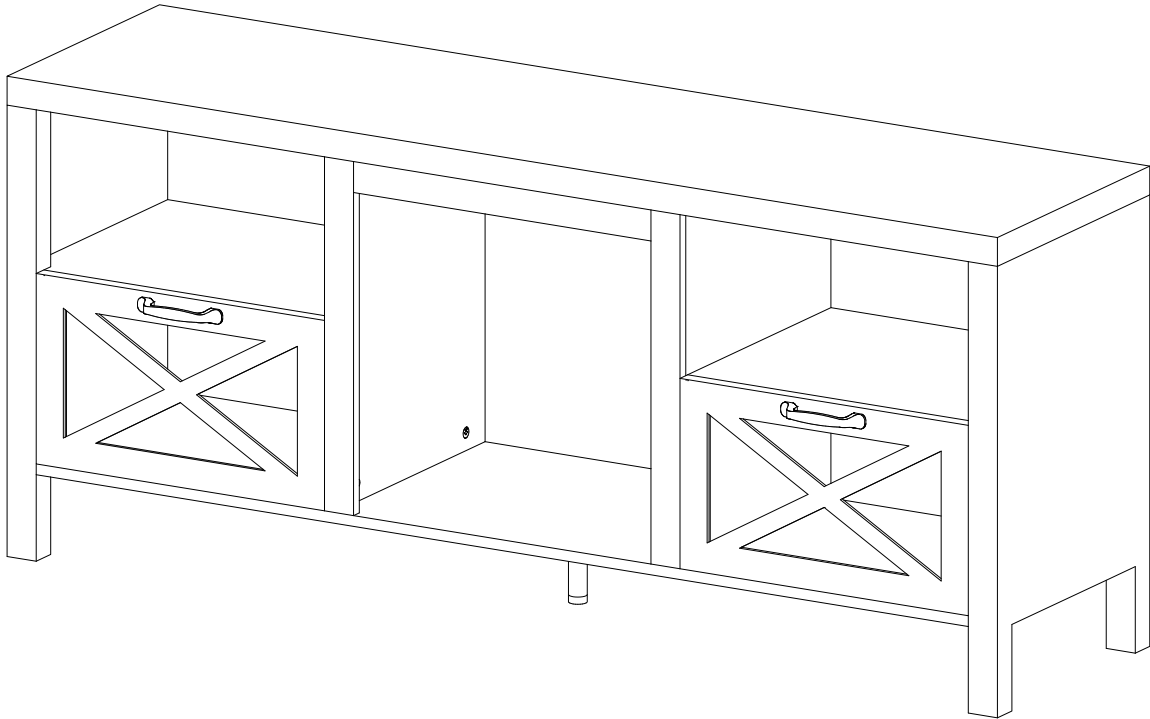

M1808 ELECTRIC FIREPLACE

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Do Not Return This Product!
Contact our customer service team for help first.


Call: 213-4467172 or 661-4358826

Monday - Sunday 8:30 am -5:30 pm P.S.T

ROWAN ELECTRIC APPLIANCE LLC 28407 Ascent Way,
Santa Clarita, CA 91350

WARNING

- Unit can tip over causing severe injury.
- Anchor unit to study on wall (if instructed to).
- Do Not allow children to climb on unit.
- Put heavy items on lower shelves or drawers.

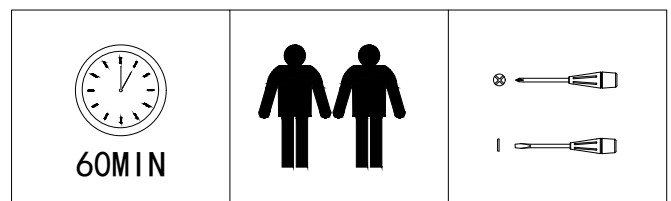

Contact Us !

DO NOT RETURN THIS PRODUCT!

Contact our friendly customer service team first for help.

Call: 213-4467172 or 661-4358826

(8:30 am - 5:30 pm P.S.T)

DATED PROOF OF PURCHASE REQUIRED FOR WARRANTY SERVICE.

[Helpful Hints]

**PEOPLE NEEDED FOR ASSEMBLY: 2
ESTIMATED ASSEMBLY TIME: 1 HOUR**

-Open your item in the area you plan to keep it to avoid excessive heavy lifting.



-Identify, sort and count the parts before attempting assembly.



-Make sure to always face the point on the top of the Cam Lock towards the outer edge.



-Use all the nails provided for the back panel and spread them out equally.



-Back panel must be used to make sure your unit is sturdy.




-Do NOT use harsh chemicals or abrasive cleaners on this item.


-Never push, pull, or drag your furniture.




PARTS LIST

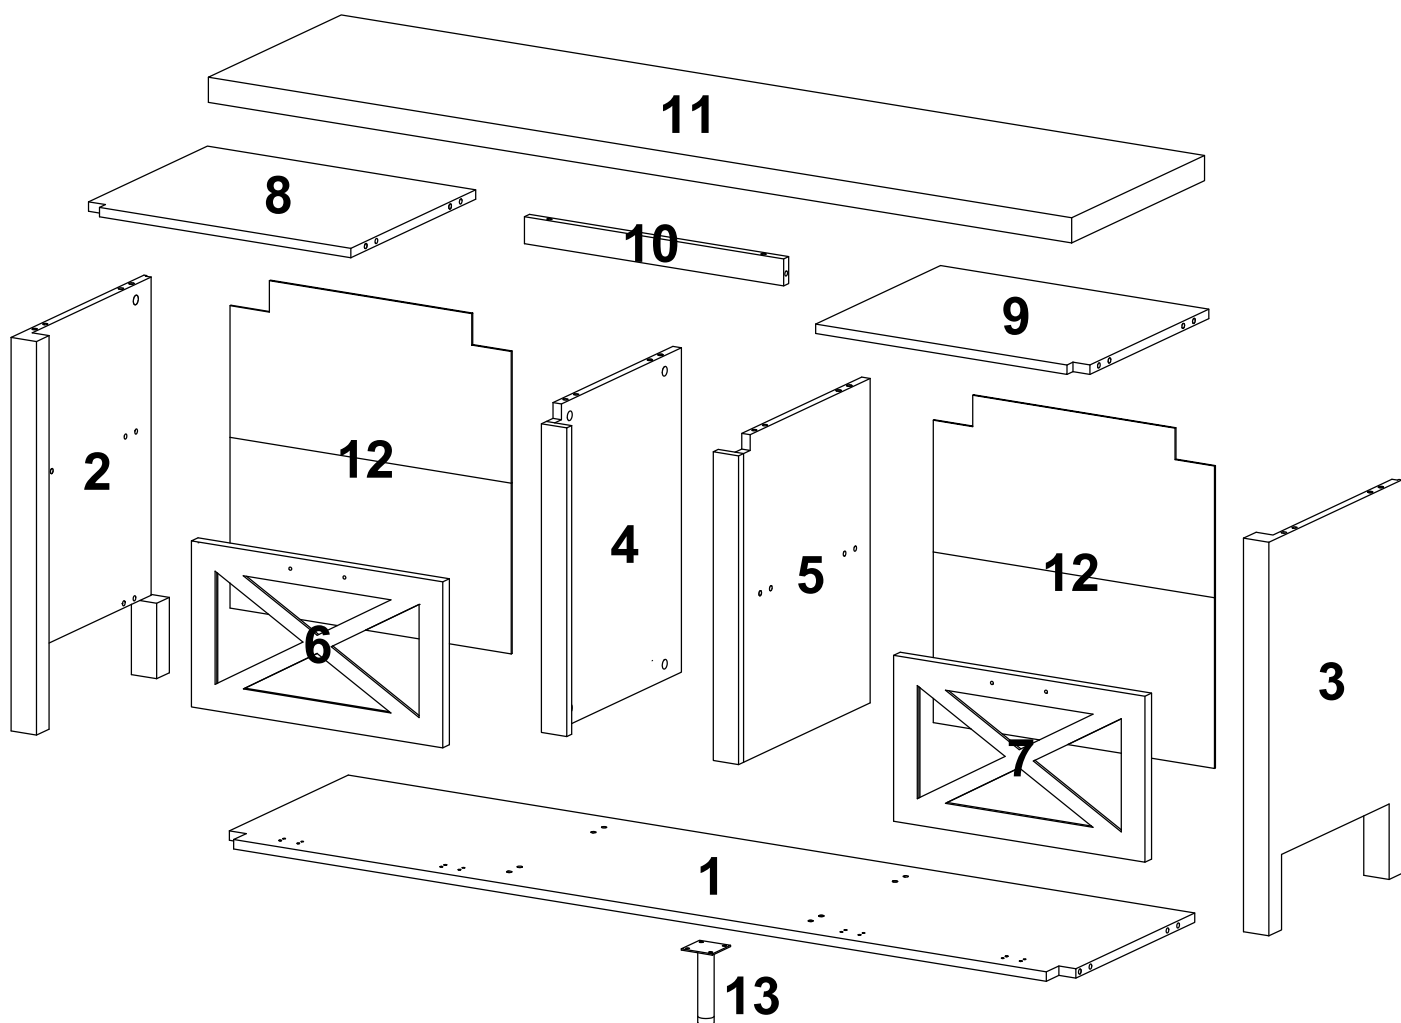


HARDWARE LIST

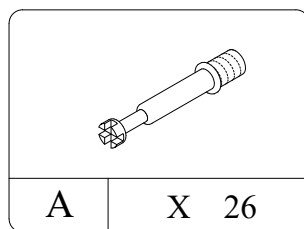


Ø6.5 x35mm

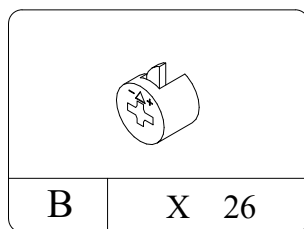




Ø15 x 12mm

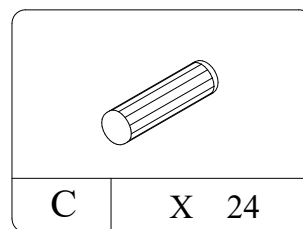



Ø8 x 30mm

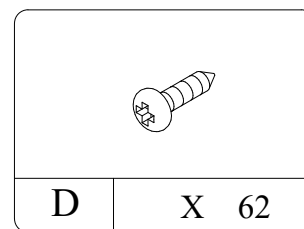

Ø3 x 12mm

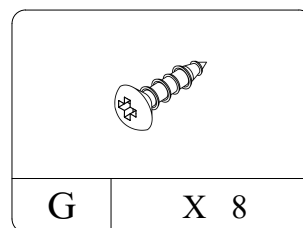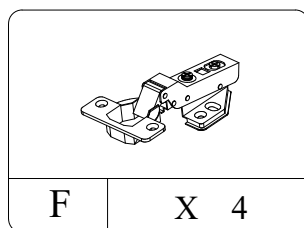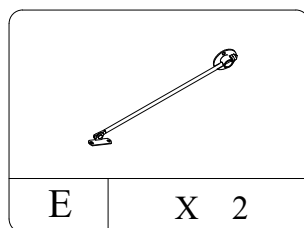


Ø4 x 12.7mm

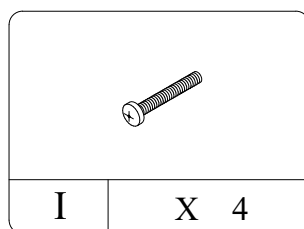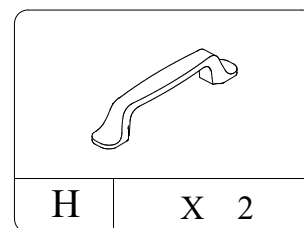

Ø4 x 18mm

DIMENSIONS


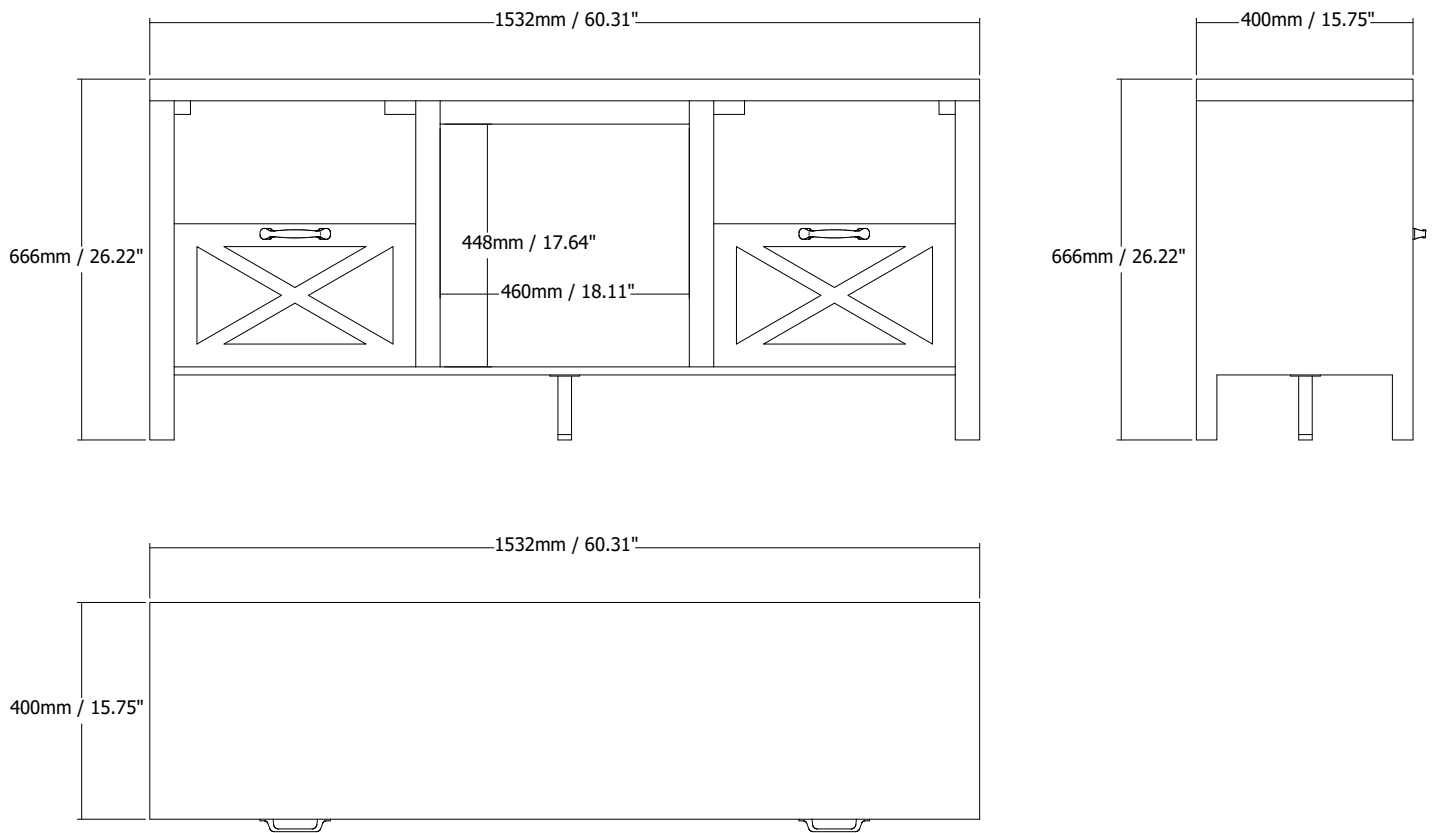


ASSEMBLY

Before installing this fireplace, please read the following steps carefully.







STEP 1:

Screw bolts (A) to panels (1)+(2)+(3)+(4)+(5)+(11).

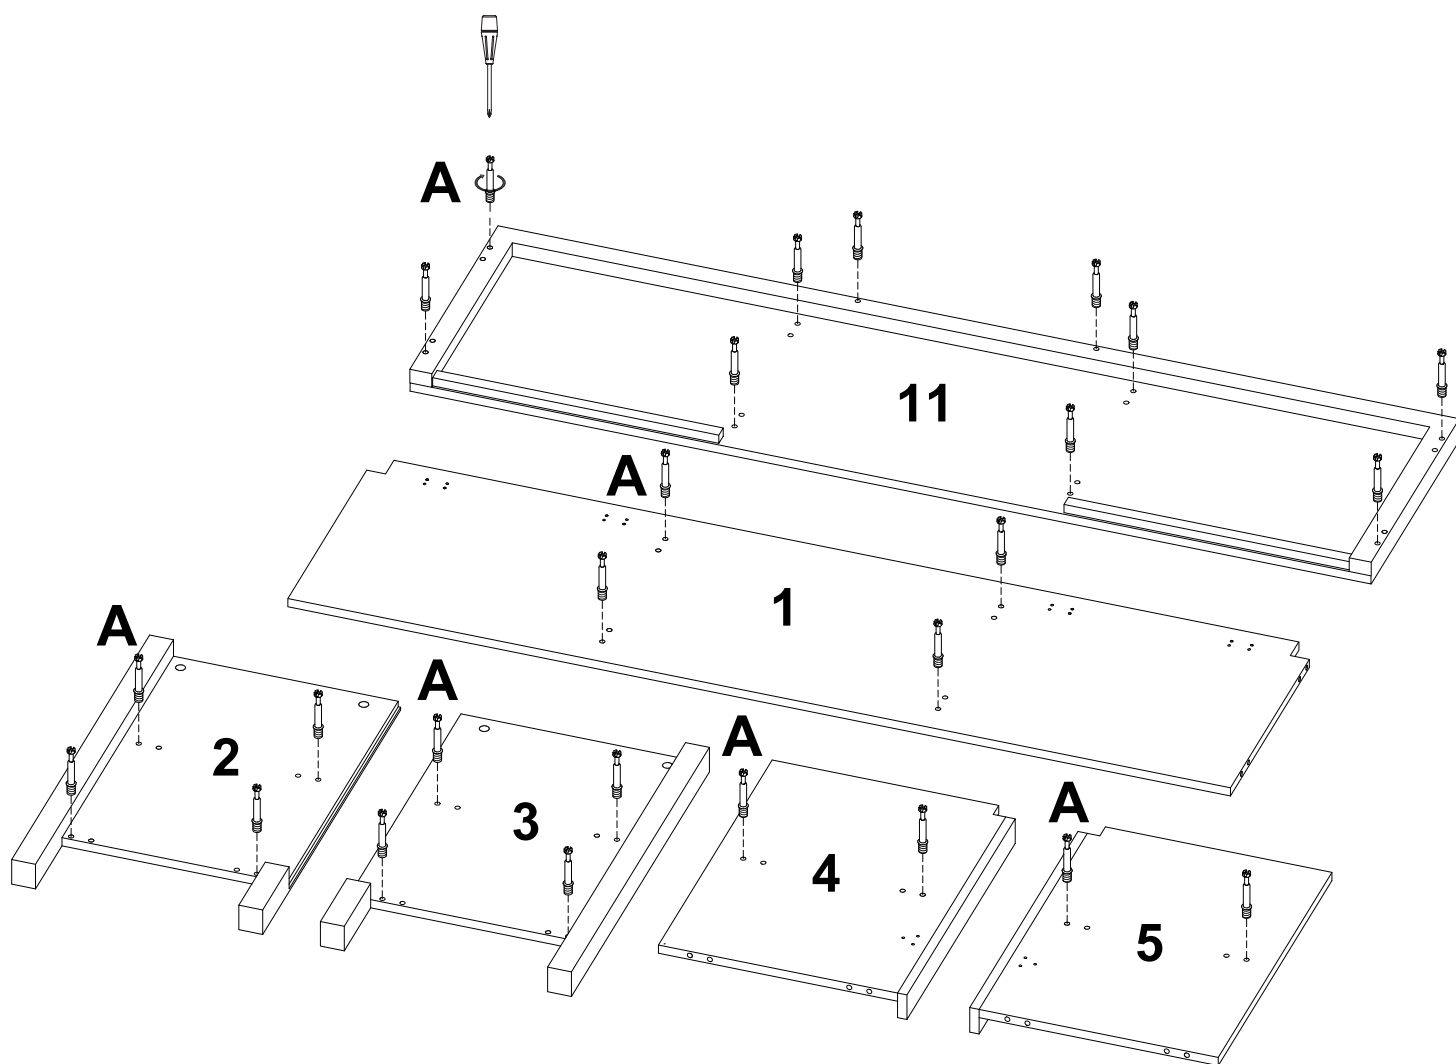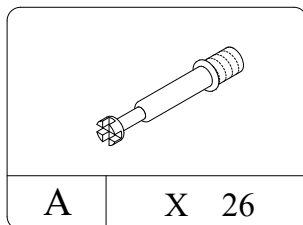



STEP 2:

Join panels (4)+(5) to the panel (1) by inserting bolts (A) and dowels (C). Lock them by inserting and securing excenter fittings (B).

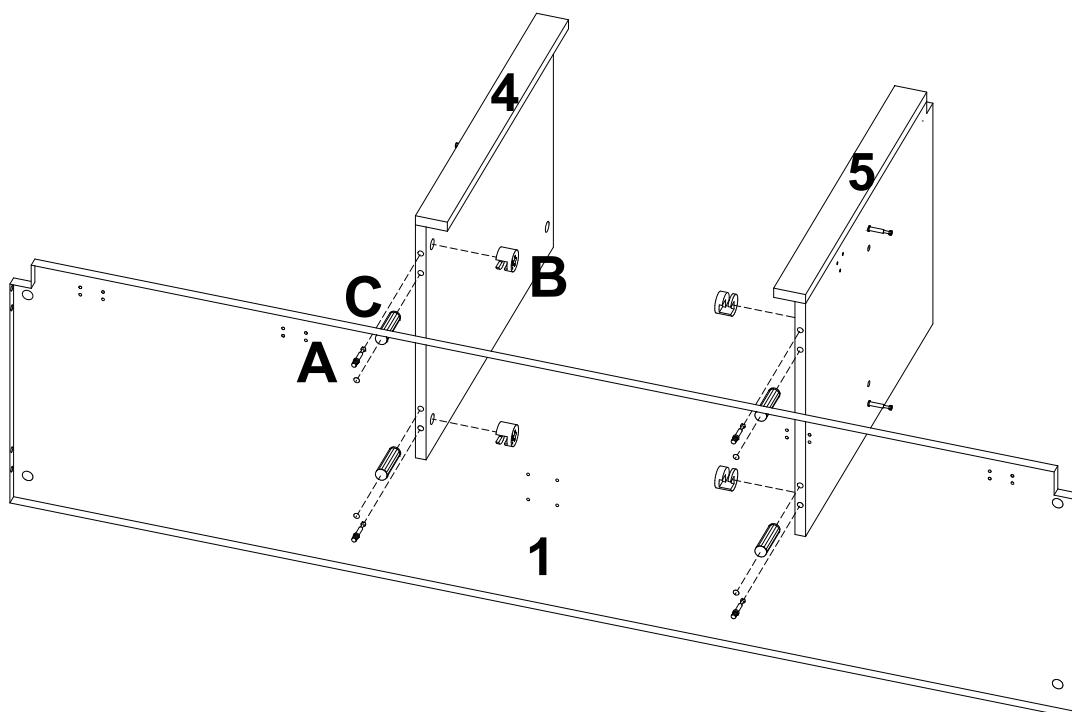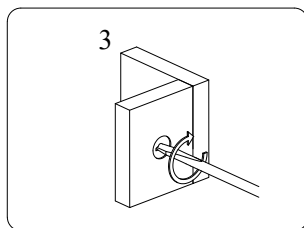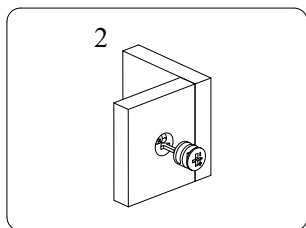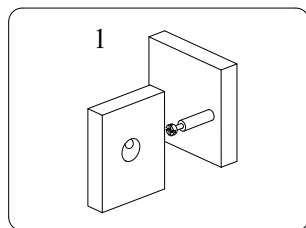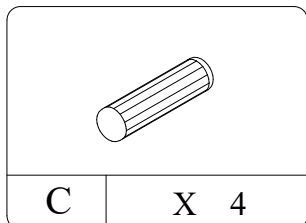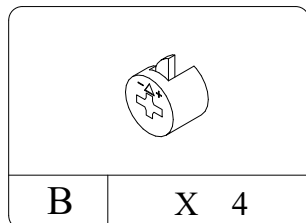

STEP 3:



Join panels (8)+(9) by inserting bolts (A) and dowels (C). Lock them by inserting and securing excenter fittings (B).

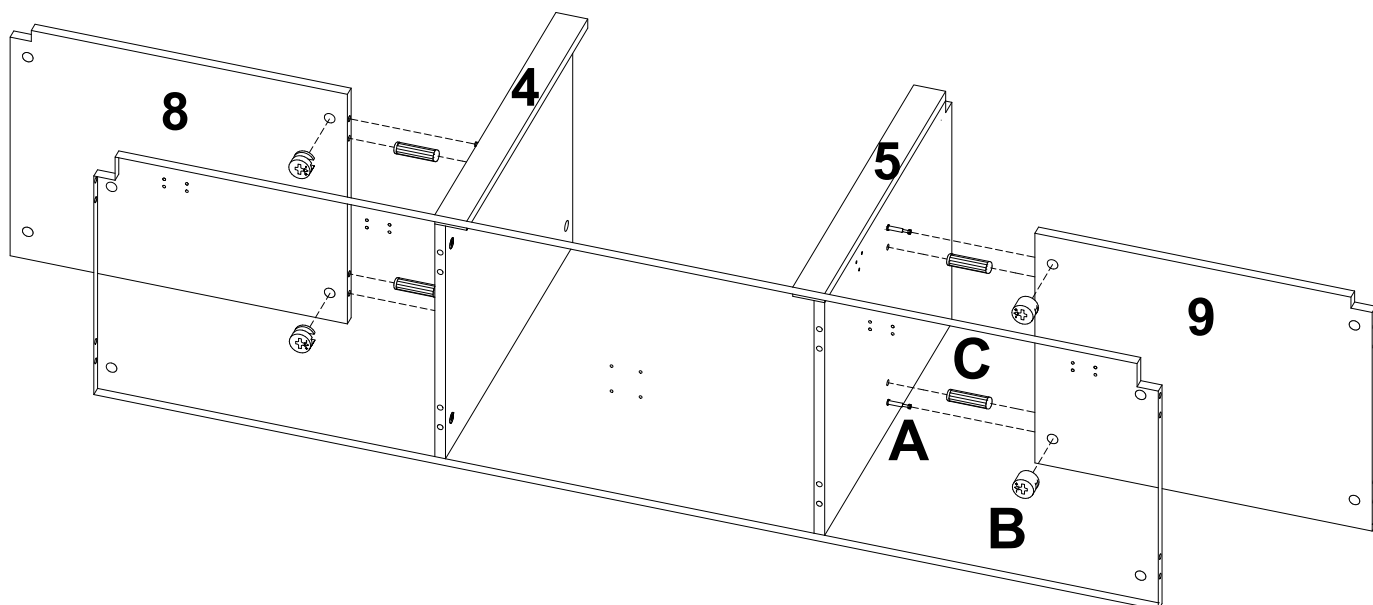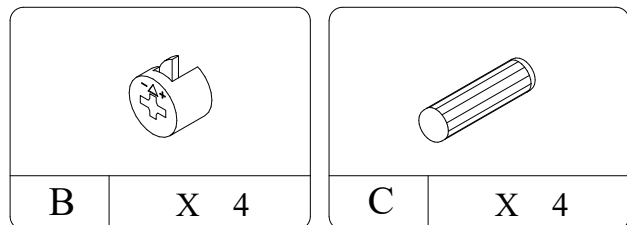

STEP 4:



Join panels (2)+(3) by inserting bolts (A) and dowels (C). Lock them by inserting and securing excenter fittings (B).

Join the foot (13) to the panel (1) by securing screws (G).

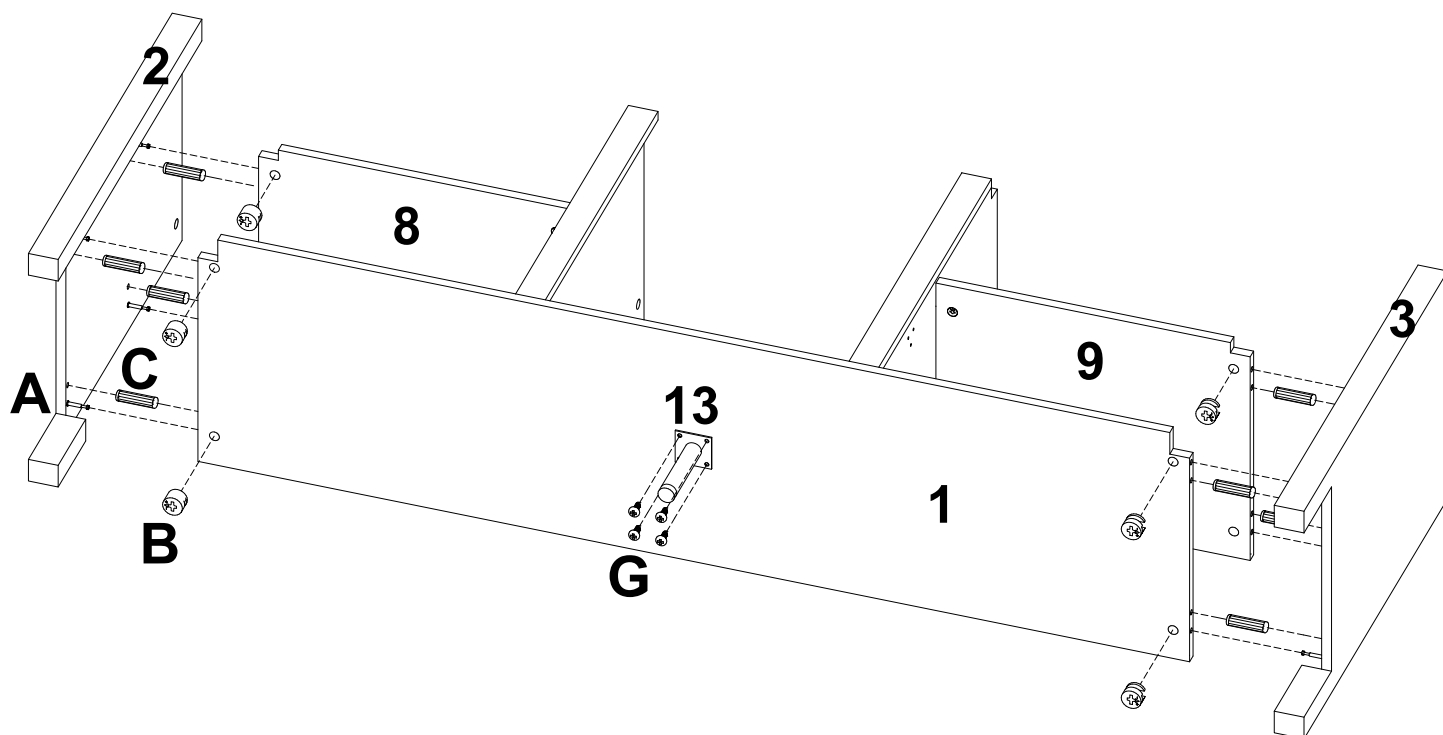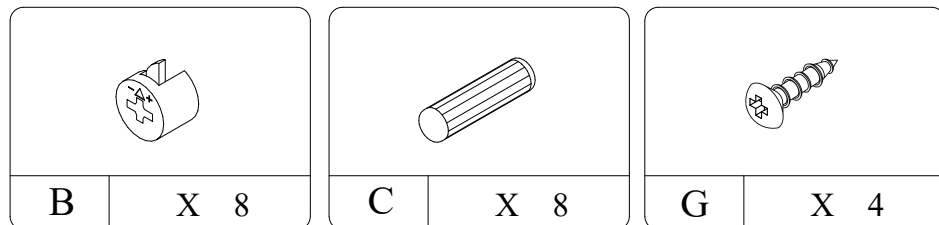



STEP 5:

Join the panel (10) to the panel (11) by inserting bolts (A) . Lock it by inserting and securing excenter fittings (B).

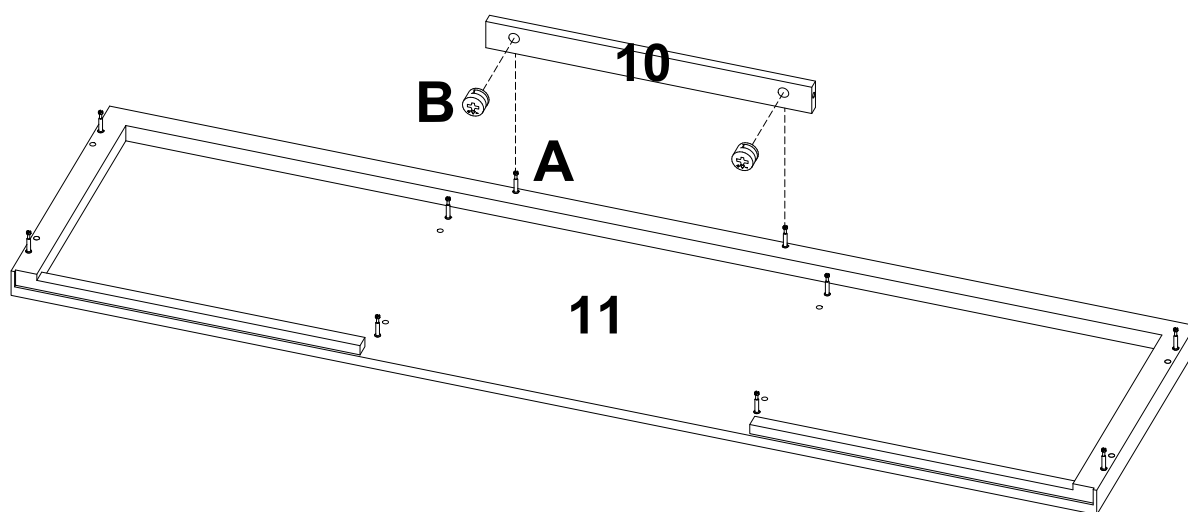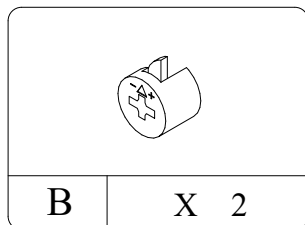

STEP 6:

Join panels (11)+(10) by inserting bolts (A) and dowels (C). Lock them by inserting and securing excenter fittings (B).

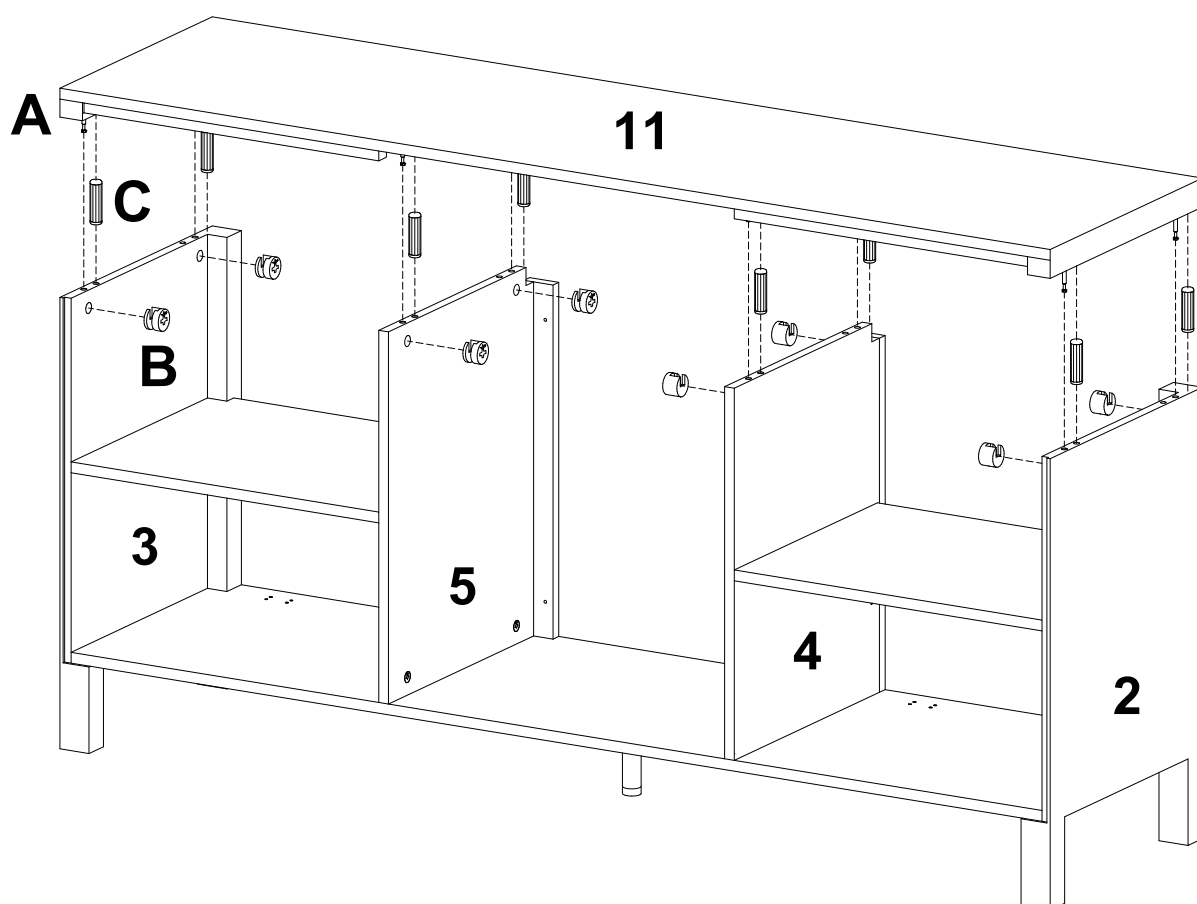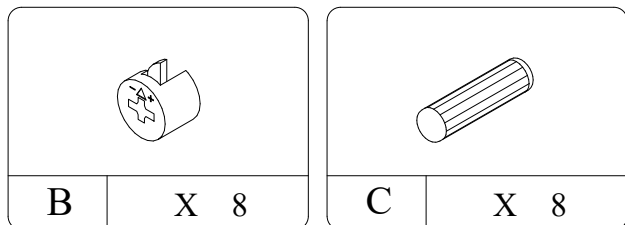


STEP 7:

Join panels (12) by securing screws (D)



D







X 28

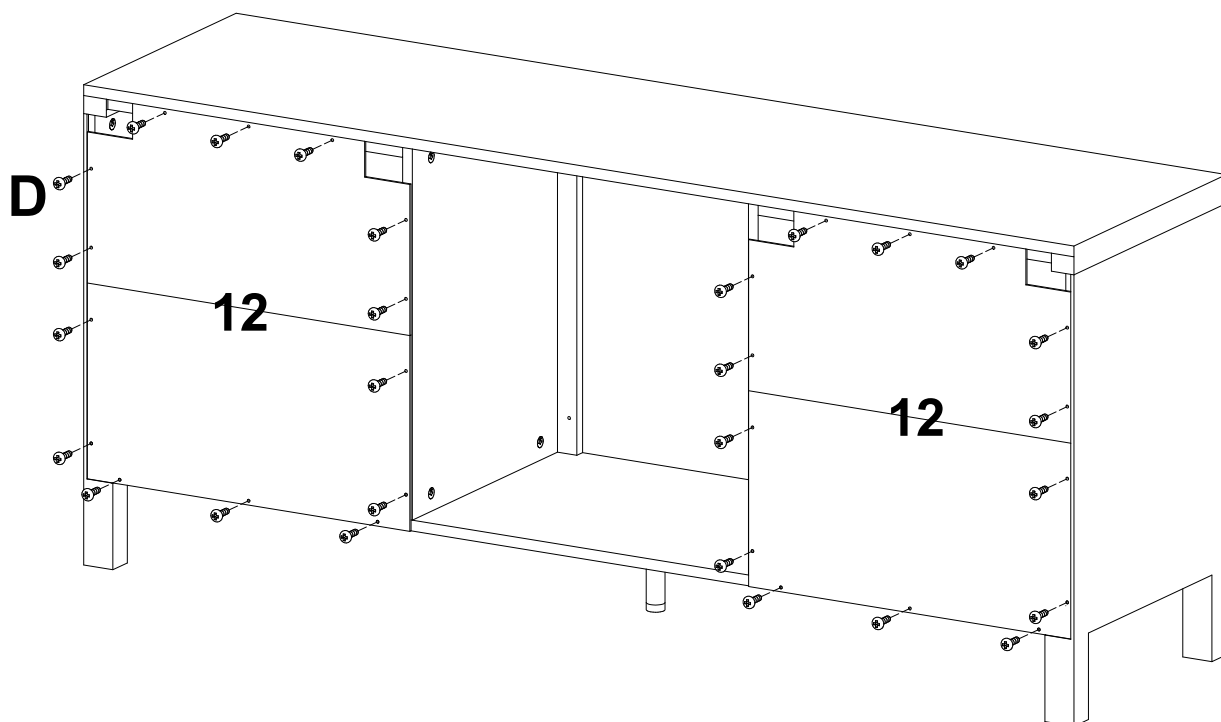

STEP 8:

Attach hinges (F) to doors (6)+(7) by securing screws (D).






Attach handles (H) to doors (6)+(7) by securing screws (I).

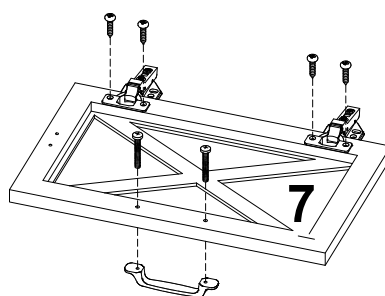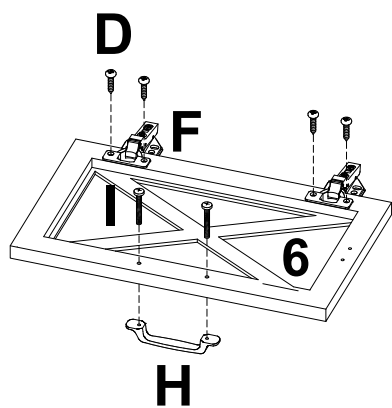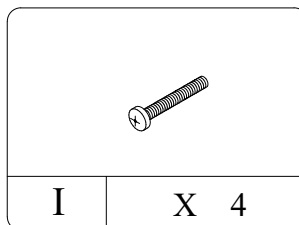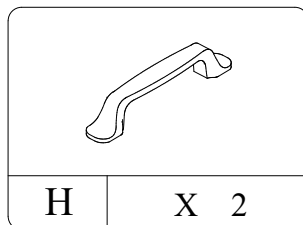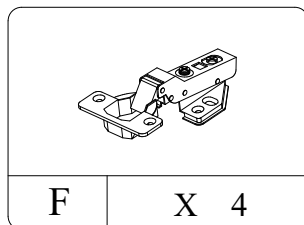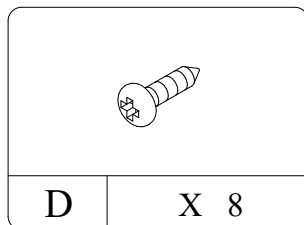

STEP 9:




Join doors (6)+(7) by securing screws (D) through hinges (F).

Adjust the doors' position by loosening, moving, and tightening the hinges.

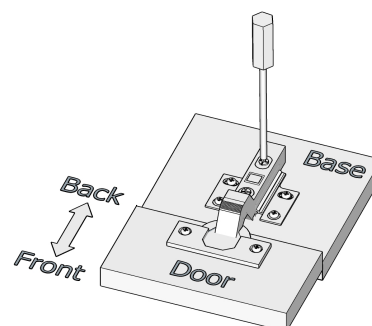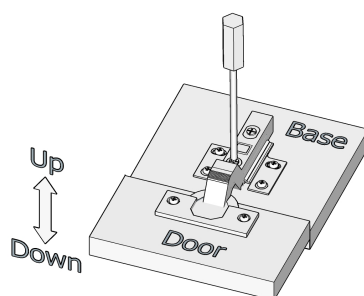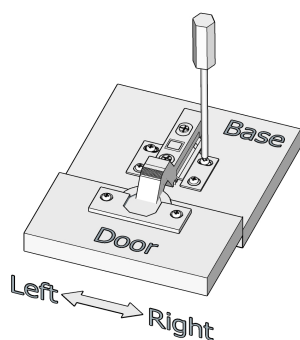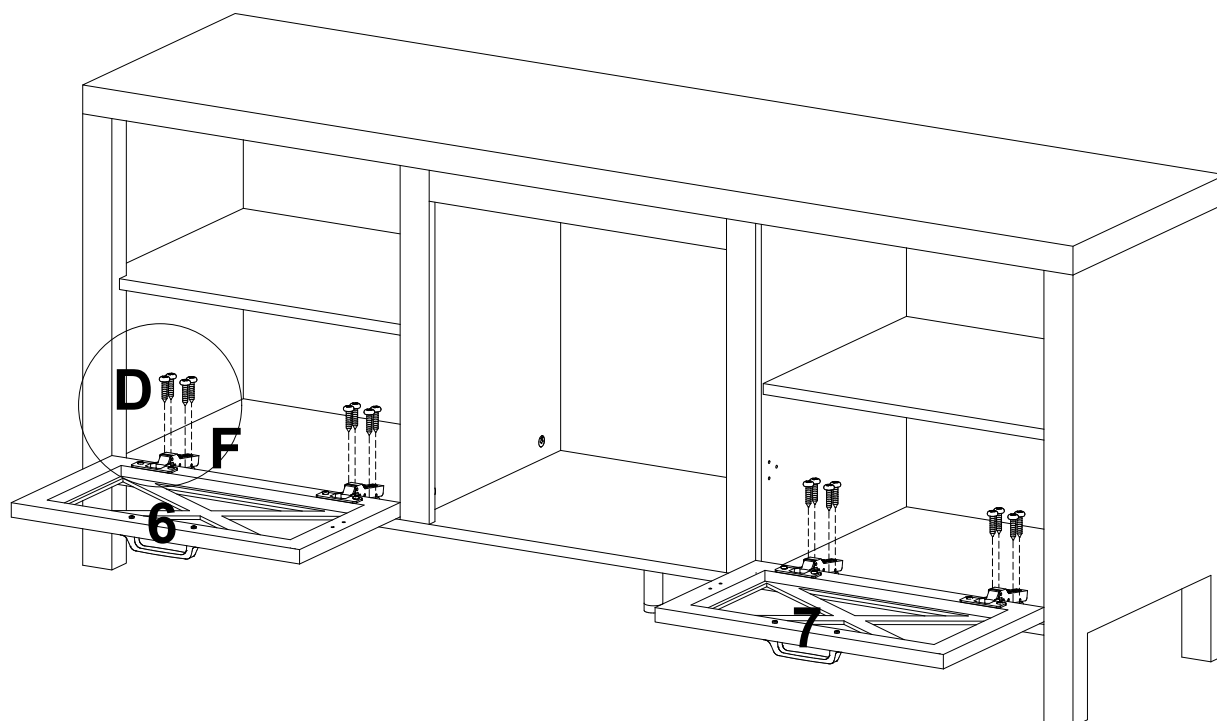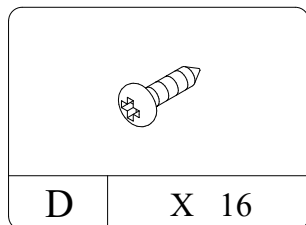




STEP 10:

Attach rods (E) to panels (4)+(5) by securing screws (D).

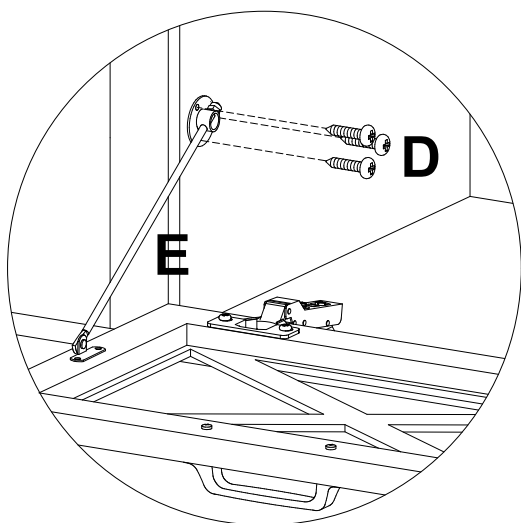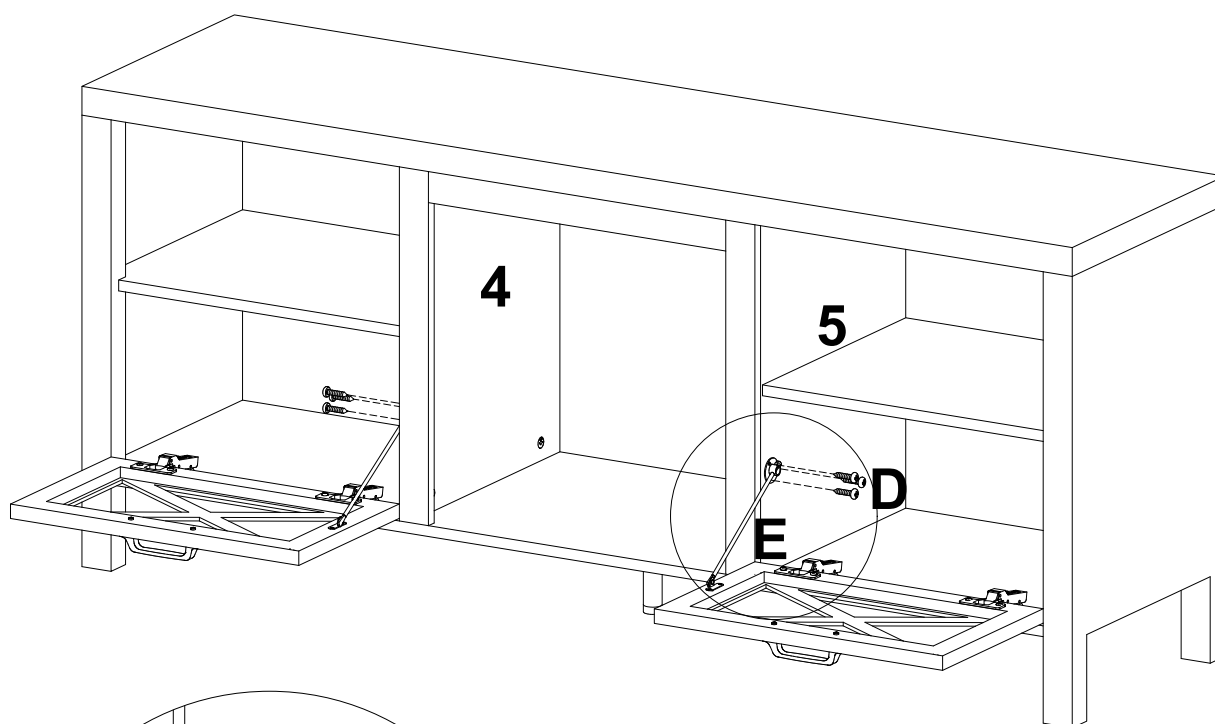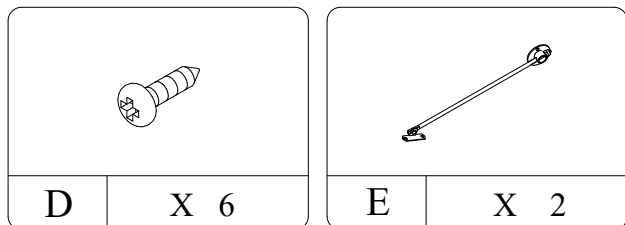



STEP 11:

Attach rods (E) to doors (6)+(7) by securing screws (D).

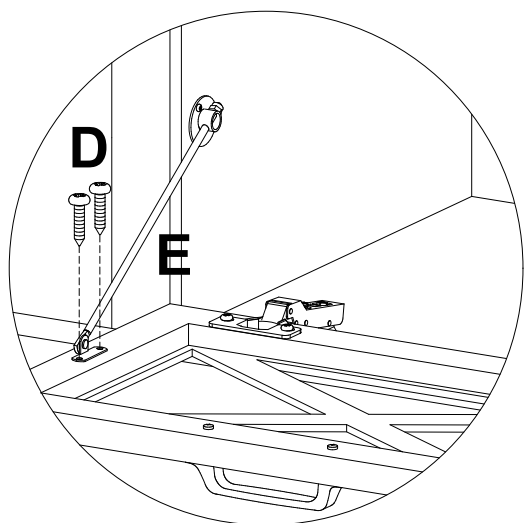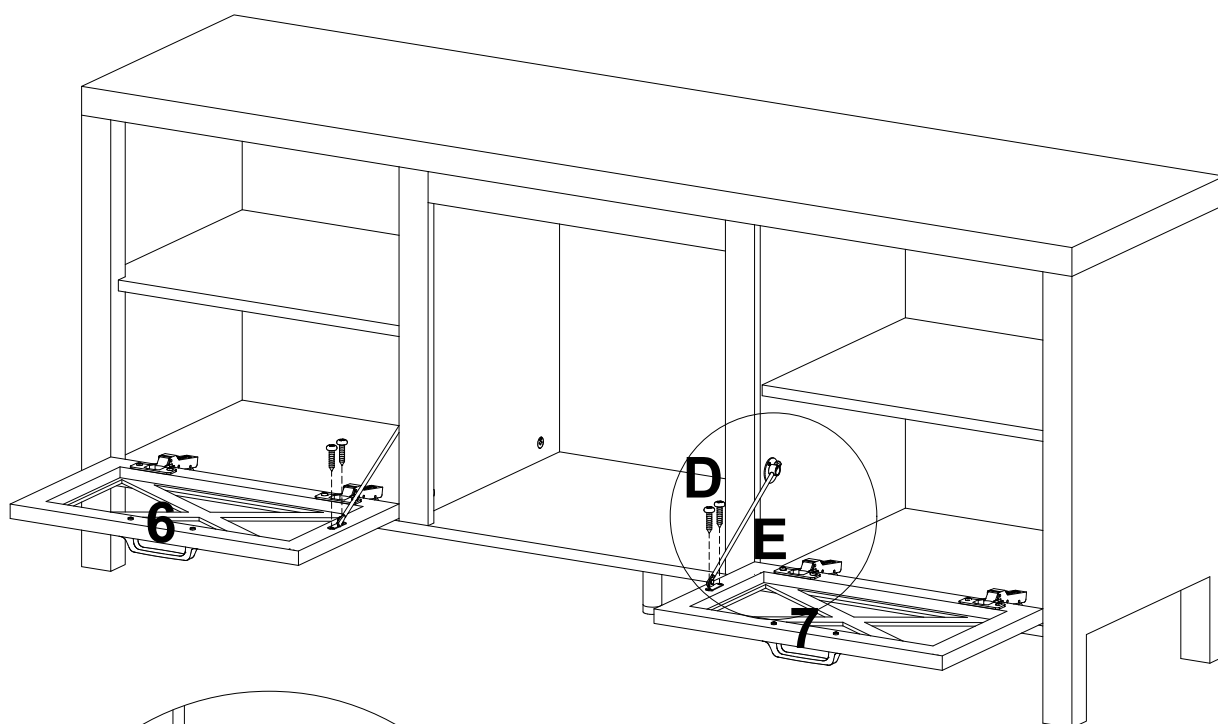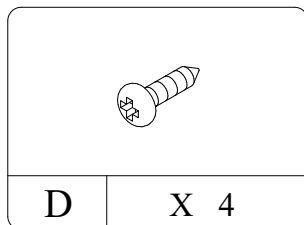

STEP 12:

Install the firebox by securing screws (G).

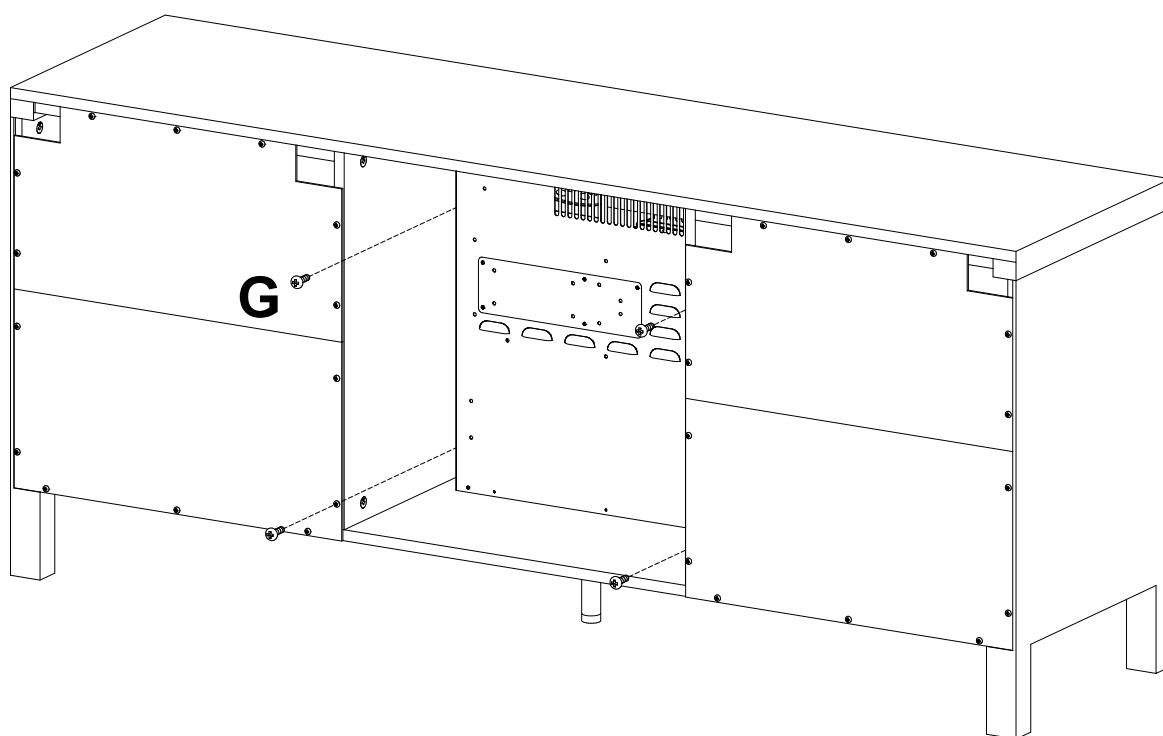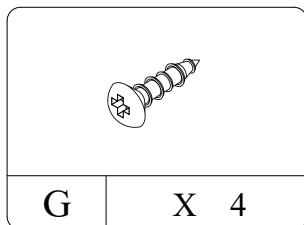

Thank you for purchasing this product! If you have any questions about the product, such as the missing parts, damaged products, product assembling, and operation, please contact us via **Amazon Message** or customer service number: **213-4467172 or 661-4358826**

IMPORTANT

Please call our customer service department for any consulting:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

DATED PROOF OF PURCHASE IS REQUIRED FOR WARRANTY
SERVICE.

AVIS

Veuillez appeler le service à la clientèle pour toutes questions au:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

PREUVE D'ACHAT ORIGINALE REQUISE POUR SERVICE DE
GARANTIE.

IMPORTANTE

Sólo hay que llamar nuestro departamento de servicio
al cliente en caso de tener preguntas o inquietudes:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

SE REQUIERE PRUEBA DE COMPRA CON FECHA PARA SERVICIO
BAJO GARANTÍA.

Add: ROWAN ELECTRIC APPLIANCE LLC 28407 Ascent Way, Santa Clarita, CA 91350

Phone: 213-4467172 or 661-4358826