ASSEMBLY INSTRUCTION






WOODEN BRIDGE

ATTENTION: Please make sure an electrical drill is ready before assembling. (Electrical drill is not included in the package)


- A. Side post with upper right hole (2pcs)
- B. Side post with upper left hole(2pcs)
- C. Middle post(2pcs)
- D. Handrail (8pcs)
- E. Right and left crossbeam (4pcs)
- F. Middle crossbeam (2pcs)
- H. Small connect rail(3pcs)
- I.Long connect rail(18pcs)

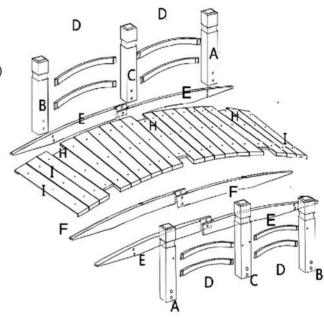

HARDWARE LIST

1,	Bol	ts	8X10	0mm	12pcs

2、Bolts 8X45mm 2pcs





3. Washers 14pcs


4, NUTS 14PCS






5, Screws 3.5X 30 142 pcs




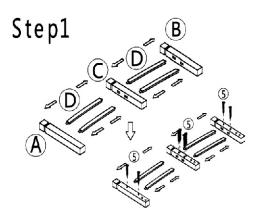


Insert part (D) (4pcs), into part (A), (B) and (C)
Use a phillips screw driver to screw in 6pcs (S)
screw securely

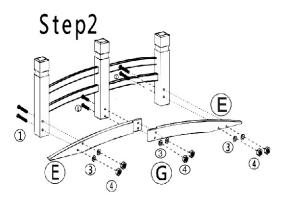

Screw parts (E), using 6pcs (1) bolts, 6pcs (3) washer 6pcs (4) nuts on posts.use same process for other side

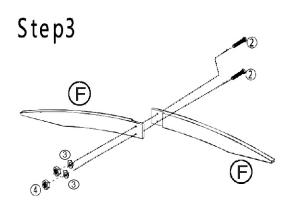

Luse 2pcs 2 bolts, 2 pcs 3 washers, 2pcs 4 nuts to tighten securely to creat middle base

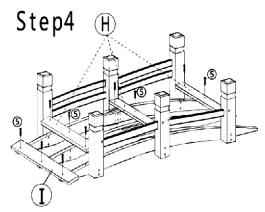

Use 18pcs 5 screws to securely fasten partH to the base . check panels are in line with the base.use remaining 5 screws to fasten partI on the base and have part I are aligned straight

Step5

Make sure all screws and bolts are tightened securely before use.

